

3. If necessary, use the LCD display or a connected computer to make any required settings. (Refer to the User Guide for configuration set up.)
4. Close all output breakers on the rear of the UPS (or in an external panel board, if used).
5. If external battery cabinets are included, close the breakers on the rear of each cabinet.
6. Power-on the UPS using the Operation and Display Panel (see the illustration to the right) by pressing and holding the power button until the confirmation dialog appears. Use the Up/Down arrows to select “YES”, then press Enter.

NOTE: During operation, the UPS may sound an alarm as the output receptacles are powered. You may press the Esc button for 2 seconds to silence the audible alarm.



