



Liebert® GXT5 UPS

Installer/User Guide

230 V Input, 230 V Output I(B)

120 V Input, 120 V Output LV(B)

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages result from use of this information or for any errors or omissions.

Refer to local regulations and building codes relating to the application, installation, and operation of this product. The consulting engineer, installer, and/or end user is responsible for compliance with all applicable laws and regulations relation to the application, installation, and operation of this product.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use, or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

Technical Support Site

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit <https://www.vertiv.com/en-us/support/> for additional assistance.

TABLE OF CONTENTS

1 Important Safety Information	1
2 Product Description	3
2.1 UPS Features and Available Models	3
2.2 Front Panels	3
2.3 Rear Panels	4
2.4 Internal Battery Packs	8
2.5 Major Internal Components and Operating Principle	8
2.6 UPS States and Operating Modes	10
2.6.1 Normal Mode	10
2.6.2 Bypass Mode	11
2.6.3 Battery Mode	12
2.6.4 ECO Mode	13
3 Installation	15
3.1 Unpacking and Inspection	15
3.2 Pre-Installation Preparation	15
3.2.1 Installation Clearances	15
3.3 Installing the UPS	15
3.3.1 Tower Installation	16
3.3.2 Rack Installation	16
3.4 Installing External Battery Cabinets	16
3.5 Input/Output Connections	18
3.5.1 Branch Circuit Breaker	18
3.6 Communication Connections	19
3.6.1 Connecting IntelliSlot communication	20
3.6.2 Connecting to the Dry Contact Port	20
3.6.3 Connecting a Remote Emergency Power Off (REPO) Switch	22
3.6.4 Connecting a USB Cable	23
3.6.5 Connecting CLI Communication Cables	23
4 Operating the UPS	25
4.1 Silencing the Audible Alarm	25
4.2 Starting up the UPS	25
4.3 Transferring to Battery Mode	25
4.4 Transferring from Normal to Bypass Mode	26
4.5 Transferring from Bypass to Normal Mode	26
4.6 Transferring from Normal Mode to Stand-by	26
4.7 Shutting Down the UPS Completely	26
4.8 Remote Emergency Power Off (REPO)	27

5 Operation and Display Panel	29
5.1 LED Indicators	31
5.2 LCD Menu and Screens	32
5.2.1 Start up and Flow Screens	32
5.2.2 Main Menu	33
5.2.3 Status Screen	34
5.2.4 Settings Submenu	37
5.2.5 Control Screen	44
5.2.6 Log Screen	45
5.2.7 About Screen	48
5.3 Editing Display and Operation Settings	50
5.3.1 Settings Prompts	51
5.3.2 Changing the Password	52
5.3.3 Selecting the Display Language	53
5.3.4 Setting the Date and Time	53
6 Maintenance	55
6.1 Replacing Batteries	55
6.2 Charging Batteries	57
6.3 Checking UPS Operation	57
6.4 Cleaning the UPS	58
6.5 Firmware Updates	58
7 Troubleshooting	59
7.1 Symptoms that Require Troubleshooting	59
7.2 Audible Alarm (Buzzer)	59
7.2.1 Faults	59
7.3 Troubleshooting UPS Issues	60
8 Specifications	61
8.1 Battery Run Times	64
Appendices	67
Appendix A: Open Source Software Legal Notices	67
Appendix B: Technical Support and Contacts	69

1 Important Safety Information

IMPORTANT! This manual contains important safety instructions that must be followed during the installation and maintenance of the UPS and batteries. Read this manual thoroughly and the safety and regulatory information, available at <https://www.vertiv.com/ComplianceRegulatoryInfo>, before attempting to install, connect to supply, or operate this UPS.

Comply with all warnings and operating instructions in this manual strictly. Save this manual and carefully read the following instructions before installing the unit. Do not operate this unit before reading all safety information and operating instructions carefully.

Transportation

Only transport the UPS system in the original packaging to protect against shock and impact.

Preparation

- Condensation may occur if the UPS system is moved directly from a cold to a warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimate the environment.
- Do not install the UPS system near water or in moist environments.
- Do not install the UPS system where it would be exposed to direct sunlight or near a heater.
- Do not block ventilation holes in the UPS housing.

Installation

- Do not connect appliances or devices which would overload the UPS system (e.g. laser printers) to the UPS output sockets.
- Place cables in such a way that no one can step on or trip over them.
- Do not connect domestic appliances such as hair dryers to UPS output sockets.
- Connect the UPS system only to an earthed shockproof outlet which must be easily accessible and close to the UPS system.
- Please use only VDE-tested, CE-marked mains cable (e.g. the mains cable of your computer) to connect the UPS system to the building wiring shockproof outlet.
- Please use only VDE-tested, CE-marked power cables to connect the loads to the UPS system.
- When installing the equipment, ensure that the sum of the leakage current of the UPS and the connected devices does not exceed 3.5 mA.

Operation

- Do not disconnect the mains cable on the UPS system or the building wiring shockproof outlet during operations since this would cancel the protective earthing of the UPS system and of all connected loads.
- The UPS system features its own, internal power source (batteries). The UPS output sockets or output terminal blocks may be electrically live even if the UPS system is not connected to the building wiring outlet.
- In order to fully disconnect the UPS system, first press the **OFF/Enter** button to disconnect the mains.
- Prevent fluids and foreign objects from entering the inside of the UPS system.

Maintenance, Service, and Faults

- The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.



WARNING! Risk of electric shock. Even after the unit is disconnected from the mains (building wiring outlet), components inside the UPS system are still connected to the battery and electrically live and dangerous.

- Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high energy capacitors such as Bus capacitors.
- Only persons that are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.



WARNING! Risk of electric shock. The battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground. Before touching, please verify that no voltage is present!

- Batteries may cause electric shock and have a high short circuit current. Please take the precautionary measures specified below and any other measures necessary when working with batteries:
 - Remove wristwatches, rings, and other metal objects.
 - Use only tools with insulated grips and handles.
- When changing batteries, install the same number and same type of batteries.
- Do not attempt to dispose of batteries by burning them. This could cause battery explosion.
- Recycle or dispose of batteries properly according to local regulations.
- Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.
- Please replace fuses only with the same type and amperage in order to avoid fire hazards.
- Do not dismantle the UPS system.

2 Product Description

The Vertiv™ Liebert® GXT5 is a compact, online uninterruptible power system (UPS) that continuously conditions and regulates its output voltage. The Liebert® GXT5 supplies computers and other sensitive equipment with clean sine wave input power.

Upon generation, AC power is clean and stable. However, during transmission and distribution it is subject to voltage sags, spikes, and complete failure that may interrupt computer operations, cause data loss, and damage equipment.

The Liebert® GXT5 protects equipment from these disturbances. The Liebert® GXT5 continuously charges its batteries from the mains, enabling it to supply power to connected loads, even when the mains fail.

2.1 UPS Features and Available Models

The Liebert® GXT5 includes the following features. **Table 2.1** below, lists the available models and power ratings.

- Enhanced load capacity with an output power factor of 1.
- Optional tower or rack installation to meet varying installation requirements.
- Adapts to areas with unstable power mains supply via high frequency double conversion topology structure, with high input power factor, wide input voltage range, and output immune to grid interference.
- Programmable terminals protect key devices when load is heavy.
- Operation and display panel with model specific color LCD offers simple configuration and control of the UPS.
- ECO mode and smart sleep mode help you save the maximum amount of energy.

Table 2.1 UPS Models and Power Ratings

Model Number	Nominal Power Rating at 230 V Input	Model Number	Nominal Power Rating at 120 V Input
GXT5-1000IRT2UXLB	1000 VA/1000 W	GXT5-1000LVRT2UXLB	1000 VA/1000 W
GXT5-1500IRT2UXLB	1500 VA/1500 W	GXT5-1500LVRT2UXLB	1500 VA/1350W
GXT5-2000IRT2UXLB	2000 VA/2000 W	GXT5-2000LVRT2UXLB	2000 VA/1800 W
GXT5-3000IRT2UXLB	3000 VA/3000 W	GXT5-3000LVRT2UXLB	3000 VA/2700 W

2.2 Front Panels

The various Liebert® GXT5 models have the same general appearance, with the main difference being the receptacle types on the rear panel.

Figure 2.1 Front View



2.3 Rear Panels

The following figures detail the rear panel features for each Liebert® GXT5 model.

Figure 2.2 GXT5-1000LVRT2UXLB Rear Panel


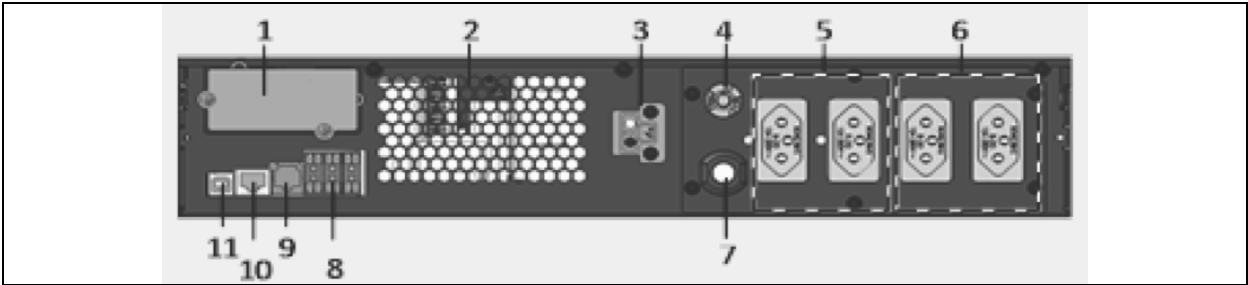


Figure 2.3 GXT5-1000IRT2UXLB Rear Panel

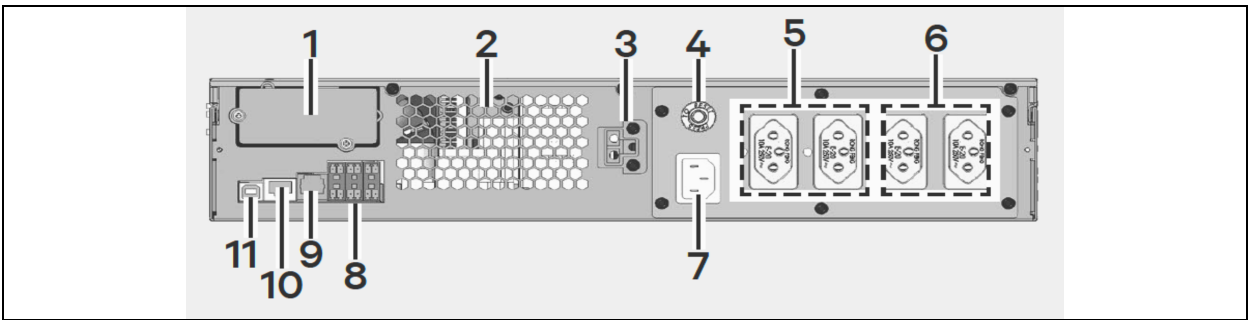

Item	Description
1	Vertiv™ Liebert® IntelliSlot™ port
2	Ventilation Hole
3	External-battery connector
4	Input circuit breaker
5	Non programmable output receptacles
6	Programmable output receptacles
7	Input power plug and cable
8	Dry contacts, Battery Detection (3), REPO input (REPO)
9	RS-232 port Used for CLI
10	RS-485 port Used for external temperature sensors
11	USB port

Figure 2.4 GXT5-1500LVRT2UXLB Rear Panel


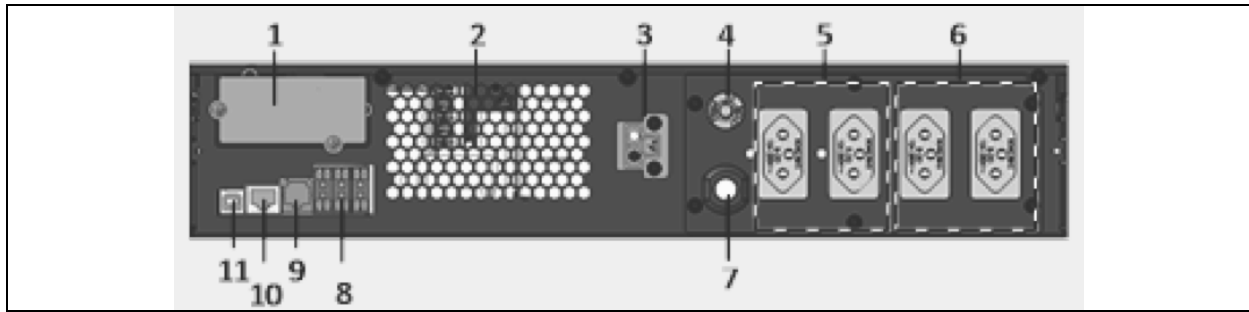


Figure 2.5 GXT5-1500IRT2UXLB Rear Panel

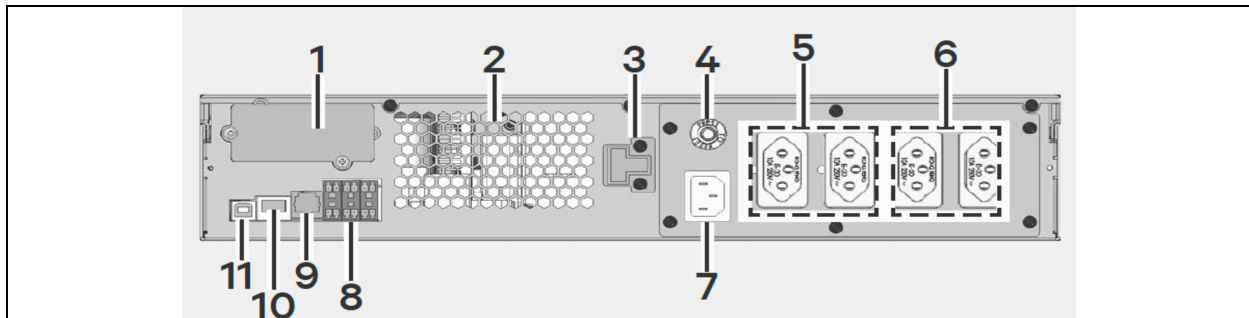

Item	Description
1	Vertiv™ Liebert® IntelliSlot™ port
2	Ventilation Hole
3	External battery connector
4	Input circuit breaker
5	Non programmable output receptacles
6	Programmable output receptacles
7	Input power plug and cable
8	Dry contacts, Battery Detection (3), REPO input (REPO)
9	RS 232 port Used for CLI
10	RS 485 port Used for external temperature sensors
11	USB port

Figure 2.6 GXT5-2000LVRT2UXLB Rear Panel


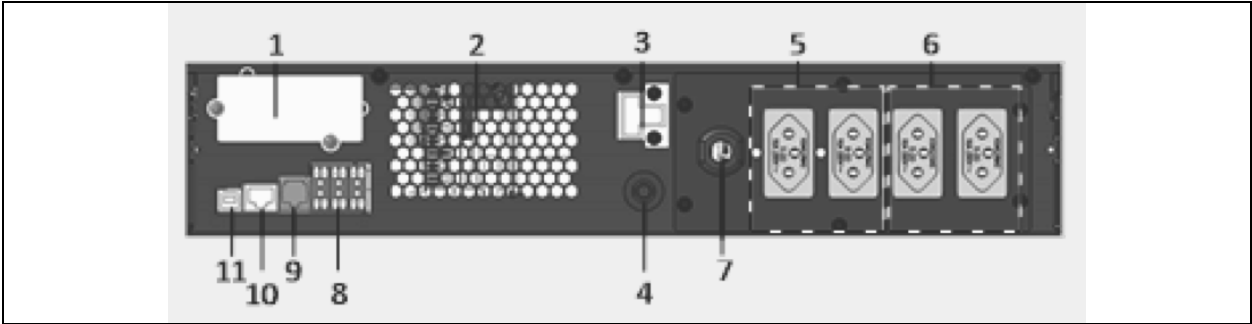


Figure 2.7 GXT5-2000IRT2UXLB Rear Panel

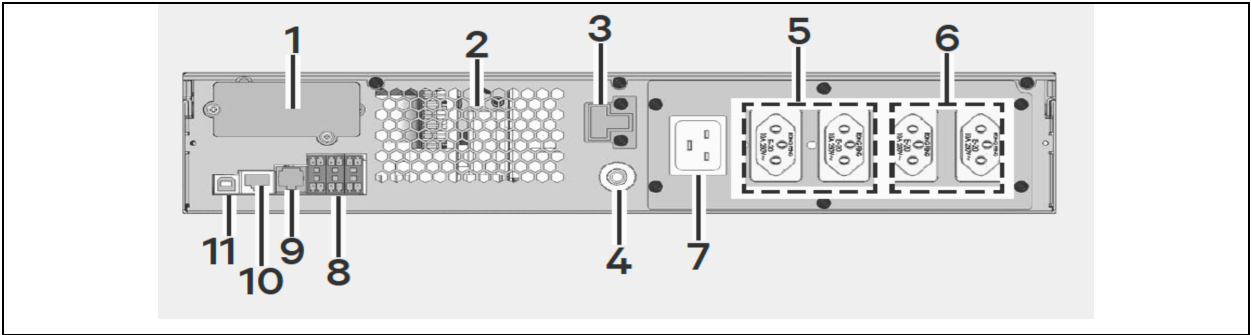

Item	Description
1	Vertiv™ Liebert® IntelliSlot™ port
2	Ventilation Hole
3	External battery connector
4	Input circuit breaker
5	Non programmable output receptacles
6	Programmable output receptacles
7	Input power plug and cable
8	Dry contacts, Battery Detection (3), REPO input (REPO)
9	RS-232 port Used for CLI
10	RS 485 port Used for external temperature sensors
11	USB port

Figure 2.8 GXT5-3000LVRT2UXLB Rear Panel


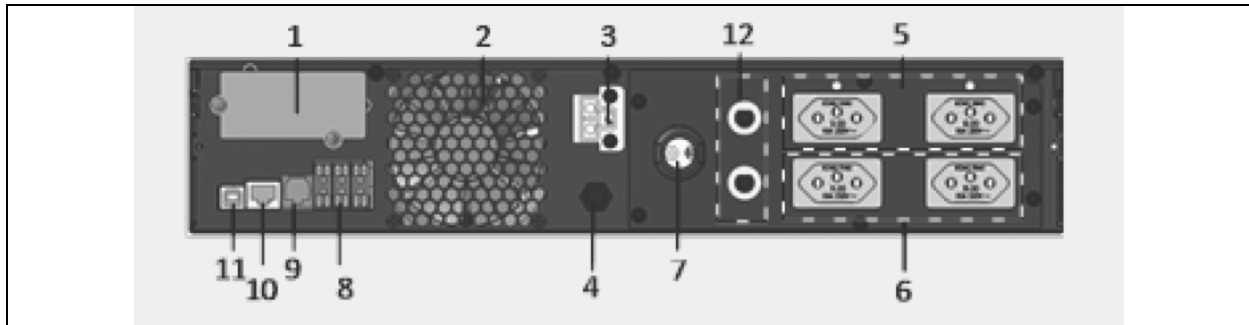


Figure 2.9 GXT5-3000IRT2UXLB Rear Panel

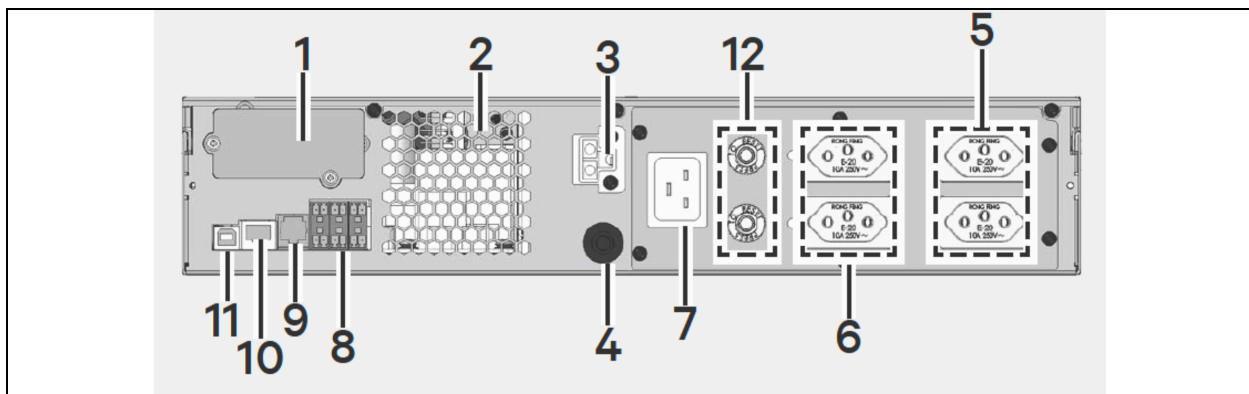


Item	Description
1	Vertiv™ Liebert® IntelliSlot™ port
2	Ventilation Hole
3	External battery connector
4	Input circuit breaker
5	Non programmable output receptacles
6	Programmable output receptacles
7	Input power plug and cable
8	Dry contacts, Battery Detection (3), REPO input (REPO)
9	RS-232 port Used for CLI
10	RS-485 port Used for external temperature sensors
11	USB port
12	Output circuit breakers

2.4 Internal Battery Packs

An example of the Liebert® GXT5 internal battery packs is shown in **Figure 2.10** below . They are located behind the access door on the front of the UPS. 3 kVA and below units have 1 battery pack. The battery pack size varies based on capacity.

Figure 2.10 Internal Battery Pack

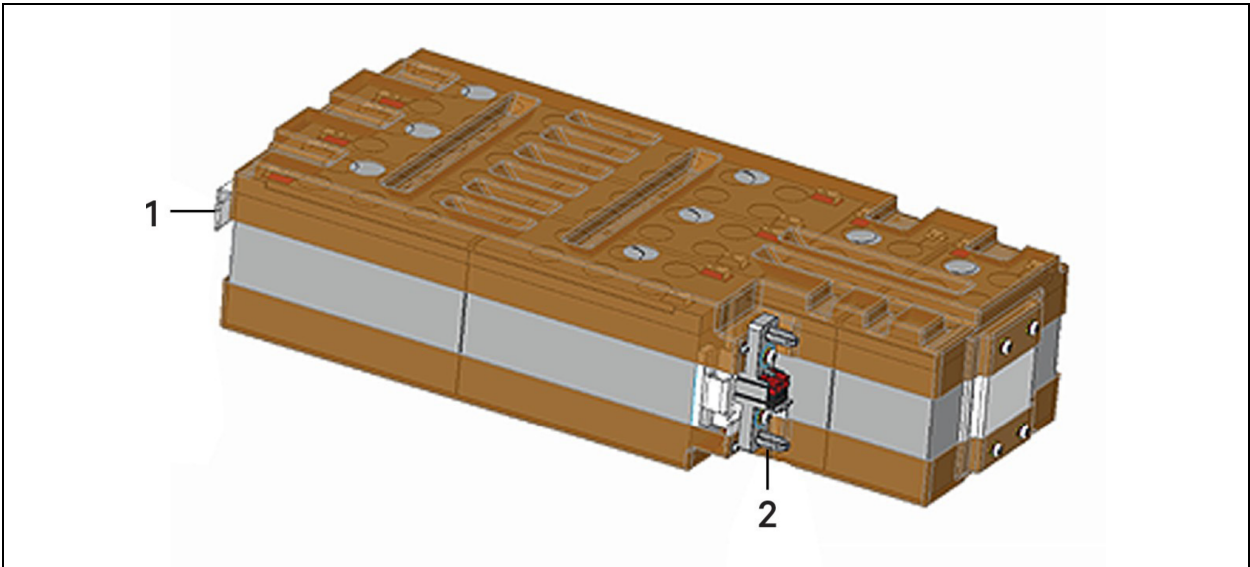

Item	Description
1	Handle
2	Connector

2.5 Major Internal Components and Operating Principle

Figure 2.11 on the facing page , shows the UPS operating principle. **Table 2.2** on the facing page describes the function of the major components in the UPS.

NOTE: **Figure 2.11** on the facing page , is one example of basic operation. The actual I/O connections for the various models may be divided into different types. See [Input/Output Connections](#) on page 18.

Figure 2.11 Basic Operating Principle Diagram

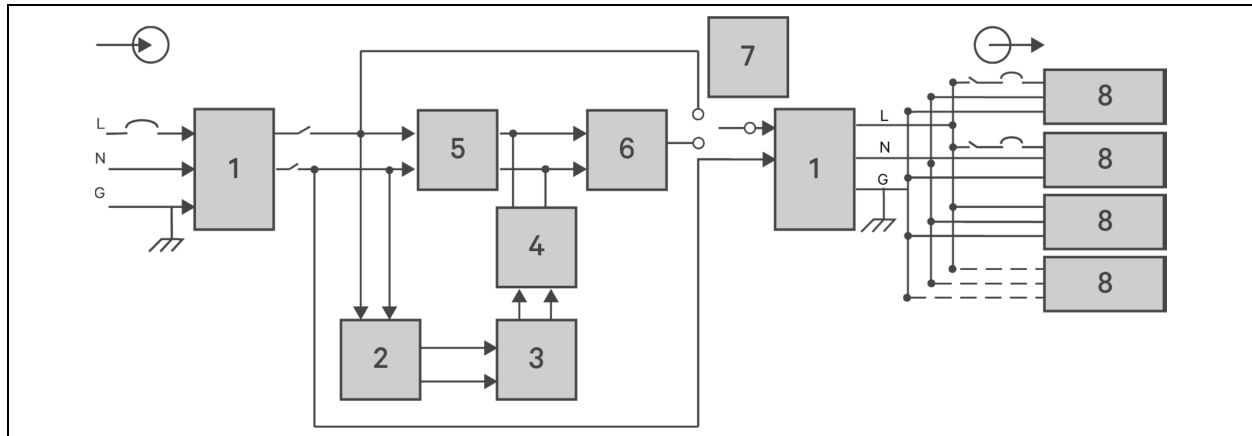


Table 2.2 Major Components

Item	Component	Operation / Function
1	Transient Voltage Surge Suppression (TVSS) and EMI/RFI Filters	Provide surge protection. Filter electromagnetic interference (EMI) and radio frequency interference (RFI). Minimize surges or interference present in the utility power and protect devices connected on the same branch as the UPS.
2	Battery Charger	Regulates input AC power to continuously float charge the batteries. Batteries are charged when the UPS is plugged in, even when not powered on.
3	Batteries	Valve regulated, non spillable, lead acid batteries. NOTE: To maintain battery design life, operate the UPS in an ambient temperature of 59 °F to 77 °F (15 °C to 25 °C).
4	DC to DC Converter	Raises the DC voltage from the battery to the optimum operating voltage for the inverter. This allows the inverter to operate continuously at its optimum efficiency and voltage, thus increasing reliability.
5	Rectifier/Power Factor Correction (PFC) Circuit	In normal operation, converts utility AC power to regulated DC power for use by the inverter while ensuring that the wave shape of the input current used by the UPS is near ideal. Extracting this sine wave input current ensures efficient use of utility power and reduces reflected harmonic distortion making cleaner power available to devices that are not protected by the UPS.
6	Inverter	In normal operation, inverts the DC output of the PFC circuit into precise, regulated sine wave AC power. When utility power fails, the inverter receives DC power from the DC to DC converter. In either operating mode, the UPS inverter remains on line, generating clean, precise, regulated AC output power.
7	Internal Bypass	In the unlikely event of UPS failure such as overload or over temperature, automatically transfers the connected load to bypass. To manually transfer the connected load from inverter to bypass, see Transferring from Normal to Bypass Mode on page 28.
8	Outlet group	Output receptacles.

NOTE: The bypass power path does not protect the connected equipment from disturbances in the utility power supply.


2.6 UPS States and Operating Modes

NOTE: See [LED Indicators](#) on page 31, for description of the run indicator and alarm indicator LEDs mentioned in this section.

2.6.1 Normal Mode

When utility power is normal, Normal mode employs the rectifier and inverter to provide voltage and frequency stabilized power to the load. The charger charges the battery in normal mode. On the front panel display, the run indicator (green) is ON, the alarm indicator is OFF, and the buzzer is silent. **Figure 2.12** below shows the diagram of normal mode.

Figure 2.12 Normal Mode Operation

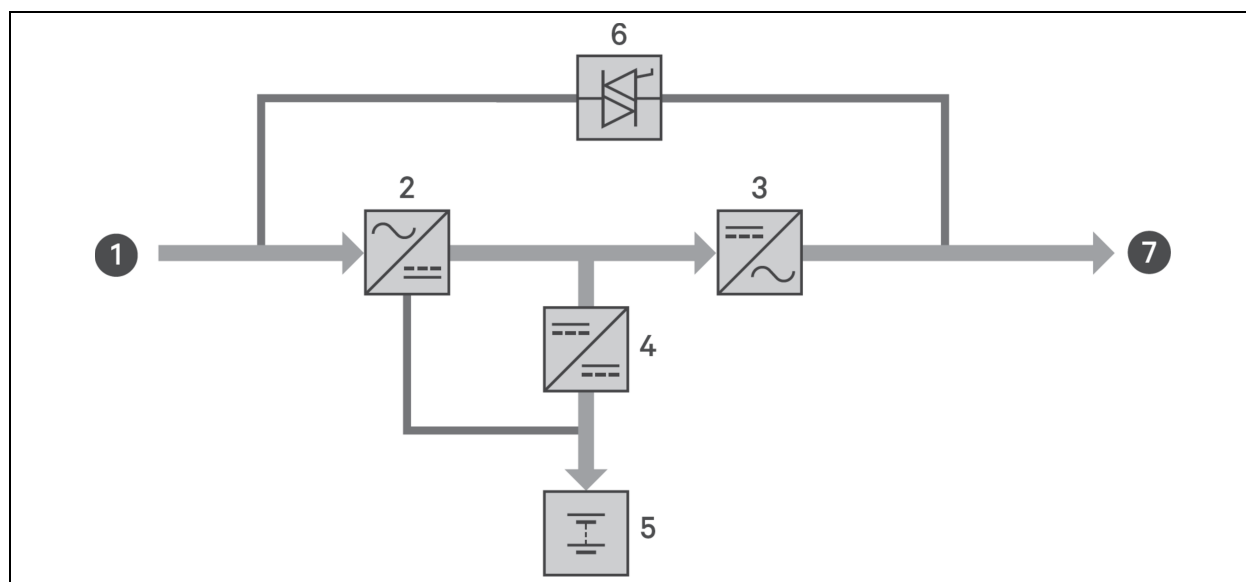


Item	Description
1	Mains/Utility input (by-pass input)
2	Rectifier/PFC
3	Inverter
4	Battery charger
5	Battery
6	Bypass static switch
7	UPS output

2.6.2 Bypass Mode

Bypass mode supplies power to the load from the bypass source (utility power) if an overload or fault occurs during normal operation. On the front panel display, the run indicator (green) is ON, the alarm indicator (yellow) is ON, and the buzzer beeps once every 2 seconds. The LCD *Flow* screen displays *On Bypass*. **Figure 2.13** below shows the diagram of bypass mode.

NOTE: If utility power fails or if the utility voltage goes outside of the permissible range during bypass mode operation, the UPS shuts down and no output is supplied to the load.

Figure 2.13 Bypass Mode Operation

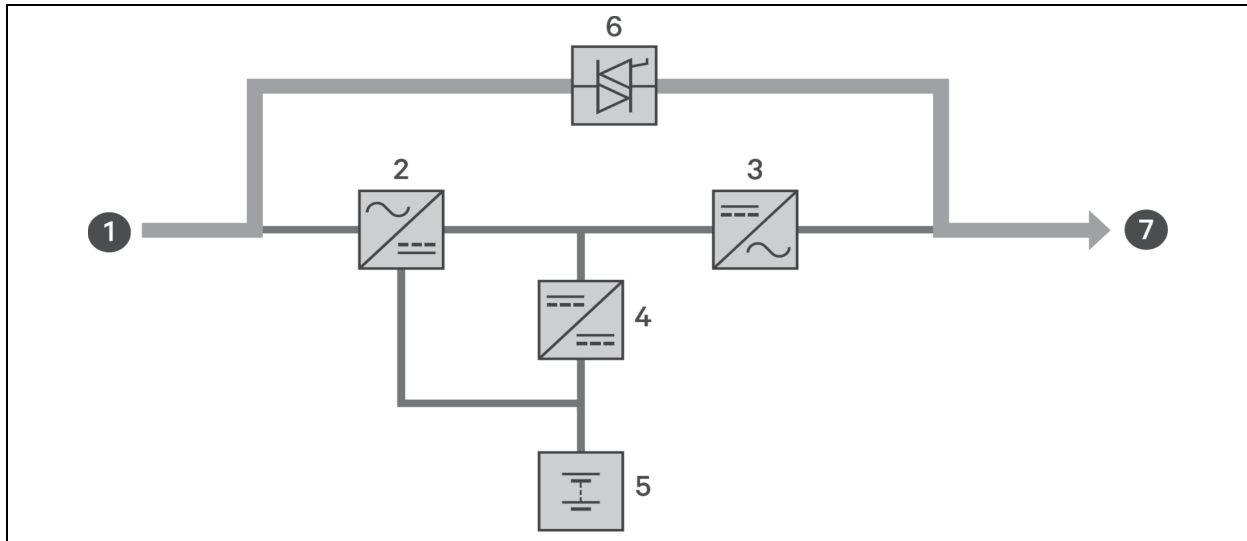

Item	Description
1	Mains/Utility input (by-pass input)
2	Rectifier/PFC
3	Inverter
4	Battery charger
5	Battery
6	Bypass static switch
7	UPS output


2.6.3 Battery Mode

Battery mode supplies battery power to the load if utility power fails or if the utility voltage goes outside of the permissible range. On the front panel display, the run indicator (green) is ON, the alarm indicator (yellow) is ON, and the buzzer beeps once every 2 seconds. The LCD *Flow* screen displays *On Battery*. **Figure 2.14** below shows the diagram of battery mode.

NOTE: The batteries are fully charged before shipment. However, transportation and storage inevitably cause some loss of capacity. To ensure adequate backup time, it is recommended to charge the batteries for at least 8 hours before first start up.

NOTE: If utility power fails and the batteries are charged, you may cold start the UPS in battery mode and use battery power to extend system availability for a time.

Figure 2.14 Battery Mode Operation

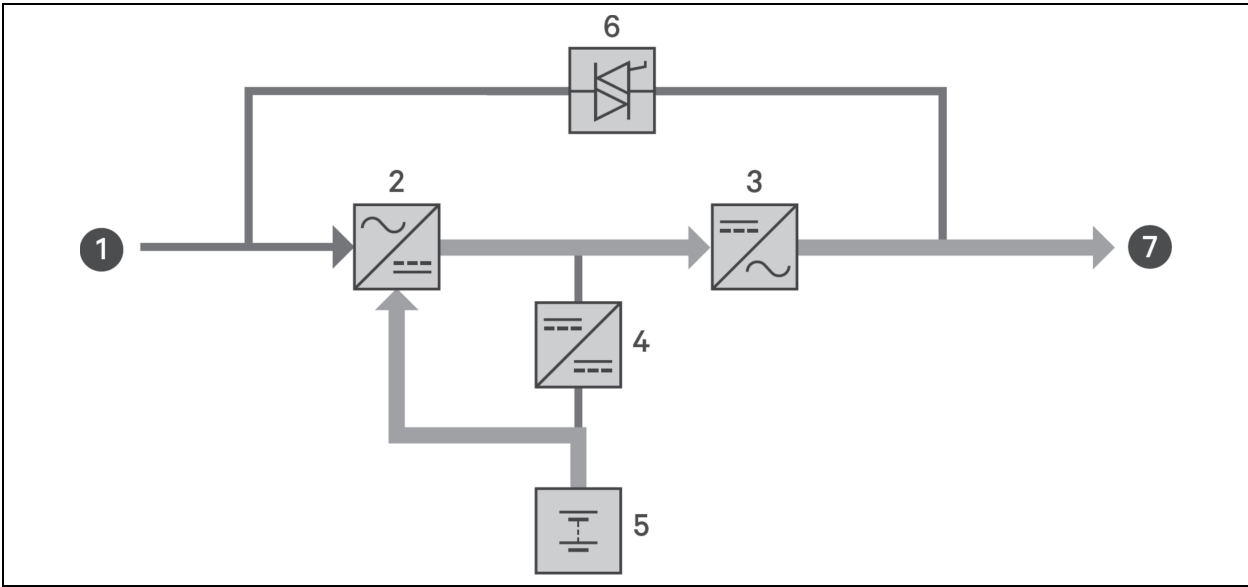

Item	Description
1	Mains/Utility input (by-pass input)
2	Rectifier/PFC
3	Inverter
4	Battery charger
5	Battery
6	Bypass static switch
7	UPS output

2.6.4 ECO Mode

NOTE: ECO mode is only available on a single UPS system.

The energy saving ECO mode reduces power consumption by powering the load via bypass if the bypass voltage is normal or by powering the load via the inverter when the bypass voltage is abnormal. You can use ECO mode to power equipment that is not sensitive to power grid quality to via bypass and reduce power consumption.

NOTE: During ECO mode, if a bypass failure or abnormal bypass voltage notification appears when the output is not overloaded, the UPS will transfer to Normal Mode. However, if a notification showing bypass failure or abnormal bypass voltage appears when the output is overloaded, the UPS will shutdown the bypass and therefore the load will shutdown.

NOTE: The UPS has no user serviceable parts. If the UPS malfunctions and requires service, contact your local Vertiv representative.

This page intentionally left blank

3 Installation

Do not start the UPS until after the installation is finished, the system is commissioned by an authorized engineer, and the external input circuit breakers are closed.



WARNING! Risk of electric shock

Can cause equipment damage, injury and death. Before beginning installation, verify that all external overcurrent protection devices are open (Off), and that they are locked out and tagged appropriately to prevent activation during the installation, verify with a voltmeter that power is Off and wear appropriate, OSHA approved personal protective equipment (PPE) per NFPA 70E. Failure to comply can cause serious injury or death. Before proceeding with installation, read all instructions. Follow all local codes.

3.1 Unpacking and Inspection

Unpack the UPS and conduct the following checks:

- Inspect the UPS for shipping damage. If any shipping damage is found, report it to the carrier and your local Vertiv representative immediately.
- Check the accessories included against the packing list. If there is any discrepancy, contact your local Vertiv representative immediately.



CAUTION: The UPS is heavy (see [Specifications](#) on page 61, for the weight). Take proper precautions when lifting or moving the unit.

3.2 Pre-Installation Preparation

- Install the UPS indoors in a controlled environment, where it cannot be accidentally turned Off. The installation environment should meet the specifications listed in [Specifications](#) on page 61.
- Place the UPS in an area of unrestricted air flow around the unit, away from water, flammable liquids, gases, corrosives, and conductive contaminants. Avoid direct sunlight.

NOTE: Operating the UPS in temperatures above 77°F (25°C) reduces battery life.

3.2.1 Installation Clearances

Maintain at least 4 in. (100 mm) clearance in the front and rear of the UPS. Do not obstruct the air inlets on the front panel and rear panel of the UPS. Blocking the air inlets reduces ventilation and heat dissipation, shortening the service life of the unit.

3.3 Installing the UPS

The UPS may be installed as a tower or in a rack, depending on available space and use considerations. Determine the type of installation and follow the appropriate instructions. See [Tower Installation](#) on the next page or [Rack Installation](#) on the next page.


NOTE: When installing the UPS or making input and output connections, comply with all relevant safety codes and standards.

3.3.1 Tower Installation

To install the UPS as a tower:

1. Take the support bases out of the accessories box.

Figure 3.1 Support Bases

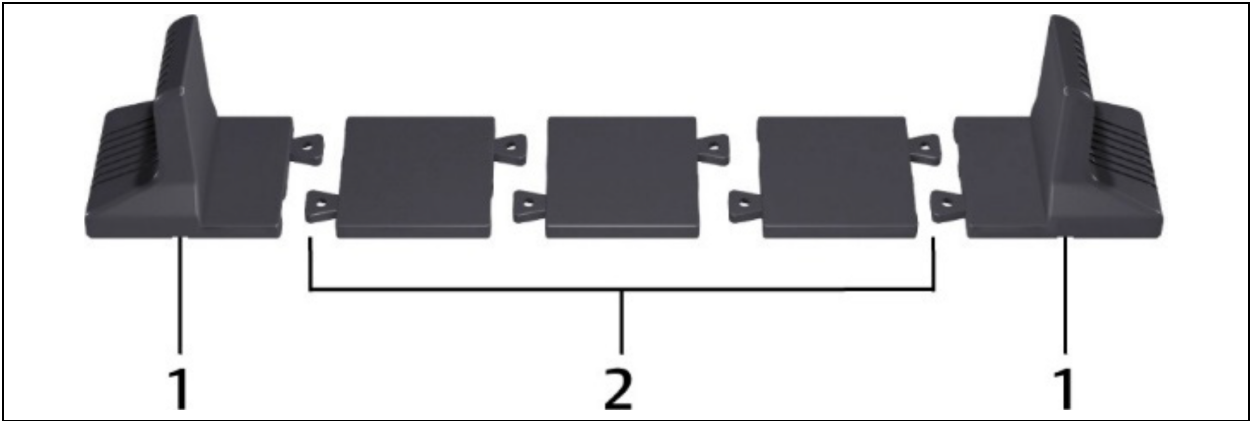


Item	Description
1	Support Bases
2	Spacers with Connectors

2. If optional external battery cabinets (EBC) will be connected, take out the spacers shipped with the battery cabinet.
3. Connect the spacers and the support bases as shown in **Figure 3.1** above . Each Liebert® GXT5 requires 2 support bases, one in the front and one in the rear.
4. Place the Liebert® GXT5 and any battery cabinets on the 2 support bases.

3.3.2 Rack Installation

When installed in a rack enclosure, the Liebert® GXT5 UPS and EBC must be supported by a shelf or rack mount rails. Because different rack mount options install in various ways, refer to the installation instructions provided with the rack mount kit.



CAUTION: The Liebert® GXT5 is heavy. The UPS must be installed as near the bottom of a rack as possible. If placed too high, it can make the rack top heavy and prone to tipping over. For unit weights, see [Specifications](#) on page 61.

3.4 Installing External Battery Cabinets

Optional, EBCs may be connected in parallel to the UPS to provide additional battery run time. For approximate battery run times with additional EBCs, see [Battery Run Times](#) on page 64. EBCs are placed on one side of the UPS in a tower configuration or stacked beneath the UPS in a rack configuration. Up to 10 EBCs may be connected to the UPS, and up to 6 may be detected using EBC auto-detection.

For applications where the number of EBCs exceeds 6 or for legacy applications where EBC auto detection is not possible, contact Vertiv service for assistance.



WARNING! Risk of electric shock

Can cause injury or death. Disconnect all local and remote electric power supplies before working with the UPS. Ensure that the unit is shutdown and power has been disconnected before beginning any maintenance.



CAUTION: The EBCs are heavy, see [Specifications](#) on page 61. Take proper precautions when lifting them.

To install the EBCs:


1. Inspect the EBC for freight damage. Report damage to the carrier and your local dealer or Vertiv representative.
2. For tower installation:
 - An additional set of support base extensions ships with each EBC.
 - See the steps in [Tower Installation](#) on the previous page, to connect the support extenders and install the bases.
- or -
3. For rack installation:
 - Rack mount hardware ships with the EBC.
 - Refer to the instructions included with the rack mount kit to install.

NOTE: Optional slide rails and securing hardware are sold separately. Contact your Vertiv representative for options and Vertiv Technical Support for assistance.

4. Verify that the EBC breaker is in the *Off* position.
5. Connect the supplied EBC cables to the rear of the cabinet, then to the rear of the UPS, see **Figure 3.2** on the next page .
6. Turn the EBC breaker to the *On* position.
7. Verify the circuit breaker on the EBC is in the *On* position.
8. The additional backup run time is now enabled.

NOTE: When removing an EBC, turn off the circuit breaker on the rear of the cabinet before disconnecting the cable.

NOTE: If shipping or storing the UPS for an extended time, disconnect the EBCs to minimize standby current drain on the batteries and help maintain design life.

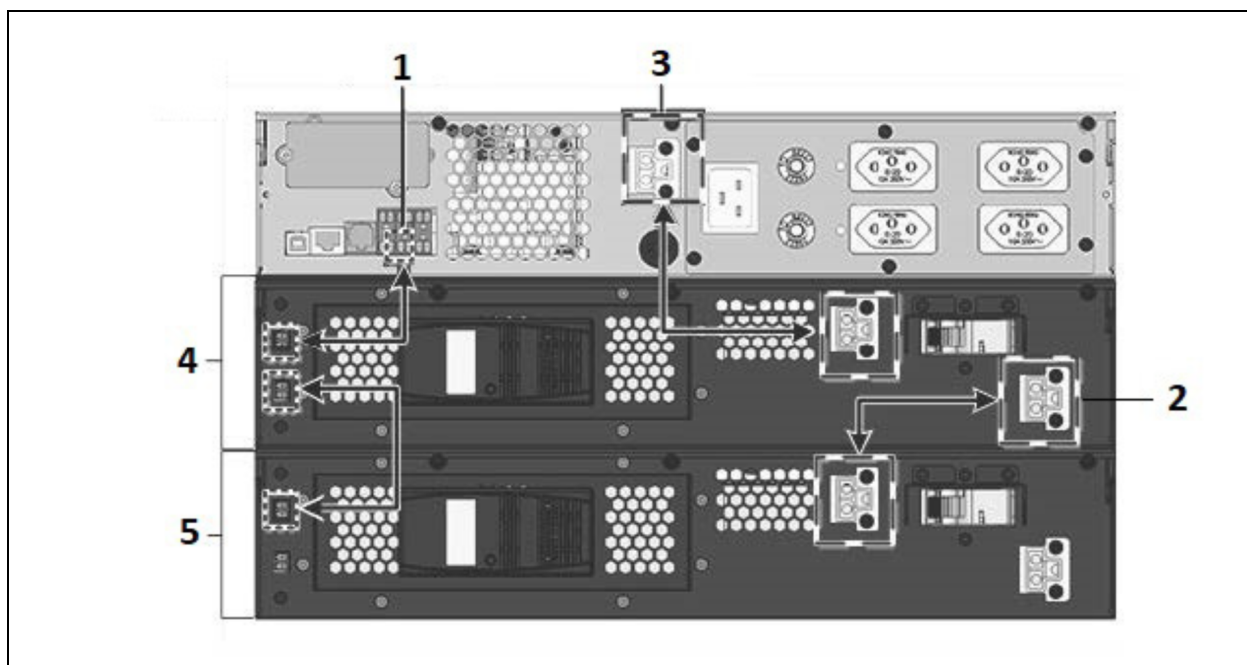Figure 3.2 Example of EBCs Connected to the UPS

Item	Description
1	EBC detection dry contact port see Table 5.1 on page 30 , for details.
2	EBC connector.
3	EBC detection port.
4	External battery cabinet.
5	External battery cabinet.

3.5 Input/Output Connections

3.5.1 Branch Circuit Breaker


The installer must provide an upstream branch circuit breaker, see **Table 3.1** on the facing page , for the ratings. The input circuit breaker on the distribution box and the output circuit breaker on the rear of the power distribution box disconnect all power between the main cabinet and the distribution box. **Figure 3.3** on the facing page shows a diagram of the circuit breakers.

Observe the following guidelines and specifications when making the hard wire input and output connections:

- Provide circuit breaker protection according to local codes. The mains disconnect should be within sight of the UPS or have an appropriate lock out.
- We recommend using a Class D circuit breaker.
- Maintain service space around the UPS or use flexible conduit.
- Provide output distributions panels, circuit breaker protection, or emergency disconnects according to local codes.
- Do not install input and output wiring in the same conduit.

Table 3.1 Branch Circuit Breaker Rating

Unit Rating	Recommended Breaker Rating
1000 VA	10 A
1500 VA	
2000 VA	16 A
3000 VA	20 A

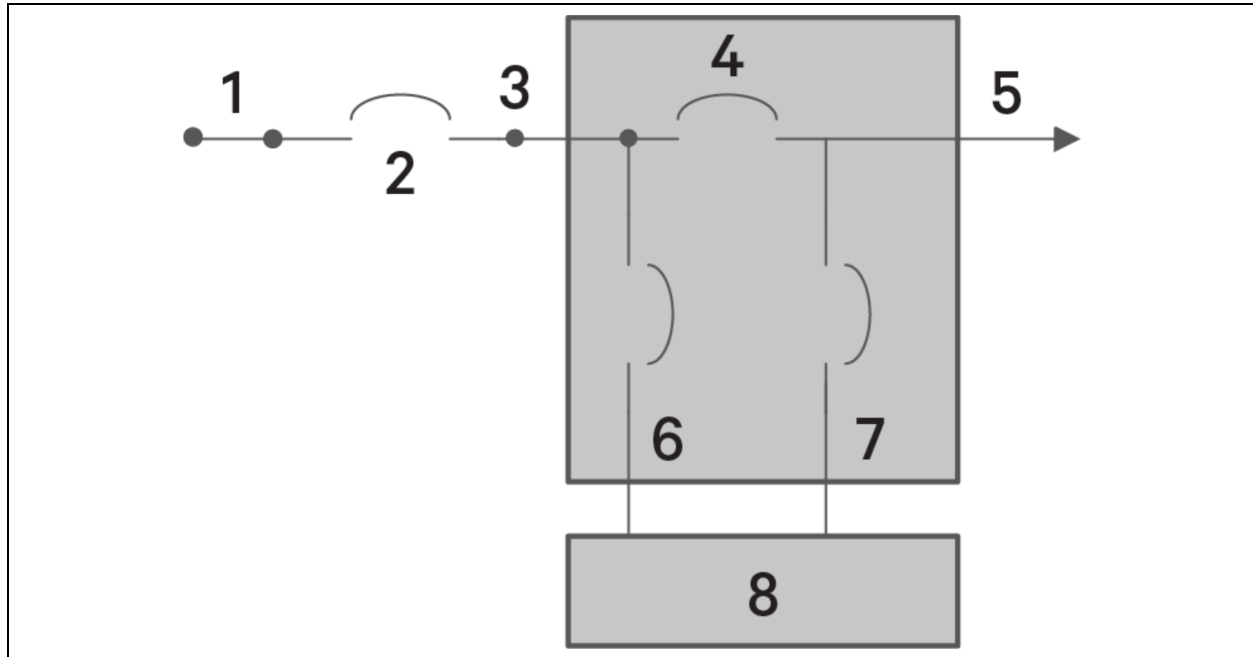Figure 3.3 Circuit Breakers Diagrams

Item	Description
1	Mains/Utility
2	External branch circuit breaker
3	Input
4	Maintenance bypass circuit breaker
5	Output
6	Input circuit breaker
7	Output circuit breaker
8	UPS PFC, battery inverter

3.6 Communication Connections

The UPS offers several communication interfaces and ports.

NOTE: We recommend that signal cable lengths be less than 10 ft (3 m), and are kept away from power cabling.

3.6.1 Connecting IntelliSlot communication

The Liebert® IntelliSlot™ RDU101 provides SNMP and/or RS-485 monitoring of the UPS across the network and/or building management system.

See the appropriate figure for your model in [Rear Panels](#) on page 4, for the location of the card port.

To install an IntelliSlot Card:

1. Remove the screws from the slot cover plate and remove the plate.
2. Insert the card into the slot, and secure with the screws that held the cover plate.


To make connections to the card, refer to the Installer/User Guide for the appropriate IntelliSlot card available www.vertiv.com.

3.6.2 Connecting to the Dry Contact Port

The UPS includes a dry contact port. See the appropriate figure for your model in [Rear Panels](#) on page 4, for the location of the port. **Figure 3.4** below, shows the ports and **Table 3.2** on the facing page describes each port.

The I/O dry contact port ratings are 125 Vac, 0.5 A; 30 Vdc, 1 A.

Figure 3.4 Dry contact Port and Pin Layout

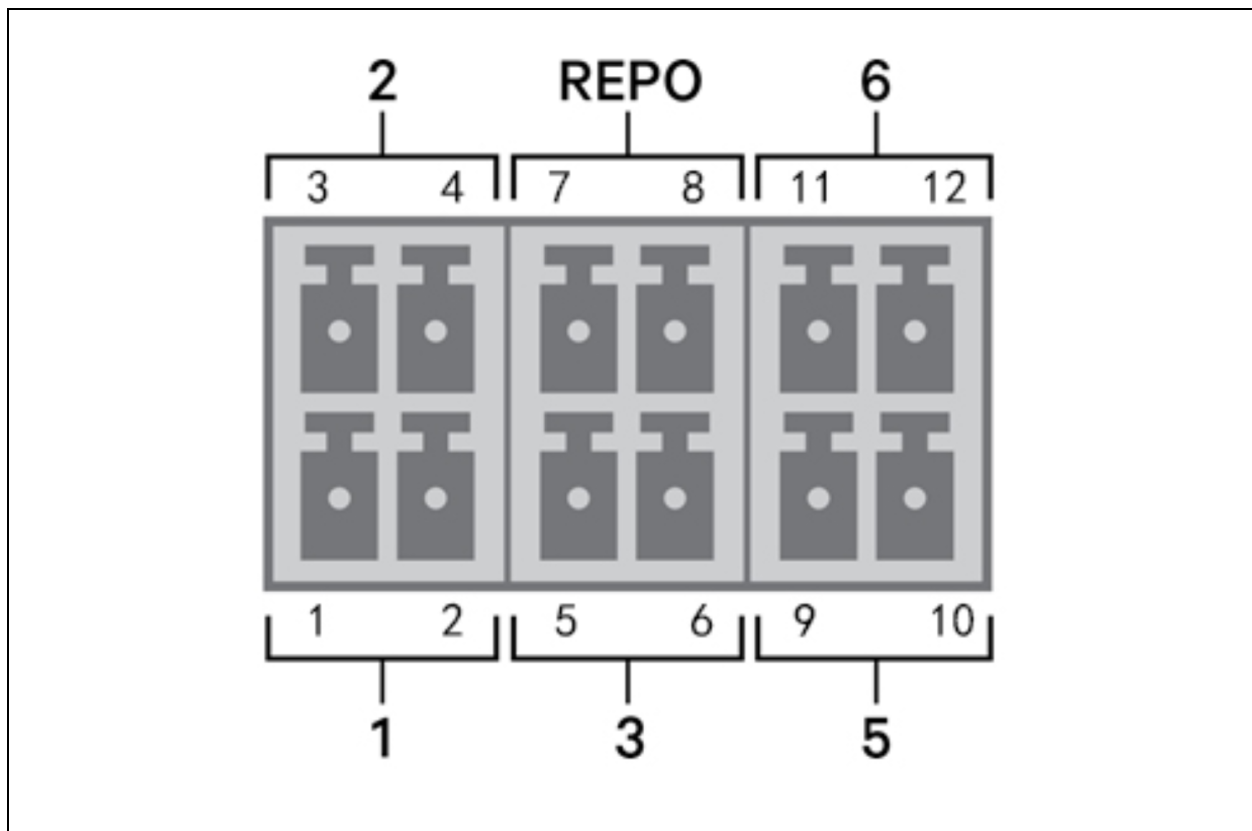

NOTE: Pins 7 and 8 are shorted before delivery.

NOTE: The emergency power off (EPO) action of the UPS closes the rectifier, inverter and static bypass, but it cannot disconnect the UPS mains input inside. To completely disconnect the UPS, disconnect the upstream input circuit breaker when generating the EPO. For details on REPO connection and operation, see [Connecting a Remote Emergency Power Off \(REPO\) Switch](#) on the next page.

Table 3.2 Dry Contact Connection and Pin Out Descriptions

Port No	Port Name	Pin No.	Pin Name	Description
1	Input 1	1	Remote Comms Shutdown 1	User configurable dry contact input that can be set to trigger the events below. The user can also select the dry contact as either NO or NC see System Parameter Options on page 40. When NO, Pins 1 and 2 are shorted to trigger the event. When NC, Pins 1 and 2 are opened to trigger the event. Options are: <ul style="list-style-type: none"> • Disable (default) • Battery mode shutdown - If the UPS is running on batteries and this input is triggered, the UPS shuts down • Any mode shutdown - If this input is triggered, the UPS shuts down regardless of current operating mode
		2	Signal Ground	Signal Ground
2	Input 1	3	Remote Comms Shutdown 2	User configurable dry contact input that can be set to trigger the events below. The user can also select the dry contact as either NO or NC (See System Parameter Options on page 40). When NO, Pins 3 and 4 are shorted to trigger the event. When NC, Pins 3 and 4 are opened to trigger the event. Options are: <ul style="list-style-type: none"> • Disable (default) • Battery mode shutdown - If the UPS is running on batteries and this input is triggered, the UPS shuts down • Any mode shutdown
		4	Signal Ground	Signal Ground
3	Battery Detection	5	EBC Detection	Automatically detects number of external battery cabinets when pins 5 and 6 are connected to the detection port, see Installing External Battery Cabinets on page 16.
		6	EBC Detection	Automatically detects number of external battery cabinets when pins 5 and 6 are connected to the detection port, see Installing External Battery Cabinets on page 16.

Table 3.2 Dry Contact Connection and Pin Out Descriptions (continued)

Port No	Port Name	Pin No.	Pin Name	Description
REPO	REPO Input	7	+5V	REPO power supply, 5 Vdc 100 mA
5	Output 5	9,10	Remote Fault Alert 5	User configurable dry contact output that can be set to alert the user to the faults below. The user can also select the dry contact as either NO or NC. (See System Parameter Options on page 40) When NO, Pins 9 and 10 are shorted when the fault occurs. When NC, Pins 9 and 10 are opened when the fault occurs. Options are: <ul style="list-style-type: none"> • Low battery (default) • On battery • On bypass • UPS fault
6	Output 6	11,12	Remote Fault Alert 6	User configurable dry contact output that can be set to alert the user to the faults below. The user can also select the dry contact as either NO or NC. (See System Parameter Options on page 40) When NO, Pins 9 and 10 are shorted when the fault occurs. When NC, Pins 9 and 10 are opened when the fault occurs. Options are: <ul style="list-style-type: none"> • Low battery (default) • On battery • On bypass • UPS fault

3.6.3 Connecting a Remote Emergency Power Off (REPO) Switch

The UPS includes an EPO connection in the dry contact port. See the appropriate figure for your model in [Rear Panels](#) on page 4, for the location of the port.

UPS ships with a REPO jumper installed, allowing the UPS to operate as a normally closed switch system (fail safe). Opening the circuit disables the UPS. To connect a REPO switch that opens the circuit to shutdown the rectifier and inverter and power off the UPS, use a cable from the remote switch to plug into the REPO port on the UPS.

In normal conditions, the REPO switch cannot cut off the UPS input power. When the REPO switch trips, the UPS generates an alarm and immediately cuts off battery charging and output power. When the emergency condition is resolved, the UPS will not return to normal operation until you reset the REPO switch and manually power on the UPS.

To make the cable for the REPO connection:

Figure 3.5 on the facing page, shows the cable required to make the connection. We recommend using 18 AWG to 22 AWG (0.82 mm² to 0.33 mm²) copper core cable.

1. Remove the insulation from the end of two cables.
2. Insert the stripped end into the plug terminals 1 and 2 respectively, then press down the terminals. Make sure that the cables are secure in the plug to prevent failure because of loose contact.

To connect a UPS to the REPO switch:




CAUTION: To maintain safety (SELV) barriers and electromagnetic compatibility, signal cables should be shielded and run separately from power cables.

1. Connect one end of the cable to the remote switch, see **Figure 3.5** on the facing page.
2. Remove the factory installed jumper from pins 7 and 8 of the dry contact port on the UPS.

3. Connect the plug to pins 7 and 8.

Figure 3.5 Cable/Plug for Connecting REPO switch to UPS REPO Port

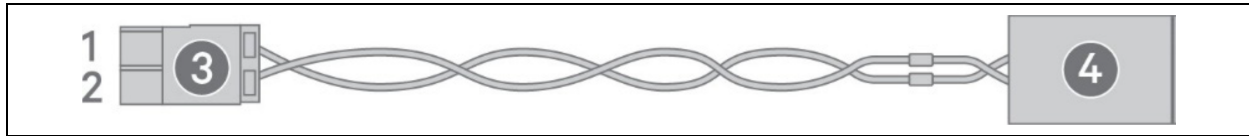

Item	Description
1	Terminal 1
2	Terminal 2
3	Plug (connects to REPO port on UPS)
4	REPO switch

3.6.4 Connecting a USB Cable

The UPS includes a USB type B connector. See the appropriate figure for your model in [Rear Panels](#) on page 4, for the location of the port.

The USB port connects the UPS to a server or other computer system. The USB port supports HID/CDC protocol. The CDC protocol is reserved for service software. To use the HID protocol for monitoring, download Power Assist from [Vertiv.com/Power Assist](https://Vertiv.com/Power-Assist).

3.6.5 Connecting CLI Communication Cables

The UPS supports the Vertiv command line interface for operation with Vertiv ACS and other third-party monitoring protocols. The RJ-45 port (labeled RS-232) is used for CLI connection. See the appropriate figure for your model in [Rear Panels](#) on page 4, for the location of the port. The pin out, described in below table is consistent with the ACS pin out.

Item	Description
1	NC
2	NC
3	TDX (Out)
4	GND
5	NC
6	RXD (in)
7	NC
8	NC

This page intentionally left blank

4 Operating the UPS

4.1 Silencing the Audible Alarm

The audible alarm may sound during UPS operation. To silence the alarm, press and hold the ESC button for 2 seconds. The button is located on the front panel display, see [Operation and Display Panel](#) on page 29.

4.2 Starting up the UPS

IMPORTANT! Do not start the UPS until after the installation is finished, the system is commissioned by an authorized engineer, and the external input circuit breakers are closed.



CAUTION: Starting the UPS applies mains/utility power to the output terminals. Make sure that the load power is safe and ready to accept power. If the load is not ready, isolate the load with the output terminal.

The UPS starts in Normal Mode.

To start the UPS:

1. If included on your UPS model, make sure the maintenance bypass switch is in the open (off) position and that the guard is secured in place.
2. Ensure that the REPO connector on the rear of the unit has a jumper between pins 7, 8 or that it is properly wired to an Emergency Power Off circuit (normally closed).
3. Make sure the breaker supplying power to the UPS is closed and close the input breaker on the rear of the UPS if included on your UPS model or, press the input circuit breaker reset buttons at the rear of the UPS.
4. Close all output breakers on the rear of the UPS (or in an external panel board, if used).
5. If EBCs are attached, close the breakers on the rear of each cabinet.
6. Power on the UPS by pressing and holding the Power button on the operation and display panel until the confirmation dialog appears. Use the Up/ Down arrows to select YES, then press **Enter**.
7. If this is the first time start up of the UPS, the Start up Guidance wizard opens to set the basic parameters of the UPS. Follow the prompts.

For detailed description of UPS display functions and settings, see [Operation and Display Panel](#) on page 29.

4.3 Transferring to Battery Mode

The UPS operates in Normal mode unless the mains/utility power fails or it is performing a battery self test, then it automatically transfers to Battery mode for the backup time available or the mains/utility power is restored. Once input power is restored, the UPS returns to Normal mode.

NOTE: Battery backup run times are listed in [Battery Run Times](#) on page 64.

4.4 Transferring from Normal to Bypass Mode

Press and hold the **Power** button for 2 seconds.

If the bypass power is within normal operating range, the option to continue to turn on or turn off the UPS displays:

- a. Use the arrow buttons to select *Turn to Bypass* or *Turn off UPS*, and press **Enter**.
- b. Use the arrow buttons to select *No* or *Yes*, then press **Enter** to confirm.

If the bypass power is outside normal operating range, the option turn off the UPS displays. Use the arrow buttons to select *No* or *Yes*, then press **Enter** to confirm.

4.5 Transferring from Bypass to Normal Mode

Press and hold the **Power** button for 2 seconds.

If the UPS is operating normally, without faults, the option to continue to turn on or turn off the UPS displays:

- a. Use the arrow buttons to select *Turn on UPS* and press **Enter**.
- b. Use the arrow buttons to select *No* or *Yes*, then press **Enter** to confirm.

NOTE: The UPS automatically switches back to normal mode after an *overheated* or *overloaded* fault is cleared and normal power is restored.

4.6 Transferring from Normal Mode to Stand-by

NOTE: Transferring to Stand-by Mode will turn off the UPS output to the load

Press and hold the **Power** button for 2 seconds.

If the UPS is operating normally, without faults, the option to continue to turn on or turn off the UPS displays:

- a. Use the arrow buttons to select *Turn off output*, and press **Enter**.
- b. Use the arrow buttons to select *No* or *Yes*, then press **Enter** to confirm.

4.7 Shutting Down the UPS Completely



WARNING! Risk of electric shock

Can cause injury or death. Disconnect all local and remote electric power supplies before working with the UPS. Ensure that the unit is shutdown and power has been disconnected before beginning any maintenance.

Press and hold the **Power** button for 2 seconds.

If the UPS is operating normally, without faults, the option to continue to turn on or turn off the UPS displays:

- a. Use the arrow buttons to select *Turn off UPS*, and press **Enter**.
- b. Use the arrow buttons to select *No* or *Yes*, then press **Enter** to confirm.
- c. Follow the on-screen instructions to disconnect input power to the UPS.
- d. The UPS will show *Shutdown in Process* for approximately 1 minute until the shutdown procedure is complete.

4.8 Remote Emergency Power Off (REPO)

REPO turns off the UPS in emergency conditions such as fire or flood. When an emergency occurs, the REPO switch turns off the rectifier and inverter and stops powering the load immediately. The battery stops charging and discharging.

To manually power Off in an emergency, disconnect the terminal connecting the REPO port on the rear of the UPS.


If mains/utility power is present, the UPS control circuit remains active even though output power is disabled. To remove all mains/utility power, disconnect the external main input circuit breaker.

This page intentionally left blank

5 Operation and Display Panel

 


 

The operation/display panel includes LED indicators, function keys, and an LCD interface to configure and control UPS operation.

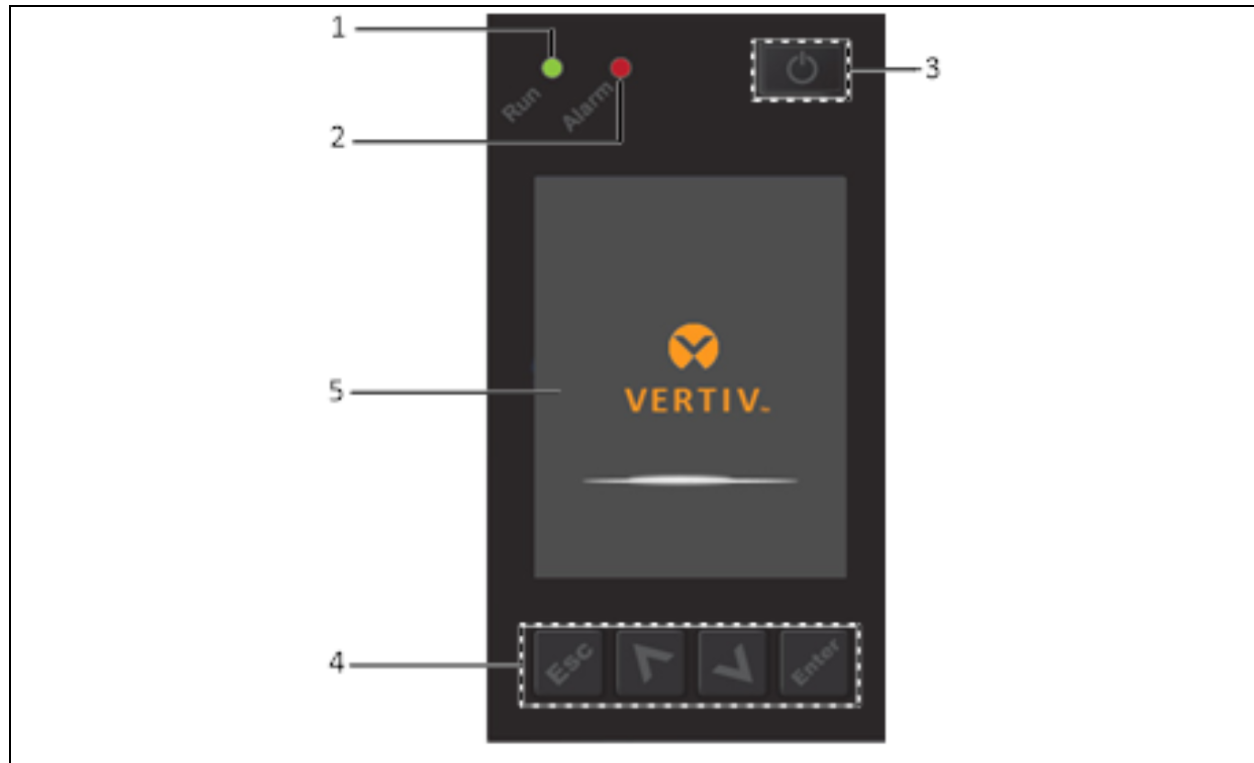Figure 5.1 UPS Front Panel Display



Item	Description
1	Run indicator LED, see LED Indicators on page 31.
2	Alarm indicator LED, see LED Indicators on page 31.
3	Power button, see Table 5.1 on the next page .
4	Menu keys, see Table 5.1 on the next page .
5	LCD panel.

Table 5.1 Display Panel Button Functions and Descriptions

Button	Function	Description
	Enter	Confirm or enter selection.
	Up	Move to previous page, increase value, move left.
	Down	Move to next page, decrease value, move right.
	Escape	Go back.
	Power	Power on the UPS, power off the UPS, transfer to Bypass Mode.

NOTE: While the UPS is operating, the LCD will dim and display a screen saver if there is no active alarm or user interaction for two minutes, see **Figure 5.2** on the facing page . After 4 minutes of inactivity, the display will blank to conserve power. If an alarm or fault occurs or if any button is pressed, the UPS flow screen displays.

Figure 5.2 LCD Screen Saver



5.1 LED Indicators

The LEDs on the front panel display indicate operation and alarm statuses of the UPS.

NOTE: When an alarm is indicated, an alarm message is logged on [Alarm Messages](#) on page 46, describes the alarm messages you may see. When a fault is indicated, front panel display list the fault, which are described in [Table 7.2](#) on page 59 .

Table 5.2 LED Functions

Indicator	LED Color	LED State	Indicates
Run indicator	Green	On	UPS output on
		Blinking	Inverter is starting
		Off	UPS has no output
Alarm indicator	Yellow	On	Alarm occurs
	Red	On	Fault occurs
	None	Off	No alarm, no fault

5.2 LCD Menu and Screens


The menu driven LCD user interface lets you browse the UPS status, view operating parameters, customize settings, control operation, and view alarm/event history. Use the function keys to navigate through the menu, and view statuses or select settings in the screens.

5.2.1 Start up and Flow Screens

At start up, the UPS executes a system test and displays the Vertiv logo screen for about 10 seconds, shown in **Figure 5.1** on page 29. After the test completes, an overview screen shows status information, the active (green) power path, and the inactive power path (gray).

NOTE: Figure 5.3 below is an example flow screen and does not reflect the actual values that you may see on your unit.

Figure 5.3 UPS Flow Screen

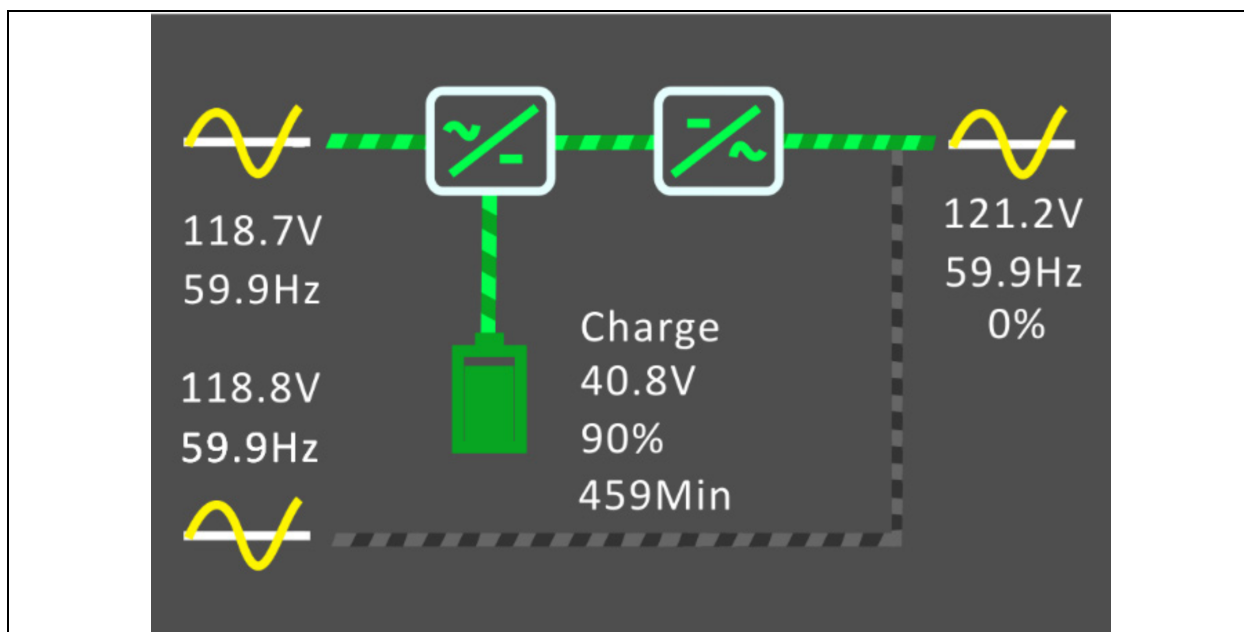

5.2.2 Main Menu


To access the main menu, press **Enter** while at the flow screen. **Table 5.3** below , describes the menu options, and **Figure 5.4** below , describes the display.

Use the arrow buttons to select the sub menu options, and press **Enter** to open the sub menu. Press ESC to return to the flow screen.

Table 5.3 Menu Options

Sub Menu	Description
Status	Voltage, current, frequency, and parameters for UPS components, see Status Screen on the next page
Settings	Display and system parameter settings, see Settings Submenu on page 37.
Control	UPS controls, see Control Screen on page 44.
Log	Current alarms and event history, see Log Screen on page 45.
About	Product and network information, see About Screen on page 48.
Maintenance	Service only, service password protected page for use only by Vertiv service representatives.

Figure 5.4 Main Menu

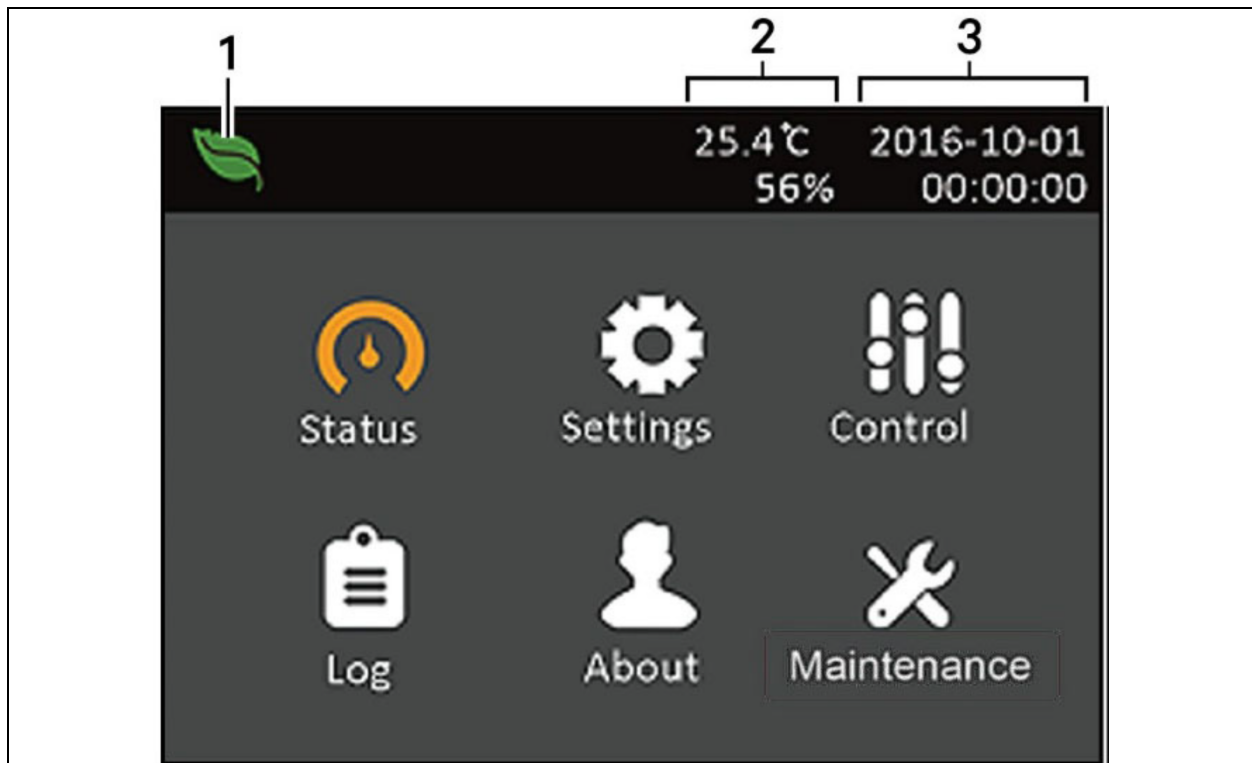

Item	Description
1	ECO mode indicator
2	Ambient Temperature
3	Date and Time


5.2.3 Status Screen

The status screen displays voltages, currents, frequencies, and parameters on individual tabs for input, bypass, battery, output, and load status.

To view the UPS status information:

- 1. At the main menu, select the Status icon, and press **Enter**.
- 2. Use the arrow buttons to move the cursor left/right and select a tab, then press **Enter** to display the status information for the selected tab.

Figure 5.5 Status screen Tabs

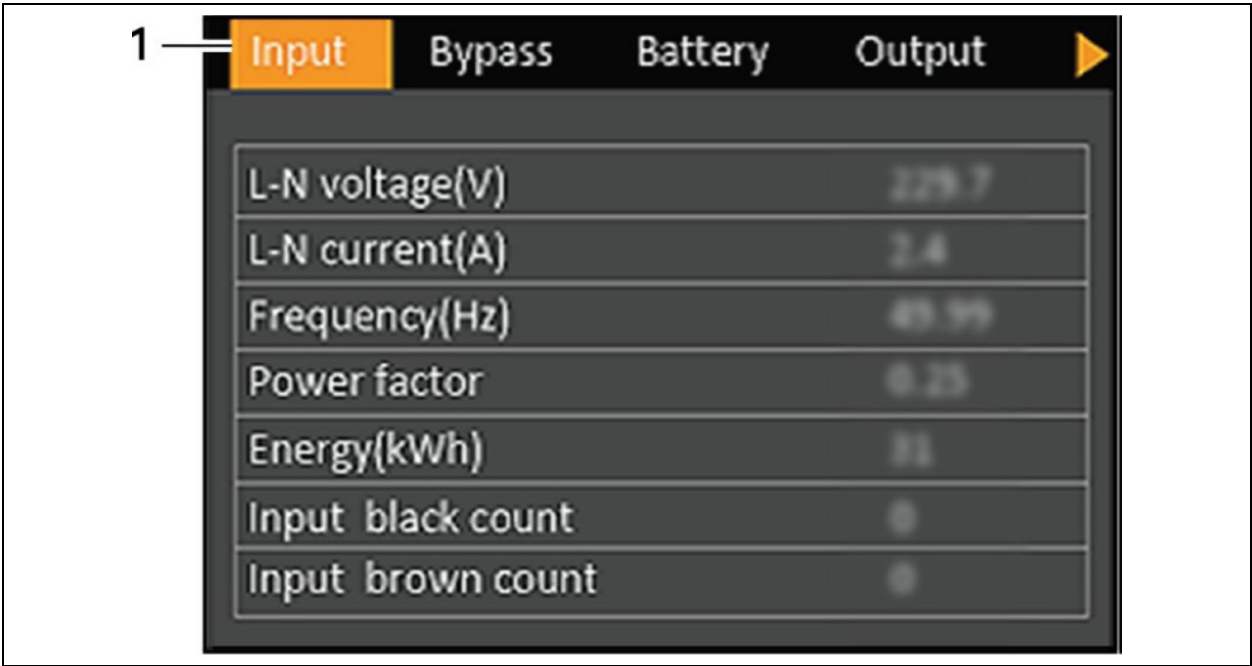

Item	Description
1	Screen tabs with Input tab selected

NOTE: Multiple phases are shown in multiple columns. For example, a unit with 3 phase input will display 3 columns of status data.

Input Status Options

L N voltage (V)

Line neutral voltage of input power.

L N current (A)

Line neutral current of input power.

Frequency (Hz)

Frequency of input of input power.

Power Factor

Power factor of the input power.

Energy (kWh)

Input power.

Input black count

The number times that the input voltage was lost or dropped below 60 VAC (black out). Resets to 0 when UPS is powered down.

Input brown count

The number of times that the input voltage was too low to support the load and the UPS was forced to switch to battery power (brown out). Resets to 0 when the UPS is powered down.

Bypass Status Options**L N voltage (V)**

Line neutral voltage of bypass power.

Frequency (Hz)

Frequency of bypass power.

Battery Status Options**Battery status**

Current battery state: charging, discharging, or fully charged.

Battery voltage (V)

Voltage of battery power.

Battery current (A)

Current of battery power.

Backup time (Min)

Amount of back-up time remaining for battery.

Remaining capacity (%)

Percent of capacity remaining for battery.

Discharge count

Number of discharges for the battery module.

Total discharge time (Min)

Number of minutes until battery is fully discharged.

Battery running time (Day)

Number of days the batteries have been in operation.

Battery replacement time

Date of last time battery was replaced.

External battery cabinet group No.

Number of EBCs connected.

Battery average temp (°C)

Average temperature of the battery.

Battery highest temp (°C)

Highest temperature battery has reached.

Battery lowest temp (°C)

Lowest temperature battery has reached.

Output Status Options

L N voltage (V)

Line neutral voltage of output power.

L N Current (A)

Line neutral current of output power.

Frequency (Hz)

Frequency of output power.

Energy (kWh)

Output power.

Load Status Options

Sout (kVA)

Apparent output power.

Pout (kW)

Active output power.

Power Factor

Power factor of output power.

Load percent (%)

Percentage of recent power rated to output power.

5.2.4 Settings Submenu

The settings screen consists of tabs that list UPS settings for configuration and adjusting parameters with tabs for:

- Output
- Battery
- Parallel
- Monitoring

NOTE: Do not change parameter settings or reset to factory defaults when powering off the UPS.

To modify UPS settings:

1. At the main menu, select the Settings icon, and press **Enter**.
2. Use the arrow buttons to move the cursor left/right and select a tab, then press **Enter** to display the parameter list for the selected tab.

Output Parameter Options

Voltage selection

Nominal voltage setting. Set the nominal system voltage to match the input voltage of the UPS.

- 200 V
- 208 V
- 220 V
- 230 V
- 240 V
- Autodetect

Startup on bypass

Allows the UPS to start up in bypass mode.

- Enable — Start the UPS in bypass mode
- Disable — Start the UPS in normal mode.

Frequency selection

Selects the frequency of the output.

- Auto, Bypass enabled — Automatically detects frequency of utility/mains power and sets the nominal frequency to match and bypass mode is enabled (default).
- Auto, Bypass disabled — Automatically detects frequency of utility/mains power and sets the nominal frequency to match and bypass mode is disabled.
- Frequency converter 50 Hz — Bypass mode is disabled and the UPS provides 50 Hz output from any qualified utility/mains power.
- Frequency converter 60 Hz — Bypass mode is disabled and the UPS provides 60 Hz output from any qualified utility/mains power.

Bypass voltage upper limit

Sets the percentage that the input voltage may be above the selected output voltage setting and remain in Bypass mode.

- +10% (default)
- +15%
- +20%

Bypass voltage lower limit

Sets the percentage that the input voltage may be below the selected output voltage setting and remain in Bypass mode.

- -10%
- -15% (default)
- -20%

Run mode

Selects Normal or ECO operation for the UPS.

- Normal — Connected load is always powered through the UPS inverter. ECO mode is disabled.
- ECO mode — ECO mode is enabled. The UPS inverter is bypassed, and the connected load is powered by utility/mains power within the selected ECO voltage and frequency tolerances.

Battery Parameter Options**Low battery time**

Sounds an alarm when the selected amount of time remaining for the UPS to operate in Battery mode.

- 2 to 30 minutes (default is 2)

Battery periodic test

The UPS can periodically self test the battery.

- Enable (default)
- Disable

Battery periodic test interval

Sets the length of time between periodic test.

- 8, 12, 16, 20, or 26 weeks (default is 8)

Battery periodic test weekday

Sets the day of the week that the battery periodic test is performed.

- Sunday to Saturday (Wednesday is default)

Battery periodic test time

Sets the time that the battery periodic test is performed.

- 00:00 to 23:59 (default is 00:00)

Batt. note duration (month)

Sets the length of time after the batteries are replaced to generate an alarm to remind the user to replace the batteries.

- Disable (default)
- 1 to 72 months

Dischg protect time

Sets the maximum discharge time for the UPS. The default setting is the maximum allowing the battery to fully discharge. This can be set lower to limit the amount of time the UPS will provide battery protection after which it will shutdown. If the discharge time remaining on the battery is lower than the setting value, it will have no effect.

- 1 to 4320 minutes (default of 4320)

Equal charge enable

Sets the charge mode of the battery. Equal charge mode is a quick charge mode that can reduce the amount of time needed to charge the battery. Float charge mode can have a longer battery life.

- Enable — Equal charge mode
- Disable — Float charge mode (default)

Replace battery

Activates newly installed battery packs after replacement and reset all battery statistics for new battery packs.

- Provides a confirmation window with Yes/No options to confirm replacement of batteries.

Monitor Settings Options**Language**

Selects the language of the display, see [Selecting the Display Language](#) on page 53.

- English (default)
- French
- Portuguese
- Spanish
- Chinese
- German
- Japanese
- Russian

Date

Selects the current date for the UPS display, YYYY-MM-DD. See [Setting the Date and Time](#) on page 53.

Time

Select the current time for the UPS display, HH:MM:SS. See [Setting the Date and Time](#) on page 53.

Display orientation

Selects the orientation of the display for use in rack or tower configuration.

- Auto rotate — Automatically rotates based on the detected orientation of the UPS. (default)
- Horizontal — Screen rotated for rack use.
- Vertical — Screen rotated for tower use.

Audible alarm

If enabled, the UPS will beep when an alarm is generated. If disabled, it will be silent. See [Audible Alarm \(Buzzer\)](#) on page 59.

- Enable (default)
- Disable

Change settings password

Opens the dialog to change the password used to access and update the UPS parameter settings, [Changing the Password](#) on page 52.

System Parameter Options

Auto restart

Allows the automatic restart of the UPS when input power is restored after a complete shutdown of the UPS due to battery end of discharge (EOD).

- Enable — The UPS will restart automatically when the input power is restored after EOD. (default)
- Disable — The UPS will not restart automatically

Auto restart delay

Length of time to elapse before an automatic restart after input power is restored.

- 0 to 999 seconds (default 0)

Guaranteed shutdown

Forces a continued shutdown of the UPS after the Low Battery alarm threshold is reached, even if input power is restored during this time. This can be used to ensure connected equipment shuts down completely after receiving a signal to shutdown from an external monitoring device before power is re applied. This ensures that once the equipment begins to shutdown, it is brought down completely before power is applied again.

- Enable
- Disable (default)

Start with no battery

Allows the UPS to start when the battery is not installed or is not functional due to damage. This can be used to turn on the UPS and power the attached load without battery protection when utility power is available but battery backup is not.

- Enable
- Disable (default)

Remote control

Allows the UPS to be controlled remotely via the CLI or RDU101 card.

- Enable (default)
- Disable

Any mode shutdown auto restart enable

Automatically restart the UPS after an *Any mode shutdown* signal is received. When the UPS is shutdown via dry contact inputs 1 or 2, it will restart automatically if this option is enabled.

- Enable
- Disable (default)

Output contact NO/NC

Selects the states of the dry contact outputs 5 and 6.

- Normally open (default)
- Normally closed

Input contact NO/NC

Selects the states of the dry contact inputs 1 and 2.

- Normally open (default)
- Normally closed

Dry contact 5 (Output)

Selects the output of dry contact 5.

- Low battery — The contacts switch when the UPS reaches the amount of time left on battery configurable from *Low battery time*. (default)
- On bypass — The contacts switch when the UPS is running in bypass mode
- On battery — The contacts switch when the UPS is running on battery
- UPS fault — The contacts switch when a UPS fault has occurred

Dry contact 6 (Output)

Selects the output of dry contact 6.

- Low battery — The contacts switch when the UPS reaches the amount of time left on battery configurable from *Low battery time*.
- On bypass — The contacts switch when the UPS is running in bypass mode
- On battery — The contacts switch when the UPS is running on battery
- UPS fault — The contacts switch when a UPS fault has occurred. (default)

Dry contact 1 (Input)

Selects the action taken by the UPS when the input of dry contact 1 is triggered.

- Disable (default)
- Battery mode shutdown — If the UPS is running on batteries and this input is triggered, the UPS shuts down
- Any mode shutdown — If this input is triggered, the UPS shuts down regardless of current operating mode

Dry contact 2 (Input)

Selects the action taken by the UPS when the input of dry contact 2 is triggered.

- Disable (default)
- Battery mode shutdown — If the UPS is running on batteries and this input is triggered, the UPS shuts down
- Any mode shutdown — If this input is triggered, the UPS shuts down regardless of current operating mode

Sleep mode

Allows the UPS to turn off the output on a weekly schedule. For instance, turn on every Monday at 1:00 and off every Friday at 23:00.

- Enable
- Disable (default)

Sleep mode cycle time

Sets the amount of weeks that the UPS will sleep. If set to 52, the UPS will sleep every week permanently without stopping after 52 weeks. This option is only shown when sleep mode is enabled.

- 0 to 52 (default of 0)

Power on day of week

Sets the day of week to turn on the UPS. This option is only shown when sleep mode is enabled.

Sunday to Saturday (default Monday)

Power on time

Sets the time of day to power on the UPS on the selected day. This option is only shown when sleep mode is enabled.

- 00:00 to 23:59 (default 00:00)

Power off day of week

Sets the day of week to turn off the UPS. This option is only shown when sleep mode is enabled.

- Sunday to Saturday (default Friday)

Power off time

Sets the time of day to power off the UPS on the selected day. This option is only shown when sleep mode is enabled.

- 00:00 to 23:59 (default 00:00)

IT system compatibility

When this option is enabled, the *Input phase reversed* and *Input ground lost* alarms are disabled.

- Enable
- Disable (default)

Outlet Parameter Options

Apply the same settings as outlet 1

Available on outlets 2 through 4, this applies the settings for Outlet1 to this outlet. This lets you apply the settings for Outlet1 and apply identical settings to any other programmable outlet.

Turn on/off outlet

Turns on or turns off the outlet based on the current state. Provides a confirmation window with Yes/No options to confirm turning on the outlet

Turn on delay

Length of time before outlet turns on after UPS start up.

- 0 to 30 minutes (default is 0)

Turn off when UPS overloads

Sets whether or not to turn off the outlet if the UPS is overloaded while on battery power. This can be used to disable lower priority equipment in the event of an overload while in battery mode.

- Yes
- No (default)

Outlet settings based on discharging time

Threshold of turning off the outlet

Length of time that the outlet is powered after the batteries begin to discharge. Select the checkbox to enable or disable (default) the option.

- 0 to 30 minutes (default is 5)

Turn on when power returns for

Length of time after the mains input power returns before turning on the outlet. Select the checkbox to enable (default) or disable the option.

- 0 to 30 minutes (default is 5)

Outlet settings based on backup time

Threshold of turning off the outlet

When the selected amount of time remains on battery mode, the outlet is turned off. Select the checkbox to enable or disable (default) the option.

- 0 to 30 minutes (default is 5)

Turn on when power returns for

Length of time after the mains input power returns before turning on the outlet. Select the checkbox to enable or disable (default) the option.

- 0 to 30 minutes (default is 0)

Outlet settings based on capacity**Threshold of turning off the outlet**

When the selected percentage of capacity remains in battery mode, the outlet turns off. Select the checkbox to enable or disable (default) the option.

- 20 to 80% (default is 20%)

Turn on when power returns

Length of time after the mains input power returns before turning on the outlet. Select the checkbox to enable or disable (default) the option.

- 0 to 30 minutes (default is 0)


5.2.5 Control Screen

The Control screen offers UPS control options.

To adjust the UPS controls:

1. At the main menu, select the Control icon, and press **Enter**.
2. Use the arrow buttons to move the cursor to the option, then press **Enter**.

Figure 5.6 Control Screen

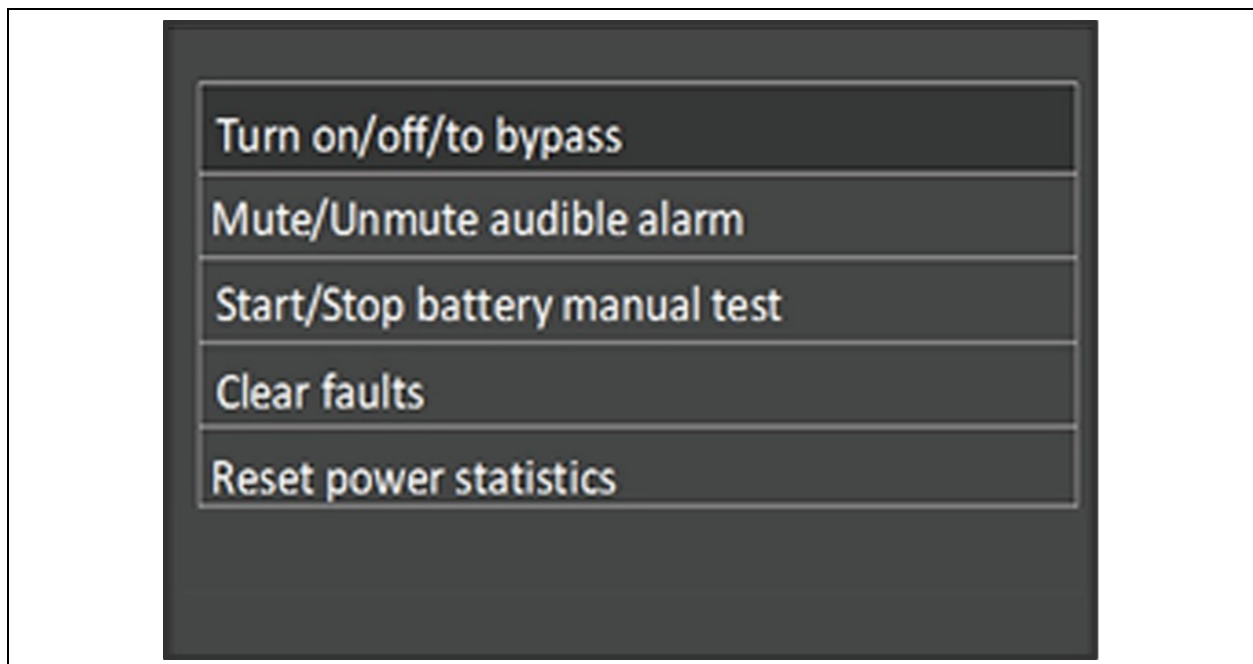

Control Options

Turn on/off/to bypass

Opens the dialog to change operating modes, see [Operation and Display Panel](#) on page 29.

Mute/Unmute audible alarm

Silences or unsilences the audible alarm, see [Silencing the Audible Alarm](#) on page 25.

Start/Stop battery manual test

Starts the battery self test manually. If the manual self test is already running, stop the self test.

Clear faults

Clears displayed faults after the issue causing the fault is resolved, see **Table 7.2** on page 59, for a description of the faults.

Reset power statistics

Resets the values tracked to calculate the Efficiency graph, see [About Screen](#) on page 48.

5.2.6 Log Screen

The Log Screen offers tabs that list the current alarms and the alarm/event history. **Table 5.4** on the next page, describes the alarm messages you may see in the logs.

To view the logs:

1. At the main menu, select the Log icon, and press **Enter**.
2. Use the arrow buttons to move the cursor left/right and select a tab, then press **Enter** to display the log for the selected tab.

Figure 5.7 Current and History Log Tabs

Current	History
00 Load on Inverter ● 01-12-2018 13:48:09 00 Inverter Manual On ● 01-12-2018 13:47:10 00 Fault Clear ● 01-12-2018 13:46:53 01 No Battery ● 01-12-2018 13:43:05 1/1	00 Fault Clear ● 01-12-2018 13:46:50 01-12-2018 13:46:53 00 Fault Clear ● 01-12-2018 13:46:10 01-12-2018 13:46:50 00 Fault Clear ● 01-12-2018 13:46:06 01-12-2018 13:46:10 1/667

Table 5.4 Alarm Messages

Item	Description
Aux. power fault	UPS internal auxiliary power voltage fault. Contact Vertiv Technical Support.
Battery Cabinet Connect Abnormal	More than 6 EBCs are connected to the UPS with the auto detect feature in use. Contact Vertiv service if using more than 6 EBCs.
Battery EOD	The battery has reached the end of discharge and mains/utility power is unavailable. Restore the mains power. The UPS will power off if it is not restored.
Battery low prewarning	This alarm occurs when the battery approaches the EOD. After the pre warning, the battery capacity allows two minutes discharge at full load. The user can set the time with the Low Battery Time setting in Battery settings from 2 min to 30 min, (2 min by default). This allows for any loads to be shut down before the system powers off if utility power cannot be restored.
Battery mode	The UPS operating in battery mode. The alarm will clear when utility power is restored.
Battery overtemp	Battery ambient temperature too high. Ensure that the battery ambient temperature is not higher than setting value 40 ~ 60 °C (default: 50 °C).
Battery replacement timeout	The system time is past the time set for the batteries to be replaced. If you have disabled the <i>Battery note duration</i> or have no batteries installed, the alarm will not occur.
Battery reversed	The battery positive and negative are reversed. Reconnect the battery and check the battery cable connections.
Battery test fail	The remaining energy at the end of the periodic or manual self test was deemed lower than acceptable. Battery replacement is recommended.
Battery test started	The battery periodic self test or manual self test was started. This will display in the log whenever the event occurs.
Battery test stopped	The battery periodic self test or manual self test has finished. This will display in the log whenever the event occurs.
Battery to utility transition	The UPS has transferred the load to the mains power from the battery. This will display in the log whenever the event occurs.
Bypass abnormal	May be caused by bypass voltage and frequency outside of range, bypass power off and incorrect bypass cables connection. Check that the bypass voltage and frequency are within the setting range. Check the bypass wiring.
Bypass abnormal in ECO mode	May be caused by ECO bypass voltage and frequency outside of range, ECO bypass power off, and incorrect ECO bypass cables connection. Check that the ECO bypass voltage and frequency are within the setting range. Check the bypass cable connection.
Bypass mode	The UPS is on bypass. This will clear when the UPS returns to Normal mode.
Bypass over current	The load is drawing more current than the UPS is rated to supply in bypass mode. Reduce the load.
Charger fault	The charger output voltage is abnormal, and the charger is off. Contact Vertiv Technical Support.
Communication fail	Internal communication is abnormal. Check that the communication cables are connected correctly.
DC bus abnormal	The inverter is off due to DC bus voltage out of acceptable range. The load will transfer to bypass if the bypass is available because the bus voltage is outside of the acceptable range.
DC/DC fault	The discharger is faulty, because the bus voltage exceeds the range when the discharger starts. Contact Vertiv Technical Support.
EOD turn off	The inverter is off due to EOD. Check the mains power off state and recover the mains in time.
Fan fault	At least one fan is faulty. Check if the fan is blocked or the cable connection is loose.

Table 5.4 Alarm Messages (continued)

Item	Description
Faults cleared	The faults have been cleared using Settings > Controls > Clear faults. This will display in the log whenever the event occurs.
Guaranteed shutdown	The battery has finished discharging, then system shuts down because Guaranteed Shutdown is enabled (see Guaranteed shutdown on page 40). This alarm will clear when the UPS is turned on again.
Input abnormal	The rectifier and charger are off due to the mains voltage and frequency exceeding normal range. Check if the input voltage and frequency are within the normal range or if the mains input has gone down.
Input ground lost	Check that the PE line is well connected and that the alarm can be cleared at the display.
Input neutral lost	The mains input neutral is not detected. The alarm will clear when the neutral connection has been restored.
Input phase reversed	The mains input line and neutral are reversed. Shut off external input breaker and connect the lines correctly.
Insufficient capacity to start	The UPS is on bypass and is started with a load greater than 105% of the rated capacity. Reduce the load to the rated capacity or below to start the unit.
Inverter fault	The inverter is turned off when the inverter output voltage or current exceed the ranges set. If bypass is available, the UPS will transfer to bypass mode, otherwise the system will power off. Contact Vertiv Technical Support.
Inverter overload	Inverter load capacity is larger than the rated value, overload delay time is up, inverter shuts down. If bypass is available, the system will transfer to the bypass mode, otherwise the system will power off. Check the output load. If overloaded, reduce the load, and the system will transfer to the inverter mode after five seconds with no alarm.
Inverter relay welded	The inverter relay is shorted. Contact Vertiv Technical Support.
Load off due to output short	A short has occurred on the output. Check the output cables and for any equipment that may have shorted.
Load off due to shutdown on battery	The system was shutdown in battery mode. This will clear when the system is turned back on.
Manual power on	The system was turned on via the display panel. This will display in the log whenever the event occurs.
Manual shutdown	The system was shutdown via the display panel. This will display in the log whenever the event occurs.
No battery	No battery detected. Check the battery and battery cable connections.
On maintenance bypass	The UPS is operating in maintenance bypass mode. This will display in the log whenever the event occurs.
Operating on inverter	The UPS output is being powered by the inverter. This will display in the log whenever the event occurs.
Output disabled	The system is in standby state, and the dry contact shutdown is enabled. Check if the shutdown dry contact is enabled.
Output off due to bypass abnormal	The bypass voltage or frequency is outside the acceptable range, and the bypass is in stand-by mode. Check that the input is normal.
Output off due to overload & bypass abnormal	The output is off due to an overload of the UPS output, and the bypass voltage or frequency is outside the acceptable range. Check that the input is normal.
Output off, voltage is not zero	This occurs when the output is off and the system detects that there is still voltage on the output. Check output equipment for backfeeds or contact Vertiv Technical Support.
Battery voltage abnormal	The battery voltage exceeds the normal range. Check if the battery terminal voltage exceeds the normal range.
Output pending	Remote shutdown has been initiated, and the system will turn off shortly.
Output short	A short has occurred on the output. Check the output cables and for any equipment that may have shorted.
Rectifier fault	The rectifier is off because the bus voltage is out of the acceptable range when the rectifier starts. Contact

Table 5.4 Alarm Messages (continued)

Item	Description
	Vertiv Technical Support.
Rectifier overload	The output power is larger than the rectifier overload point. Check that the input voltage meets the output load, if the mains input falls to 176 V - 100 V, the load is derated linearly from 100% - 50%.
Remote power on	The UPS was powered on remotely. This will display in the log whenever the event occurs.
Remote shut off	The UPS was powered off remotely. This will display in the log whenever the event occurs.
Remote shutdown	Any mode shutdown was initiated by the dry contact input. This will display in the log whenever the event occurs.
REPO	Shutdown caused by the REPO terminal Normally Closed contact input opening. This will display in the log whenever the event occurs.
Restore factory defaults	On the Maintenance page, <i>Restore Factory Defaults</i> has been set while the UPS is in the standby state. This will return settings to their factory settings.
Shutdown due to over temp	During the UPS operation, the system checks if the heat sink temperature exceeds the setting range. If an overtemperature occurs, check if: <ol style="list-style-type: none"> 1. The ambient temperature is too high. 2. Dust is blocking any of the UPS vents. 3. A fan fault has occurred.
System over temp	The internal heat sink temperature is too high, and the inverter is off. The alarm can only be silenced if the heat sink temperature is lower than the alarm setting. The system can automatically start after overtemperature fault is corrected. If an overtemperature occurs, check if: <ol style="list-style-type: none"> 1. The ambient temperature is too high. 2. Dust is blocking any of the UPS vents. 3. A fan fault has occurred.
Turn on fail	The UPS does not start because there is no mains/utility power or it is outside of the range of the voltage required to supply the full load. Check the AC input power.
UPS has no output	Both Inverter and Bypass are not supplying power due to the UPS output being turned off remotely or via the LCD or are unavailable due to no input power or input power out of range. Check that UPS is on and input power is available.

5.2.7 About Screen


The About screen offers tabs that list information about the product.

- Product tab — shows UPS identification information, firmware versions, and information about the communication card (when the card is installed).
- Efficiency tab — shows a curve of the efficiency of your UPS model vs the load capacity used.
- Battery age tab — shows the curve of the percent state of health (SOH) of the installed battery versus time. The UPS calculates one value per week and plots it on the graph. The values are based on the battery temperature, age, and the actual amount of energy discharged from the battery if the battery has been discharged fully.

To view the product, efficiency, and battery age information:

1. At the main menu, select the About icon, and press **Enter**.
2. Use the arrow buttons to move the cursor left/right and select a tab, then press **Enter** to display the information for the selected tab.

Figure 5.8 About Screen Tabs

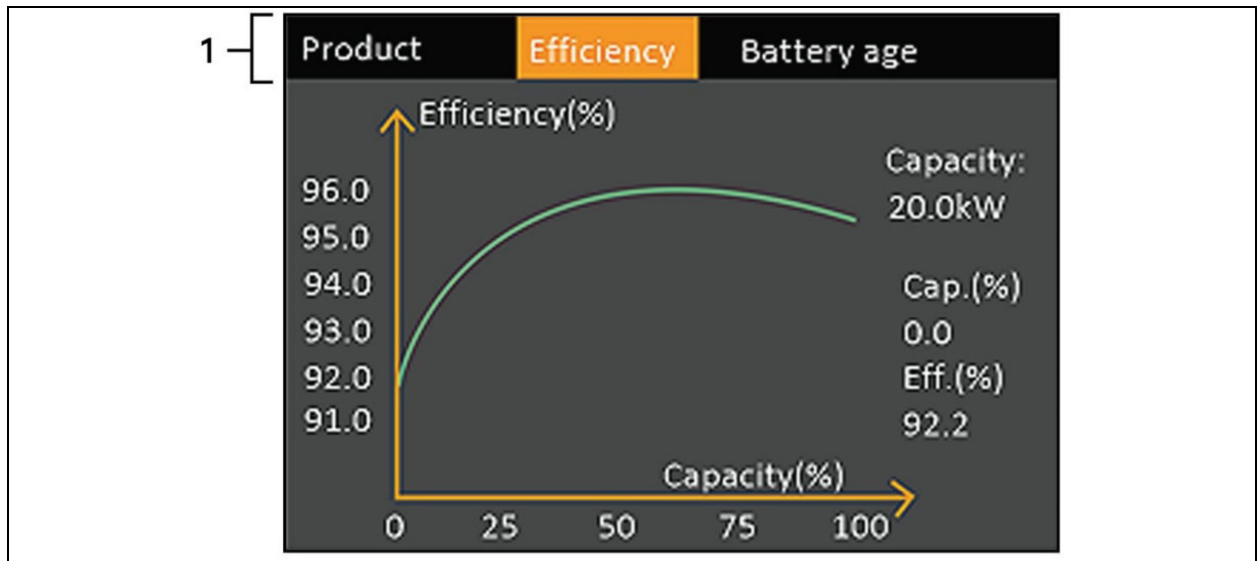

Item	Description
1	About screen tabs with Efficiency tab selected. NOTE: The figure is an example of the graph and does not represent the actual capacity values for your UPS model.

Product Information

Product Type

UPS model number.

Serial number

UPS serial number.

Time since startup

Elapsed time since start up of the UPS.

Boot FW version

Version of MCU boot firmware on the monitor board.

Monitor FW version

Version of MCU application firmware on the monitor board.

DSP FW version

Version of DSP firmware on the UPS power module.

MAC address

Shows the MAC address of the RDU101 card. This is only shown when the RDU101 card is installed.

IPv4 address

Shows the IPv4 address of the RDU101 card. This is only shown when the RDU101 card is installed.

Subnet mask

Shows the subnet mask of the RDU101 card. This is only shown when the RDU101 card is installed.

Gateway address

Shows the gateway address of the RDU101 card. This is only shown when the RDU101 card is installed.

Efficiency Tab**Capacity**

This shows the maximum capacity of your UPS model.

Cap. (%)

This shows the percentage of the maximum capacity your UPS is currently using.

Eff. (%)

This shows the efficiency the UPS is currently operating at based on the Cap. (%) value.

Battery Age

This page also displays the following values:

Battery recommended replacement date

This shows the date that it is recommend to replace the battery. It is 5 years from the time the battery was installed.

SOH (%)

This shows the current SOH percentage.


5.3 Editing Display and Operation Settings

You may adjust the display settings and UPS configuration via the LCD. The display and operation settings are password protected. The default password is 111111 (six ones).

NOTE: We recommend that you change the password to protect your system and equipment and record the new password and store it in an accessible location for later retrieval. See [Changing the Password](#) on page 52.

To enter the password:

1. Press the up arrow button to change the digit shown, then press the down arrow button to move to the next digit.
2. Repeat to select each digit, and press **Enter** to submit the password.

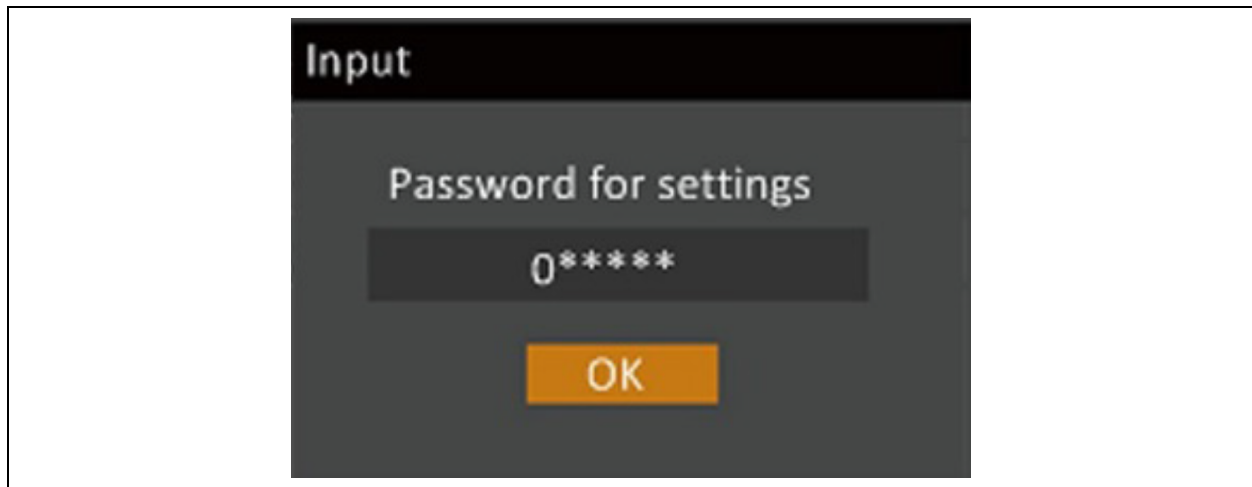Figure 5.9 Password Prompt

5.3.1 Settings Prompts

While using the operation and display panel, prompts display to alert you to specific conditions or require confirmation of commands or settings. **Table 5.5** below lists the prompts and their meaning.

Table 5.5 Display Prompts and Meanings

Prompt	Meaning
Cannot set this online, shutdown output	Appears when changing important output settings (output voltage, output frequency, output phase No.).
Incorrect password,input again	Appears when the Settings password is input incorrectly.
Operation failed, condition is not met	Appears when attempting to execute an operation for which the required conditions are not met.
Password changed OK	Appears upon successful change of the Settings password.
Fail to change password, try again	Appears when attempting to change the Settings password but the new and confirmation passwords do not match.
The time cannot be earlier than system time	Appears when attempting to set the time of 'Turn on delay' or 'Turn off delay' earlier than the current system time.
Turn on failed, condition is not met	Appears when proper conditions are not met for UPS power on. Applies when using the Power button or when execute the command of 'Turn on/Turn off/to Bypass' on the LCD panel 'Control' page.
Cannot set this on line, unplug REPO	Appears when attempting to change the output phase number while the output is connected.


5.3.2 Changing the Password

The default password is 111111 (six ones). You must use the current password to change the password.

NOTE: We recommend that you change the password from the default to protect your system and equipment. Record the new password and store it in an accessible location for later retrieval.

1. At the main menu, select the Settings icon, and press **Enter**.
2. At the password prompt, use the up arrow to select the first digit, press the down arrow to move to the next digit, repeat for each digit, then press **Enter** to access the settings.
3. Use the arrow buttons to select the Monitor tab, then press **Enter**.
4. Use the down arrow to highlight Change Settings Password, press **Enter**, and re enter the current password. The Input new password dialog opens, see **Figure 5.10** below .
5. Enter the new password, then confirm the new password. A confirmation dialog opens to indicate a successful password change.
6. Press **ESC** to return to the settings or main menu.

Figure 5.10 New and Confirm Password Dialogs

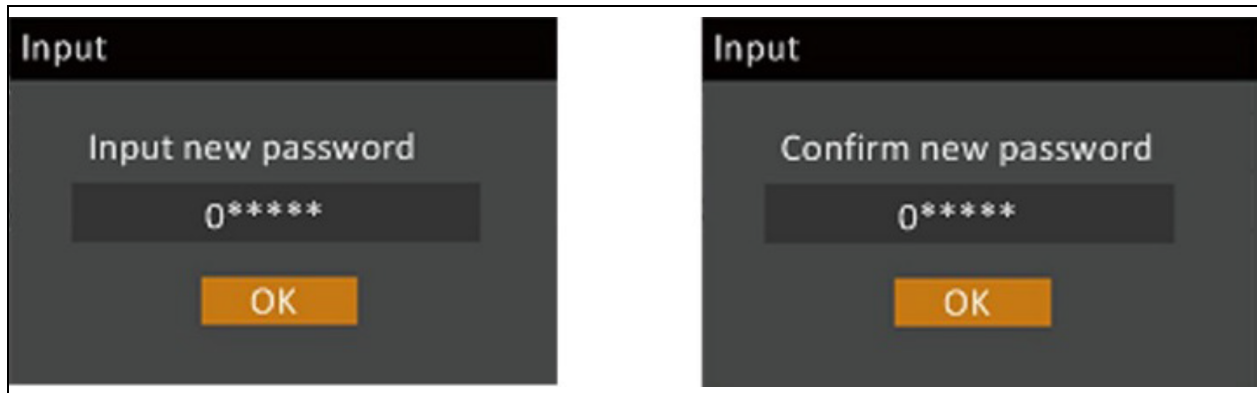

5.3.3 Selecting the Display Language

The LCD is multilingual. The available languages are English, French, Portuguese, Spanish, Chinese, German, Japanese, and Russian.

To change the language:

1. At the main menu, select the Settings icon, and press **Enter**.
2. At the password prompt, use the up arrow to select the first digit, press the down arrow to move to the next digit, repeat for each digit, then press **Enter** to access the settings.
3. Use the arrow buttons to select the Monitor tab, then press **Enter**.
4. Use the down arrow to highlight Language, then press **Enter**.
5. Use the up/down arrows to select the language, then press **Enter**. All the LCD elements will now display in the selected language.

5.3.4 Setting the Date and Time

To adjust the date and time:

1. At the main menu, select the Settings icon, and press **Enter**.
2. At the password prompt, use the up arrow to select the first digit, press the down arrow to move to the next digit, repeat for each digit, then press **Enter** to access the settings.
3. Use the arrow buttons to select the Monitor tab, then press **Enter**.
4. Use the down arrow to highlight Date or Time, then press **Enter**.
5. Use the up/down arrows to select the date/time, then press **Enter** to confirm.
6. Use the down arrow to select the digit to change and the up arrow to select the correct digit. Repeat as needed to set each digit.

This page intentionally left blank

6 Maintenance



WARNING! Risk of electric shock

Can cause equipment damage, injury and death. A battery can present a risk of electrical shock and high short circuit current.

Observe the following precautions when working on batteries:

- Remove watches, rings and other metal objects.
- Use tools with insulated handles.
- Wear rubber gloves and boots.
- Do not lay tools or metal parts on top of batteries.
- Disconnect input power prior to connecting or disconnecting battery terminals.
- If the battery kit is damaged in any way or shows signs of leakage, contact your Vertiv representative immediately.
- Handle, transport, and recycle batteries in accordance with local regulations.
- Determine if the battery is inadvertently grounded. If it is, remove the source of the ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock will be reduced if grounds are removed during installation and maintenance (applicable to a UPS and a remote battery supply not having a grounded supply circuit).

6.1 Replacing Batteries



WARNING! Risk of electric shock

Can cause injury or death. Disconnect all local and remote electric power supplies before working with the UPS. Ensure that the unit is shutdown and power has been disconnected before beginning any maintenance.



WARNING! Risk of electric shock and explosion

Can cause equipment damage, injury and death. Do not dispose of the battery in a fire. The battery may explode. Do not open or damage the battery. Released electrolyte is toxic and is harmful to skin and eyes. If electrolyte comes into contact with the skin, wash the affected area immediately with plenty of clean water and get medical attention.



WARNING! Risk of electric shock

Can cause equipment damage, injury and death. A battery can present a risk of electrical shock and high short circuit current.



WARNING! Risk of explosion

Can cause equipment damage, injury and death. A battery can explode if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions included with the battery pack.

Read all safety cautions before proceeding. A trained user can replace the internal battery pack when the UPS is in a restricted access location (such as a rack or server closet). To obtain the appropriate replacement battery packs, refer to **Table 6.1** below and contact your local dealer or Vertiv representative.

NOTE: EBC batteries are not replaceable. When EBC batteries have aged, purchase a new EBC of the same part number to replace the aged EBC. Save the packaging of the new EBC and use to return the aged EBCs to Vertiv for recycling or recycle locally.

Table 6.1 Replacement Battery Pack Model Numbers

UPS Model Number	Battery Pack Model Number	Quantity Required
GXT5-1000LVRT2UXLB	GXT5-36VBATKIT	1
GXT5-1000IRT2UXLB		
GXT5-1500LVRT2UXLB	GXT5-48VBATKIT	
GXT5-1500IRT2UXLB		
GXT5-2000LVRT2UXLB		
GXT5-2000IRT2UXLB		
GXT5-3000LVRT2UXLB	GXT5-72VBATKIT	
GXT5-3000IRT2UXLB		


To replace a battery pack:

NOTE: The internal battery pack is hot swappable. However, you must exercise caution because; during this procedure, the load is unprotected from disturbances and power outages. Do not replace the battery while the UPS is operating in Battery Mode. This will result in a loss of output power and will drop the connected load.

1. Press the button on the left front of the UPS front panel, and pull the panel open, then, loosen and remove the screw from the battery door, see **Figure 6.1** on the facing page .
2. Lay the cover, battery door, and screw aside for reassembly.
3. Grasp the battery handle, and pull out the battery pack, see **Figure 6.1** on the facing page .
4. Unpack the replacement battery pack, taking care not to damage the packaging to re use when disposing of the old battery.
5. Compare the new and old battery pack to make sure they are the same type and model. If so, proceed with step If they are different, stop and contact your Vertiv representative, or Technical Support.
6. Line up and slowly push in each replacement battery pack until 2/3 of the length is in the bay, then lift up and continue to push smoothly until the battery pack is fully inserted in the bay. The battery is fully inserted if the battery door fits flush against the UPS.
7. Re attach the battery door with the screw and replace the front cover.
8. Activate the new battery packs using the operating/display panel.

NOTE: The display menus and functions are described in Operation and Display Panel on page 29.

9. From the main menu, select Settings, then the Monitoring tab and verify that the date and time are correct. If the date or time need correction, see [Setting the Date and Time](#) on page 53.
10. Select the Battery tab, use the arrows to select Replace Battery, and press **Enter**. The replaced battery packs are activated.
11. Use **ESC** to return to the main display.

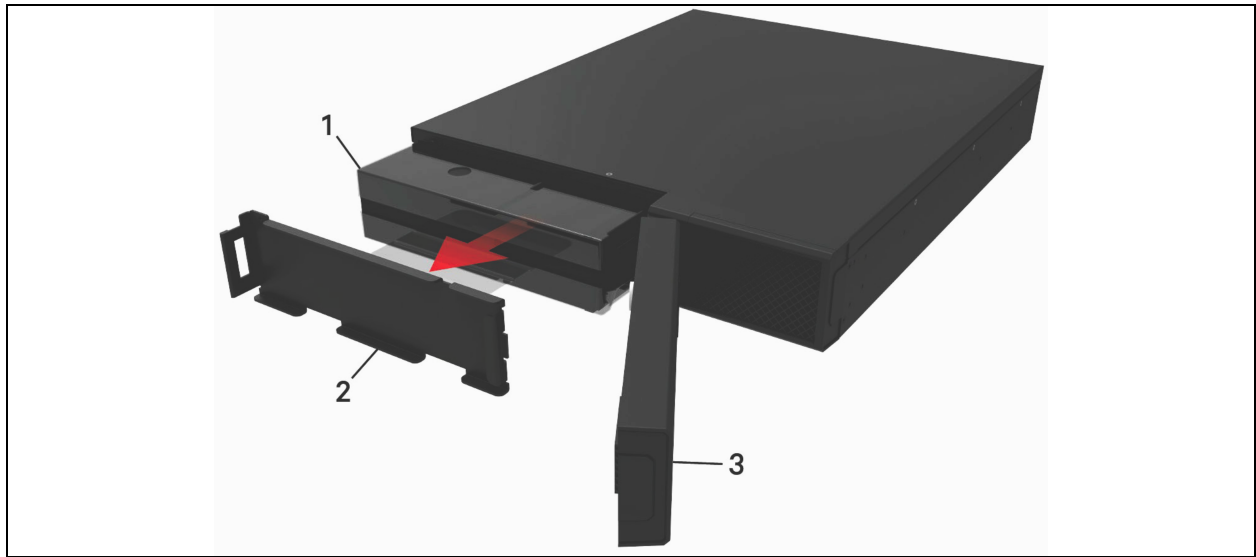Figure 6.1 Replacing the Battery Pack

Item	Description
1	Front cover
2	Battery door
3	Battery handle
4	Grasp handle and pull battery out.

6.2 Charging Batteries

The batteries are valve regulated, non spillable, lead acid batteries and should be kept charged to attain their design life. The UPS charges the batteries continuously when it is connected to the utility input power.

If the UPS will be stored for a long time, we recommend connecting the UPS to input power for at least 24 hours every 4 to 6 months to ensure full recharge of the batteries.

6.3 Checking UPS Operation

NOTE: Operation check procedures may interrupt output power supplied to the connected load.

We recommend checking the UPS operation once every 6 months. Ensure that output power loss to the connected load will not cause data loss or other errors before conducting the check.

1. Press the **Enter** button to check the indicators and display function, see [Operation and Display Panel](#) on page 29.
2. Check for any alarm or fault indicators on the operation/display panel.
3. Make sure that there are no audible or silenced alarms. Select the Log and look at the Current tab for alarm and fault history, see [Log Screen](#) on page 45.
4. Check the flow screen to ensure the UPS is operating in Normal mode. If the UPS is operating in Bypass mode, contact Vertiv Technical Support.
5. Check the flow screen to see if batteries are discharging (operating in Battery mode) while utility power is normal. If so, contact Vertiv Technical Support.

6.4 Cleaning the UPS



WARNING! Risk of electric shock

Can cause injury or death. Disconnect all local and remote electric power supplies before working with the UPS. Ensure that the unit is shutdown and power has been disconnected before beginning any maintenance.

The UPS requires no internal cleaning. If the outside of the UPS becomes dusty, wipe with a dry cloth. Do not use liquid or aerosol cleaners. Do not insert any objects into the ventilation holes or other openings in the UPS.

6.5 Firmware Updates

Firmware updates are available via the [Vertiv website](#). Firmware update instructions are provided with the firmware download.

7 Troubleshooting

This section indicates various UPS symptoms you may encounter and provides a troubleshooting guide in the event the UPS develops a problem. Use the following information to determine whether external factors caused the problem and how to remedy the situation.

7.1 Symptoms that Require Troubleshooting

The following symptoms indicate the UPS is malfunctioning:

- The alarm indicator illuminates, indicating the UPS has detected a problem.
- An alarm buzzer sounds, alerting the user that the UPS requires attention.

7.2 Audible Alarm (Buzzer)

An audible alarm accompanies various events during UPS operations. **Table 7.1** below, describes the sounds and their meaning. To silence an alarm, see [Silencing the Audible Alarm](#) on page 25.

Table 7.1 Audible Alarm Descriptions

Sound	Indicates
Continuous beep	Generated when a UPS fault appears, such as a fuse or hardware failure.
One beep every 0.5 seconds	Generated when a UPS critical alarm appears, such as on inverter overload.
One beep every 1 second	Generated when a UPS critical alarm appears, such as on battery low voltage.
One beep every 3.3 seconds	Generated when a UPS general alarm appears.



WARNING! When an alarm is indicated, an alarm message is logged. **Table 5.4** on page 46, describes the alarm messages you may see. When a fault is indicated, the front panel display will list the fault. Faults are described in **Table 7.2** below.

7.2.1 Faults

When the fault indicator is illuminated, the LCD displays the fault. The faults are described in **Table 7.2** below.

Table 7.2 Description of Displayed Faults

Display Fault	Cause	Corrective Steps
Battery test fail	The battery is bad or weak.	Contact technical support.
Rectifier fault	A rectifier failure occurred.	Contact technical support.
Inverter overload, Bypass overcurrent	The UPS is overloaded, Bypass is over current.	Reduce the load and contact technical support.
Inverter fault	The inverter is faulty.	Contact technical support.
Battery aged	The battery is bad or weak.	Replace the battery.
Output short	The output connection is short circuited.	Shutdown the equipment and contact technical support.

Table 7.2 Description of Displayed Faults (continued)

Display Fault	Cause	Corrective Steps
DC bus fail	The DC bus is faulty.	Contact technical support.
System overtemp	Over temperature condition in the UPS. The UPS will transfer to bypass mode.	Reduce the load and contact technical support.
Charger fault	The charger is faulty.	Contact technical support.
Fan fault	At least one fan is faulty.	Contact technical support.
DC/DC fault	A DC DC charger failure occurred.	Contact technical support.

7.3 Troubleshooting UPS Issues

In the event of an issue with the UPS, refer to **Table 7.3** below, to determine the cause and solution. If the fault persists, contact Vertiv Technical Support. Visit the Liebert® GXT5 product page at www.vertiv.com for contact information.

When reporting a UPS issue to Vertiv, include the UPS model and serial number. These are located in several places for your ease of location:

- On the top panel (rack mount orientation)
- The left side (tower orientation)
- The rear panel
- On the front of the unit behind the front plastic bezel
- On the LCD select Main Menu > About

Table 7.3 Troubleshooting

Problem	Cause	Solution
UPS fails to start	UPS is short-circuited or overloaded	Ensure UPS is Off. Disconnect all loads and ensure nothing is lodged in output receptacles. Ensure loads are not defective or shorted internally.
	Batteries are not charged enough or not connected	Check to ensure the internal battery is connected. If it is not, fully remove and reinstall the battery, and try to start the unit. If the battery is connected, leave the UPS connected to input power for 24 hours to recharge batteries, then try to start the unit.
UPS has reduced battery backup time	Batteries are not fully charged	Keep UPS plugged in continuously at least 24 hours to recharge batteries.
	UPS is overloaded	Check load level indicator and reduce the load on the UPS.
	Batteries may not be able to hold a full charge due to age	Replace batteries. Contact your Vertiv representative or Vertiv Technical Support for replacement battery kit.

8 Specifications

Table 8.1 UPS Specifications, 1000VA to 3000 VA Models

Model GXT5	1000LVRT2UXLB	1000IRT2UXLB	1500LVRT2UXLB 2000LVRT2UXLB	1500IRT2UXLB 2000IRT2UXLB	3000LVRT2UXLB	3000IRT2UXLB
Rating	1000 VA/1000 W		1500 VA/1350 W 2000 VA/1800 W	1500 VA/1500 W 2000 VA/1800 W	3000 VA/2700 W	3000 VA/3000 W
Dimensions, D×W×H, in. (mm)						
Unit	15.7 x 16.9 x 3.4 (400 x 430 x 85)		18.5×16.9×3.4 (470×430×85)		21.3 x 16.9 x 3.4 (540 × 430 × 85)	
Shipping	24.3 x 22.4 x 10.3 (617 x 570 x 262)		24.3 ×22.4 x 10.3 (617 x 570 x 262)		28.2 x 22.4 x 10.3 (717 x 570 x 262)	
Weight, lb.(kg)						
Unit	36.3 (16.5)		46.2 (21)		62 (28.2)	
Shipping	51.7 (23.5)	46.2 (21)	61.6 (28)	56.1 (25.5)	79.2 (36)	72.6 (33)
Input AC						
Voltage (typical)	120 VAC nominal, variable based on output load	230 VAC nominal; variable based on output load	120 VAC nominal, variable based on output load	230 VAC nominal; variable based on output load	120 VAC nominal, variable based on output load	230 VAC nominal; variable based on output load
90% ~ 100% loading	94 ~ 102 VAC to 149.5 VAC	184VAC to 288 VAC	94 ~ 102 VAC to 149.5 VAC	184 to 288 VAC	94 ~ 102 VAC to 149.5 VAC	184VAC to 288 VAC
70% ~ 90% loading	77 ~ 94 VAC to 149.5 VAC	161VAC to 288 VAC	77 ~ 94 VAC to 149.5 VAC	161VAC to 288 VAC	77 ~ 94 VAC to 149.5 VAC	161VAC to 288 VAC
50% ~ 70% loading	60 ~ 77 VAC to 149.5 VAC	115VAC to 288 VAC	60 ~ 77 VAC to 149.5 VAC	115VAC to 288 VAC	60 ~ 77 VAC to 149.5 VAC	115VAC to 288 VAC
0 ~ 50% loading	60 VAC to 149.5 VAC	115VAC to 288 VAC	60 VAC to 149.5 VAC	115VAC to 288 VAC	60 VAC to 149.5 VAC	115VAC to 288 VAC
Frequency	40 Hz to 70 Hz; Auto Sensing					
Input Power Cord	IEC 609-06-1	C14	IEC 609-06-1	C14	IEC 609-06-1	C20
Output AC						
Output Receptacles	4 x IEC 609-06-1					
Voltage	100/110/115/120/125 VAC (user configurable); ±3%	200/208/220/230/240 VAC (user configurable); ±3%	100/110/115/120/125 VAC (user configurable); ±3%	200/208/220/230/240 VAC (user configurable); ±3%	100/110/115/120/125 VAC (user configurable); ±3%	200/208/220/230/240 VAC (user configurable); ±3%
Waveform	Sine wave					

Table 8.1 UPS Specifications, 1000VA to 3000 VA Models (continued)

Model GXT5	1000LVRT2UXLB	1000IRT2UXLB	1500LVRT2UXLB 2000LVRT2UXLB	1500IRT2UXLB 2000IRT2UXLB	3000LVRT2UXLB	3000IRT2UXLB
Rating	1000 VA/1000 W		1500 VA/1350 W 2000 VA/1800 W	1500 VA/1500 W 2000 VA/1800 W	3000 VA/2700 W	3000 VA/3000 W
Utility (AC) Model Overload	>200% for 250 ms 150-200% for 2 seconds 125-150% for 50 seconds 105-125% 60 seconds					
Internal Charger						
Charging current	Nominal 1.8 A; Maximum 8 A					
Battery						
Type	Valve regulated, non spillable, lead acid					
Qty×V×Rating	3 × 12 V × 9.0 Ah					
Backup time	See Battery Run Times on page 64					
Recharge Time	3 Hours to 90% capacity after full discharge with 100% load until UPS auto shutdown (Internal Batteries Only)					
Environmental Requirements						
Operating Temperature, °F (°C)	32 to 104 (0 to 40)					
Extended Operating Temperature, °F (°C)	32 to 122 (0 to 50); output derated by 1% per 1 °C above 40 °C					
Storage Temperature, °F (°C)	5 to 122 (-15 to 50)					
Relative Humidity	0% to 95%, noncondensing					
Operating Elevation	Up to 10,000 ft. (3000 m) at 77 °F (25 °C) without derating					
Audible Noise	<46 dBA max, at 3 ft. (1 m) front and sides <43 dBA max at 3 ft. (1 m) rear		<46 dBA max at 3ft. (1 m) front and sides <45dBA max at 3 ft. (1 m) rear			
Agency						
Safety	IEC 62040-1:2008+A1					
Transportation	ISTA Procedure 1A					

Table 8.2 External Battery Cabinet Specifications, 1000 VA to 3000 VA Models

Model Number	GXT5-EBC36VRT2U		GXT5-EBC48VRT2U	GXT5-EBC72VRT2U
USED W/UPS MODEL	1,000 VA MODELS		1,500 – 2,000 VA MODELS	3,000 VA MODELS
Dimensions, D×W×H, in. (mm)				
Unit	14.6 x 16.9 x 3.3 (370 × 430 × 85)		19.7 x 16.9 x 3.3 (497 × 430 × 85)	23.7 x 16.9 x 3.3 (602 × 430 × 85)
Shipping	24.3 x 22.4 x 10.3 (617 x 570 x 262)			
Weight, lb.(Kg)				
Unit	48.4 (22)		57.3 (28.5)	97.9 (44.4)
Shipping	91.3 (41.5)		86 (41.5)	104.9 (47.6)
Battery				
Type	Valve regulated, non spillable, lead acid			
Qty × V	Two parallel strings of three 12V/9Ah batteries in series.		Two parallel strings of four 12V/9Ah batteries in series.	Two parallel strings of six 12V/9Ah batteries in series.
Backup time	See appropriate table for model size in Battery Run Times on the next page.			
EBC Breaker Size	50 A		63 A	
Environmental Requirements				
Operating Temperature, °F (°C)	32 to 104 (0 to 40)			
Extended Operating Temperature, °F (°C)	32 to 122 (0 to 50); output derated by 1% per 1 °C above 40 °C			
Storage Temperature, °F (°C)	5 to 104 (-15 to 40) High ambient temperatures will reduce battery life			
Relative Humidity	0% to 95%, non condensing			
Operating Elevation	Up to 10,000 ft. (3000 m) at 77 °F (25 °C) without derating			
Agency				
Safety	EN 62040-1:2008+A1:2013; GS mark; UL 1778 5th Edition and CSA 22.2 No. 107.1			
EMC	EN 62040-2:2006 EN 61000-3-2:2014 EN 61000-3-3:2013			
Safety	UL 1778 5th Edition and CSA 22.2 No. 107.1			
Transportation	ISTA Procedure 1A			
Surge Immunity	ANSI C62.41 Category B			
RFI/EMI	FCC Part 15 (Class A)			

8.1 Battery Run Times

NOTE: Run times in this table are approximate. Times are based on new, fully charged, standard battery modules at a temperature of 77 °F (25 °C) with 100% resistive UPS loading. Run times listed above can vary by ±5% due to manufacturing variances of the individual batteries.

Table 8.3 Battery Run Time, 1000 VA Models

Load			Internal Battery Only	Number of EBCs									
				1	2	3	4	5	6	7	8	9	10
%	VA	W	Minutes										
10	100	100	101.8	332.7	584.9	841.2	1114.7	1373.2	1590.9	1750.8	1873.0	1969.6	2047.7
20	200	200	50.1	179.8	311.9	453.2	595.8	736.7	888.2	1042.4	1199.1	1340.5	1476.5
30	300	300	33.7	127.1	218.3	316.1	416.5	519.9	620.3	724.8	833.9	944.6	1056.5
40	400	400	23.8	95.8	168.9	239.3	316.4	394.3	474.5	555.3	629.9	713.6	798.3
50	500	500	17.8	76.3	135.1	193.0	251.8	314.0	377.3	443.1	506.8	573.0	632.6
60	600	600	14.1	59.7	112.1	161.6	208.6	260.6	313.2	366.4	420.4	475.8	531.1
70	700	700	11.5	50.7	95.3	139.4	181.7	224.1	268.6	315.0	361.0	408.6	457.6
80	800	800	9.6	43.3	83.4	120.8	160.1	197.6	235.3	275.3	316.3	357.1	399.0
90	900	900	8.1	38.2	73.0	107.4	141.0	174.8	206.9	241.5	277.6	314.0	350.4
100	1000	1000	6.8	33.3	62.8	94.6	125.7	156.3	187.0	216.1	248.0	280.4	313.1

Table 8.4 Battery Run Time, 1500 VA Models

Load			Internal Battery Only	Number of EBCs									
				1	2	3	4	5	6	7	8	9	10
%	VA	W	Minutes										
10	150	150	107.3	350.3	612.3	885.6	1173.2	1436.2	1644.5	1797.2	1914.0	2006.2	2080.9
20	300	300	52.8	187.9	325.3	472.1	618.0	769.6	927.7	1089.0	1247.1	1393.8	1526.8
30	450	450	32.7	123.9	213.1	309.0	407.6	508.2	609.2	708.8	815.3	923.4	1033.0
40	600	600	22.2	89.2	159.1	226.4	297.8	371.9	448.5	523.5	600.5	672.1	751.6
50	750	750	16.3	70.2	125.3	179.9	234.5	292.4	351.5	411.5	472.8	533.9	596.2
60	900	900	12.7	55.1	103.5	148.3	194.8	239.7	289.0	338.1	387.8	439.9	489.9
70	1050	1050	10.1	44.5	85.9	125.6	165.6	203.4	243.0	285.0	326.6	369.5	412.5
80	1200	1200	8.2	38.6	73.8	108.4	142.3	176.3	208.4	244.0	280.4	316.9	353.6
90	1350	1350	6.7	32.7	61.7	93.2	124.1	154.3	184.8	213.4	245.0	277.0	309.4
100	1500	1500	5.6	28.2	54.3	83.4	111.2	138.5	165.8	192.5	218.4	246.7	275.3

Table 8.5 Battery Run Time, 2000 VA Models

Load			Internal Battery Only	Number of EBCs									
				1	2	3	4	5	6	7	8	9	10
%	VA	W	Minutes										
10	200	200	78.5	258.8	455.3	650.5	861.7	1078.7	1289.4	1482.1	1636.0	1757.5	1855.8
20	400	400	36.2	134.8	231.0	334.0	442.2	550.0	653.9	767.6	883.1	1000.1	1118.7
30	600	600	21.8	88.2	156.6	223.1	293.8	366.4	441.9	515.7	592.1	662.0	740.7
40	800	800	14.8	63.1	115.9	167.7	216.8	269.8	324.8	380.4	437.8	493.7	551.2
50	1000	1000	10.7	47.1	89.2	131.9	172.7	211.1	254.6	297.4	341.8	386.1	432.1
60	1200	1200	8.2	38.5	73.5	108.1	141.9	175.8	208.0	243.2	279.6	316.0	352.7
70	1400	1400	6.3	31.0	58.9	89.2	119.1	148.5	178.3	206.2	236.1	266.8	297.8
80	1600	1600	5.0	25.9	50.1	78.1	103.9	129.3	154.3	179.9	204.6	230.7	257.6
90	1800	1800	4.0	22.0	42.9	66.5	88.9	113.0	136.0	158.2	180.4	202.5	225.2
100	2000	2000	3.2	18.8	38.1	57.1	79.8	99.9	119.3	140.7	161.0	180.6	200.6

Table 8.6 Battery Run Time, 3000 VA Models

LOAD			Internal Battery Only	Number of EBCs									
				1	2	3	4	5	6	7	8	9	10
%	VA	W	Minutes										
10	300	300	78.9	260.2	457.8	654.1	866.5	1084.9	1296.1	1488.8	1641.8	1762.7	1860.5
20	600	600	36.7	136.3	233.3	337.8	447.1	556.0	660.9	775.9	892.7	1011.1	1131.0
30	900	900	21.9	88.4	157.2	223.8	294.7	367.6	443.3	517.4	594.0	664.2	743.1
40	1200	1200	14.9	63.3	116.1	168.0	217.3	270.3	325.4	381.2	438.7	494.7	552.4
50	1500	1500	10.8	47.5	89.6	132.6	173.6	212.5	256.0	299.0	343.8	388.2	434.7
60	1800	1800	8.3	38.8	74.2	109.0	143.0	177.1	209.4	245.5	282.0	318.7	355.6
70	2100	2100	6.4	31.4	59.4	89.8	119.9	149.5	179.5	207.6	237.8	268.8	300.0
80	2400	2400	5.1	26.2	50.6	78.7	104.8	130.4	155.7	181.3	206.0	232.5	259.6
90	2700	2700	4.1	22.4	43.3	67.6	89.7	114.2	137.5	160.2	182.6	204.5	227.9
100	3000	3000	3.3	19.1	38.7	57.9	80.9	101.6	121.1	142.6	163.5	183.4	203.2

Table 8.7 Battery Recharge Time, 0% to 90%, All Models

Number of EBCs	Charging Time to 90%
0 EBC	3 h
1 EBC	3 h
2 EBC	5 h
3 EBC	6 h
4 EBC	9 h
5 EBC	11 h
6 EBC	13 h
7 EBC	15 h
8 EBC	17 h
9 EBC	19 h
10 EBC	21 h

Appendices

Appendix A: Open Source Software Legal Notices

The Liebert® GXT5 product links the FreeRTOS software with Vertiv Group Corporation's proprietary modules that communicate with the FreeRTOS software solely through the FreeRTOS API interface. This use is an exception to the FOSS GPLv2 license. The user is free to redistribute the FreeRTOS software and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation. A copy of the GNU General Public License is located at www.gnu.org/licenses/old-licenses/gpl-2.0.html. A copy of the exception is located at <https://spdx.org/licenses/freertos-exception-2.0.html>. For a period of three (3) years after purchasing the Liebert® GXT5 product, the purchaser has the right to obtain a copy of the FreeRTOS software that is incorporated in the Liebert® GXT5 product. The purchaser can contact Vertiv Technical Support and request the software.

This page intentionally left blank

Appendix B: Technical Support and Contacts

B.1 Technical Support/Service in the United States

Vertiv Group Corporation

24x7 dispatch of technicians for all products.

1-800-543-2378

Liebert® Thermal Management Products

1-800-543-2378

Liebert® Channel Products

1-800-222-5877

Liebert® AC and DC Power Products

1-800-543-2378

B.2 Locations

United States

Vertiv Headquarters

505 N Cleveland Ave

Westerville, OH 43082

Europe

Via Leonardo Da Vinci 8 Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

Asia

7/F, Dah Sing Financial Centre

3108 Gloucester Road, Wanchai

Hong Kong

This page intentionally left blank

Connect with Vertiv on Social Media



<https://www.facebook.com/vertiv/>



<https://www.instagram.com/vertiv/>



<https://www.linkedin.com/company/vertiv/>



<https://www.twitter.com/Vertiv/>



Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082 USA

©2024 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

SL-26401_REV2_03-24