


Vertiv™ Liebert® IntelliSlot™ RDU120 Communications Card



Quick Installation Guide

The Vertiv™ Liebert® IntelliSlot™ RDU120 Communications Card enables SNMP, Modbus, and BACnet management of Liebert equipment. To integrate the card into a SNMP system, compile the Liebert Global Products Management Information Base (MIB) on the Network Management Station (NMS). The Liebert Global Products MIB supports both Microsoft Windows and Unix/Linux file formats. The MIB files can be downloaded at link: <https://www.vertiv.com/en-us/support/software-download/monitoring/management-information-bases-mibs-for-liebert-products/>

Vertiv™ Liebert® IntelliSlot™ RDU120 Communications Card

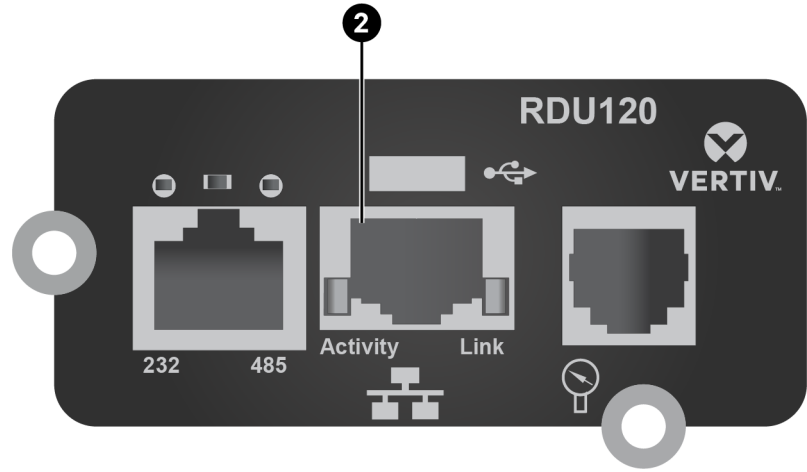

1. Mounting the IntelliSlot card

NOTE: The bay may have a plastic cover.

Insert the card into the IntelliSlot bay on your Liebert equipment and secure the card using the screws supplied with the Liebert equipment.

2. Connecting to Card

If using DHCP or BOOTP, connect a LAN cable to the card's Ethernet port. If using Static IP, proceed to step 4.

3. Using DHCP or BOOTP Address

Allow time for the card to boot and acquire an address.

Get the address from the network administrator based on the card's MAC address (from the label on the card's faceplate). If the network administrator is unavailable, the DHCP address can be obtained by accessing the card with a local connection. This is a direct PC-to-card Ethernet connection. The PC acquires a link-local address, and the card is accessed at 169.254.24.7.

Alternatively, the card can be accessed at 192.168.123.123 by setting up the PC for static IP address of 192.168.123.1. The DHCP address can be found on the Communications>Support>Active Networking>IPv4 Address.

4. Create Administrator Account


Create an administrator account in the above dialogue. Please refer to the Username and Password complexity requirements at the bottom of the dialogue.

5. Using a Static IP Address

Access the card at 169.254.24.7 or 192.168.123.123 as described in step 3. Create Administrator account described in step 4. Click the *Communications* tab, from the Communications tab menu, select *Configuration>Network>IPv4* or *IPv6*. Select the IP protocol folder to configure, click the *Edit* button in the details panel, and enter the Username and Password. Enter the static IP details and then click Save.

ONLINE USER MANUAL

This quick-installation guide provides the information to install and configure the RDU120 card. We highly recommend that you consult the user manual, Vertiv™ Liebert® IntelliSlot™ RDU120 Communications Card Installer/User Guide, available on the product page at www.vertiv.com.

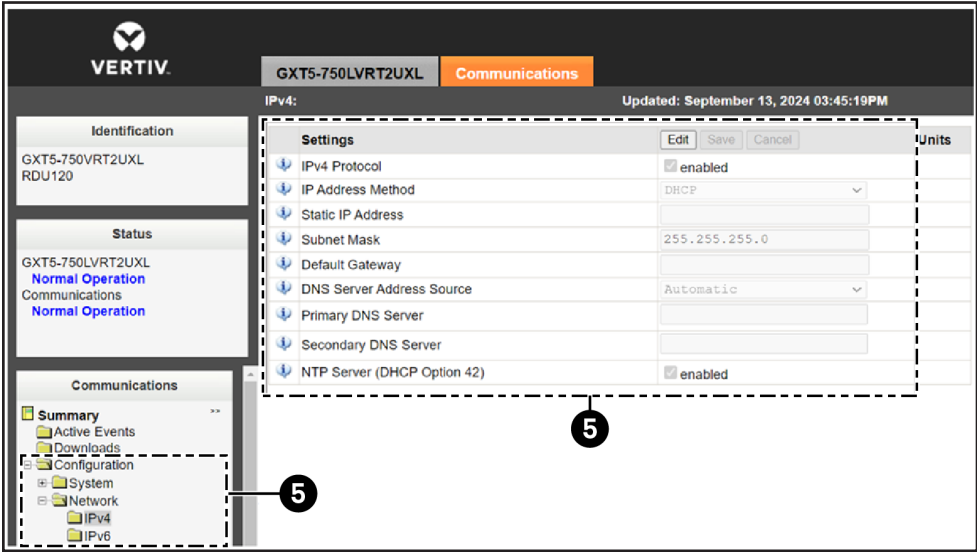

To contact Vertiv Technical Support: visit www.Vertiv.com

© 2024 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

