 


Handling the Unit While Packaged

- Transport packaged unit using a fork lift or pallet jack.
- When using a fork lift, make sure forks (if adjustable) are spread to widest allowable distance to still fit under pallet. Make sure fork length is suitable for pallet length. Pallet length is 60" (1524mm). When a forklift is used, insert the tines of the forklift in the direction as shown in the figure below.
 - Packaged unit shall not be lifted any higher than 2"- 4" (51-102mm) off ground when handled. All by-standing personnel shall be no closer than 12' (3.7m) to handled packaged unit.
 - If circumstances require unit to be lifted higher than 4" (102mm) great care shall be excercised and all by-standing personnel are to be no closer than 20' (5m) to lift point of unit.

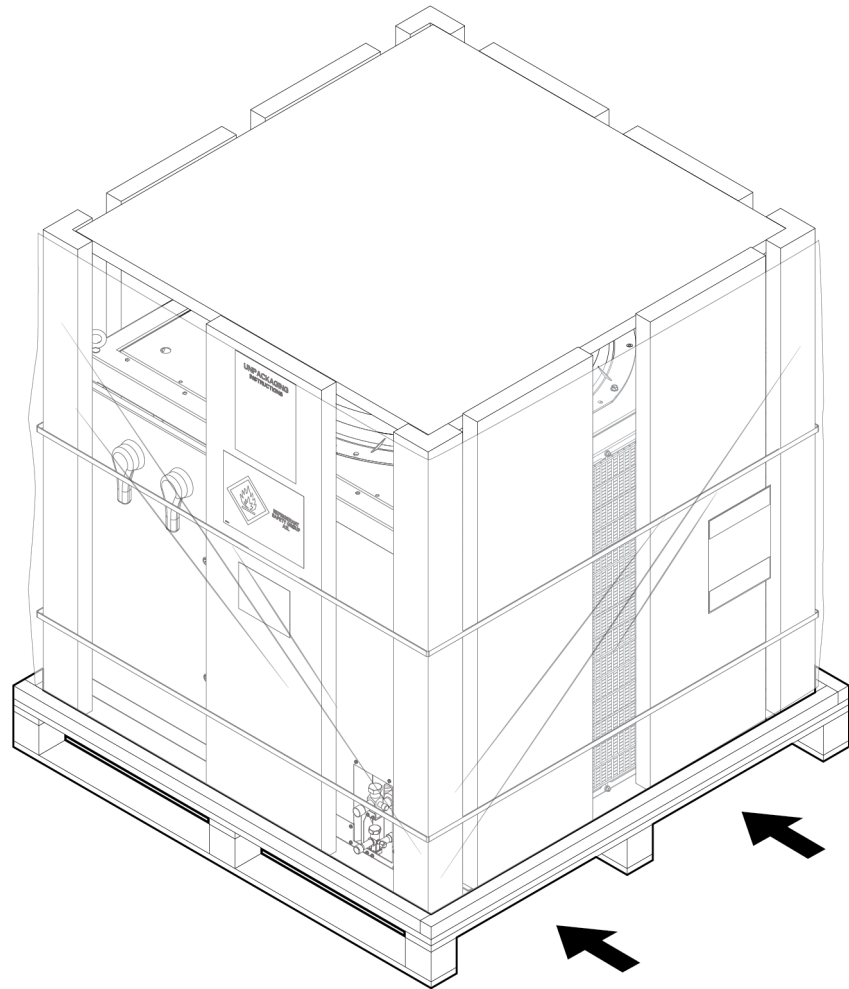

Safety Information


WARNING
Risk of improper handling and contact with sharp edges, splinters and exposed fasteners. Can cause equipment damage, injury, or death. Use only trained and fully qualified technicians wearing appropriate OSHA approved personal protection equipment (PPE) who have read all of the following instructions to move, lift, remove packaging from, or prepare the unit for installation.

CAUTION
Risk of contact with sharp edges, splinters, and exposed fasteners. Can cause injury! Wear appropriate OSHA approved personal protective equipment (PPE) when attempting to move, lift, remove packaging from, or prepare unit for installation.

 
NOTICE
Risk of passageway interference. Can cause unit and/or structure damage. Refer to the installation plans and measure the unit and all passageway dimensions prior to moving the unit to verify clearances.

NOTICE
Risk of improper forklift operation. Can cause unit damage. Keep tines of the forklift level and at a height suitable to fit under the pallet.

Equipment Inspection
Upon arrival of the unit, and before unpacking, verify that labeled equipment matches Bill of Lading. Carefully inspect all items for either visible or concealed damage. Damage should be immediately reported to carrier and a damage claim filed with a copy sent to Vertiv or to your sales representative.


PackingMaterial
 All material used to package this unit is recyclable. Please save for future use, or appropriately dispose of material.

Recommended Unit Handling Equipment

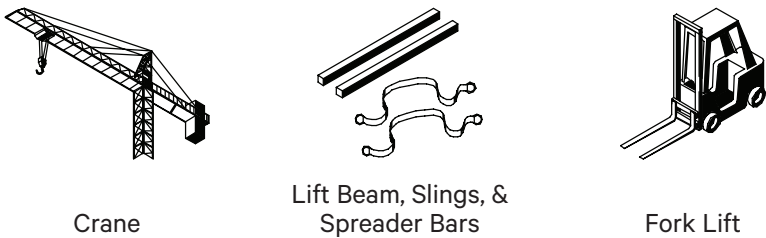


Handling Instructions for Vertiv™ CoolPhase Condensing Unit 21 kW, 28 kW and 35 kW Models

 
Reference guide for receiving,
unpacking and preparing for
installation.
DO NOT THROW AWAY!

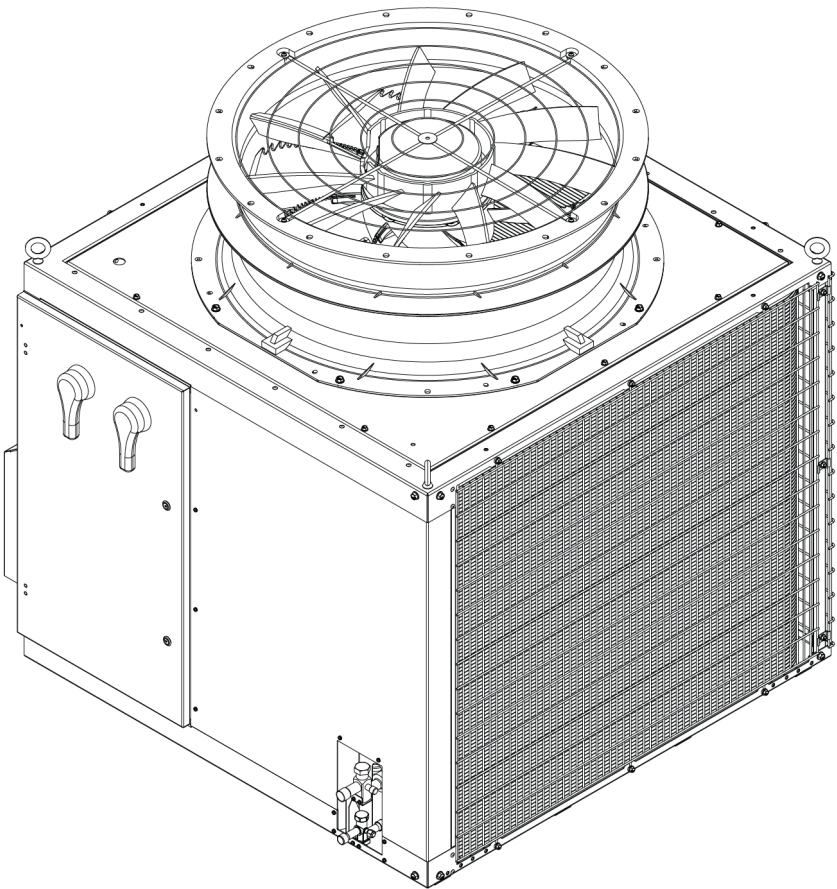

Unpacking Unit

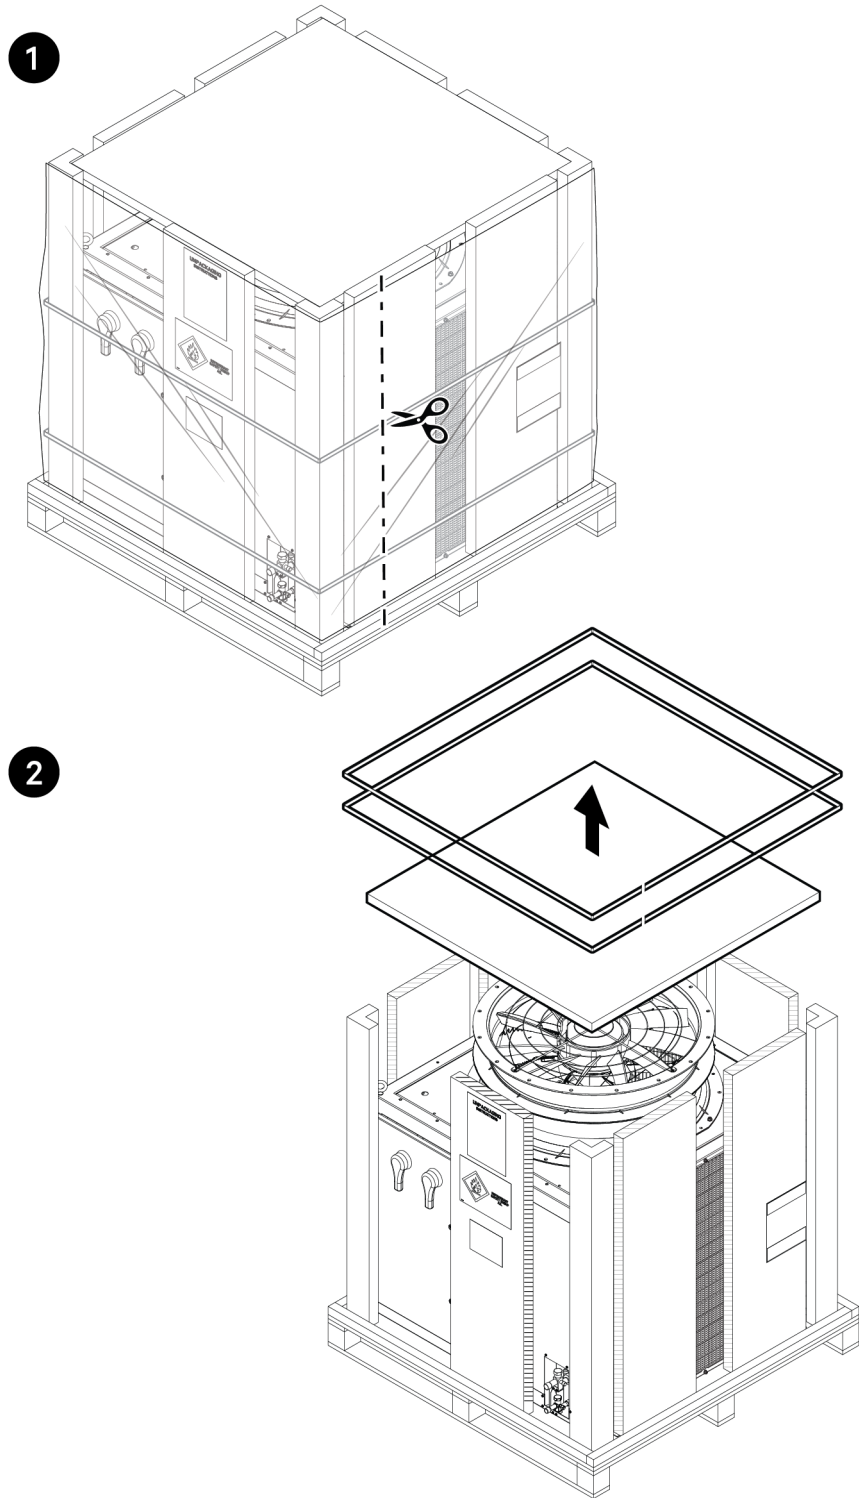 

 - Step 1:**
- Place the package on a flat surface, then trim the plastic wrap and the polystraps to release the unit.
- Step 2:**
- Remove the top honeycomb piece.

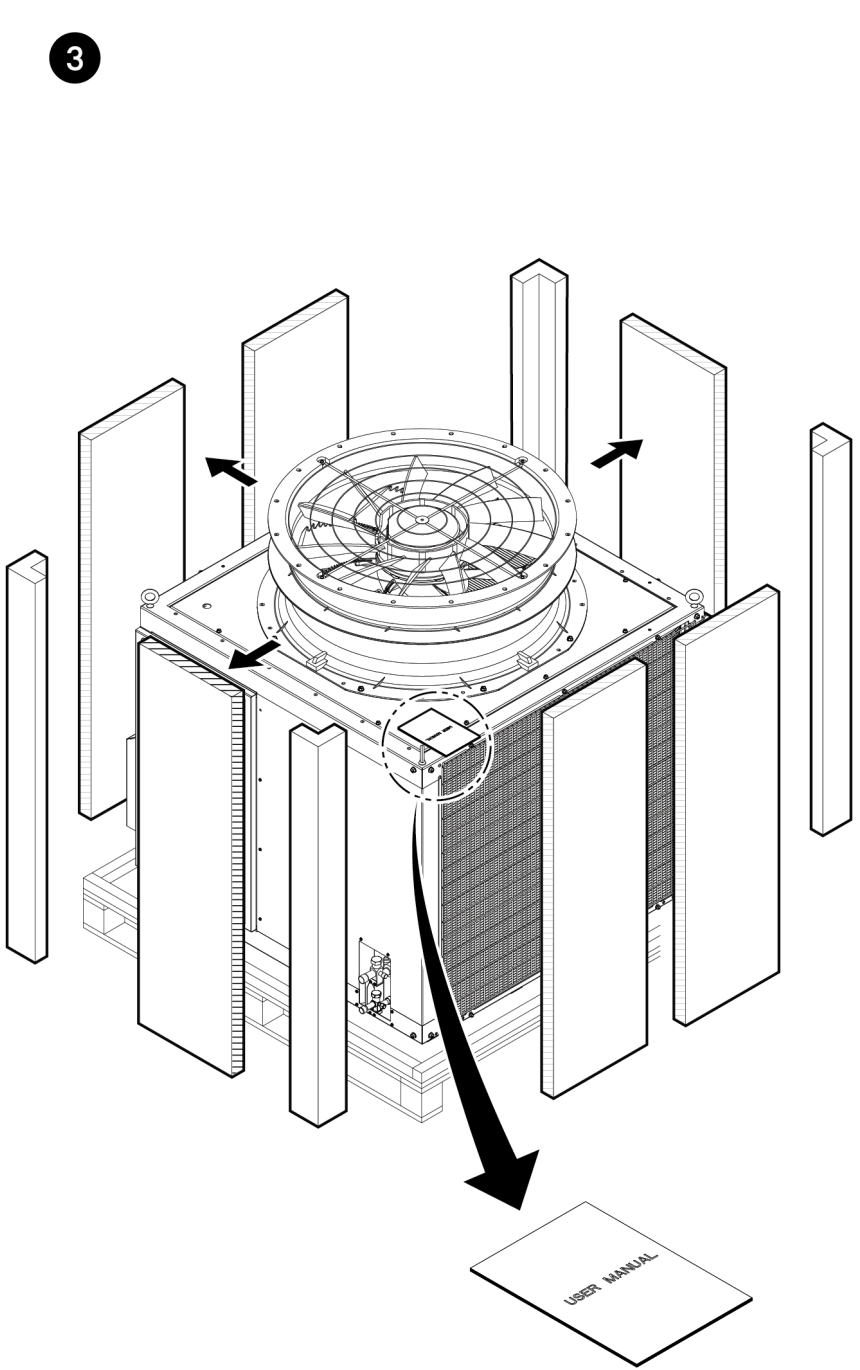

- Step 3:**
- Step aside the honeycomb placed in the sides of the unit, included the foam of the corners, then take out the user manual for Installation.

Removing Unit from Pallet

To remove the unit from the pallet follow the indications bellow:

- Step 1:**
- Take off the shipping brackets from the pallet by detaching the four 3/8" hex screws and washers of each bracket.
- Step 2:**
- Lift the unit with the help of a crane anchoring the slings to the 4 eyebolt lifts located on the top of the unit.

NOTE: Do not throw away the shipping brackets; they are necessary for installing the unit.

NOTE: A minimum height span of 50cm (19.68 in) is required to lift the unit off the shipping pallet safely.

