

# REMOTE ACCESS KEY

## Quick Installation Guide

---

**NOTE:** You will need to configure the Avocent® AutoView™ switch for Dell network settings at the local Setup port for KVM remote access to function.

---

### 1. Connecting the Remote Access Key

Connect the Remote Access Key to any USB port on the AutoView™ switch for Dell. When the key receives USB power, the LED on the key will blink slowly, followed by rapid blinking to indicate successful enumeration, and then illuminate continuously when the key is accepted.

### Dell Remote Access Key



