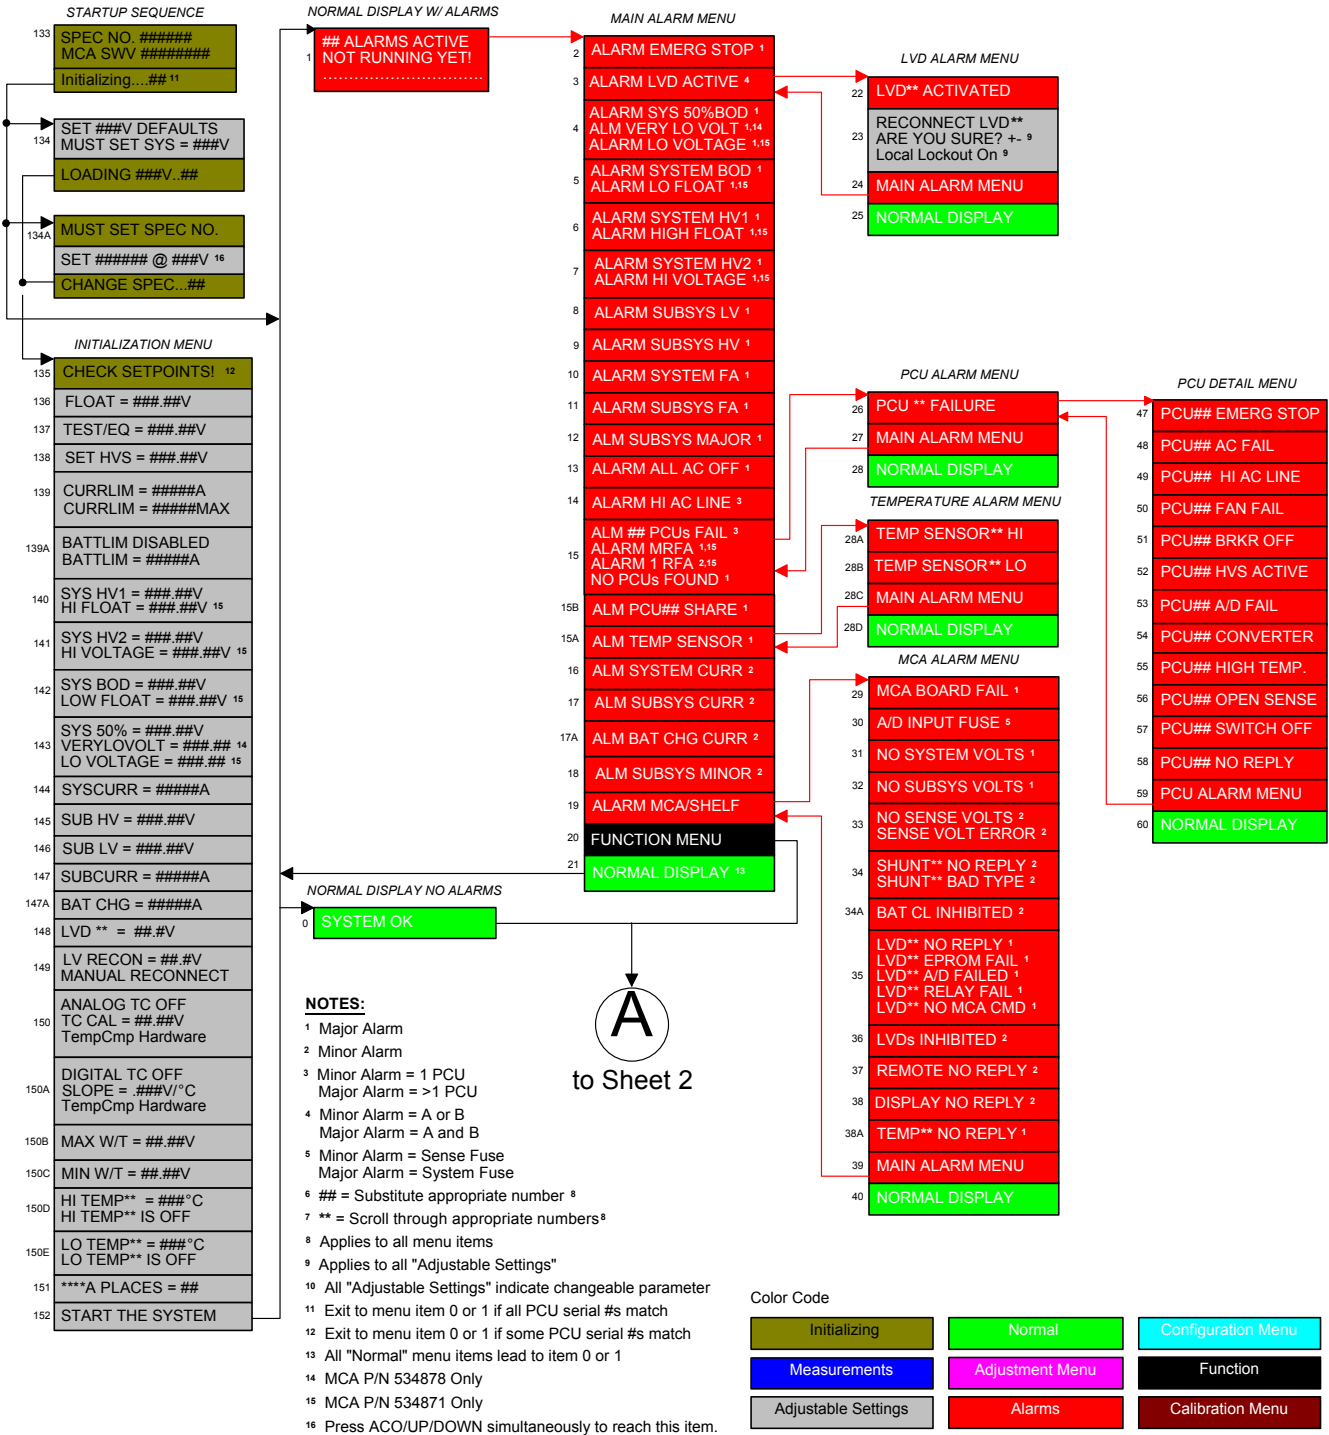
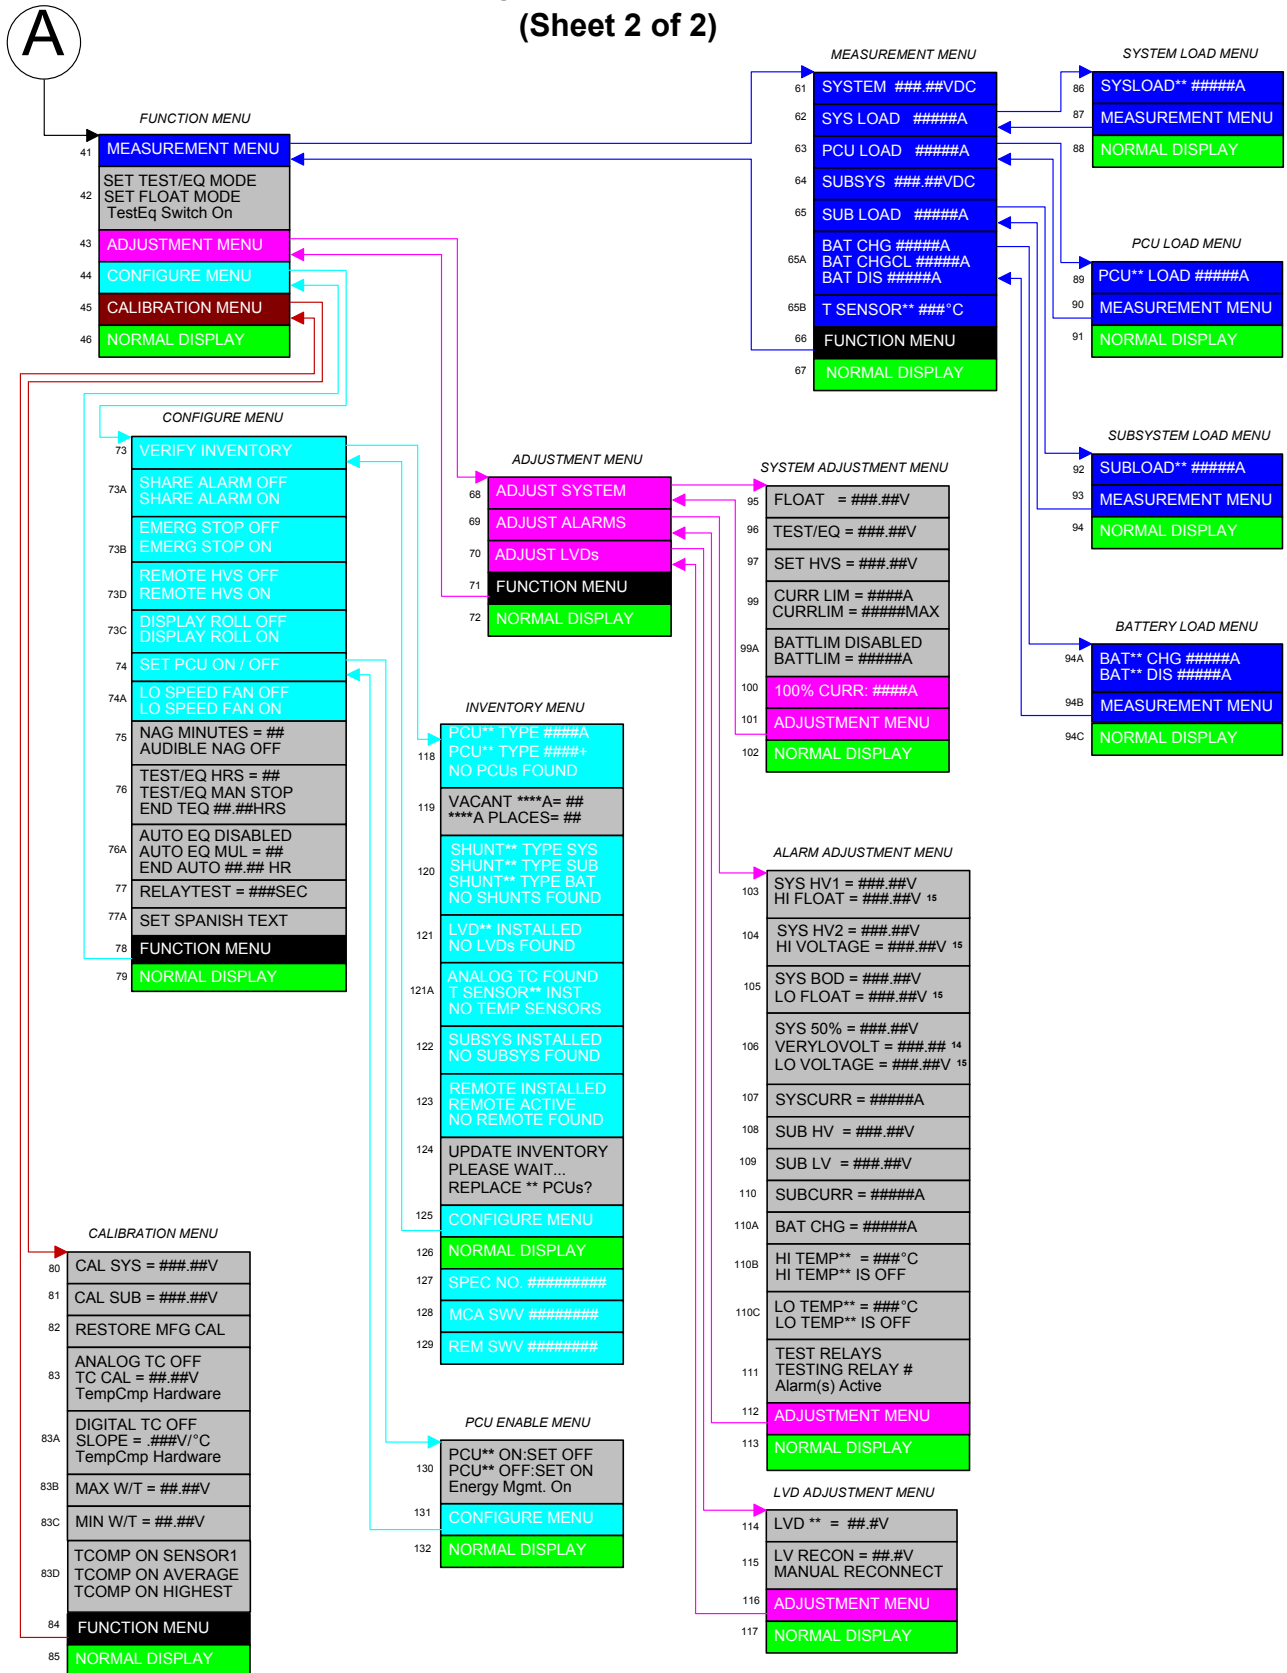


 

 
 
 
 
 
 

## NETSURE™ MCA Menu Tree (Sheet 1 of 2)



from Sheet 1

## NETSURE™ MCA Menu Tree (Sheet 2 of 2)



TASK	KEY OR KEY COMBINATIONS	NOTES
Getting to Home Position	<p>FUNCTION SET YES (+) and NO (-)</p> 	At any level in the MCA menus, pressing these two keys simultaneously takes you back to the "Normal Display" (beginning of menu tree).
Moving from One Menu to Another Menu	<p>FUNCTION SET ENTER</p> 	<p>You can travel left to right from one menu to another by pressing this key.</p> <p>You can also go back to a specified menu by pressing this key while the menu's name is being displayed.</p>
Moving Within a Menu	<p>FUNCTION SELECT Up Arrow and Down Arrow</p> 	Press the Up Arrow key to move up the list of available entries in the active menu. Press the Down Arrow key to move down the list of available entries in the active menu.
Changing a Control Function	<p>ALARM CUTOFF and FUNCTION SET ENTER</p> 	<p>Changing a control function requires two (2) steps.</p> <p>1) With the control function menu item being displayed, simultaneously press the FUNCTION SET ENTER and ALARM CUTOFF keys.</p>
Confirming the Change	<p>FUNCTION SET YES (+) or NO (-)</p> 	<p>2) To accept the change, at the "ARE YOU SURE?+" prompt press the FUNCTION SET YES (+) key. To reject the change, at the "ARE YOU SURE?+" prompt press the FUNCTION SET NO (-) key.</p>
Changing a Value or Setting	<p>ALARM CUTOFF and FUNCTION SET ENTER</p> 	<p>Changing a value or setting requires four (4) steps.</p> <p>1) With the current value or setting being displayed, simultaneously press the FUNCTION SET ENTER and ALARM CUTOFF keys. The name of the value or setting begins to flash.</p>
Changing the Value or Setting	<p>FUNCTION SET YES (+) and NO (-)</p> 	<p>2) To increase the value or change the setting, press the FUNCTION SET YES (+) key. To decrease the value or change the setting, press the FUNCTION SET NO (-) key.</p>
Locking the Change	<p>FUNCTION SET ENTER</p> 	<p>3) With the correct value or setting being displayed, press the FUNCTION SET ENTER key.</p>
Confirming the Change	<p>FUNCTION SET YES (+) or NO (-)</p> 	<p>4) To accept the change, at the "ARE YOU SURE?+" prompt press the FUNCTION SET YES (+) key. To reject the change, at the "ARE YOU SURE?+" prompt press the FUNCTION SET NO (-) key.</p>

**REVISION RECORD**

Issue	Change Number (ECO)	Description of Change
AA	LLP210447	New

**Emerson Network Power, Energy Systems, North America, Inc.**  
1122 F Street / Lorain, Ohio 44052-2293 / (440) 288-1122

*In Canada:*  
Emerson Electric Canada Limited  
122 Edward St. / St. Thomas, Ontario N5P 1Z2 / (519) 637-4900

*In Mexico:*  
Emerson Network Power de Mexico, S.A. de C.V.  
Apartado Postal 77001 / Mexico 10 D.F., MX 11200 / (525) 576-8277

