LIEBERT PSI5™ UPS Quick Installation User Guide



IMPORTANT: Before installing, connecting to supply or operating your Liebert PSI5[™] UPS, please review the Safety and Regulatory Statements sheet. For detailed installation, operating, maintenance and troubleshooting information refer to the PSI5[™] User Guide available at www.VertivCo.com.

INSTALLATION

1. Inspecting the UPS

Inspect the UPS for any signs of obvious damage. If damage is visible, do not proceed and call our warranty support line for assistance at 1-800-222-5877 menu option 3, or email at microups.warranty@vertivco.com.

2. Choosing a location Install the UPS in a temperature-controlled environment that is free of corrosive and conductive contaminants. Avoid locations near heat or water sources and exposed to direct sunlight. For proper ventilation, leave four inches clearance on all sides of the UPS.

The input outlet should be nearby and easily accessible.

3. Installing the UPS

The UPS and optional PSI5[™] UPS External Battery Cabinets may be installed in either a tower or rack configuration. For tower installation, assemble and attach the tower support stands. For rack installation, attach the brackets to the UPS, install the rail kit in the rack if needed, and install the UPS in the rack.

NOTE: This UPS is not for use in a computer room as defined in the standard for the protection of electronic computer/data processing equipment of ANSI/ NFPA 75.

MODEL DESIGN CONFIGURATIONS



PSI5-3000RT100



#	Description
1	Grounding screw
2	Network/Fax/Modem surge protection input/output
3	External battery connector
4	USB communication port
5	Programmable receptacles
6	Non-programmable receptacles
7	SNMP IntelliSlot port
8	Emergency Power Off (EPO) connector
9	Input circuit breaker
10	AC input
11	Output circuit breaker



UPS to External Battery Cabinet Connections



CONNECTIONS

1. Connecting Loads

The UPS has non-programmable and programmable rear outlets. Plug your critical equipment (such as computer, monitors, etc.) into the non-programmable outlets and your less-critical equipment (such as printers and other less-often used peripherals) into the programmable outlets.

2. Connecting for Network Protection (Optional)

> Connect a network, fax, or modem to the network/fax/ modem surge-protection ports on the rear panel for protection from electrical surges to your computer or telephone network.

3. USB Communication Connection (Optional)

Connect the UPS through the rear panel USB Type-B port to a computer via USB to allow unattended, controlledshutdown of your computer in case of UPS input power failure. The UPS works with the computer running software built-in within the Microsoft® Windows® operating system or the *Trellis™* Power Insight software located at www. VertivCo.com.

4. Emergency Poweroff (EPO) Connection (Optional)

To comply with national and local wiring codes and regulations, the EPO connector internally disconnects all power sources to the UPS and connected equipment. To use this feature remove the factoryinstalled jumper on the rearpanel EPO connector and connect to active-open contacts that are normally closed but open during an emergency power off event. Operating logic may be reversed in the Settings menu. If you do not use the EPO connector, leave the factoryinstalled jumper in place and the default (active open) EPO setting in the Settings Menu.

5. External Battery Cabinet Connection (Optional)

External battery cabinets provide longer battery run-time for connected devices. Refer to PSI5[™] User Guide, to select the appropriate model and quantity for your model and applications. You can connect up to 6 battery cabinets to the PSI5.

- 1. Turn off the UPS utility input.
- 2. Open the front left cover on the UPS and the External Battery Cabinet (EBC) and disconnect the internal batteries.
- 3. Remove the EBC terminal covers from the UPS and the EBC. Connect one end of the external battery cable to the UPS and one end to the battery cabinet. If connecting more than one external battery, connect one end of the external battery cable to the second connector on the battery cabinet, then connect the other end to the next battery cabinet.

Quick Installation User Guide

- 4. Once the UPS and EBC(s) are connected, secure the connection with the screws, reconnect the internal batteries and replace the front left covers on the units.
- 5. After installation and initial startup, set the number of installed battery cabinets in the UPS settings.

NOTE: When two or more external battery cabinets are used with PSI5 model 3000, the UPS load rating is decreased by 20%.

6. Network communication card connection (optional)

For external status monitoring, there is a network communications port where one of these network cards can be installed:

- IntelliSlot Relay card, IS-UNITY-SNMP
- IntelliSlot Unity card, IS-UNITY-DP
- Remove the two screws and protective cover on the rearpanel network communications port.
- 2. Insert the card into the port and secure it with the screws. Refer to the documentation with the card or at www.VertivCo. com for cable connection and operation.

7. Connecting AC Input

Ensure that all the loads are first powered off. Connect to an input-power supply/wall outlet that is properly protected by a circuit breaker in accordance with national and local electrical codes. The input receptacle must be grounded Once the UPS is plugged into the wall outlet, it begins charging the battery.



OPERATION

1. Starting up the UPS

Plug the UPS input plug into a stable 120VAC source. The LCD display briefly turns on and the batteries begin charging. Press and hold the **ON/MUTE** button for two seconds until the display flashes On. The UPS is in Battery Self Test mode for 10 seconds. After a successful battery self-test, the UPS is in On Mode.

2. Shutting down the UPS Press and hold the OFF/ENTER button for two seconds, turning the battery-backed-up outlets off. Disconnect the input power.

3. Fully shutting down the UPS

Perform the normal shutdown sequence. Remove the front bezel, then disconnect the battery connector. Replace the front bezel. The unit is now fully shut down.

MAINTENANCE AND BATTERY REPLACEMENT Precaution

Although the UPS is designed and manufactured to ensure personal safety, improper use can result in electrical shock or fire. To ensure safety, observe the following precautions:

- Turn off and unplug the UPS before cleaning it.
- Clean the UPS with a dry cloth. Do not use liquid or aerosol cleaners.

- Never block or insert any objects into the UPS ventilation holes or openings.
- Do not place the UPS power cord where it might be damaged.

Battery Charging

The batteries are valve-regulated, non-spillable, lead acid and should be kept charged to attain their design life. The UPS charges the batteries continuously when it is connected to the utility input power. If the UPS will be stored for a long time, we recommend connecting the UPS to input power for at least 24 hours every four to six months to ensure full recharge of the batteries.

Replacing the Battery

IMPORTANT: Before you proceed, please review the battery safety precautions available at https:// www.vertivco.com/

ComplianceRegulatoryInfo.

You may safely replace the internal battery pack. See the Specifications in the User Guide online at www. VertivCo.com for the part number of the replacement battery for your UPS model number.

NOTE: Replace the battery with the same type and number as originally installed.

1. Removing the front panel Remove the front bezel by pulling firmly until the snaps release.

2. Disconnecting the battery wires

Disconnect the battery connector by squeezing the ends and pulling apart.

3. Removing the battery box Remove the two screws and the metal battery cover plate. Slide out the existing battery kit and disconnect the battery terminals from the connector, disconnecting the red wire first then the black wire.



LIEBERT PSI5[™] UPS

Quick Installation User Guide

4. Installing the new battery

Plug the removed connector into the terminals of the new battery, plugging the black wire in first then the red wire. Orient the connector and the new battery in the same way as the original battery, then slide them into the UPS. Reconnect the two halves of the battery connector and slide the front panel back on until it clicks. Replace the metal plate and secure with the two screws. Snap the front bezel back on.

5. Testing the new battery

Press and hold the power button for three seconds to initiate the Battery-Self Check mode to clear any previous battery fault warning.

6. Disposing of the old battery

Properly dispose of old batteries at an appropriate recycling center or return them to Vertiv in the packing material for the replacement batteries.

UPS Battery Replacement



To contact Vertiv Technical Support: visit www.VertivCo.com

© 2018 Vertiv Co. All rights reserved. Vertiv and the Vertiv logo are trademarks or registered trademarks of Vertiv Co. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness herein, Vertiv Co. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications are subject to change without notice.







重要:Liebert PSI5™ UPS を設置し、 電源に接続、または操作する前に、安 全性と規制に関する記述書を確認し てください。インストール、操作、メン テナンス、およびトラブルシューティ ングの詳細情報については、PSI5™ ユーザーガイド (www.VertivCo.com より入手可)を参照してください。

インストール

1. UPS の点検

UPS に明らかな損傷の兆候が ないか点検します。損傷が認 められる場合は、先に進むの を止め、弊社の保証サポート ライン(1-800-222-5877 メニ ューオプション3)に電話する か、または電子メール (microups.warranty@vertivco.com) で支援を求めてください。

2. 場所の選択

腐食性および導電性の汚染物質 がない、温度制御された環境に UPSを設置してください。熱源や 水源の近く、および直射日光の 当たる場所は避けてください。適 切に換気するため、UPSのすべ ての側面に4インチの隙間を残 してください。

入力コンセントは近くにあって、 簡単にアクセスできる必要があ ります。

3. UPS のインストール

UPS とオプションの PSI5™ UPS 外付けバッテリキャビネットは、 タワー型またはラック型のどちら で設置することもできます。タワ ー型の場合は、タワー支持台を組 み立てて取り付けます。ラック型 設置の場合は、ブラケットをUPS に取り付け、必要に応じてレール キットをラックに取り付け、UPS をラックに設置します。

注: この UPS は、ANSI/NFPA 75 の 電子コンピュータ/データ処理装置 の保護のための規格で定義されて いるとおり、コンピュータルームでの 使用はできません。

モデル設計の構成

PSI5-1500RT100



PSI5-3000RT100



#	説明
1	アースねじ
2	ネットワーク/ファックス/モデムサージ保護入出力
3	外付けバッテリコネクタ
4	USB 通信ポート
5	プログラム可能レセプタクル
6	プログラム不能レセプタクル
7	SNMP IntelliSlot ポート
8	緊急電源切断(EPO)コネクタ
9	入力ブレーカー
10	AC入力
11	出力ブレーカー



UPSから外付けバッテリキャビネットへの接続



接続

1. 負荷の接続

UPS は、プログラム不能および プログラム可能のリアコンセン トを備えています。重要な機器 (コンピュータ、モニタなど)は プログラム不能なコンセントに、 それほど重要でない機器(プリン タやそれほど頻繁には使用され ない周辺機器など)はプログラ ム可能なコンセントに差し込み ます。

2. ネットワーク保護(オプション)のための接続

コンピュータや電話網への電気 的サージから保護するために、 ネットワーク、ファックス、または モデムを背面パネルのネットワ ーク/ファックス/モデムサージ保 護ポートに接続します。

3. USB 通信接続(オプション) 背面パネルの USB タイプ B ポ ートを使用して UPS を USB 経 由でコンピュータに接続し、UPS の入力電源障害時にコンピュー タの無人で制御されたシャット ダウンを可能にします。UPS は、Microsoft®Windows® オペレ ーティングシステム、または www.VertivCo.com にある Trellis[™] Power Insight ソフトウェ アに組み込まれたソフトウェア を実行しているコンピュータで 動作します。

4. 緊急電源切断 (EPO) 接続 (オプション)

国および地域の配線コードおよ び規制を遵守するために、EPO コネクタはUPSおよび接続され た機器へのすべての電源を内部 で切断します。この機能を使用す るには、リアパネルの EPO コネ クタに工場出荷時に取り付けら れているジャンパを取り外し、通 常は閉じているが緊急電源オフ イベント中は開いているアクティ ブなオープン接点に接続します。 操作ロジックは、[設定]メニュー で元に戻すことができます。EPO コネクタを使用しない場合は、エ 場出荷時に取り付けられている ジャンパと、[設定]メニューのデ フォルト(アクティブな開いた状 態)の EPO 設定のままにしてお きます。

5. 外付けバッテリキャビネット 接続(オプション)

外付けバッテリキャビネットは、 接続されたデバイスのバッテリ 駆動時間を長くします。使用モデ ルとアプリケーションに適したモ デルと数量を選択するに は、PSI5™ユーザーガイドを参 照してください。PSI5 には最大 6 つのバッテリキャビネットを接続 できます。

- UPS ユーティリティ入力をオ フにします。
- UPSの前面左側にあるカバ ーと外付けバッテリキャビネ ット(EBC)を開き、内蔵バッ テリを取り外します。
- UPS および EBC から EBC 端子カバーを取り外します。 外付けバッテリケーブルの 一端を UPS に接続し、もう 一端はバッテリキャビネッ トに接続します。複数の外 付けバッテリを接続する場 合、外付けバッテリケーブ ルの一端をバッテリキャビ ネットの2番目のコネクタに 接続し、もう一端は次のバ ッテリキャビネットに接続 します。
- UPSとEBCが接続されたら、ネジで接続を固定し、内蔵バッテリを接続し直して、前面左側のカバーをユニットに戻します。

LIEBERT PSI5™ UPS

クイック・インストレーション・ユーザー・ガイド

 インストールおよび初期起 動の後、UPSの設定で取り付 けられたバッテリキャビネッ トの数を設定します。

注:複数の外付けバッテリキャビネットをPSI5 モデル 3000 で使用する 場合、UPS の定格荷重は 20%減少します。

6. ネットワーク通信カード接続 (オプション)

> 外部状態を監視するために、これ らのネットワークカードの1つをイ ンストールすることができるネッ トワーク通信ポートがあります。

- IntelliSlot リレーカー ド、IS-UNITY-SNMP
- ・ IntelliSlot UNITY カー ド、IS-UNITY-DP
- リアパネルのネットワーク通 信ポートにある2本のネジと 保護カバーを取り外します。
- ポートにカードを挿入し、ネジで固定します。ケーブルの接続と操作については、カードに付属の文書またはwww.VertivCo.comを参照してください。

7. AC入力の接続

すべての負荷がまず電源オフに なっていることを確認します。国 および地域の電気工事規定に準 拠して、ブレーカーにより適切に 保護されている入力電源装置ま たは壁コンセントに接続します。 入力レセプタクルは接地する必 要があります。UPSをコンセント に差し込むと、バッテリの充電が 開始されます。

操作

1. UPS の起動

UPS 入力プラグを、安定した 120VAC電源に差し込みま す。LCDディスプレイが短時間点 灯し、バッテリが充電を開始しま す。ディスプレイが [オン] を点滅 するまで、【オン/ミュート】 ボタン を 2 秒間押します。UPSは、10 秒 間 [バッテリのセルフテスト] モ ードになります。バッテリセルフ テストが正常に終了すると、UPS は [オンモード] になります。



- 2. UPS のシャットダウン [オフ/ENTER] ボタンを2秒間押 し続けると、バッテリバックアッ プされた差し込み口がオフにな ります。入力電源を切断します。
- UPS の完全なシャットダウン 通常のシャットダウン手順を実 行します。前面ベゼルを取り外し てから、バッテリコネクタの接続 を切ります。前面ベゼルを戻しま す。これでユニットは完全にシャ ットダウンされています。

メンテナンスとバッテリ交換 使用上の注意

UPS は身の安全を確保するように 設計および製造されてはいますが、 不適切な使用は感電や火災をもた らす可能性があります。安全を確保 するために、次の使用上の注意を守 ってください。

- 洗浄の前には、UPS の電源を 切り、電源プラグを抜いてくだ さい。
- 乾いた布で UPS を洗浄します。 液体クリーナーやエアゾール クリーナーは使用しないでくだ さい。
- UPSの通気穴または開口部を遮 ったり物を詰めたりしないでくだ さい。
- UPSの電源コードを破損するような場所に置かないでください。

バッテリの充電

バッテリは密閉形の漏出しない鉛蓄 電池であり、設計寿命を達成するた めには充電を維持する必要がありま す。UPSは、ユーティリティ入力電源 に接続されているとき、バッテリを連 続的に充電します。UPSを長時間保 管する場合は、4~6か月ごとに少な くとも24時間以上UPSを入力電源 に接続して、バッテリを確実に完全 再充電することをお勧めします。

バッテリ交換

重要:先に進む前に、https:// www.vertivco.com/ ComplianceRegulatoryInfo から入 手できるバッテリの安全上の注意事 項を確認してください。

内蔵バッテリパックは安全に交換 することができます。お使いの UPS モデル番号の交換用バッテリの部 品番号は、www.VertivCo.com から 入手できるオンラインの「ユーザ ーガイドの仕様」を参照してくだ さい。

注: バッテリは、最初に取り付けられていたものと同じタイプおよび番号のものと交換してください。

- 前面パネルの取り外し スナップが外れるまでしっかり と引いて前面ベゼルを取り外し ます。
- バッテリワイヤの取り外し 両端を絞って引き離すことにより、バッテリコネクタの接続を切ります。
- 3. バッテリボックスの取り外し 2本のネジと金属製バッテリカ バープレートを取り外します。 現在のバッテリキットをスライ ドさせてバッテリ端子をコネク タから切断しますが、まず赤線 を切断してから黒線を切断し ます。
- 4. 新しいバッテリの取り付け 取り外したコネクタを新しいバ ッテリ端子に差し込みますが、 最初に黒線を、その後赤線を差 し込みます。元のバッテリと同 じ方法でコネクタと新しいバッ テリの向きを合わせ、その後 UPS にスライドさせます。バッ テリコネクタの2等分を再接続 し、カチッという音がするまで 前面パネルをスライドさせて元 に戻します。金属板を元に戻 し、2本のネジで固定します。前 面べゼルをカチッと止めて元に 戻します。

LIEBERT PSI5™ UPS

クイック・インストレーション・ユーザー・ガイド



5. 新しいバッテリのテスト

電源ボタンを3秒間押し続ける と、[バッテリセルフチェック] モ ードが起動し、それまであったバ ッテリ障害の警告はクリアされ ます。

6. 古いバッテリの廃棄 古いバッテリは、該当するリサ イクルセンターに適切に廃棄す

るか、交換用バッテリの梱包材 に入れて Vertiv に返送してくだ さい。



Vertiv テクニカル・サポートに問い合わせるには、www.VertivCo.com にアクセスしてください

© 2018 Vertiv Co. 全著作権所有。Vertiv および Vertiv ロゴは Vertiv Co. の商標または登録商標です。言及されている他のすべての名称およびロゴは、それぞれの所有者の商号、商標 または登録商標です。ここに記載される内容の正確性および完全性を保証するため、Vertiv Co. ではあらゆる予防措置を講じておりますが、本情報の使用が原因で発生する損害または 錯誤もしくは不作為に対して、一切の責任を負わず、かつそのすべての賠償責任を拒否します。仕様は予告なく変更される可能性があります。

