



# Liebert<sup>®</sup> Trinergy<sup>™</sup> Cube

## Operation and Maintenance Guide

800 kVA – 1600 kVA, 60 Hz, Three-phase UPS,  
Single-module and Multi-module

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages result from use of this information or for any errors or omissions.

Refer to local regulations and building codes relating to the application, installation, and operation of this product. The consulting engineer, installer, and/or end user is responsible for compliance with all applicable laws and regulations relation to the application, installation, and operation of this product.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use, or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

### **Technical Support Site**

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit <https://www.vertiv.com/en-us/support/> for additional assistance.

## TABLE OF CONTENTS

<b>1 Important Safety Instructions</b> .....	<b>1</b>
<b>2 Introduction</b> .....	<b>5</b>
2.1 General Description .....	5
2.2 Modes of Operation .....	8
2.2.1 Functions .....	8
2.3 Special Features .....	9
2.3.1 Smart safe and reliable operation .....	9
2.3.2 Easy installation and operation .....	9
2.3.3 Battery management .....	9
2.3.4 Environment, EMC .....	9
2.3.5 Modern technology .....	10
2.4 Options .....	10
2.5 Setpoints (User Adjustable) .....	11
<b>3 Operation</b> .....	<b>13</b>
3.1 Touchscreen Navigation .....	13
3.1.1 Single UPS - switching to Automatic operating mode .....	13
3.1.2 Single UPS - switching to System Bypass .....	14
3.1.3 Parallel UPS System - switching to Automatic operating mode .....	14
3.1.4 Parallel UPS System - switching to System Bypass .....	14
3.2 Manual Operations—All Systems .....	14
3.2.1 Startup—single module system .....	18
3.2.2 Load transfer and retransfer—single-module system .....	20
3.2.3 Maintenance bypass load transfers—single-module system .....	20
3.2.4 1+N systems .....	22
3.2.5 Load transfer 1+N system: remove a UPS from system (collective) .....	23
3.2.6 Load transfer 1+N system: add a UPS to the system (collective) .....	24
3.2.7 Load transfer 1+N system—transfer system inverter to bypass .....	24
3.2.8 Load transfer 1+N system: transfer system from bypass to inverter .....	24
3.2.9 Maintenance bypass load transfer—1+N module system .....	25
3.2.10 Shutdown—1+N system shutdown .....	26
3.2.11 Energize the transformer .....	27
<b>4 Battery Connectivity Status</b> .....	<b>29</b>
4.1 Battery Icon Color .....	29
4.1.1 Core view of the touchscreen with VRLA or HPL batteries .....	29
4.1.2 Core view of the touchscreen with Samsung batteries .....	29
4.1.3 I/O box view of the touchscreen with VRLA or HPL batteries .....	29
4.1.4 I/O box view of the touchscreen with Samsung batteries .....	29

- 4.2 Battery Disconnects ..... 29
  - 4.2.1 Core view of the touch screen ..... 29
  - 4.2.2 I/O Box view of the touch screen ..... 30
- 5 Maintenance ..... 31**
- 5.1 Safety Precautions ..... 31
- 5.2 Routine Maintenance ..... 32
  - 5.2.1 Record log ..... 32
  - 5.2.2 Air filter ..... 32
  - 5.2.3 Limited life components ..... 33
- 5.3 Battery Maintenance ..... 34
  - 5.3.1 Battery safety precautions ..... 34
- 5.4 Detecting Trouble ..... 36
  - 5.4.1 Reporting a problem ..... 37
- 5.5 Upstream Feeder Circuit Breaker Setting Inspections ..... 37
- 6 Specifications ..... 39**
- 6.1 Performance Data ..... 43
- Appendices ..... 45**
- Appendix A: Technical Support and Contacts ..... 45
- Appendix B: Vertiv™ Liebert® Trinergy™ Cube Status Messages ..... 47
- Appendix C: Vertiv™ Liebert® Trinergy™ Cube Alarm Messages ..... 54
- Appendix D: Vertiv™ Liebert® Trinergy™ Cube Fault Messages ..... 60

# 1 Important Safety Instructions

## Save These Instructions

This manual contains important instructions that should be followed during operation and maintenance of the Vertiv™ Liebert® Trinerigy™ Cube uninterruptible power system and DC source.



**WARNING! To Reduce the Risk of Injury, read all instructions.**

**Risk of electric shock. Can cause equipment damage, injury or death.**

**Hazardous Voltage Circuits.**

Exercise extreme care when handling UPS cabinets to avoid equipment damage or injury to personnel. Refer to separate installation manual for equipment handling information and installation procedures. Follow all DC source safety precautions when installing, charging or servicing DC sources. In addition to the hazard of electric shock, gas produced by batteries can be explosive and sulfuric acid can cause severe burns. In case of fire involving electrical equipment, use only carbon dioxide fire extinguishers or others approved for use in electrical fire fighting.

Extreme caution is required when performing maintenance. Service and maintenance work must be performed only by properly trained and qualified personnel and in accordance with applicable regulations as well as with manufacturers' specifications.

Be constantly aware that the UPS contains high DC as well as AC voltages. With input power off and the DC source disconnected, high voltage at filter capacitors and power circuits should be discharged within 5 minutes. However, if a power circuit failure has occurred, assume that high voltage still exists after shutdown. Check with a voltmeter before making contact.

AC voltage will remain on the system bypass, the UPS output terminals and the static bypass switch, unless associated external circuit breakers are opened. Check for voltage with both AC and DC voltmeters prior to making contact. When the UPS is under power, both the operator and any test equipment must be isolated from direct contact with earth ground and the UPS chassis frame by using rubber mats. Some components within the cabinets are not connected to the chassis ground.

Any contact between floating circuits and the chassis is a lethal shock hazard. Exercise caution that the test instrument exterior does not make contact, either physically or electrically, with earth ground.

**NOTE:** For installation only where accessible to Qualified Persons per NEC 110.27(A)(1) and CEC 2-202(1)(a).

**NOTE:** In the event of an emergency or problems with the system, please call Liebert Services at 1-800-543-2378. Vertiv: 975 Pittsburgh Drive, Delaware, OH 43015.



**AVERTISSEMENT! Risque de décharge électrique pouvant entraîner des dommages matériels, des blessures et même la mort. Faites preuve d'une extrême prudence lors de la manutention des armoires ASC afin d'éviter de les endommager ou de blesser le personnel. Reportez-vous au manuel d'installation approprié pour connaître les consignes de manutention et les procédures d'installation de l'équipement. Observez toutes les mesures de sécurité relatives à la source d'alimentation c.c. décrites dans la section 4.0 -Entretien lors de l'installation, de la charge ou de l'entretien des sources c.c. Outre les risques de décharge électrique associés aux batteries, les gaz qu'elles produisent peuvent être explosifs et l'acide sulfurique qu'elles contiennent peut provoquer des brûlures graves. En cas d'incendie associé à du matériel électrique, n'utilisez que des extincteurs à dioxyde de carbone ou homologués pour la lutte contre les incendies d'origine électrique. Les opérations d'entretien requièrent une extrême prudence. Les opérations d'entretien ne doivent être confiées qu'à du personnel qualifié et dûment formé. Toutes les interventions doivent être effectuées conformément aux règlements applicables et aux spécifications du fabricant. Soyez toujours conscient du fait que le système ASC contient des tensions c.c. et c.a. élevées. Une fois l'alimentation d'entrée coupée et la source d'alimentation c.c. débranchée, la haute tension aux condensateurs de filtrage et aux circuits d'alimentation devrait se dissiper en moins de 5 minutes. En cas de défaillance d'un circuit d'alimentation, toutefois, il importe de présumer qu'une tension élevée est présente même après l'arrêt. Vérifiez toujours les tensions avec un voltmètre avant d'établir des contacts. Le circuit de dérivation, les bornes de sortie ASC et le commutateur statique de dérivation continueront d'afficher une tension c.a. à moins que les disjoncteurs externes associés ne soient ouverts. Vérifiez les tensions avec des voltmètres c.a. et c.c. avant d'établir tout contact. Lorsque le système ASC est sous tension, les responsables de l'entretien et l'équipement d'essai doivent reposer sur des tapis de caoutchouc pour prévenir tout contact direct avec le sol et avec le châssis du système lors des interventions. Certains composants à l'intérieur des armoires ne sont pas connectés à la masse du châssis. Tout contact entre les circuits flottants et le châssis présente un risque de décharge mortelle. Il importe de veiller à ce que l'extérieur des équipements d'essai n'entre pas en contact physique ou électrique avec le sol.**

UL9540 ESS system requires upstream input circuit breaker (feeder breaker) which is customer supplied responsibility for field installation with means of accessible manual disconnect. The customer to ensure that all lockout tagout (LOTO) devices are rated according to specific of manufacturer kilo ampere interrupting capacity (kAIC) specification as required by NFPA 70E and CSA Z462 per table 12. Before beginning any electrical installation or maintenance of ESS system, ensure proper LOTO procedure is followed for all upstream feeder breakers and downstream output breakers directly connected to the UPS, and any DC breakers for the battery circuit to properly isolate power. The proper LOTO procedure will be determined by manufacturer for all applicable equipment. The size and type of LOTO device will be dependent on manufacture and size of disconnect device used. Refer to the manufacturer-supplied user information for all applicable equipment.

Arc Flash Ratings should be determined as part of customer site arc flash coordination study. Ground fault detection is required per NFPA 70E and CSA Z462. For compliance with UL9540 ESS system requirements for LOTO procedure of the DC source EnergyCore Lithium 5/7 battery cabinet, refer to the **Vertiv™ EnergyCore Lithium 5 SL-71251/Vertiv™ EnergyCore Lithium 7 SL-71369**.

This equipment contains circuitry that is energized with high voltage. Only test equipment designated for troubleshooting should be used. This is particularly true for oscilloscopes. Always check with an AC and DC voltmeter to ensure safety before making contact or using tools. Even when the power is turned Off, dangerously high voltage can exist at the capacitor banks.

Observe all DC source precautions when near the DC source for any reason.

ONLY properly trained and qualified service personnel should perform maintenance on the UPS system. When performing maintenance on any part of the equipment under power, service personnel and test equipment should be standing on rubber mats. The service personnel should wear insulating shoes for isolation from direct contact with the floor (earth ground).

One person should never work alone. A second person should be standing by to assist and summon help in case an accident should occur. This is particularly true when work is performed on the DC source.

## Battery Cabinet Precautions

The following warning applies to all battery cabinets supplied with UPS systems. Additional warnings and cautions applicable to battery cabinets can be found in [Important Safety Instructions](#) on page 1 and [Battery Maintenance](#) on page 34.



**WARNING! Internal battery strapping must be verified by manufacturer prior to moving a battery cabinet (after initial installation). Battery cabinets contain non-spillable batteries.**

- Keep units upright
- Do not stack
- Do not tilt

Failure to heed this warning could result in smoke, fire or electric hazard. Contact Vertiv Technical Support before moving battery cabinets (after initial installation). For systems using DC sources other than batteries, refer to the manufacturer's recommendations for handling and care.



**AVERTISSEMENT! L'arrimage des batteries internes doit être vérifié par le fabricant avant de déplacer une armoire de batteries (après l'installation initiale). Les armoires de batteries contiennent des batteries étanches.**

- Maintenir les systèmes à la verticale.
- Ne pas empiler.
- Ne pas incliner.

Le non-respect de ces consignes comporte des risques liés à la fumée, au feu ou à l'électricité. Composez le Vertiv avant de déplacer des armoires de batteries (après l'installation initiale). Reportez-vous aux recommandations du fabricant relatives à la manipulation et à l'entretien pour les systèmes qui utilisent d'autres sources d'alimentation c.c. que les batteries.

This page intentionally left blank

## 2 Introduction

### 2.1 General Description

The Vertiv™ Liebert® Trinergy™ Cube provides continuous, high quality AC power to business-critical equipment, such as telecommunications and data processing equipment.

The Vertiv Liebert Trinergy Cube supplies power that is free of the disturbances and variations in voltage and frequency common to utility power, which is subject to brownouts, blackouts, surges and sags.

The Vertiv Liebert Trinergy Cube utilizes the latest in high frequency, double conversion pulse width modulation technology and fully digital controls to enhance its reliability and increase the ease of use.

As shown in the following figure, the AC utility source is input at the rectifier and the rectifier converts the AC utility into DC power. The inverter converts that DC power from the rectifier or DC power from the DC source into AC power for the load.

The DC source will power the load through the inverter in the event of a power failure. The utility source can also power the load through the static bypass. If maintenance or repair of the UPS is necessary, the load can be switched without interruption in service to the optional maintenance bypass.

**Figure 2.1 Typical Single Module UPS One Line Diagram, Single Input**

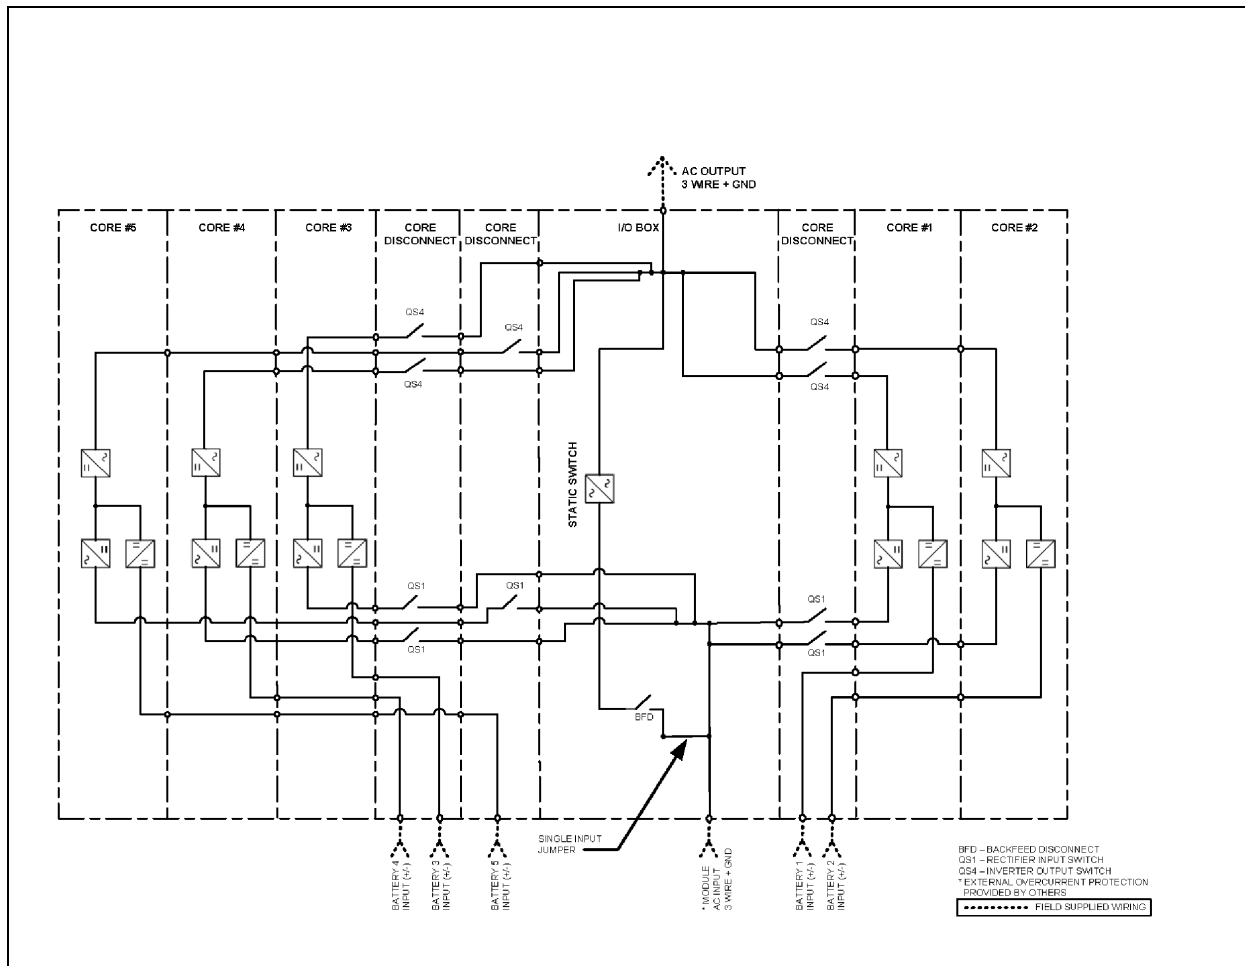


Figure 2.2 Typical Single Module UPS One Line Diagram, Dual Input

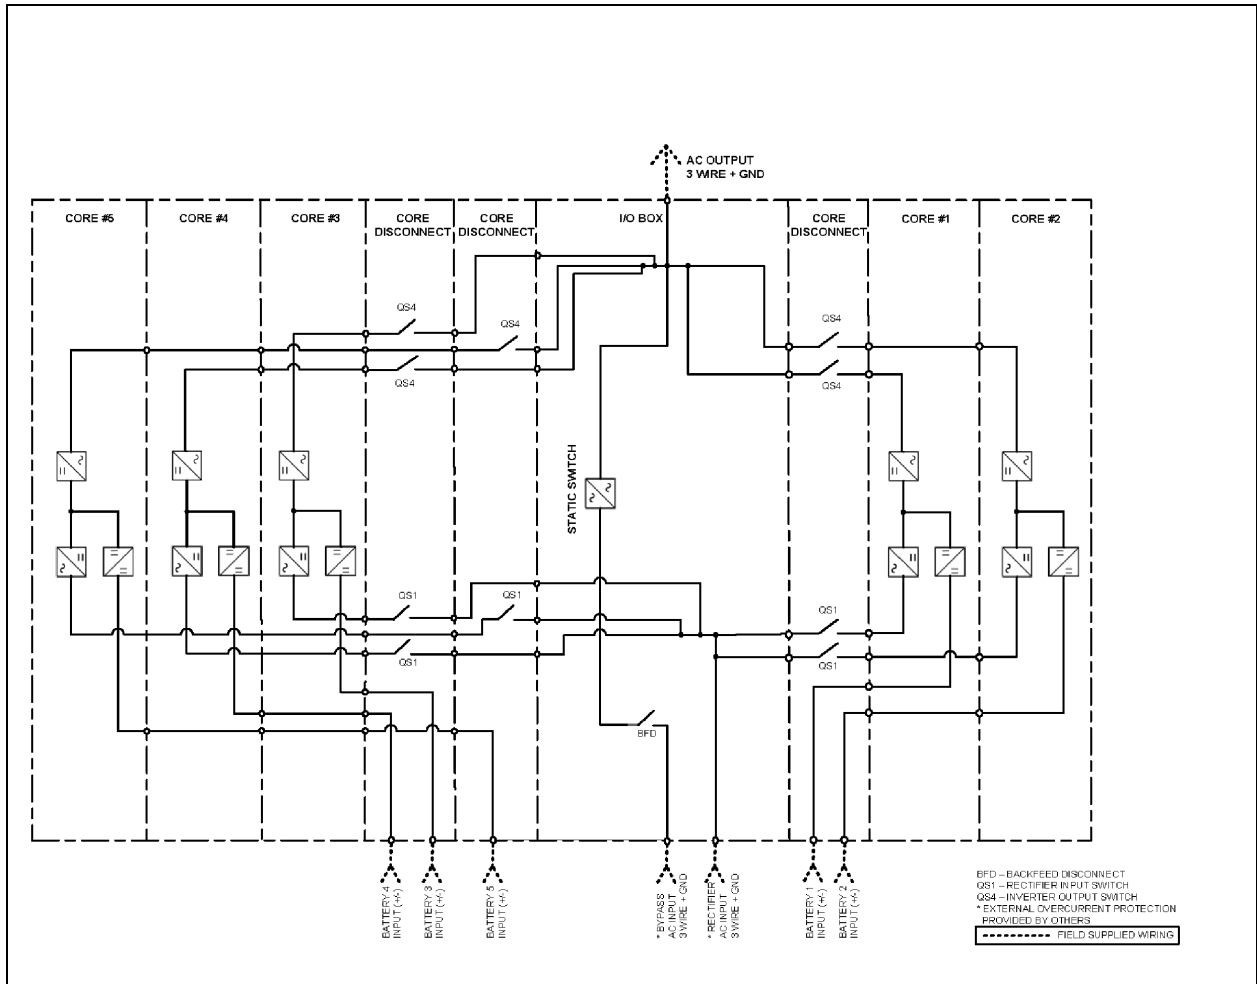


Figure 2.3 Customer Connection Locations in All Models

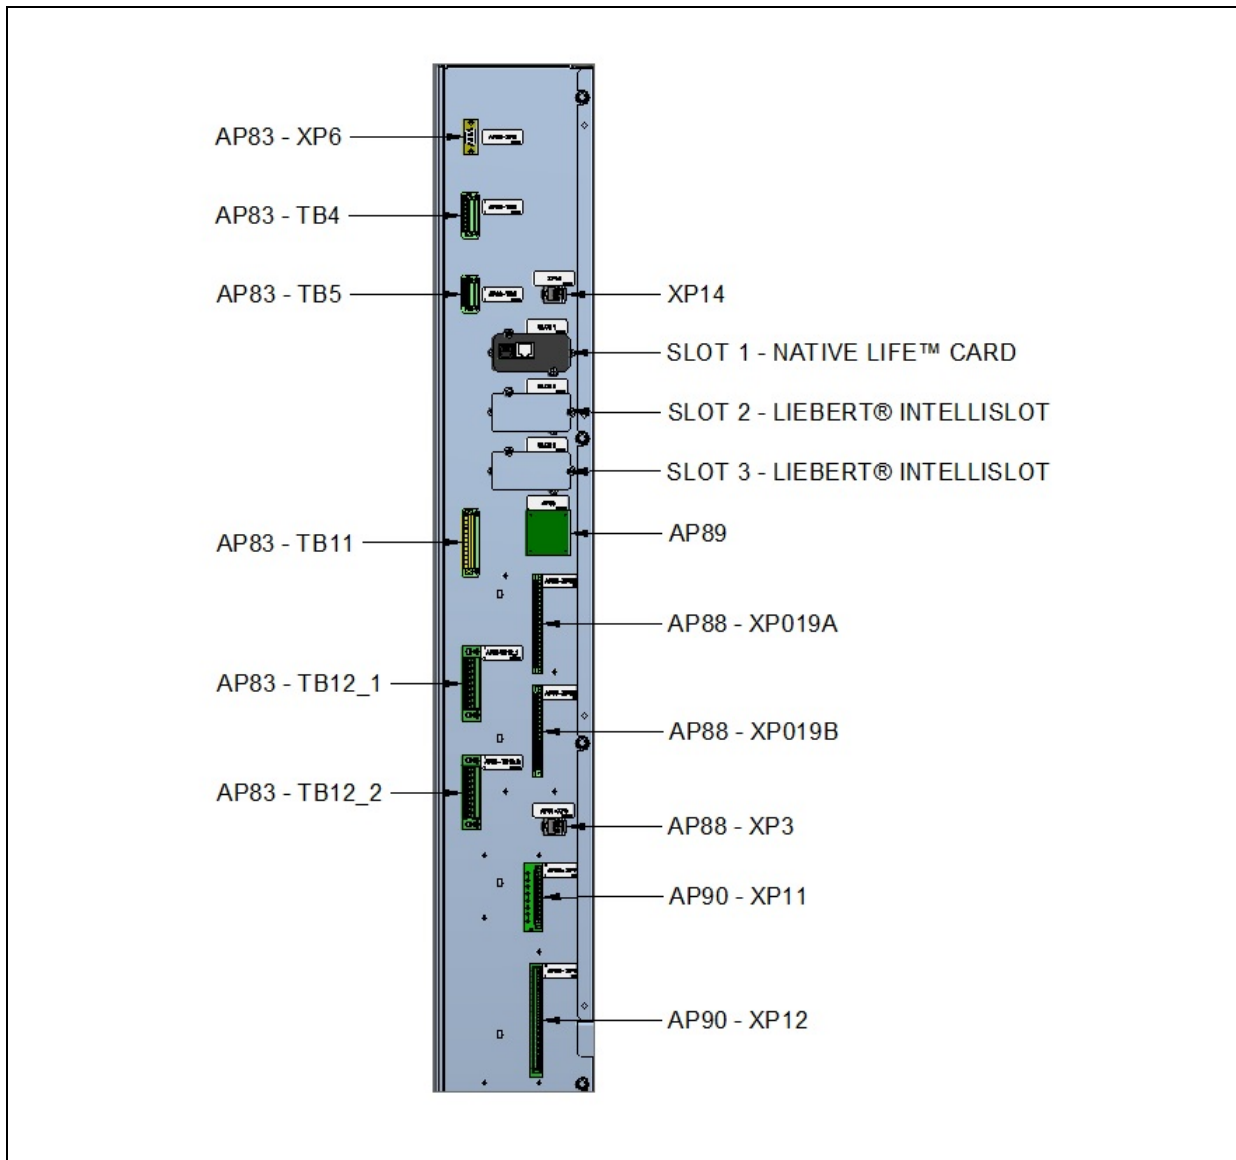


Table 2.1 Connection Interfaces

Slot 1 for Native Vertiv™ Liebert® LIFE™ Communication Cards
Slot 2 and 3 for Vertiv™ Liebert® Intellislot™ Communication Cards
AP90-XP11 (1-12) Selectable Inputs Dry Contacts (Up to 8 Form A/B or 4 Form C Inputs)
AP90-XP12 (1-18) Selectable Outputs Dry Contacts (6 Form C outputs)
AP83-TB11 - (1-12) Selectable Inputs Dry Contacts (Up to 8 Form A/B or 4 Form C Inputs)
AP83-TB12_1 - (1-9) Selectable Outputs Dry Contacts (6 Form C Outputs)
AP83-TB12_2 - (10-18) Selectable Outputs Dry Contacts (6 Form C Outputs)
AP83-TB5: (1-2) Remote Alarm Status Power (option)

**Table 2.1 Connection Interfaces (continued)**

AP83-TB5: (4-5) Common Battery BIB CAN (option)
AP88 – XP019A (20Ways Male Conn.) Parallel comms (FBO)
AP88 – XP019B (20Ways Male Conn.) Parallel comms (FBO)
AP88 – XP3 (RJ45) Sync Interface (for future use)
AP83 - XP6 (DB9-M) Serial Interface for External LIFE™
XP14 Ethernet for Service
AP83 – TB4 (1-4) EPO
AP83 – TB4 (5-7) EPO Status
AP89 – Air Temp I2C

## 2.2 Modes of Operation

### 2.2.1 Functions

Vertiv™ Liebert® Trinergy™ Cube incorporates the three existing standard topologies into one transformer free UPS:

#### Maximum Power Control Mode (IEC 62040-3 VFI)

This is the double-conversion mode, which provides the highest level of power conditioning. It protects the load from all types of electrical network disturbances that would use a greater amount of energy.

Efficiency at full load with the latest transformer free technology is over 96.5%.

#### Maximum Energy Saving Mode (IEC 62040-3 VFD)

This mode detects when there is no need for conditioning and allows energy flow to pass through the bypass line. In this mode, efficiency will exceed 99%.

#### Circular Redundancy Mode (IEC 62020-3 CR)

This mode detects when the UPS output load is below a pre-determined power level threshold allowing one or more cores to enter standby mode. The remaining core(s) support the load in VFI mode. The CR mode feature typically increases the UPS output efficiency. Reference the Liebert® Trinergy™ Cube efficiency submittal, TC1-18-S001 for specific load efficiency values.

Trinergy Cube will automatically enter the highest efficiency mode based on the sensed load and customer desire. There are five different automatic modes that can be activated at the time of installation by the Vertiv Services customer engineer.

1. **Automatic mode 0:** allows only double conversion mode (VFI).
2. **Automatic mode 1:** allows for transition from double conversion (VFI) to circular redundancy (CR) mode. There are entrance requirements to allow the UPS to transition into CR mode such as bypass reliability and time delays.
3. **Automatic mode 2:** allows for transition from double conversion (VFI) to maximum energy saving mode (VFD also known as ECO mode). Again, certain conditions such as bypass reliability and time delays must be met prior to entering VFD mode.

## Battery Operation

In this operating mode, the connected load is supplied from the batteries via the inverter. In the event of a power failure, battery operation is automatically activated and supplies the loads without interruption.

From this operating mode, the UPS automatically returns to VFI operation within the backup time after line power returns. If the duration of the power failure is longer than battery capacity under current load, the UPS provides the relative information via its interfaces. Computers can be automatically powered down with additional software (optional).

## Maintenance Bypass

In this operating mode, the connected loads are supplied directly with line power.

Maintenance bypass is used to supply connected loads during maintenance work on the UPS.



**WARNING! To avoid overheating inside the UPS, do not operate the unit for extended periods with the rectifier running, the inverter switched Off and the bypass switch open.**

## 2.3 Special Features

### 2.3.1 Smart safe and reliable operation

- Three operating modes (see [Modes of Operation](#) on the previous page) that can be selected to suit the type of load being supplied, the required level of efficiency, and the quality of line power.
- Important features of the UPS, such as vector control and high flexibility, are supported by the DSP board.
- The UPS adopts the smart power capacity: maximum available output power limit is dynamically set based on at least one temperature experienced by the uninterruptible power supply system. In one aspect, the temperature is ambient temperature of the area in which the uninterruptible power supply system is located. This temperature is used as a control parameter to set the maximum available output power limit. Dynamically set means that the temperature is being used as the control parameter. The maximum available output power limit is changed accordingly when the control parameter changes.
- Static bypass switch increases the reliability of electrical supply.

### 2.3.2 Easy installation and operation

- Parameterization using bundled PC software.
- Operator is not required during normal operation.
- Simple touch screen provides clear indication of status, load and battery quality. The concept behind the display and the way the display operates are easy to understand.
- Event logs for fault analysis.
- Fault display and audible signal.

### 2.3.3 Battery management

- Temperature dependent charging

### 2.3.4 Environment, EMC

- The EMC limits values to comply with the FCC regulations

- Energy savings due to high efficiency
- Low noise level

### 2.3.5 Modern technology

- Interfaces with software for all operating systems
- IGBT power transistors
- Highly integrated digital electronics
- Especially suited for computer loads

## 2.4 Options

A number of options are available from Vertiv for the Vertiv™ Liebert® Trinergy™ Cube. Contact your Vertiv representative for more information.

- **DC (Battery) Ground Fault**—Enables the detection and annunciation of battery DC ground faults in order to facilitate proactive resolution of such ground faults for 2014 NEC compliance. The UPS can be configured to allow the circuit breaker to open or remain closed upon detection of a ground fault. DC Ground Fault Some regulatory agencies require a system to detect battery DC ground faults in ungrounded DC systems. Generally, for Vertiv Liebert Trinergy Cube, this applies to battery systems field-wired to the UPS. For details, contact your local Vertiv representative.
- **Vertiv™ Liebert® IntelliSlot™ Cards**—Three ports; provides Web, embedded Vertiv™ Liebert® LIFE™ Technology, Vertiv Protocol, SNMP, BACnet IP/MSTP, Modbus TCP/RTU, SMTP, SMS, and telnet communication and control capabilities in one unified communication platform.
- **Maintenance Bypass**—This switchboard provides make-before-break maintenance bypass. It includes: Maintenance Bypass Breaker (MBB) and Maintenance Isolation Breaker (MIB).
- **Remote Alarm Status Panel**—Provides alarm lamps for up to eight UPS alarms.
- **Seismic Bracing**—A separate kit for tying down the UPS module allows the unit to meet International Building Code (IBC 2021).
- **Temperature Sensor**—Allows the UPS module to compensate battery charging voltage, depending on temperature, to prolong battery life. The Temperature Sensor is required for battery solutions utilizing a non-matching Module Battery Disconnect or Battery Isolation Switch. Liebert battery packs have built-in temperature sensors. The Temperature Sensor option includes a remote sensor that must be field installed.
- **Battery and Racks**—The batteries provide power in the event of a power outage. The Vertiv Liebert Trinergy Cube can use a variety of battery types, provided the battery plant is designed for the UPS DC voltage range and the load requirements of the application.
- **DC Switchboard**—The DC switchboard is used for common battery systems (all cores share the same battery system) and provides core level isolation from the common DC bus via integrated Module Battery Disconnects (MBD).
- **Battery Interface Box**—A Battery Interface Box (BIB) is available to support the UPS and third-party battery cabinets or rack-mounted batteries. A BIB is required for each MBD (stand-alone or inside the third-party battery cabinet). A BIB is optional with each Battery Isolation Switch. A BIB is required for each temperature sensor.
- **Battery Isolation Switch**—A Battery Isolation Switch (BIS) is used to isolate individual battery strings when a system MBD is used. When the optional Battery Interface Box is used, the status of the Battery Isolation Switch is displayed on the UPS HMI. A temperature sensor is recommended to allow proper battery charging and overtemperature protection.

- **Module Battery Disconnect**—The UPS system utilizes a separate Module Battery Disconnect (MBD) for remotely located batteries. A sensing circuit in the UPS module, set at the battery low voltage limit, trips the Module Battery Disconnect to safeguard the battery from excessive discharge. The Module Battery Disconnect has an undervoltage release mechanism designed to ensure that during any shutdown or failure mode all battery potential is removed from the UPS system.
- **Vertiv™ Alber™ Monitoring System**—The matching Liebert Battery Cabinet allows installing an optional Alber battery-monitoring system in the cabinet. The Alber battery monitoring continuously checks all critical battery parameters, such as cell voltage, overall string voltage, current and temperature.

## 2.5 Setpoints (User Adjustable)

The following will change the settings of the modules:

- Display Options
  - Display Properties (Language, Auto-Logout Timer, Calibrate Touchscreen)
  - Date & Time (Time Zone, Date, Local Time)
  - Format (Date, Time, Measurement System)
  - Custom Labels (Settings, Network Interfaces)
- Audible Alarm - Silence, Enable, Disable
- Manage Permissions - Operator and Admin pin number
- Dial Control Setup - Center, Upper and Lower Meter UPS Setting - Enable/Disable Audible Alarm

This page intentionally left blank

## 3 Operation

### 3.1 Touchscreen Navigation


Several menu items can be accessed from the main display screen (see the Touchscreen Control Panel user manual available at [www.Vertiv.com](http://www.Vertiv.com)).

Vertiv™ Liebert® Trinergy™ Cube features several different operating modes, which are listed in [Modes of Operation](#).

Vertiv Liebert Trinergy Cube automatically selects the most suitable operating mode for the application.

When Vertiv Liebert Trinergy Cube is switched On, as described in [To start the unit without power supplied to the connected load](#): on page 19, the touchscreen displays the “System in bypass” condition until the operator starts the inverter.

**Figure 3.1 Touchscreen Overview of a System with Rectifier On**

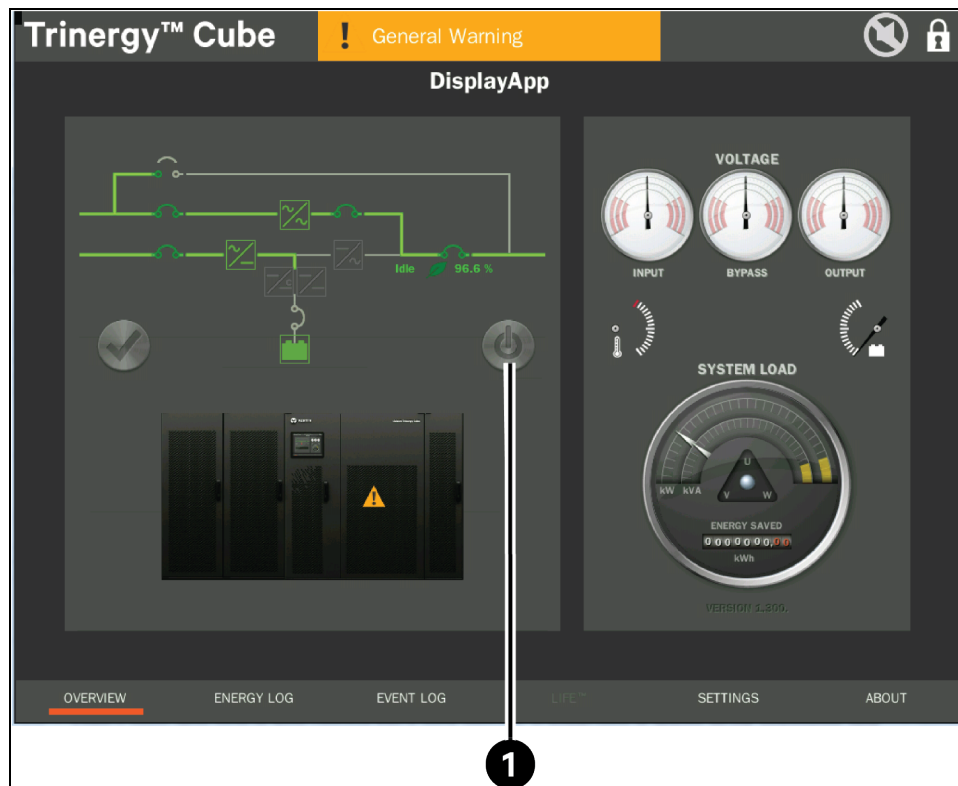

**Table 3.1 Touchscreen Description**

Number	Description
1	The On/Off button allows the user to turn the inverter On/Off.

#### 3.1.1 Single UPS - switching to Automatic operating mode

With the Vertiv Liebert Trinergy Cube system in bypass, press the **On/Off** button (see [Figure 3.1](#) above) to switch to automatic mode. Enter the passcode in the pop up and then press **Start** in the control pop up to start the inverter.

The UPS starts in VFI mode and remains in this condition for a predetermined period, during which time the relevant electrical characteristics are monitored. At the end of this period, which can last for several days depending on the conditions being measured, Vertiv™ Liebert® Trinergy™ Cube selects the operating mode that will supply the load as efficiently as possible without negatively affecting electrical characteristics such as power factor and current distortion.

The Trinergy Cube algorithm will select the most efficient mode based on the configured automatic mode selection as described in [Modes of Operation](#) on page 8.

### 3.1.2 Single UPS - switching to System Bypass

With the system running in the selected operating mode, press the **On/Off** button (see **Figure 3.1** on the previous page) to return to bypass mode. Enter the passcode in the pop up and then press *Stop* in the control pop up to stop the inverter.

Under these conditions the load is supplied by the bypass, and all automatic functions, including battery operation, are disabled.

### 3.1.3 Parallel UPS System - switching to Automatic operating mode

With all systems in bypass, press the **On/Off** button (see **Figure 3.1** on the previous page) on each of the UPS units in the parallel system and follow the same procedure as a Single UPS to switch them to the automatic operating mode.

All the UPS units will start in the VFI mode and remain in this condition for a predetermined period, during which time the relevant electrical characteristics are monitored. At the end of this period, which can last for several days depending on the conditions being measured, Vertiv Liebert Trinergy Cube selects the operating mode that will supply the load as efficiently as possible without negatively affecting electrical characteristics such as power factor and current distortion.

The Trinergy Cube algorithm will select the most efficient mode based on the configured automatic mode selection as described in [Modes of Operation](#) on page 8.

### 3.1.4 Parallel UPS System - switching to System Bypass

With the system running in the selected operating mode, press the **On/Off** button (see **Figure 3.1** on the previous page) on each UPS unit in the parallel system and follow the same procedure as the Single UPS System to switch them to system bypass.

The UPS will switch to the “System in bypass” condition only when all the **STOP** buttons have been pressed.

Under these conditions the load is supplied by the bypass, and all automatic functions, including battery operation, are disabled.

## 3.2 Manual Operations—All Systems

The Vertiv Liebert Trinergy Cube is designed to function unattended by an operator. The system control logic automatically handles many important functions. Other procedures must be performed manually.

Manual procedures available to the operator include startup, load transfers and shutdowns. These are performed with the touchscreen and some manually operated circuit breakers and switches.

This section lists typical step-by-step instructions.

- **Startup**—Including initial startup, recovering from input power failure, recovering from DC source shutdown and recovering from shutdowns for emergencies or maintenance.
- **Load Transfers**—Including transfers from UPS to bypass and retransfers from bypass to the UPS system.

- **Maintenance Bypass Load Transfers**—Including transfers from internal bypass to maintenance bypass and transfers from maintenance bypass to internal bypass.
- **Shutdowns**—Including module shutdowns for maintenance and emergency shutdowns.

The following figures illustrate several of the possible maintenance bypass configurations for Vertiv™ Liebert® Trinergy™ Cube systems.

**Figure 3.2 Maintenance Bypass Configurations—Two Breaker**

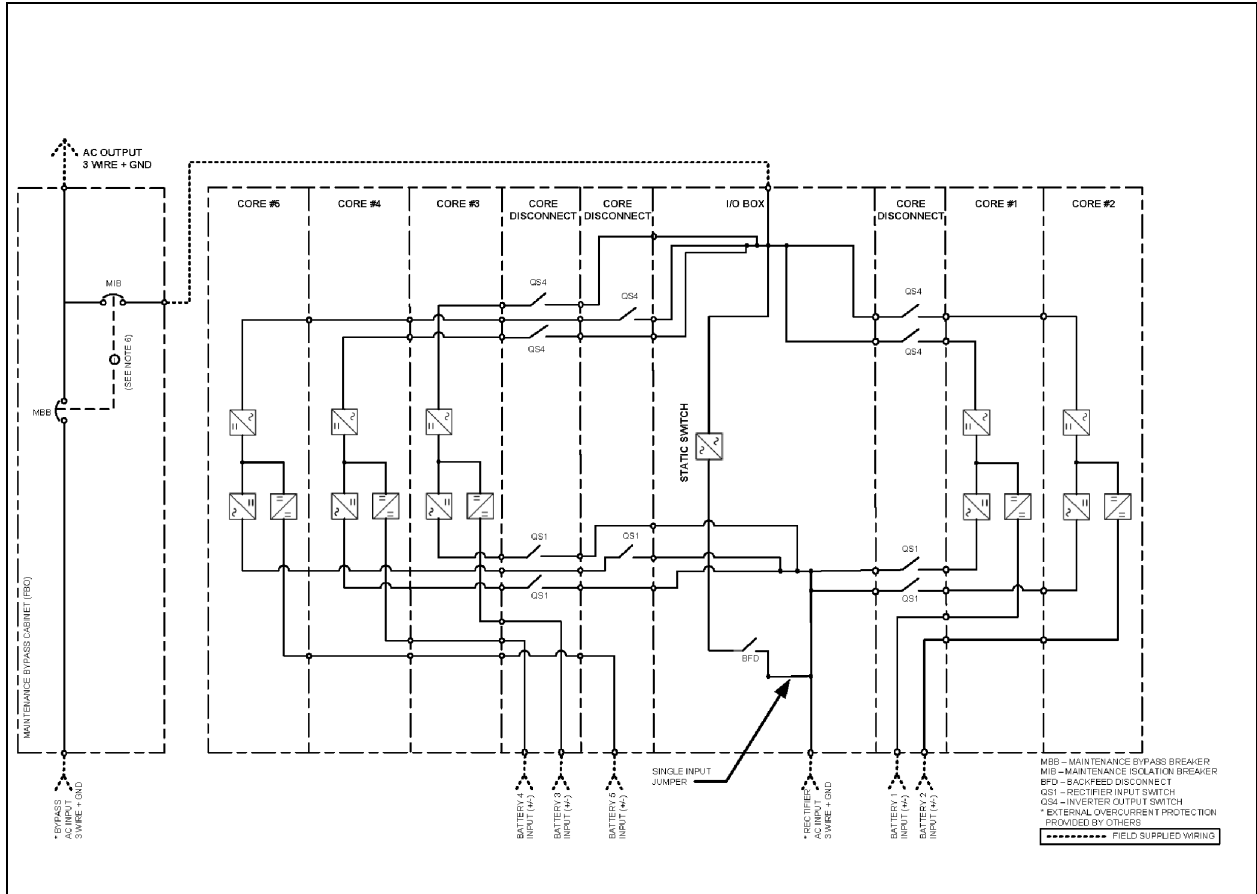




Figure 3.4 Maintenance Bypass Configurations—Two Breakers for Dual-Input UPS


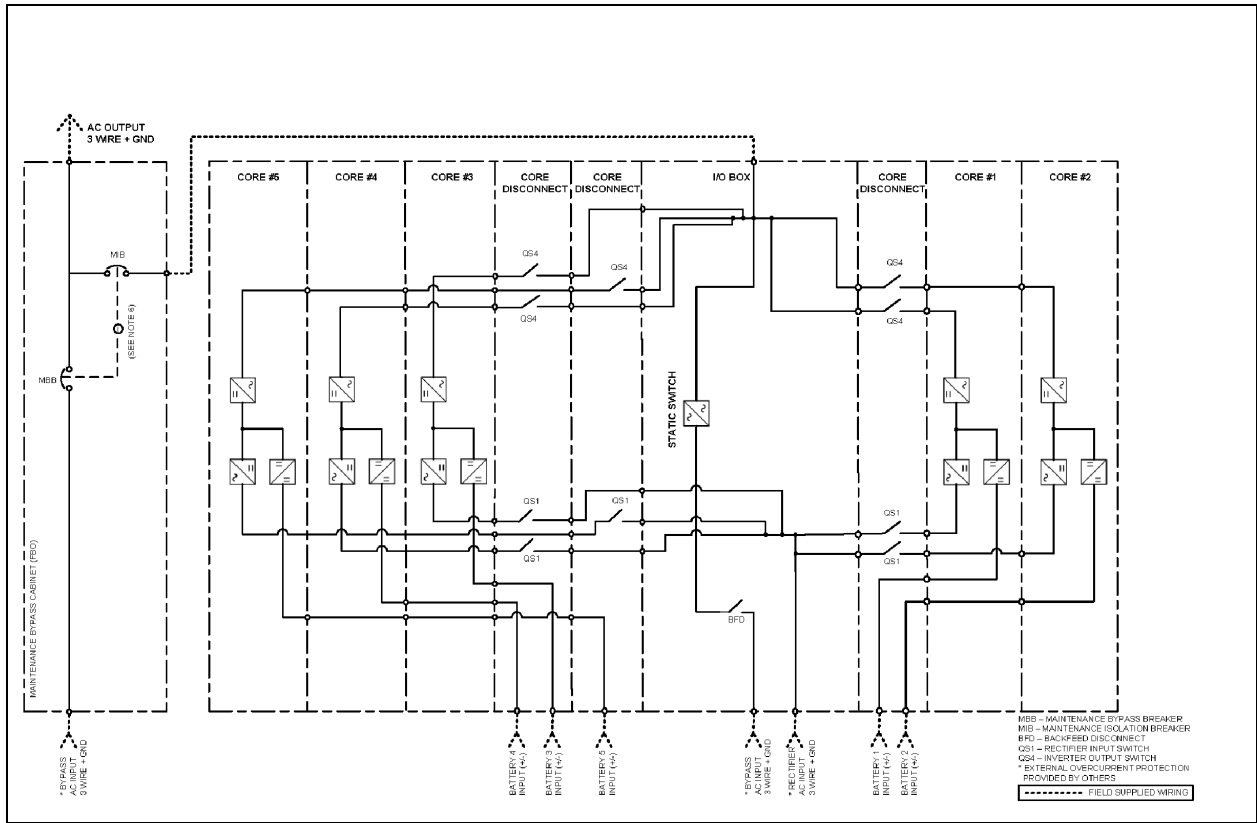


Figure 3.5 Maintenance Bypass Configurations—Four Breakers for Dual-Input UPS

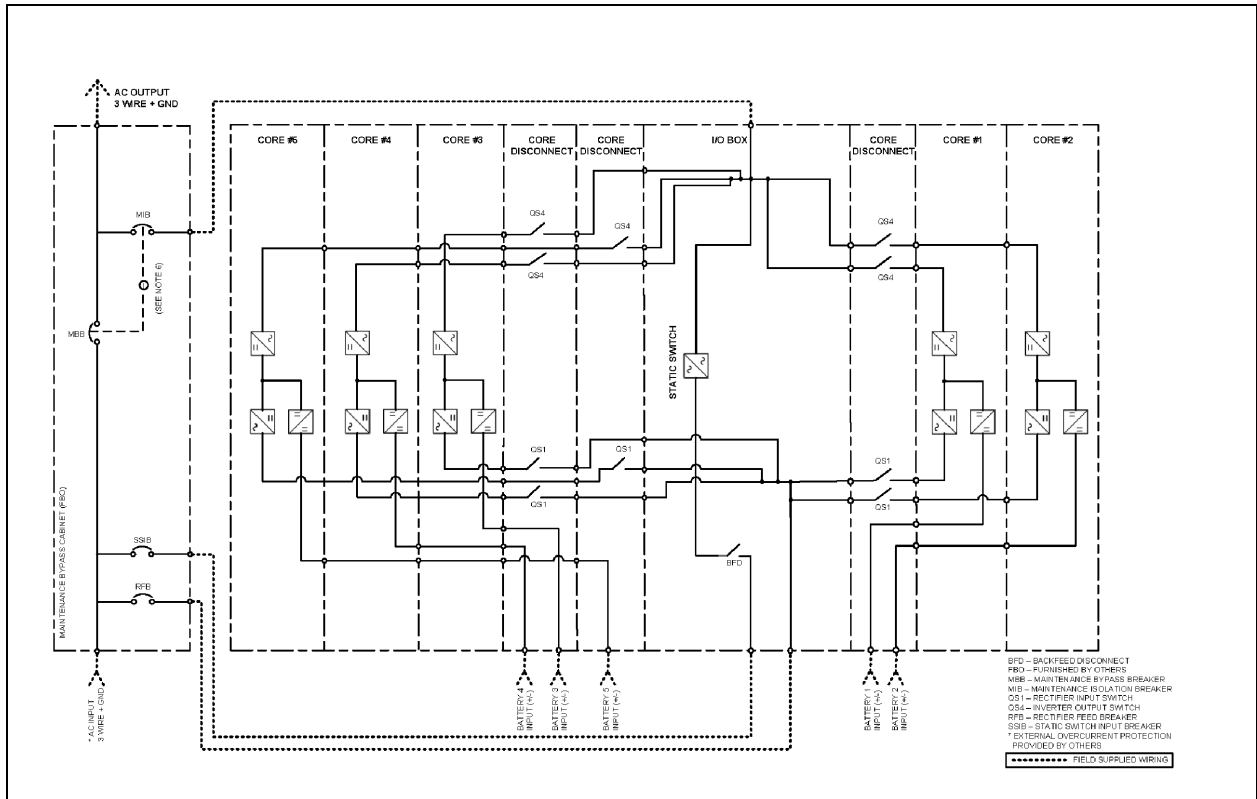

### 3.2.1 Startup—single module system

**NOTE:** The following procedure assumes that the UPS installation inspection and initial startup have been performed by a Vertiv authorized technician. A Vertiv authorized representative must perform the initial system startup to ensure proper system operation.

This section lists step-by-step instructions for UPSs with maintenance bypass configurations as shown in this manual. If the system has a different maintenance bypass operation, consult the provider of that system for operating procedures.

**! WARNING! Risk of electric shock. Can cause equipment damage, personal injury and death. The following procedure provides power to the critical load distribution system. Verify that the critical load distribution is ready to accept power. Make sure that personnel and equipment are ready for the critical load distribution system to be energized.**

**! AVERTISSEMENT! Risque de décharge électrique pouvant entraîner des dommages matériels, des blessures et même la mort. La procédure suivante fournit de l'énergie au système de distribution de la charge critique. Vérifiez que ce système est prêt à être alimenté. Assurez-vous que le personnel et les équipements sont préparés pour la mise sous tension du système de distribution de la charge critique.**

## Starting the unit without power supplied to the connected load

If the installation includes a Maintenance Bypass, power can already be supplied to the critical load equipment through the Maintenance Bypass. If there is no power to the critical load, apply power through the UPS bypass line per the following procedure.

During startup, power is supplied to the load through the UPS (internal) bypass line while the UPS system is being energized. Depending on the reason for the UPS shutdown, power can be present in the bypass line. To determine this, check the Touchscreen Control Panel after control power is available.

**NOTE: If the system was shut down because of an Emergency Off, there can be alarm messages on the touchscreen that describe system conditions before or at the time of the shutdown. Some or all of the alarm conditions can have been resolved. Contact Vertiv technical support for assistance in clearing any remaining alarm messages. If the system is a multi-module system, verify that the UPS is in Maintenance Bypass Mode, then open the Module Output Breakers (in the distribution switchboard) because the output bus provides an additional source of control power. Wait at least 10 minutes for the control power circuitry to completely de-energize. After 10 minutes, turn control power back On.**



**WARNING! Risk of electric shock and high short-circuit current. Can cause equipment damage, injury and death. If the UPS has been shut down for maintenance, verify that all of the UPS system doors are closed and latched. All test equipment must be removed from the system. All electrical connections must be secure.**



**AVERTISSEMENT! Risque de décharge électrique et de présence de courant de court-circuit élevé pouvant entraîner des dommages matériels, des blessures et même la mort. Si l'alimentation sans coupure a été interrompue à des fins d'entretien, assurez-vous que toutes les portes du système ASC sont fermées et verrouillées. Tous les appareils de test doivent être retirés du système. Tous les branchements électriques doivent être serrés.**

**To start the unit without power supplied to the connected load:**

**NOTE: Risk of equipment damage. If an abnormal situation occurs during this startup procedure, open the circuit breakers and investigate the problem. Call Vertiv Services at 800-543-2378 if help is required.**

1. Before applying power to the UPS module, determine the location and position of the following circuit breakers and switches. External/remote breakers will be located in the appropriate switchgear.
  - Verify UPS back-feed disconnect (BFD) breaker is in the OPEN position.
  - Verify all UPS core disconnect switches (QS1 and QS4) are in the OFF position.
  - Verify all external/remote upstream breakers feeding the UPS are in the OPEN position.
  - Verify all the DC source connections are disconnected. This includes Module Battery Disconnect(s) (MBD) and battery breakers/switches.
2. Close the external upstream feed breaker(s) for the UPS rectifier and bypass.
3. Close the UPS BFD. Wait for the Touchscreen Control Panel startup.
4. Close each core QS1 switch.
5. Verify that the rectifier has started. The rectifier icon on the Touchscreen Control Panel should be Green. If not, the issue must be corrected before proceeding.
6. Verify that the Bypass Static Switch (BPSS) has started. The BPSS icon on the Touchscreen Control Panel should be Green. If it is not, the issue must be corrected before proceeding.

7. Verify the UPS Charger turns on. The Charger icon should be yellow (since the batteries are not yet online). If it is not, the issue must be corrected before proceeding.
8. Close each core's output (QS4) switch.
9. Close the external Module Battery Disconnect(s) (MBD's) and/or battery breakers/switches.
10. Verify that the MBD contact icon on the Touchscreen Control Panel is Closed and that the battery icon is Green. If it is not, the issue must be corrected before proceeding.
11. From the Touchscreen Control Panel, touch the on/off button located on the overview screen.
12. Select *Start Inverter* in the pop up menu.
13. The load should be on UPS inverter at this time.

### 3.2.2 Load transfer and retransfer—single-module system

Changing the load from the UPS system to the UPS bypass is called a transfer. Changing the load from UPS bypass to the UPS system is called a retransfer. Note that the UPS system control logic can initiate automatic load transfers and retransfers.

#### To transfer the load:

1. From the Touchscreen Control Panel, touch the on/off button located on the overview screen.
2. When prompted by the Touchscreen Control Panel, select *stop inverter*.
3. The load should transfer to UPS bypass at this time.

#### To retransfer the load:

1. From the Touchscreen Control Panel, touch the on/off button located on the overview screen.
2. When prompted by the Touchscreen Control Panel, select *start inverter*.
3. The load should transfer to UPS inverter at this time.

### 3.2.3 Maintenance bypass load transfers—single-module system

Follow these instructions to manually transfer the load between the Maintenance Bypass and the UPS bypass line. Do not transfer the load between the Maintenance Bypass and the UPS module (Inverter) output. Use the Touchscreen Control Panel to verify that the UPS bypass line is available.

**NOTE: Risk of equipment damage. Failing to follow the proper sequence when operating any circuit breaker can cause damage to the connected equipment. Operating a Maintenance Bypass circuit breaker out of sequence could cut off power to the critical load.**

#### NOTICE

Risk of equipment damage. The UPS must be on internal bypass before performing the following procedures and operating the MIB or the MBB, or damage to the UPS can occur and the critical load can be lost.

#### Maintenance bypass load transfers—single-module System, If load is on UPS bypass

After the UPS has been transferred to bypass (see [Load transfer and retransfer—single-module system](#) above), the OK to transfer lamp on the key release unit will light.

**NOTE: If the maintenance bypass cabinet or switchboard has any other type of custom interlock, follow the specific instructions for that interlock system to remove the key.**

1. If using a key interlock system, depress the key release unit push button, turn the key and remove it from key-release unit.

**NOTE: The UPS is now locked in bypass and cannot be retransferred to the inverter until the key is reinserted.**

2. If using a key interlock system, insert the key into the lock for the Maintenance Bypass Breaker (MBB); retract the bolt.
3. Close the MBB (Maintenance Bypass Breaker).

#### NOTICE

Risk of improper operation sequence. can cause equipment damage. Failure to close the Maintenance Bypass Breaker (MBB) will interrupt power to the load.

4. Open the MIB (Maintenance Isolation Breaker). The UPS is now isolated from the critical load and the load is now on Maintenance Bypass.
5. If using a key interlock system, remove the key from the lock for the MIB.
6. If the maintenance bypass cabinet or switchboard has an optional two key interlock system, replace the key into the solenoid.
7. If UPS bypass shutdown is required, following instructions in [UPS shutdown—single-module system](#) below.

### Maintenance bypass load transfers—single-module System, If load is on maintenance bypass

1. Verify that power is available to the module's bypass and rectifier inputs.
2. Verify that the UPS is started and in Bypass Mode.
3. If using a key interlock system:
  - a. Depress the key release unit push button.
  - b. Turn the key and remove it from the key-release unit.

**NOTE: The UPS is now locked in bypass and cannot be retransferred to the Inverter until the key is returned.**

4. If using a key interlock system:
  - a. Insert the key into the lock for the MIB.
  - b. Retract the bolt.
5. Close the MIB.

#### NOTICE

Risk of improper operation sequence. Can cause equipment damage. Failure to close the Maintenance Isolation Breaker (MIB) will interrupt power to the load.

6. Open the MBB. Load is now on UPS Internal Bypass.
7. If using a key interlock system, remove the key from the lock for the MBB to lock it open.
8. If the maintenance bypass cabinet or switchboard has an optional two key interlock system, insert the key into the solenoid.

The UPS system can now be transferred from bypass to UPS (see [Load transfer and retransfer—single-module system](#) on the previous page).

### UPS shutdown—single-module system

Follow these instructions to completely shut down and de-energize the UPS module.

**NOTE: This shutdown turns Off the inverter, rectifier and bypass static switch. This will shut down the UPS completely.**

1. From the Touchscreen Control Panel, touch the on/off button located on the overview screen.
2. When prompted by the Touchscreen Control Panel, select stop inverter.
3. The load should transfer UPS bypass at this time.
4. Open all core disconnect QS4 switches
5. Open all MBD and/or battery breakers
6. Open all core disconnect QS1 switches
7. Open the BFD breaker
8. Open the UPS external utility feed breaker(s).

### 3.2.4 1+N systems

#### Startup



**WARNING! Risk of electrical shock. Can cause equipment damage, personal injury and death. The following procedure provides power to the critical load distribution system. Verify that the critical load distribution is ready to accept power. Make sure that personnel and equipment are ready for the critical load distribution system to be energized.**



**AVERTISSEMENT! Risque de décharge électrique pouvant entraîner des dommages matériels, des blessures et même la mort. La procédure suivante fournit de l'énergie au système de distribution de la charge critique. Vérifiez que ce système est prêt à être alimenté. Assurez-vous que le personnel et les équipements sont préparés pour la mise sous tension du système de distribution de la charge critique.**

If the installation includes a Maintenance Bypass, power can already be supplied to the critical load equipment through the Maintenance Bypass. If there is no power to the critical load, apply power through the UPS bypass line per the following procedure.

During startup, power is supplied to the critical load through the UPS (internal) bypass line while the UPS system is being energized. Depending on the reason for the UPS system shutdown, power can be present in the bypass line. To determine this, check the Touchscreen Control Panel screen after control power is available.

**NOTE: If the system was shut down in response to an Emergency Off, there can be alarm messages on the touchscreen that describe system conditions before (or at the time of) the shutdown. Some or all of the alarm conditions can have been resolved. Contact Vertiv Technical Support for assistance in clearing any remaining alarm messages.**



**WARNING! The following procedure must be performed exactly as described. Deviating from the procedure can result in electric shock hazard to personnel and the risk of fire.**



**AVERTISSEMENT! La procédure suivante doit être suivie à la lettre. Dévier de cette procédure peut entraîner des risques d'électrocution à la personne ainsi que des risques d'incendie.**

This section lists typical step-by-step instructions to start a 1+N Module System with and without remote breakers.

- Startup—Including initial startup, recovering from input power failure, recovering from DC source shutdown and recovering from shutdowns for emergencies or maintenance.
- Load Transfers—Including transfers from UPS to bypass and retransfers from bypass to the UPS system.
- Maintenance Bypass Load Transfers—Including transfers from internal bypass to maintenance bypass and transfers from maintenance bypass to internal bypass.
- Shutdowns—Including module shutdown for maintenance and emergency shutdown.

**NOTE: The following procedure assumes that the UPS installation inspection and initial startup have been performed by Vertiv-authorized technicians. A Vertiv-authorized representative must perform the initial system startup to ensure proper system operation.**

**NOTE: Risk of equipment damage. If an abnormal situation occurs during this startup procedure, open the circuit breakers and investigate the problem. Call Vertiv Services at 800-543-2378 if help is required.**

1. Before applying power to the UPS module, determine the location and position of the following circuit breakers and switches. External/remote breakers will be located in the appropriate switchgear.
  - Verify UPS back feed disconnect (BFD) breaker is in the OPEN position.
  - Verify all UPS core disconnect switches (QS1 and QS4) are in the OFF position.
  - Verify all external/remote upstream breakers feeding the UPS are in the OPEN position.
  - Verify all the DC source connections are disconnected. This includes Module Battery Disconnect(s) (MBD) and battery breakers/switches.
2. For each Trinergy Cube UPS within the 1+N system follow below steps.
  - a. Close the *external upstream feed breaker(s)* for the UPS rectifier and bypass.
  - b. Close the *UPS BFD*. Wait or the Touchscreen Control Panel startup.
  - c. Close each core *QS1 switch*.
  - d. Verify that the rectifiers have started. The rectifier icon on all the Touchscreen Control Panels should be Green. If not, the issue must be corrected before proceeding.
  - e. Verify that all the Bypass Static Switches (BPSS) have started. The BPSS icon on the Touchscreen Control Panels should be Green. If it is not, the issue must be corrected before proceeding.
  - f. Verify the UPS Chargers turn on. The Charger icon should be yellow (since the batteries are not yet online). If it is not, the issue must be corrected before proceeding.
  - g. Close each core's output (QS4) switch.
  - h. Close the external *Module Battery Disconnect(s) (MBD's)* and/or battery breakers/switches.
  - i. Verify that the MBD contact icon on all the Touchscreen Control Panels are Closed and that the battery icon is Green. If it is not, the issue must be corrected before proceeding.
  - j. Close the Module Output Breaker (MOB).
  - k. From each Touchscreen Control Panel, touch the on/off button located on the overview screen.
  - l. Select Start Inverter in the pop up menu.
3. The load should be on UPS inverter at this time.

### 3.2.5 Load transfer 1+N system: remove a UPS from system (collective)

**To remove one UPS module from the collector bus:**

1. Verify that enough UPS modules will remain present to support the load if one module is removed from the collector bus.

2. Open the Module Output Breaker (MOB) of the UPS module to be removed from service. The inverter will turn Off after the MOB is opened. The other UPS modules in the system should be supporting the load.
3. Open the Module Battery Disconnect(s) (MBD's) of the module that was removed from service.
4. Open internal Back-Feed Disconnect (BFD) of the module that was removed from service.
5. Open the upstream feed breakers (RBB, RFB) to the UPS rectifier and bypass buses. The UPS module rectifier will shut Off.

### 3.2.6 Load transfer 1+N system: add a UPS to the system (collective)

To add one UPS module to the collector bus:

**NOTE: A load drop will occur if the UPS modules supporting the load are in Bypass Mode and control power is applied to the offline module (assuming that paralleling cables are installed in the offline module when control power is turned On).**

1. Close the external upstream feed breaker(s) for the UPS rectifier and bypass.

**NOTE: The Rectifier will start the UPS module at this time. Do not proceed until the Touchscreen Control Panel is fully operational on the UPS module.**

2. Verify that the rectifier on the UPS module has started. The rectifier icon on the Touchscreen Control Panel should be Green. If it is not, the issue must be corrected before proceeding.
3. Close the external Remote Back Feed Breaker (RBB) if installed.
4. Verify that the Bypass Static Switch (BPSS) on the UPS module is Off. If it is not, the issue must be corrected before proceeding.
5. Close the external Module Battery Disconnect(s) (MBDs) on the UPS module.
6. Close the external Module Output Breaker (MOB) on the UPS module.
7. Verify that the inverter on the UPS module is active. If the inverter does not start, touch the on/off button located on the overview screen, then select start inverter.
8. Verify that all inverters are connected to the collector bus.

### 3.2.7 Load transfer 1+N system—transfer system inverter to bypass

To transfer the UPS system from Inverter Mode to Bypass Mode:

**NOTE: The critical load should be on the UPS Inverter.**

1. From one of the UPSs' Touchscreen Control Panel, touch the on/off button located on the overview screen.
2. When prompted by the Touchscreen Control Panel, select stop inverter.
3. Repeat steps 1 and 2 on each UPSs' Touchscreen Control Panel.
4. The load should be on UPS bypass at this time.

**NOTE: The load will now be on static bypass in each UPS.**

### 3.2.8 Load transfer 1+N system: transfer system from bypass to inverter

To transfer the UPS system from Bypass to Inverter mode of operation:

**NOTE: The critical load should be on the UPS Bypass.**

1. From one of the UPSs' Touchscreen Control Panel, touch the on/off button located on the overview screen.

2. When prompted by the Touchscreen Control Panel, select start inverter.
3. Repeat steps 1 and 2 on each UPSs' Touchscreen Control Panel.
4. The load should be on UPS inverter at this time.

### 3.2.9 Maintenance bypass load transfer—1+N module system

Follow these instructions to manually transfer the load between Maintenance Bypass and the UPS bypass line. Do not transfer the load between Maintenance Bypass and the UPS module inverter output. Use the Touchscreen Control Panel screen to verify that the UPS bypass line is available.

#### NOTICE

Risk of improper operating sequence. Can cause equipment damage. Failing to follow the proper sequence when operating any circuit breaker can cause damage to the connected equipment. Operating a Maintenance Bypass circuit breaker out of sequence could cut Off power to the critical load.

#### NOTICE

Risk of improper load transfer. Can cause equipment damage. The UPS must be on internal bypass before performing the following procedures and operating the MIB or the MBB, or damage to the UPS can occur and the critical load can be lost.

#### If load is on UPS bypass

##### To transfer the UPS system from bypass to maintenance bypass:

1. Transfer the UPS system to bypass (see [Load transfer 1+N system—transfer system inverter to bypass](#) on the previous page). The OK to transfer lamp on the key release unit will light.

**NOTE: If the maintenance bypass cabinet or switchboard has any other type of custom interlock, follow the instructions for that interlock system to remove the key.**

2. If using a key interlock system:
  - a. Press the key-release unit push button.
  - b. Turn the key and remove it from key release unit.

**NOTE: The UPS is now locked in bypass and cannot be retransferred to the inverter until the key is reinserted.**

3. If using a key interlock system, insert the key into the lock for the Maintenance Bypass Breaker (MBB); retract the bolt.
4. Close the MBB.

#### NOTICE

Risk of improper operation sequence. can cause equipment damage. Failure to close the Maintenance Bypass Breaker (MBB) will interrupt power to the load.

5. Open the Maintenance Isolation Breaker (MIB). The UPS system is now isolated from the critical load and the load is now on Maintenance Bypass.
6. If using a key interlock system, remove the key from the lock for the MIB.
7. If the maintenance bypass cabinet or switchboard has an optional, two key interlock system, insert the key into the solenoid.

8. If UPS bypass shutdown is required, follow the instructions in [Shutdown—1+N system shutdown](#) below or [Load transfer 1+N system: remove a UPS from system \(collective\)](#) on page 23.

### If load is on maintenance bypass

#### To transfer the UPS system from Maintenance Bypass to Bypass:

1. If the UPS modules are Off, start the system. See [1+N systems](#) on page 22.
2. Place all the UPS units in the system in Bypass Mode. See [Load transfer 1+N system—transfer system inverter to bypass](#) on page 24.
3. If using a key interlock system:
  - a. Press the key release unit push button.
  - b. Turn the key and remove it from the key release unit.

**NOTE: The UPS is now locked in bypass and cannot be retransferred to the inverter until the key is reinserted.**

4. If using a key interlock system, insert the key into the lock for the Maintenance Isolation Breaker (MIB); retract the bolt.
5. Close the MIB.

#### NOTICE

Risk of improper operation sequence. Can cause equipment damage. Failure to close the Maintenance Isolation Breaker (MIB) will interrupt power to the load.

6. Open the Maintenance Bypass Breaker (MBB). The load is now on UPS internal bypass.
7. If using a key interlock system, remove the key from the lock for the MBB to lock it open.
8. If the maintenance bypass cabinet or switchboard has an optional two-key interlock system, insert the key into the solenoid.

The UPS system can now be transferred from bypass to UPS (see [Load transfer 1+N system: transfer system from bypass to inverter](#) on page 24).

### 3.2.10 Shutdown—1+N system shutdown

#### To perform a system shutdown procedure to remove power from the entire UPS system:

**NOTE: Service and maintenance must be performed only by properly trained and qualified personnel and in accordance with applicable regulations as well as with manufacturer's specifications.**

1. If the UPS system is operating in Inverter Mode, transfer the UPS system to bypass (see [Load transfer 1+N system—transfer system inverter to bypass](#) on page 24). The OK to transfer lamp on the key release unit will light.
2. If an external, wraparound bypass is installed, perform the following steps; otherwise skip to Step 3. If using a key interlock system:
  - a. Press the key release unit push button.
  - b. Turn the key and remove it from the key release unit.

**NOTE: The UPS system is now locked in bypass and cannot be transferred until the key is returned.**

- c. If using a key interlock system, insert the key into the lock for the MBB; retract the bolt.
- d. Close the MBB.

**NOTE: Failure to close the Maintenance Bypass Breaker (MBB) will interrupt power to the load.**

- e. Open the MIB. The UPS system is now isolated from the critical load and the load is now on Maintenance Bypass.
  - f. If using a key interlock system, remove the key from the lock for the MIB.
  - g. If the maintenance bypass cabinet or switchboard has an optional, two-key interlock system, insert the key into the solenoid.
3. Open the external Module Output Breaker (MOB) on each UPS.
  4. Open the external Module Battery Disconnect(s) (MBD's) for each UPS module.
  5. Open the external Remote Back Feed Breaker (RBB) and internal Back-Feed Disconnect (BFD) on each UPS, if installed.
  6. Open the external rectifier feeder breaker for each UPS in the system.
    - External Remote Back Feed (RBB) for single input/feed applications
    - External Rectifier Feed Breaker (RFB) for dual input/feed applications

**NOTE: The Rectifier will shut down on each UPS at this time. Once shutdown is complete, the Touchscreen Control Panel will turn Off.**

### 3.2.11 Energize the transformer

The UPS features a rugged inverter design such that a like size transformer can be energized while the UPS is operating on inverter. When the bypass source is available, the UPS will perform Dynamic Line Support for up to 500% of nominal input current for up to 800 milliseconds where the bypass is used in parallel with the inverter to help source the transformer inrush current. When the bypass source is unavailable, the inverter will source up to 210% of nominal current for up to 200 milliseconds.

The UPS shall support multiple downstream transformers being energized one at a time with a recommended 5-second break between transformer startups. If your connected PDU load exceeds 2X system load, it is recommended to go to maintenance bypass. When energizing multiple downstream transformers, it is recommended that these transformers be designed for low inrush. Contact your Vertiv representative for more information or for application specific questions.

This page intentionally left blank

## 4 Battery Connectivity Status

There are two attributes displayed on the touch screen that indicate the battery connectivity status of the UPS system.

1. Battery Icon Color
2. Battery Disconnect graphic symbol (BCB, MBD, BIS)

### 4.1 Battery Icon Color

The battery icon color is interpreted in the following way.

#### 4.1.1 Core view of the touchscreen with VRLA or HPL batteries

- Green battery block indicates all battery cabinets are connected (online)
- Yellow battery block indicates at least one battery cabinet is disconnected (offline)
- Red battery block indicates all battery cabinets are disconnected

#### 4.1.2 Core view of the touchscreen with Samsung batteries

- Green battery block indicates at least one battery cabinet is connected (online)
- Red battery block indicates all battery cabinets are disconnected (offline)

#### 4.1.3 I/O box view of the touchscreen with VRLA or HPL batteries

- Green battery block indicates all (aggregate) battery cabinets are connected (online)
- Yellow battery block indicates at least one battery cabinet is disconnected (offline)
- Red battery block indicates all (aggregate) battery cabinets are disconnected

#### 4.1.4 I/O box view of the touchscreen with Samsung batteries

- Green battery block indicates at least one (aggregate) battery cabinet is connected (online)
- Red battery block indicates all battery cabinets are disconnected (offline)

### 4.2 Battery Disconnects

The battery disconnect graphic symbol(s) can be named BCB, MBD, and/or BIS depending on the battery configuration of the UPS system. The battery disconnect status is interpreted in the following way.

**NOTE: If this is an HPL system without external battery disconnects, there is no disconnect graphic symbol in the core view on the touch screen.**

#### 4.2.1 Core view of the touch screen

- Closed indication if at least one battery cabinet is connected to the Core
- Open if all battery cabinets are disconnected from the Core

## 4.2.2 I/O Box view of the touch screen

- Closed indication if at least one battery cabinet is connected to any Core
- Open if all battery cabinets are disconnected from all Cores

## 5 Maintenance

### 5.1 Safety Precautions

Observe the safety precautions in the [Important Safety Instructions](#) on page 1.

Observe all of the warnings and cautions in this document before performing any maintenance on the UPS and associated equipment. Also observe the manufacturer's safety precautions pertaining to the battery system, along with the battery safety precautions in this section.



**WARNING! Risk of electric shock. Can cause injury and death. Only Vertiv or Vertiv-trained service personnel should work on this equipment. Both AC and DC high voltages are present in lethal amounts within this equipment. Extreme care should be taken when working around UPS equipment. Always identify the source of connecting wiring before disconnecting it. Mark any disconnected wires so they can be properly reconnected. Do not substitute parts except as authorized by Vertiv. Keep the UPS cabinets free of foreign materials such as solder, wire cuttings.**



**AVERTISSEMENT! Risque de décharge électrique et de présence de courant de court-circuit élevé pouvant entraîner des dommages matériels, des blessures et même la mort. L'entretien et la réparation de cet équipement doivent être confiés exclusivement à un personnel qualifié du Vertiv ou formé par Vertiv. Des hautes tensions c.a. et c.c. mortelles sont présentes dans cet équipement. Faites preuve d'une grande prudence lorsque vous travaillez à proximité d'un système ASC. Identifiez tous les circuits de connexion avec de débrancher des câbles. Ne remplacez aucun composant sans l'autorisation expresse du Vertiv. Assurez-vous que les armoires d'ASC sont exemptes de matériaux étrangers tels que des résidus de soudure, des bouts de câble, etc.**



**WARNING! Extreme caution is required when performing maintenance. Be constantly aware that the UPS system contains high DC as well as AC voltages. With input power off and the battery disconnected, high voltage at filter capacitors and power circuits should be discharged within 30 seconds. However, if a power circuit failure has occurred, assume that high voltage still exists after shutdown. Check with a voltmeter before making contact. AC voltage will remain on the bypass and output contactors and the static bypass switch unless associated external circuit breakers are opened. Check for voltage with both AC and DC voltmeters before making contact.**

When the UPS system is under power, both the operator and any test equipment must be isolated from direct contact with earth ground and the UPS chassis frame by using rubber mats. Some components within the cabinets are not connected to chassis ground. Any contact between floating circuits and the chassis is a lethal shock hazard. Use differential oscilloscopes when measuring a floating circuit. The differential input should have at least 800 vrms common mode input rating and a common mode rejection ratio of at least 80 db. Exercise caution that the test instrument exterior does not make contact either physically or electrically with earth ground. In case of fire involving electrical equipment, use only carbon dioxide fire extinguishers or others approved for use in fighting electrical fires.



**AVERTISSEMENT!** Faire preuve d'une extrême prudence lors de travaux d'entretien. Soyez conscient en tout temps que le système d'alimentation sans coupure contient des tensions élevées c.c. et c.a. Lorsque la tension d'entrée est coupée et que les batteries sont déconnectées, les tensions élevées aux condensateurs de filtrage et aux circuits de puissance devraient être dissipées en moins de 30 secondes. Toutefois, si une panne est survenue dans un circuit de puissance, il est présumé qu'une tension élevée est toujours présente après l'arrêt du système. Vérifiez à l'aide d'un voltmètre avant d'établir le contact. Une tension c.a. reste présente sur les contacteurs de dérivation et de sortie et sur le sectionneur de dérivation statique, à moins que les disjoncteurs externes associés ne soient ouverts (position Off). Vérifiez si une tension est présente à l'aide de voltmètres c.c. et c.a. avant d'établir le contact.

Lorsqu'un système d'alimentation sans coupure est sous tension, l'exploitant et l'équipement de test doivent être isolés de tout contact direct avec la terre et le cadre de châssis du système d'alimentation sans coupure en utilisant des tapis de caoutchouc. Certains composants à l'intérieur des armoires ne sont pas raccordés à la masse du châssis. Tout contact entre des circuits isolés et le châssis représente un danger de secousse électrique fatale. Utiliser des oscilloscopes différentiels lors de mesures sur un circuit isolé. L'entrée différentielle doit avoir une tension d'entrée nominale en mode commun d'au moins 800 V efficace et un rapport de réjection en mode commun d'au moins 80 décibels. Prendre les précautions nécessaires pour empêcher l'extérieur de l'instrument de test d'entrer en contact physique ou électrique avec la terre. En cas d'incendie impliquant de l'équipement électrique, n'utiliser que des extincteurs au dioxyde de carbone ou autres extincteurs approuvés pour combattre des incendies d'origine électrique.

## 5.2 Routine Maintenance

Become thoroughly familiar with the equipment, but never go beyond the specific procedures in this manual while performing maintenance or correcting a malfunction. If there is any doubt as to what must be done, contact Vertiv Technical Support.

The UPS is designed for unattended operation, but does require some common sense maintenance.

- **Keep good records**—Troubleshooting is easier when there are good service records.
- **Keep it clean**—Keep the UPS free of dust and moisture.
- **Keep it cool**—Battery systems must be kept in the range of 72-77°F (22-25°C) to meet design specifications for capacity and longevity. The UPS will reliably meet all performance specifications at temperatures up to 104°F (40°C) and can be slightly derated for operation at even higher temperatures. However, performance and longevity will be optimized when the UPS is operated at the same temperature as the batteries.
- **Keep connections tight**—Tighten all connections at installation and at least annually thereafter.

### 5.2.1 Record log

Set up a maintenance log to record scheduled checks and any abnormal conditions.

The log should have space for all metered data, including phase readings, alarm messages, UPS mode of operation, air filter replacement date and observations. Maintain a second log for the battery module as directed by the battery manufacturer.

Vertiv recommends periodic walk-through inspections of the UPS and battery rooms to check for visible and audible indications of problems. Log the inspection, metered parameter indications and any discrepancies.

### 5.2.2 Air filter

The air filters must be inspected and serviced regularly. The frequency of inspections will depend on environmental conditions. Under normal conditions, the air filters will require cleaning or replacement approximately every two months. Abnormal or dusty conditions will require more frequent cleaning and replacement of air filters.

Inspect installations in new buildings more often, then alter the inspection period as experience dictates.

All Vertiv™ Liebert® Trinergy™ Cube models have a replaceable air filter inside the front doors. These filters can be changed while the UPS is in operation.

**NOTE: Service and maintenance must be performed only by properly trained and qualified personnel and in accordance with applicable regulations as well as with manufacturer's specifications.**

### 5.2.3 Limited life components

The Vertiv Liebert Trinergy Cube has a design life well in excess of 10 years. Well maintained units can continue to provide economic benefits for 20 years or more. Long life components are used in the UPS wherever practical and cost effective. However, due to the currently available component material, manufacturing technology limitations and the general function and use of the component, a few components in the UPS will have a shorter life cycle and require replacement in less than 10 years.

The DC capacitors in one or more Power Modules (PMs) and Booster Modules (BMs) require formation if they are out of service for more than 18 months. This requirement includes, but is not limited to, the following conditions:

- Power Modules (PMs) and Booster Modules (BMs) in storage for more than 18 months
- A UPS system that is not in operation for more than 18 months

The following components utilized in the UPS have a limited life cycle and are specifically exempt from warranty. To prevent a wear out failure of one of these components affecting the critical load operations, we recommend that these components be periodically inspected and replaced before the expected expiration of their life cycle. The expected life of each component in **Table 5.1** below is simply an estimate and is not a guarantee. Individual users can have site specific requirements, maintenance and other environmental conditions that affect the length of the component's useful life cycle.

In most cases, replacement components must exactly match the original component specifications.

These replacement components are not readily available from third-party component distributors.

For assistance with specific component specifications, replacement component selection and sourcing, contact Vertiv Technical Support. Visit <http://www.Vertiv.com/en-us/support/> for the support available in your area.

**Table 5.1 UPS Component Service Life**

Component	Expected Life	Replace In
Power AC Filter Capacitors	15 years	12 to 15 years
Power DC Filter Capacitors	15 years	12 to 15 years
Low-Profile Fans	> 7 years	6 to 7 years
Air Filters	1 to 3 years	Check four times per year
Battery, Lithium Logic Memory Backup	10 years	8 to 9 years
Battery, Storage		
Lead-Acid Wet-Cell (User Selection)	15 to 20 years	12 to 15 years
Valve-Regulated, Lead-Acid (VRLA)	5 years	2 to 3 years
	10 years	3 to 4 years

**Table 5.1 UPS Component Service Life (continued)**

Component	Expected Life	Replace In
	20 years	8 to 12 years
Lithium-Ion	15 years	10 years
<i>Expected Life is sometimes referred to as Design Life.</i>		

## 5.3 Battery Maintenance



**WARNING! Risk of electrical shock and high short circuit current. Can cause equipment damage, personal injury and death. These maintenance procedures will expose hazardous live parts. Refer servicing to qualified personnel. DC fuses operate at the rated battery voltage at all times. A blown DC bus fuse indicates a serious problem. Serious injury or damage to the equipment can result if the fuse is replaced without knowing why it failed. Contact Vertiv Technical Support for assistance.**



**AVERTISSEMENT! Risque de secousse électrique et de courant élevé de court-circuit. Peuvent causer des dommages aux équipements, des blessures corporelles et la mort. Des composants affichant des tensions dangereuses seront accessibles durant ces procédures d’entretien. Faire exécuter l’entretien par du personnel qualifié. Les fusibles c.c. fonctionnent en tout temps à la tension nominale des batteries. Un fusible c.c. grillé indique un problème majeur. De graves blessures ou des dommages importants aux équipements peuvent survenir si le fusible est remplacé sans avoir identifié la cause de la panne. Communiquer avec le centre de service de Vertiv pour de l’assistance.**

### 5.3.1 Battery safety precautions

Battery service must be performed or supervised by personnel experienced with batteries and the required precautions. Keep unauthorized personnel away from batteries.

When replacing batteries, use the same number and type of batteries.

Regular maintenance of the battery module is an absolute necessity. Periodic inspections of battery and terminal voltages, specific gravity, and connection resistance should be made. Strictly follow the procedures in the battery manufacturer’s manual. (See battery manufacturer’s Web site.)

Valve regulated, lead acid batteries require periodic visual inspections and checks of battery voltage and connection resistance.

Since individual battery characteristics are not identical and can change over time, the UPS module is equipped with circuitry to equalize battery cell voltages. This circuit temporarily increases charging voltage to maintain flooded type battery cells at full capacity.



**WARNING! Risk of electrical shock. Can cause personal injury and death. Special care must be taken when working with the batteries associated with this equipment. Be constantly aware that the battery system contains high AC as well as DC voltages. Check for voltage with AC and DC voltmeters before making contact.**

Observe all DC safety precautions before working on or near the DC system.

Follow all battery safety precautions when installing, charging or servicing batteries. In addition to the hazard of electric shock, gas produced by batteries can be explosive and sulfuric acid can cause severe burns.

Lead-acid batteries contain hazardous materials. Batteries must be handled, transported, and recycled or discarded in accordance with federal, state and local regulations. Because lead is a toxic substance, lead-acid batteries should be recycled rather than discarded.

- Do not dispose of a battery in a fire. The battery can explode.
- Do not open or mutilate a battery. Released electrolyte is harmful to the skin and eyes. It is toxic.

A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:

- Remove watches, rings and other metal objects.
- Use tools with insulated handles.
- Wear rubber gloves and boots.
- Do not lay tools or metal parts on top of batteries.
- Disconnect charging source prior to connecting or disconnecting battery terminals.
- Determine if any battery is inadvertently grounded. If any inadvertently grounded batteries are found, remove the source of the ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock will be reduced if such grounds are removed during installation and maintenance.
- Lead-acid batteries can present a risk of fire because they generate hydrogen gas. In addition, electrical connections must be protected against accidental short circuits, which can cause sparks.

The following procedures should be followed:

- Do not smoke near batteries.
- Do not cause flame or spark in battery area.
- Discharge static electricity from body before touching batteries by first touching a grounded metal surface.
- After replacing battery jars in a battery cabinet, replace the retaining straps that hold the jars in place on the shelves. This will limit accidental movement of the jars and connectors should the cabinet ever need to be repositioned or relocated.



**AVERTISSEMENT! Risque de secousse électrique. Peut causer des blessures corporelles et la mort. Il faut prendre des précautions particulières lors de tout travail exécuté sur les batteries associées à cet équipement. Soyez conscient en tout temps que le système de batteries contient des tensions élevées c.c. et c.a. Vérifiez si une tension est présente à l'aide de voltmètres c.c. et c.a. avant d'établir le contact.**



**AVERTISSEMENT! Observer toutes les mesures de sécurité relatives aux tensions c.c. avant de travailler sur le système c.c. ou près de celui-ci.**

**Observer toutes les mesures de sécurité relatives aux batteries avant d'installer ou de charger des batteries ou d'en faire l'entretien. En plus du danger de secousse électrique, les gaz produits par les batteries peuvent causer des explosions et l'acide sulfurique peut causer de graves brûlures.**

**Les batteries au plomb-acide contiennent des matières dangereuses. Les batteries doivent être manipulées, transportées et recyclées selon les stipulations de la réglementation fédérale, provinciale et locale. Puisque le plomb est une substance toxique, les batteries au plomb-acide doivent être recyclées plutôt que d'être mises aux rebuts.**

- Ne pas jeter une ou plusieurs batteries dans un feu. Elle(s) pourrai(en)t exploser.
- Ne pas ouvrir ou abîmer la ou les batteries. Les projections d'électrolyte sont dangereuses pour la peau et les yeux. L'électrolyte est également toxique.

Une batterie peut présenter un risque de secousse électrique et un courant élevé de court-circuit. Il faut observer les mesures de sécurité suivantes lors de travaux exécutés sur les batteries:

- Retirer les montres, les bijoux et tout autre objet métallique.
- Utiliser des outils dont les manches sont isolés. Porter des gants et des bottes de caoutchouc.
- Ne pas déposer d'outils ou de pièces métalliques sur le dessus des batteries.
- Débrancher l'équipement de charge avant de connecter ou de déconnecter les bornes de batteries.
- Vérifier si les batteries sont accidentellement mises à la terre. Si elles sont accidentellement mises à la terre, enlever la source de mise à la terre. Tout contact avec une partie quelconque d'une batterie mise à la terre peut causer une secousse électrique. Le danger d'une telle secousse sera réduit si de telles mises à la terre sont enlevées durant l'installation et l'entretien.
- Les batteries au plomb-acide peuvent présenter un risque d'incendie, car elles génèrent de l'hydrogène sous forme de gaz. De plus, les connexions électriques doivent être protégées contre les courts-circuits accidentels, lesquels peuvent produire des étincelles. Suivre les procédures suivantes :
- Ne pas fumer près des batteries.
- Ne pas produire de flamme ou d'étincelles dans l'environnement immédiat des batteries.
- Décharger l'électricité statique de votre corps avant de toucher aux batteries en touchant d'abord une surface de métal mise à la terre.
- Après avoir remplacé des bacs de batteries dans une armoire de batteries, remettre en place les sangles de rétention maintenant les bacs en place sur les étagères. Ceci limitera tout mouvement accidentel des bacs et connecteurs si l'armoire doit éventuellement être repositionnée ou déplacée.

**NOTE: Do not use cleaners on the batteries. Solvents can make the battery cases brittle. Use only a dry cloth or a cloth moistened in water**

**NOTE: Do not use equalize charging with valve-regulated, lead-acid batteries, such as those used in some Liebert battery cabinets. Consult the battery manufacturer's manual for specific information about equalize charging.**

The equalizing charge time is adjustable from zero to 200 hours and can be initiated automatically or manually.

## 5.4 Detecting Trouble

The operator must check the instrument readings if abnormal equipment performance is suspected. Any metered value that differs appreciably from normal could mean an impending malfunction and should be investigated.

Items to check on the various UPS display screens include:

- **Output Voltage Levels:** Output voltages of all phases should be within 1% of normal voltage. Output currents on each phase normally should not differ by more than 20%. If the difference is greater, the load is unbalanced and must be corrected.
- **Battery Charge Current Levels:** If the UPS has not operated on battery power during the last 10 hours, the batteries should require little charging current. The battery mimic should indicate normal DC voltage with relatively little battery charge current.

- **Input Current:** Input current on each phase should be within 10% of the average input current. Alarm messages indicate malfunction or impending malfunction. A daily check of the control panel will help to provide an early detection of problems. See [Vertiv™ Liebert® Trinergy™ Cube Status Messages](#) on page 47, [Vertiv™ Liebert® Trinergy™ Cube Alarm Messages](#) on page 54 and [Vertiv™ Liebert® Trinergy™ Cube Fault Messages](#) on page 60 to interpret alarm messages.
- **Event Log:** Alarm messages and the metered parameter indications help in tracing a problem to a particular section. These are stored in the UPS Event Log and can be displayed at the touchscreen or downloaded by Vertiv Services.

### 5.4.1 Reporting a problem

If a problem occurs, review all alarm messages along with other pertinent data, and contact Vertiv Services by visiting <http://www.Vertiv.com/en-us/support/> or calling 1-800-543-2378.

## 5.5 Upstream Feeder Circuit Breaker Setting Inspections

During normal UPS operations, short term overload current demand from the bypass source can reach 10 times the UPS output current rating. This overload current demand can be caused by the magnetizing inrush current of one or more downstream transformers (example, power distribution units) or faults on downstream branch circuits. The instantaneous trip point(s) of the upstream bypass feeder breaker(s) must be set to support these temporary overloads. The magnitude of short-term overload bypass current demand is typically six to eight times the UPS current rating but must be determined by analysis on a per-site basis. This analysis, generally known as an End-to-End Fault Coordination Study, must be done by a registered professional engineer experienced in this activity and familiar with local codes and related requirements.

Vertiv highly recommends periodic inspections of the bypass feeder breaker instantaneous trip settings, as well as the module input (rectifier) feeder breaker trip settings, to ensure that they are correct. For a variety of reasons, although typically during circuit breaker maintenance procedures by others, trip settings have been inadvertently left improperly set. Correct trip setting of these circuit breakers is most important to achieving high availability from the UPS.

For further information regarding proper trip settings for the feeder breakers, contact Vertiv Technical Support.

**NOTE: The instantaneous trip setting of the breaker feeding the UPS bypass input should be high enough to accommodate short duration overloads. The bypass static switch power path inside the UPS can draw up to 10 times the system's rated current for up to three cycles.**

**NOTE: While Vertiv can provide typical guidelines, the responsibility for the proper breaker trip settings outside the Liebert UPS equipment resides with the owner.**

This page intentionally left blank

## 6 Specifications

**Table 6.1 Vertiv™ Liebert® Trinergy™ Cube Specifications and Standards**

UPS Rating at 95°F (35°C), kVA	800 - 1600
UPS Rating at 104°F (40°C), kVA	750 - 1500
Output Active Power at 95°F (35°C), kW	800 - 1600
Output Active Power at 104°F (40°C), kW	750 - 1500
<b>Input AC Parameters</b>	
Input Voltage to Rectifier/Bypass, VAC	480, 3-Phase, 3-Wire
Permissible Input Voltage Range	+10%, -10%
Input Frequency, Hz	60± 5
Input Power Factor	≥ 0.99
Input Current Distortion (THD) at Nominal Voltage at Full Load,%	≤ 3.0
Power Walk-In (seconds)	1 to 90 (Selectable in 1 Second Increments)
Internal Back-Feed Protection	Yes
Input Connection	Single or dual feed
Short-Circuit Withstand Rating (kA)	100
<b>Battery and DC Parameters</b>	
Battery Type	Vertiv™ HPL, Lithium ion, VRLA (Valve Regulated Lead Acid), VLA (Vented Lead Acid)
Nominal Battery Bus, VDC / Battery Float Voltage, VDC	480 / 540, 576 Max
DC Ripple at Float Voltage	< 1.0% (RMS value) < 3.4% Vpp
Temperature Compensated Battery Charging	Standard with Vertiv™ VRLA Battery Cabinets
<b>Output Parameters</b>	
Load Power Factor Supported (Without Derating)	0.7 Leading to 0.4 Lagging
Output Voltage, VAC	480, 3 Phase, 3 Wire
Output Voltage Regulation (%) / Output Voltage Regulation (50% Unbalanced Load) (%)	< 1.0 (3 phase RMS average) / < 2.0 (3 phase RMS average)
Output Frequency, Hz	60 ± 0.1%
Output THD at Nominal Voltage (Linear Load), %	≤ 1.5 (RMS Value)
Output THD at Nominal Voltage Including a 100kVA Non-Linear Load per IEC 62040-3, %	≤ 5.0 (RMS Value)
Transient Recovery 100% Load Step / 50% Load Step / Loss of/Return to AC Input Power	±4% / ±2% / ±2% (RMS average for one cycle)
Voltage Displacement (Balance Loads) / Voltage Displacement (50% Balance Loads)	120 deg ±1 deg / 120 deg ±2 deg

**Table 6.1 Vertiv™ Liebert® Trinergy™ Cube Specifications and Standards (continued)**

Overload at Nominal Voltage and 77°F (25°C)	110% continuously; 125% for 10 minutes; 150% for 60 seconds; 200% for 200 milliseconds
Overload in Bypass Operation at 104°F (40°C)	110% continuously, 125% for 10 minutes, 150% for 60 seconds, 700% for 600 milliseconds, 1000% for 100 milliseconds
<b>Efficiency</b>	
Double-Conversion Mode	Up to 96.8%
ECO Mode	Up to 99.2%
<b>Physical Characteristics</b>	
Dimensions for Core, 400kW, W x D x H In. (mm)	26.8 x 36.1 x 77.0 (681 x 917 x 1956)
Dimensions for Core Disconnect (connects up to two Cores to I/O Box), W x D x H In. (mm)	16.8 x 36.1 x 80.3 (427 x 917 x 2040)
Dimensions for I/O Box 2400A, W x D x H, in. (mm)	62.2 x 36.1 x 80.3 (1580 x 917 x 2040)
Weight for Core 400 kW , lb (kg)	1300 (590)
Weight for Core Disconnect (connects up to two Cores to I/O Box), lb. (kg)	435 (198)
Weight for I/O Box 2400A, lb. (kg)	2050 (930)
<b>Color</b>	Black, RAL 7021
<b>Protection Class, UPS Enclosure</b>	NEMA 1, IP 20 (with and without front door open)
<b>Environmental</b>	
Operating Temperature	32°F to 131°F* (0°C to 55°C*)
Relative Humidity	0% to 95%, non-condensing
Operating Altitude, ft. (m)	Up to 3300 (1000) without derating
Heat Dissipation at Full Load in VFI (BTU/h)	52440 (400 kW per Core)
Airflow at Full Load in VFI (CFM)	up to 3225 (per 400 kW Core)
<b>Paralleling</b>	Up to 5 cores (4 cores for capacity and 1 core for redundancy) in one unit, up to 8 units in parallel
<b>Hot Swappable core</b>	Yes
<b>Acoustical Noise, dBA</b>	78 (72 at partial load)
<b>Communications</b>	
Control panel	Multifunction 12 inch Color Touchscreen
Options	2 Vertiv™ Liebert® Intellislot™
Card Compatibility	IS-UNITY-DP, IS-485EXI
Protocols	BACnet IP, BACnet MSTP, Modbus TCP, Modbus RTU, SNMP, YDN23, Vertiv Liebert Life Services
Inputs/Outputs	8/12 Programmable (Form C)
<b>Standards</b>	
Transportation / Safety	ISTA Procedure 3B / UL 1778 5th Edition;

**Table 6.1 Vertiv™ Liebert® Trinerigy™ Cube Specifications and Standards (continued)**

	CSA 22.2 NO 107.3
EMI / Surge	IEC 62040-2; FCC Part 15, Class A / ANSI C62.41, Category B3
UL9540 Trinerigy Cube PHR3462 to be used with Samsung Battery Cabinet PHR3462 Trinerigy Cube PHR3262 to be used with Samsung Battery Cabinet PHR3262 Trinerigy Cube PHR2852 to be used with Samsung Battery Cabinet PHR2852 Trinerigy Cube PHR2652 to be used with Samsung Battery Cabinet PHR2652 Trinerigy Cube PHR2042 to be used with Samsung Battery Cabinet PHR2042	If installing per UL9540 Compliance between Trinerigy Cube UPS and Samsung ESS, the Samsung ESS has been Fire Propagation Tested in accordance with UL9540A, Project Number: 4789212736.
Maximum Rated Energy Capacity (Trinerigy Cube + Samsung ESS)	34.6 kWh Per Battery Cabinet (Maximum of 2 Battery Cabinets per UPS Core, Maximum of 8 Battery Cabinets Total)
UL9540 Trinerigy Cube to be used with Vertiv™ EnergyCore Lithium 5 16 module Trinerigy Cube to be used with Vertiv™ EnergyCore Lithium 5 18 module	If installing per UL9540 Compliance between Trinerigy Cube UPS and EnergyCore Lithium 5 series; the EnergyCore Lithium 5 Series has been Fire Propagation Tested in accordance with UL9540A, CSA Report # 80132596 on Sept, 29, 2023.
Maximum Rated Energy Capacity (Trinerigy Cube + EnergyCore Lithium 5 ESS)	16 module 27.6 kWh Per Battery Cabinet (Maximum of 2 Battery Cabinets per UPS Core, Maximum of 8 Battery Cabinets Total = 220.8 kWh max per system).
	18 module 33.1 kWh Per Battery Cabinet (Maximum of 2 Battery Cabinets per UPS Core, Maximum of 8 Battery Cabinets Total = 264.8 kWh max per system).
UL9540 Trinerigy Cube to be used with Vertiv™ EnergyCore Lithium 7 16 module Trinerigy Cube to be used with Vertiv™ EnergyCore Lithium 7 17 module	If installing per UL9540 Compliance between Trinerigy Cube UPS and EnergyCore Lithium 7 series; the EnergyCore Lithium 7 Series has been Fire Propagation Tested in accordance with UL9540A, CSA Report # 80217568 on Sept, 30, 2024.
Maximum Rated Energy Capacity (Trinerigy Cube + EnergyCore Lithium 7 ESS)	16 module 32.6 kWh Per Battery Cabinet (Maximum of 2 Battery Cabinets per UPS Core, Maximum of 8 Battery Cabinets Total = 260.8 kWh max per system).
	17 module 33.1 kWh Per Battery Cabinet (Maximum of 2 Battery Cabinets per UPS Core, Maximum of 8 Battery Cabinets Total = 276.8 kWh max per system).
Minimum Distance Between UPS ESS Systems	25.4 mm from battery room walls
UL9540 Seismic Rating	If installing per UL9540 Compliance between Trinerigy Cube UPS and Samsung ESS; Samsung ESS complies with CBC 2019, and IBC 2018. Trinerigy Cube UPS complies with IBC 2021.
	Energy Storage System (ESS) is not intended for installation in locations subjected to seismic activity since this system has not been subjected to seismic testing
	Samsung ESS: SDS = 1.70, Z/H = 1.0 ; Trinerigy Cube UPS: SDS = 1.20, Z/H = 1.0  SDS = 2.15, Z/H = 0 ; SDS = 1.61, Z/H = 0  Ip = 1.5 ; Ip = 1.5
<b>General and System Data</b>	
Inverter Type	High-Efficiency, Transformer-Free IGBT, Three-Level PWM Inverter
Rectifier Type	High-Efficiency, Transformer-Free IGBT, Three-Level PWM Inverter

**Table 6.1 Vertiv™ Liebert® Trinergy™ Cube Specifications and Standards (continued)**

Parallel Configuration	Up to 8 units in parallel
Access	Front and Top (no rear access required)
*Conditions applied	

**Table 6.2 Overload Capacity - Temperature dependence**

77°F (25°C)		86°F (30°C)		95°F (35°C)		104°F (40°C)	
Time sec.	Load %	Time sec.	Load %	Time sec.	Load %	Time sec.	Load %
0.2	200	0.2	200	0.2	200	0.2	200
1	158	1	158	1	158	1	158
28	155	30	155	15	155	19	155
50	152	47	152	30	152	28	152
330	130	155	130	90	130	40	130
600	125	210	125	115	125	47	125
—	110	—	110	207	110	77	102

Based on nominal input voltage and no battery charging.

**Table 6.3 Overload Capacity - Current v. Time**

% Load	Overload Time, sec.
110	750
125	300
130	210
152	19
155	5.45
158	5.17
165	0.61

Based on normal input voltage

## 6.1 Performance Data

The technical illustrations are in the order of the drawing part number. The following table groups the drawings by topic/application.

**Table 6.4 Performance Data Graph**

Drawing Number	Description
TC1-18-S001	Module Double Conversion (VFI) AC/AC Efficiency, Typical, SMS and Distributed Bypass 800kVA/800kW, 480V 60Hz
TC1-18-S002	Module Double Conversion (VFI) AC/AC Efficiency, Typical, SMS and Distributed Bypass 1200kVA/1200kW, 480V 60Hz
TC1-18-S003	Module Double Conversion (VFI) AC/AC Efficiency, Typical, SMS and Distributed Bypass 1600kVA/1600kW, 480V 60Hz
TC1-18-S013	Module ECO Mode (VFD) AC/AC Efficiency, Typical, SMS and Distributed Bypass 800kVA/800kW, 480V 60Hz
TC1-18-S014	Module ECO Mode (VFD) AC/AC Efficiency, Typical, SMS and Distributed Bypass 1200kVA/1200kW, 480V 60Hz
TC1-18-S015	Module ECO Mode (VFD) AC/AC Efficiency, Typical, SMS and Distributed Bypass 1600kVA/1600kW, 480V 60Hz
TC1-18-S019	Module Double Conversion (VFI) DC/AC Efficiency, Typical, SMS and Distributed Bypass 800kVA/800kW, 480V 60Hz
TC1-18-S020	Module Double Conversion (VFI) DC/AC Efficiency, Typical, SMS and Distributed Bypass 1200kVA/1200kW, 480V 60Hz
TC1-18-S021	Module Double Conversion (VFI) DC/AC Efficiency, Typical, SMS and Distributed Bypass 1600kVA/1600kW, 480V 60Hz
TC1-18-S025	Input Power Factor, All Power Ratings, 480V 60Hz
TC1-18-S026	Input Current THDi, All Power Ratings, 480V 60Hz
TC1-18-S027	Inverter Overload Chart, All Power Ratings
TC1-18-S028	Bypass Overload Chart, All Power Ratings

This page intentionally left blank

# Appendices

## Appendix A: Technical Support and Contacts

### A.1 Technical Support/Service in the United States

Vertiv Group Corporation

24x7 dispatch of technicians for all products.

1-800-543-2378

Liebert® Thermal Management Products

1-800-543-2778

Liebert® Channel Products

1-800-222-5877

Liebert® AC and DC Power Products

1-800-543-2378

## A.2 Locations

### United States

Vertiv Headquarters  
505 N Cleveland Ave  
Westerville, OH, 43082, USA

### Europe

Victor-von-Bruns Strasse 21,  
8212 Neuhausen am Rheinfall, Switzerland

### Asia

#### Singapore

151 Lorong Chuan, Lobby D #05-04  
New Tech Park, Singapore 556741

#### India

Vertiv Energy Private Limited  
Plot No. C 20, Road No. 19  
Wagle Industrial Estate, MIDC  
Thane (West), Maharashtra 400604, India

#### China

Vertiv Technology Co., Limited  
Floors 1–4 and 6–10,  
Building B2, Nanshan I Park  
No. 1001 Xueyuan Road, Nanshan District  
Shenzhen, Guangdong 518055, China

## Appendix B: Vertiv™ Liebert® Trinergy™ Cube Status Messages

Component	Type	Text Display	ID	Description
Battery	Status	Battery warning	04-000	A warning is pending.
Battery	Status	Battery fault	04-001	A fault is pending.
Battery	Status	Battery idle	04-002	The battery is idle; energy is flowing neither in nor out.
Battery	Status	Battery is discharging	04-004	The battery is discharging.
Battery	Status	Automatic Battery Test Started	04-032	An automatic battery test has been started.
Battery	Status	Battery Test Requested	04-033	(Not supported) see BAW1 bit 4
Battery	Status	Battery Test Failed	04-035	A battery test has failed. Permanent state: a manual reset is required.
Battery	Status	Battery Test Idle	04-048	The battery test function is not being performed.
Battery	Status	Battery Test Start Pending	04-052	In a parallel system with a common battery, the <i>Start</i> command is present on some but not all the units.
Battery	Status	Battery Test Stop Pending	04-053	In a parallel system with a common battery, the <i>Stop</i> command is present on some but not all the units.
Battery	Status	Battery Non-Blocking Fault	04-054	Set when a non-blocking fault is active in the stage.
Battery	Status	Battery Not Connected	04-065	Set when V_BATT1 < 100V (fix threshold). Control always active independently to battery breaker status.
Battery	Status	Battery is charging	14-003	The battery is being charged.
Battery	Status	Battery Test Running	14-034	Battery test is running.
Battery	Status	Battery Test Not Allowed	14-036	Conditions preclude performing a battery test.
Battery	Status	Battery Test Finished OK	14-037	Battery test finished; active for 5 seconds, then switches to Battery Test Idle.
Battery	Status	Battery Test Canceled	14-038	(Not supported)
Battery	Status	Battery Test Interrupted	14-050	(Not supported)
Battery	Status	Battery Test Stopped by User	14-051	User has stopped the battery test; active for 5 seconds, then switches to Battery Test Idle. Valid only for a manual battery test.
Bypass	Status	Bypass is not present	01-000	—
Bypass	Status	Bypass Is On	01-001	—
Bypass	Status	Bypass Is Off	01-002	—
Bypass	Status	Bypass is stopped due to a fault	01-003	—
Bypass	Status	Bypass not prepared	01-004	Static switch board is not installed or the bypass voltage is over the threshold (P 106.i04).
Bypass	Status	Bypass fault	01-005	Set when a blocking fault is active in the stage.
Bypass	Status	Bypass warning	01-007	Set when at least one warning is active.
Bypass	Status	Bypass available with delay	01-008	Set when the bypass and inverter are not synchronized.

Component	Type	Text Display	ID	Description
Bypass	Status	Parallel bypass OK	01-029	All bypass inputs are OK.
Bypass	Status	Parallel bypass one fault	01-030	One bypass input fault exists.
Bypass	Status	Parallel bypass at least one OK	01-031	At least one bypass input is OK.
Bypass	Status	Parallel bypass fault	01-032	All bypass inputs are in fault.
Bypass	Status	Undelayed Bypass Ref. Failure	01-040	Bypass reference failure notification without any delay.
Bypass	Status	Bypass is Centralized	01-041	The internal bypass is disabled; the UPS is using the centralized / common (MSS) bypass.
Bypass	Status	Bypass Non-Blocking Fault	01-042	Set when a non-blocking fault is active in the stage.
Bypass	Status	Bypass Global On Request	01-078	Bypass Static Switch On command request on the shared bus
Bypass	Status	Bypass Global On	01-079	Bypass Static Switch on global status read from the shared bus.
Bypass	Status	Bypass Global Off	01-080	Bypass Static Switch Off Global status read from the shared bus.
Bypass	Status	Bypass mains is out of tolerance	11-006	Bypass failure notification without any delay.
Bypass	Alarm	Bypass Input Switch Open	21-012	Bypass input switch is open.
Charger/Booster	Status	Charger in Standby - (not charging)	03-000	—
Charger/Booster	Status	Charger is on	03-001	—
Charger/Booster	Status	Charger is off	03-002	—
Charger/Booster	Status	Charger Forced On	03-003	—
Charger/Booster	Status	Charger Stopped due to a Fault	03-038	—
Charger/Booster	Status	Charger in Current Limitation	03-039	Displayed as long as the voltage reference is lower than the nominal.
Charger/Booster	Status	Charging Status OFF	03-040	—
Charger/Booster	Status	Charging Status INIT	03-041	—
Charger/Booster	Status	Charging Status FLOAT 1	03-042	—
Charger/Booster	Status	Charging Status FLOAT 2	03-043	—
Charger/Booster	Status	Charging Status POST	03-044	—
Charger/Booster	Status	Charging Status PAUSE	03-045	—
Charger/Booster	Status	Charging Status MANUAL	03-046	—
Charger/Booster	Status	Charging Status FAULT	03-047	—
Charger/Booster	Status	Buck-Booster Fault	03-048	At least one fault is active.
Charger/Booster	Status	Buck-Booster Warning	03-049	Set when at least one warning is active.
Charger/Booster	Status	Booster Off	03-050	—
Charger/Booster	Status	Booster Turning On	03-051	—

Component	Type	Text Display	ID	Description
Charger/Booster	Status	Booster On	03-052	—
Charger/Booster	Status	Booster Stopped Due To Fault	03-053	—
Charger/Booster	Status	Booster Runs From Battery	03-054	Status set after a fixed delay equivalent to P1110.
Charger/Booster	Status	Buck-Booster Non-Blocking Fault	03-055	At least one non-blocking fault is active.
Charger/Booster	Status	DC Bus Too Low To Charge	03-061	—
General	Status	Warning pending	00-000	Set when at least one stage in the core is in warning.
General	Status	Fault pending	00-001	Set when at least one stage in the core is in fault.
General	Status	General Fault	00-002	Set when a fault is active in general stage.
General	Status	Parallel Unit	00-003	Set when P129 = 1.
General	Status	External Synch enabled	00-005	Set when P700 = 1.
General	Status	Inverter/Rectifier OFF Command Issued	00-006	Set when command <i>UPS Off</i> is received; resets when command is not present.
General	Status	Inverter on rectifier	00-009	Inverter is supplied by the rectifier.
General	Status	Inverter on battery	00-010	Inverter is supplied by the battery.
General	Status	Parameter reset active	00-011	Set after a parameter reset. Resets as soon as the parameter is written.
General	Status	Intelligent Parallel Not Allowed	00-014	Inverter status is not compatible with circular redundancy.
General	Status	Core Running	00-016	Core running.
General	Status	Operating Request for VFI	00-102	—
General	Status	SKRU: Inverter start inhibited	00-131	On B001 (Trinegy-Cube), the DIC1 inverter board will check the status of the input/output contact Function #16 to inhibit the inverter start.
General	Status	General Warning	00-146	Set when a warning is active in the general stage.
General	Status	General Non-Blocking Fault	00-147	Set when a non-blocking fault is active in general stage.
General	Status	Non-Blocking Fault pending	00-148	Set when at least one stage in the CORE is in a non-blocking fault.
General	Status	General Fault	00-171	Set when a fault is active in general stage.
General	Status	General Warning	00-172	Set when a warning is active in general stage.
General	Status	General Non-Blocking Fault	00-173	Set when a non-blocking fault is active in general stage.
General	Status	General Core Summary Warning	00-174	Set when a customer blocking fault flag is present (not yet defined).
General	Status	General Core Summary Fault	00-175	Set when at least one customer warning is active. (Not yet defined)
General	Status	General Core Non-Blocking Fault	00-176	Set when a customer non-blocking fault in stage is set (not yet defined).

Component	Type	Text Display	ID	Description
General	Status	Manual Mode Command Pending	00-200	Set when manual command is pending but global status not confirmed.
General	Status	Synchronize Rectifier Mains Failure	00-219	Request to synchronize the rectifier in case mains failure affects only one core or unit.
General	Status	One or More Fans Not Working	00-221	Set when one fan out of the entire set of monitored fans is not working.
General	Status	BCB: Trip command issued	00-226	Enabled by Output Function 47 BCB trip. Battery Circuit Breaker (BCB) opening command has been issued.
General	Status	Operating Request for Intelligent ECO	00-273	—
General	Status	Core Sleeping	10-015	Core is sleeping.
General	Status	Intelligent ECO Enabled	10-204	—
General	Status	Intelligent Parallel Enabled	10-205	—
General	Status	Fan Test in Progress	10-220	Set when fan test is in progress. Valid for either Automatic or Manual.
Inverter	Status	Inverter is off	06-000	—
Inverter	Status	Inverter is turning on	06-001	—
Inverter	Status	Inverter is on	06-002	—
Inverter	Status	Inverter is stopped due to a fault	06-003	—
Inverter	Status	Inverter fault	06-004	Set when a blocking fault is present on the inverter stage.
Inverter	Status	Synchronization Source: Bypass	06-005	—
Inverter	Status	Synchronization Source: Output	06-006	—
Inverter	Status	Synchronization Source: Self Clock	06-007	—
Inverter	Status	Synchronization Source: External	06-008	—
Inverter	Status	Inverter warning	06-010	Set when at least 1 warning is active
Inverter	Status	Inverter out of Synchronization	06-011	Set when the inverter is not synchronized with local bypass
Inverter	Status	Inverter out of Synchronization	06-016	Set when the inverter is not synchronized with external synchronization signal.
Inverter	Status	Online operation / VFI	06-018	—
Inverter	Status	Intelligent ECO / VFD	06-020	—
Inverter	Status	Intelligent Parallel / CR	06-079	—
Inverter	Status	Intelligent Parallel / CR	06-079	—
Inverter	Status	Intelligent Parallel / CR	06-079	—
Inverter	Status	Operation: ECO mode	06-086	Active if inverter is turning On, the load is on Bypass and P580=1 (DIM enabled).

Component	Type	Text Display	ID	Description
Inverter	Status	Inverter in Standby	06-087	—
Inverter	Status	Inverter Ready and Sync	06-088	—
Inverter	Status	Inverter Not Ready	06-089	—
Inverter	Status	Current Limit Last more then 3ms	06-090	Current limit lasts > 3 ms.
Inverter	Status	Inverter Non-Blocking Fault	06-091	Set when a non-blocking fault is active in the stage.
Inverter	Status	Inverter Fault	06-110	Set when CUSTOMER blocking fault flag is present.
Inverter	Status	Inverter warning	06-111	Set when at least one customer warning is active.
Inverter	Status	Inverter Non-Blocking Fault	06-112	Set when a customer non-blocking fault in stage is set.
Inverter	Status	Inverter pending on command	16-029	—
Load	Status	Load supplied by bypass	07-001	Set when load is supplied by Automatic Bypass and Inverter is Off.
Load	Status	Load Supplied By Maint. Bypass	07-002	Set when load is supplied by Manual Bypass.
Load	Status	Load is currently not supplied	07-003	Set when module is not supplying load.
Load	Status	Load on low priority line	07-004	Set when the load is supplied by the inverter and P568=1 or when the load is supplied by the bypass and P580=0.
Load	Status	Load on phase U-A > 85%	07-005	—
Load	Status	Load on phase V-B > 85%	07-006	—
Load	Status	Load on phase W-C > 85%	07-007	—
Load	Status	Load warning	07-008	Set when at least one warning is active.
Load	Status	Load supplied by battery	07-026	Set when the load is secured by the inverter and energy is provided by the battery.
Load	Status	Load Secured by Inverter	07-027	Set when the load is secured by the inverter. This includes the inverter in VFI or DIM (Eco) Mode.
Load	Status	Load Fault	07-028	Set when a blocking fault is present in the actual stage (not yet implemented).
Load	Status	Load Non-Blocking Fault	07-029	Set when a non-blocking fault is present in the actual stage (not yet implemented).
MUN	Status	MUN has a warning	08-000	Set when at least one MUN stage is in warning.
MUN	Status	MUN has a fault	08-001	Set when at least one non-blocking fault is present on MUN.
MUN	Status	UPS Model detection in progress	08-003	MUN is searching for Model Information.
MUN	Status	MUN initialization done	08-004	MUN is setup with auto detection.
MUN	Status	MUN reboot required	08-005	MUN detects difference in environment variable.
MUN	Status	System Started	08-011	Set at application start-up; never reset.
MUN	Status	Acknowledge Button Pressed	08-025	Acknowledge button has been pressed.

Component	Type	Text Display	ID	Description
MUN	Status	UPS Time not valid	08-026	Set when date is < 1 Jan 2009.
MUN	Status	Life call in progress	08-033	Call in progress.
MUN	Status	Life call rescheduled	08-034	Call rescheduled.
MUN	Status	Life modem not detected	08-035	Set when MUN does not receive replies from modem.
MUN	Status	Parameter read failed	08-054	Parameter can not be read from DSP. <ul style="list-style-type: none"> <li>Set when Parameter Reading returns with an exception</li> <li>Reset when Parameter Reading returns with an OK.</li> </ul>
MUN	Status	Parameter set failed	08-055	Parameter can not be written to DSP. <ul style="list-style-type: none"> <li>Set when Parameter Writing returns with an exception.</li> <li>Reset when Parameter Writing returns with an OK.</li> </ul>
MUN	Status	Life Service Mode	08-060	Life is in Service mode, so emergency calls are not sent to station (used when an SE is operating on the device in field).
MUN	Status	Ntp is Disconnected from Touchscreen	08-061	—
MUN	Status	Life interface Init in Progress	08-079	Set at application start up; reset after one second
MUN	Status	Life Events Sampling started	08-095	Ignore events history and restart sampling from current time.
MUN	Status	MUN/DSP are not Sync with SYNW	08-097	—
MUN	Status	Life Measures Sampling Started	08-098	Ignore measures history and restart sampling from current time.
MUN	Status	System Time Moved Ahead	08-110	Set when device time is moved ahead after time adjustment from Life Station.
MUN	Status	System Time Moved Back	08-111	Set when device time is moved back after time adjustment from Life Station.
Rectifier	Status	Rectifier is off	02-000	—
Rectifier	Status	Rectifier is turning on	02-001	—
Rectifier	Status	Rectifier is on	02-002	—
Rectifier	Status	Rectifier fault	02-004	Set either blocking or non blocking.
Rectifier	Status	Rectifier Warning	02-009	Set when at least 1 warning is active.
Rectifier	Status	No pre-charge in progress	02-010	No pre-charge active. Active while mains is out of tolerance.
Rectifier	Status	Charger in progress	02-011	Hold off delay and resistor pre-charge.
Rectifier	Status	Walk-in in progress	02-012	Rectifier current limit ramp.

Component	Type	Text Display	ID	Description
Rectifier	Status	pre-charge finished	02-013	pre-charge finished. Active while mains is OK.
Rectifier	Status	Rectifier Power Limitation Active	02-048	Set when the input current is limited by standard or customer limit (See T-Cube Overload specification).
Rectifier	Status	Rectifier Current Limit	02-049	Set when input current reaches the limit defined by P 1740.11 and lasts more 3 ms but less 10 ms.
Rectifier	Status	Rectifier Non-Blocking Fault	02-050	Set when a non-blocking fault in rectifier stage is set.
Rectifier	Status	Rectifier fault	02-070	Set when CUSTOMER blocking fault flag is present (not yet defined).
Rectifier	Status	Rectifier Warning	02-071	Set when at least one customer warning is active (not yet defined).
Rectifier	Status	Rectifier Non-Blocking Fault	02-072	Set when a customer non-blocking fault in stage is set (not yet defined).
Rectifier	Status	Rectifier Stopped - Fault	02-092	
Rectifier	Status	Rectifier Inhibited	02-093	Set when the rectifier pulse is inhibited due to DC overvoltage.
Rectifier	Status	Rectifier mains is out of tolerance	12-005	Mains failure notification without any delay.

## Appendix C: Vertiv™ Liebert® Trinergy™ Cube Alarm Messages

Component	Type	Text Display	ID	Description
Battery	Alarm	Battery under voltage	24-012	The battery voltage is under the shutdown voltage defined by 5 points of P1513 <i>Shutdown Voltage Table</i> . This warning causes the inverter to stop. This warning will be kept as long as the battery voltage is lower than the Inverter Restart Threshold.
Battery	Alarm	High battery temperature	24-015	RBM battery temperature user alarm (Temp. P1533.1 [0°C] < T < P1533.2 [38°C].)
Battery	Alarm	Battery temperature out of range	24-016	RBM battery temperature is out of range -10°C < T < P 1533.1 or 1533.2 < T < 40°.
Battery	Alarm	Temperature Probe Broken	24-017	RBM temperature probe is not responding (Temp. T < 10°C or T > 50°C or RBM Sensor Status [bit 3-2] = 11.
Battery	Alarm	Battery Switch Wiring Fault	24-056	Core only: Set when the RBM option is installed with Form C wiring and related cubicle breaker wiring fails.
Battery	Alarm	Cubicle Battery Switch Open	24-063	Core and Monolithic. <ul style="list-style-type: none"> <li>• CORE: set when an RBM option is installed.</li> <li>• Monolithic: set when IO Function 18 is enabled.</li> </ul>
Battery	Alarm	Battery Is Not Connected	24-064	Battery is not connected - warning.
Battery	Alarm	Imminent End Of Autonomy - Volt	24-066	Set if P1590 = 2 or 3. The battery voltage is lower than the threshold defined by 5 points of P1513 <i>Shutdown Voltage Table</i> + P 1591 <i>Delta shutdown imminent</i> .
Battery	Alarm	Imminent End Of Autonomy - Time	24-067	Set if P1590 = 1 or 3. The autonomy is below the defined threshold P1117 <i>Battery stored energy time limit</i> .
Battery	Alarm	BCB Breaker Open	24-068	Enabled by Input Function 21 BCB. Battery Circuit Breaker (BCB) is open.
Battery	Alarm	Battery Breaker Open	24-072	One or more BIB boards report an open breaker.
Bypass	Alarm	Bypass Input Switch Open	21-012	Bypass input switch is open.
Bypass	Alarm	Bypass mains failure	21-013	Warning set after delay defined by P 110.
Bypass	Alarm	Bypass in Overload Condition	21-014	—
Bypass	Alarm	Bypass disabled	21-016	<i>Bypass ON</i> command disabled (SW bypass inhibition to avoid DC capacitor overcurrent. Detected on DIC Inv. when DC link higher than ([SQRT2 * Phase voltage RMS] - 30V), delay 0.4 seconds).
Bypass	Alarm	Bypass overtemperature	21-017	Set when inverter temp. P 151.01 < T < P 151.02.
Bypass	Alarm	Bypass mode not auto	21-018	Set when the Bypass Control CAN ID 04002300h is not AUTO. Normally set in <i>Power Circuit Test</i> page.
Bypass	Alarm	Parallel Bypass Failure	21-038	Set when the input <i>Bypass OK</i> is set.
Bypass	Alarm	Bypass Wrong Phase Rotation	21-083	Bypass input wrong phase rotation.
Charger/Booster	Alarm	Battery Not Connected	23-012	Set when -100V < V_BATT1 < 100V (fix threshold). Control

Component	Type	Text Display	ID	Description
				always active independently to battery breaker status.
Charger/Booster	Alarm	Reversed polarity	23-014	Set when V_BATT1 < -100V (fix threshold). Control always active independently to Battery breaker status. Inhibits starting the battery charger.
Charger/Booster	Alarm	Buck-Booster DC Voltage Low	23-056	Booster inhibit when DC voltage < P1135.i03 (to be verified).
Charger/Booster	Alarm	Buck-Booster Overtemperature	23-057	Set when the temperature is greater than the P 1151 value.
Charger/Booster	Alarm	Buck-Booster B Overtemperature	23-067	Set when the temperature is greater than the P 1151 value.
Charger/Booster	Alarm	DC Overvoltage	23-080	Set when the DC bus voltage crosses the maximum threshold of P1753.30 for P1753.31 time.
General	Alarm	System Power UP	00-023	—
General	Alarm	Commissioning / Test Mode	20-018	—
General	Alarm	System Maint. Bypass Switch Closed	20-019	—
General	Alarm	Synchronization system fault	20-022	—
General	Alarm	System shutdown	20-024	—
General	Alarm	The ID Card is missing	20-025	—
General	Alarm	Calibration is started	20-026	—
General	Alarm	Input Air High Temperature	20-027	—
General	Alarm	System Output Switch Open	20-031	—
General	Alarm	System Bypass Switch Closed	20-032	—
General	Alarm	Detected Cores Mismatch	20-127	—
General	Alarm	Communication Loss BIB	20-132	—
General	Alarm	AC Ground Fault	20-133	—
General	Alarm	Communication Loss MI Ph. U-A	20-153	—
General	Alarm	Communication Loss MI Ph. V-B	20-154	—
General	Alarm	Communication Loss MI Ph. W-C	20-155	—
General	Alarm	Communication Loss MI BB	20-156	—
General	Alarm	Motherboard Overtemperature	20-165	—
General	Alarm	PIB Overtemperature	20-166	—
General	Alarm	Cable Conduit Overtemperature	20-167	—
General	Alarm	MIB Overtemperature	20-168	—
General	Alarm	Duplicated Parallel Unit Id	20-169	—
General	Alarm	Parallel Unit Number Mismatch	20-170	—
General	Alarm	Communication Loss MI-B Ph. U-A	20-206	—

Component	Type	Text Display	ID	Description
General	Alarm	Communication Loss MI-B Ph. V-B	20-207	—
General	Alarm	Communication Loss MI-B Ph. W-C	20-208	—
General	Alarm	Communication Loss MI-B BB	20-209	—
General	Alarm	Fan Failure Phase U	20-210	—
General	Alarm	Fan Failure Phase V	20-211	—
General	Alarm	Fan Failure Phase W	20-212	—
General	Alarm	Fan Failure Buck-Booster	20-213	—
General	Alarm	Battery Switch Open - Do Not Close	20-214	—
General	Alarm	CPU Time Slice	20-215	—
General	Alarm	Fan Failure Static Switch	20-222	—
General	Alarm	Fan Failure Board Slot	20-223	—
General	Alarm	I/O Transformer Overtemperature	20-224	—
General	Alarm	DC Overvoltage	20-227	—
General	Alarm	Communication Loss PIB-S1	20-243	—
General	Alarm	Communication Loss PIB-S1	20-244	—
General	Alarm	Communication Loss PIB-S1- I2C	20-245	—
Inverter	Alarm	Inverter DC Undervoltage	26-025	—
Inverter	Alarm	Inverter overload	26-026	RMS overload condition.
Inverter	Alarm	The inverter is off	26-027	—
Inverter	Alarm	Inverter pending off command	26-028	—
Inverter	Alarm	Inverter overload	26-031	Set when the overload timeout has reached 100%. This triggers the request to transfer to bypass with default configuration.
Inverter	Alarm	Overtemperature Phase U-A	26-101	Set when Phase U temperature is greater than the value specified by P 151.
Inverter	Alarm	Overtemperature Phase V-B	26-102	Set when Phase V temperature is greater than the value specified by P 151.
Inverter	Alarm	Overtemperature Phase W-C	26-103	Set when Phase W temperature is greater than the value specified by P 151.
Inverter	Alarm	Overtemperature B Phase U-A	26-119	Set when Phase U temperature is greater than the value specified by P 151.
Inverter	Alarm	Overtemperature B Phase V-B	26-120	Set when Phase V temperature is greater than the value specified by P 151.
Inverter	Alarm	Overtemperature B Phase W-C	26-121	Set when Phase W temperature is greater than the value specified by P 151.
Inverter	Alarm	DC Overvoltage	26-137	Set when DC bus voltage crosses the maximum threshold

Component	Type	Text Display	ID	Description
				P753.40 for P753.41 time.
Load	Alarm	Output Switch Open	27-009	The output breaker MOB is open.
Load	Alarm	Load is currently not supplied	27-010	Monolithic only: UPS is not supplying the load
Load	Alarm	Re-transfer is inhibited	27-011	Load transfer to inverter inhibited due to overload (to be verified with overload specification).
MUN	Status	MUN has a warning	08-000	Set when at least one MUN stage is in warning.
MUN	Status	MUN has a fault	08-001	Set when at least one non-blocking fault is present on MUN.
MUN	Status	UPS Model detection in progress	08-003	MUN is searching for model information.
MUN	Status	MUN initialization done	08-004	MUN is setup with auto detection.
MUN	Status	MUN reboot required	08-005	MUN detects difference in environmental variables.
MUN	Status	System Started	08-011	Set at application standup; never reset.
MUN	Status	Acknowledge Button Pressed	08-025	Acknowledge button has been pressed.
MUN	Status	UPS Time not valid	08-026	Set when date is < 1 Jan 2009.
MUN	Status	Life call in progress	08-033	Call in progress.
MUN	Status	Life call rescheduled	08-034	Call rescheduled.
MUN	Status	Life modem not detected	08-035	Set when MUN does not receive replies from modem.
MUN	Status	Parameter read failed	08-054	Parameter can not be read from DSP. <ul style="list-style-type: none"> <li>Set when Parameter Reading returns with an exception.</li> <li>Reset when Parameter Reading returns with OK.</li> </ul>
MUN	Status	Parameter set failed	08-055	Parameter cannot be written to DSP. <ul style="list-style-type: none"> <li>Set when Parameter Writing returns with an exception.</li> <li>Reset when Parameter Writing returns with OK.</li> </ul>
MUN	Status	Life Service Mode	08-060	LIFE is in Service Mode, so emergency calls are not sent to station (used when an SE is operating on the device).
MUN	Status	Ntp is Disconnected from Touchscreen	08-061	—
MUN	Status	Life interface Init in Progress	08-079	Set at application start-up; reset after one second.
MUN	Status	Life Events Sampling started	08-095	Ignore events history and restart sampling from current time.
MUN	Status	MUN/DSP are not Sync with SYNW	08-097	—
MUN	Status	Life Measures Sampling Started	08-098	Ignore measures history and restart sampling from current time.
MUN	Status	System Time Moved Ahead	08-110	Set when device time is moved ahead after time

Component	Type	Text Display	ID	Description
				adjustment from Life Station.
MUN	Status	System Time Moved Back	08-111	Set when device time is moved back after time adjustment from Life Station.
MUN	Alarm	CAN Communication Loss	28-008	Set when CAN telegram are not received for 10 seconds. Reset when a general stage telegram is received.
MUN	Alarm	UPS Model cannot be identified	28-056	UPS model not detected.
Rectifier	Status	Rectifier is off	02-000	—
Rectifier	Status	Rectifier is turning on	02-001	—
Rectifier	Status	Rectifier is on	02-002	—
Rectifier	Status	Rectifier fault	02-004	Set as either <i>blocking</i> or <i>non-blocking</i> .
Rectifier	Status	Rectifier Warning	02-009	Set when at least one warning is active.
Rectifier	Status	No pre-charge in progress	02-010	No pre-charge active. Active while mains is out of limits.
Rectifier	Status	pre-charge in progress	02-011	Hold off delay and resistor pre-charge.
Rectifier	Status	Walk-in in progress	02-012	Rectifier current limit ramp.
Rectifier	Status	pre-charge finished	02-013	Pre-charge finished. Active while mains is OK.
Rectifier	Status	Rectifier Power Limitation Active	02-048	Set when the input current is limited by standard or customer limit (See T-Cube Overload specification).
Rectifier	Status	Rectifier Current Limit	02-049	Set when input current reaches the limit defined by P 1740.11 and lasts more than 3 ms but less than 10 ms.
Rectifier	Status	Rectifier Non-Blocking Fault	02-050	Set when a non-blocking fault in rectifier stage is set.
Rectifier	Status	Rectifier fault	02-070	Set when a customer blocking fault flag is present (not yet defined).
Rectifier	Status	Rectifier Warning	02-071	Set when at least one customer warning is active (not yet defined).
Rectifier	Status	Rectifier Non-Blocking Fault	02-072	Set when a customer non-blocking fault in stage is set. (not yet defined).
Rectifier	Status	Rectifier Stopped - Fault	02-092	—
Rectifier	Status	Rectifier Inhibited	02-093	Set when the rectifier pulse is inhibited due to DC overvoltage.
Rectifier	Status	Rectifier mains is out of tolerance	12-005	Mains failure notification without any delay.
Rectifier	Alarm	Rectifier Input Switch Open	22-014	—
Rectifier	Alarm	Rectifier mains failure	22-015	Warning set after the delay defined by P1110.
Rectifier	Alarm	Wrong phase rotation	22-017	Input line phase rotation is incorrect.
Rectifier	Alarm	DC voltage low	22-018	DC link voltage under the threshold defined by P1135.2, causing PWM inhibition.
Rectifier	Alarm	Out of synchronization	22-020	During the rectifier running it causes the rectifier to stop temporarily.

Component	Type	Text Display	ID	Description
Rectifier	Alarm	Peak Input Voltage	22-021	Mains voltage high peak detector trips when instantaneous voltage exceeded the limit defined by P 1140.i05.
Rectifier	Alarm	Overtemperature Phase U-A	22-061	Set when Phase U temperature is greater then P 1151 setting (Def = 80°C)
Rectifier	Alarm	Overtemperature Phase V-B	22-062	Set when Phase V temperature is greater then P 1151 setting (Def = 80°C).
Rectifier	Alarm	Overtemperature Phase W-C	22-063	Set when Phase W temperature is greater then P 1151 setting (Def = 80°C).
Rectifier	Alarm	Overtemperature B Phase U-A	22-073	Set when Phase U temperature is greater then P 1151 setting (Def = 80°C).
Rectifier	Alarm	Overtemperature B Phase V-B	22-074	Set when Phase V temperature is greater then P 1151 setting (Def = 80°C).
Rectifier	Alarm	Overtemperature B Phase W-C	22-075	Set when Phase W temperature is greater then P 1151 setting (Def = 80°C).
Rectifier	Alarm	DC Overvoltage	22-102	Set when the rectifier detects DC bus voltage above threshold P1753.29.

## Appendix D: Vertiv™ Liebert® Trinergy™ Cube Fault Messages

Component	Type	Text Display	ID	Description
Battery	Fault	Battery Test Failure	34-023	—
Battery	Fault	Battery Overcurrent Fault	34-070	BCB Control algorithm has detected an overcurrent condition. BCB Open command issued.
Battery	Fault	Battery Ground Fault	34-071	Enabled by Input Function 22 BCB GND Fault. Battery ground fault detector is tripped.
Bypass	Fault	E.P.O.	31-020	—
Bypass	Fault	Bypass hardware failure	31-021	Output voltage is out of tolerance and the bypass input is within tolerance (SW detected fault monitoring output signals).
Bypass	Fault	Bypass hardware failure	31-022	Set when the bypass static switch board is not installed (bypass voltage < 170 V).
Bypass	Fault	Back-feed protection	31-023	Back-feed fault has been detected. Enabled by P142.
Bypass	Fault	Overload	31-026	—
Bypass	Fault	Bypass Failure During Line Support	31-027	—
Bypass	Fault	Parallel Failure During Support	31-028	—
Bypass	Fault	Overtemperature	31-036	Bypass heat sink overtemperature.
Charger/Booster	Fault	Charger Temperature high	33-018	Set when temperature is greater than P 1152 value.
Charger/Booster	Fault	Temperature Probe Broken	33-019	Buck booster temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 1780.6).
Charger/Booster	Fault	Charger Temperature high	33-020	Booster/Charger filter overtemperature (M.I. XP31 pin 1-6).
Charger/Booster	Fault	Charger De-saturation	33-021	Charger de-saturation.
Charger/Booster	Fault	Charger Redundant Voltage error	33-022	If the absolute value of the difference between primary and secondary battery voltage acquisition is greater than a predefined threshold, a fault is issued and the booster/charger is turned Off because the voltage measurement is corrupted.
Charger/Booster	Fault	Charger DC Bus	33-023	Set when DC voltage +/- is greater than the P753.i15 threshold.
Charger/Booster	Fault	E.P.O.	33-035	—
Charger/Booster	Fault	Charger Voltage Out of Limit	33-025	The charger is switched Off due to an overvoltage on the battery. The time until switch Off depends on the overvoltage value.
Charger/Booster	Fault	Buck-Booster Overcurrent	33-058	The current limitation control has tripped the booster.
Charger/Booster	Fault	Booster Defenestration	33-059	Booster de-saturation.
Charger/Booster	Fault	Booster and Charger De-saturation	33-060	Charger and booster de-saturation.

Component	Type	Text Display	ID	Description
Charger/Booster	Fault	Charger Temperature High	33-070	—
Charger/Booster	Fault	Charger Temperature High	33-071	—
Charger/Booster	Fault	Temp Probe Module B Broken	33-072	—
Charger/Booster	Fault	Charger De-saturation	33-073	—
Charger/Booster	Fault	Booster B De-saturation	33-074	—
Charger/Booster	Fault	Booster and Charger B De-saturation	33-075	—
Charger/Booster	Fault	Fuse Blown Pos Pole	33-076	Positive line buck booster fuse is blown.
Charger/Booster	Fault	Fuse Blown Neg Pole	33-077	Negative line buck booster fuse is blown.
Charger/Booster	Fault	Fuse Blown Module B Pos Pole	33-078	Positive B line buck booster fuse blown.
Charger/Booster	Fault	Fuse Blown Module B Neg Pole	33-079	Negative B line buck booster fuse is blown.
General	Fault	Incorrect power class	30-036	—
General	Fault	DSP Signal Hardware Failure	30-049	—
General	Fault	DSP Signal Hardware Failure	30-049	—
General	Fault	DSP Signal Hardware Failure	30-049	—
General	Fault	DSAVE active	30-053	—
General	Fault	Ambient Sensor Broken	30-059	—
General	Fault	Parallel cable missing	30-071	—
General	Fault	Parallel timeout	30-078	—
General	Fault	Parallel Identification Error	30-079	—
General	Fault	Parallel impossible	30-080	—
General	Fault	E.P.O.	30-145	—
General	Fault	DSP ADC Serial Comm Failure	30-163	—
General	Fault	DSP Signal Software Failure	30-164	—
General	Fault	Fast De-saturation	30-178	—
General	Fault	High Ambient Temperature	30-202	—
General	Fault	Input Contact Wiring Error	30-203	—
General	Fault	SMPS DC Supply Failure	30-216	—
General	Fault	SMPS Single AC Supply Failure	30-217	—
General	Fault	SMPS Double AC Supply Failure	30-218	—
Inverter	Fault	E.P.O.	36-034	—
Inverter	Fault	Overtemperature	36-035	Set when the Phase U temperature is greater than the value specified by P 152 .
Inverter	Fault	Overtemperature	36-036	Set when the Phase V temperature is greater than the value specified by P 152.

Component	Type	Text Display	ID	Description
Inverter	Fault	Overtemperature	36-038	Set when the Phase W temperature is greater than the value specified by P 152 .
Inverter	Fault	Overload	36-044	Set if the inverter stops for DC bus undervoltage four times in 5 minutes.
Inverter	Fault	Overload	36-045	Set when: <ul style="list-style-type: none"> <li>• Current limit condition occurs at inverter start while the output voltage is ramping up</li> <li>• Current limit condition lasts more then 200 ms</li> <li>• Current limit condition set again after 2nd Dynamic line Support</li> </ul>
Inverter	Fault	Overload	36-046	Set when the RMS overload counter reaches the end.
Inverter	Fault	DC Overvoltage	36-047	Set when DC voltage +/- is greater than P753.i15 threshold
Inverter	Fault	Output out of tolerance	36-048	Set when <ul style="list-style-type: none"> <li>• Output voltage filtered is above V Nominal + (P106.1 + P107.1 + P118.0 + P105.0)</li> </ul> OR <ul style="list-style-type: none"> <li>• Output voltage fast is above V Nominal + (P106.2 + P118.8 + P105.0)</li> </ul>
Inverter	Fault	Output out of tolerance	36-049	Set when <ul style="list-style-type: none"> <li>• Output voltage filtered is below V Nominal - (P106.1 + P107.1)</li> </ul> OR <ul style="list-style-type: none"> <li>• Output voltage fast is below V Nominal - (P106.2)</li> </ul>
Inverter	Fault	Output out of tolerance	36-050	—
Inverter	Fault	Output out of tolerance	36-051	—
Inverter	Fault	Output out of tolerance	36-052	—
Inverter	Fault	Output out of tolerance	36-053	—
Inverter	Fault	Output out of tolerance	36-054	—
Inverter	Fault	Inverter DC/AC de-saturation	36-055	De-saturation Phase U (Group A)
Inverter	Fault	Inverter DC/AC de-saturation	36-056	De-saturation Phase V (Group A)
Inverter	Fault	Inverter DC/AC de-saturation	36-057	De-saturation Phase W (Group A)
Inverter	Fault	DC Bus undervoltage	36-059	If (Udc < P135.i04) and <ul style="list-style-type: none"> <li>• (rectifier mains within tolerance) AND</li> <li>• (rectifier input breaker closed) AND</li> <li>• (NO Test Mode) AND</li> <li>• (NO HW-Init) AND</li> <li>• (60-second delay expired)</li> </ul>

Component	Type	Text Display	ID	Description
Inverter	Fault	Fuse Blown Phase U-A	36-080	Set by M.I. Phase U XP21 pin 7 -8. Indicates output fuse Phase U open.
Inverter	Fault	Fuse Blown Phase V-B	36-081	Set by M.I. Phase V XP21 pin 7 -8. Indicates output fuse Phase V open.
Inverter	Fault	Fuse Blown Phase W-C	36-082	Set by M.I. Phase W XP21 pin 7 -8. Indicates output fuse Phase W open.
Inverter	Fault	Temp Probe Broken Phase U-A	36-104	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).
Inverter	Fault	Temp Probe Broken Phase V-B	36-105	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).
Inverter	Fault	Temp Probe Broken Phase W-C	36-106	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).
Inverter	Fault	Overtemperature Choke Ph. U-A	36-107	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active.
Inverter	Fault	Overtemperature Choke Ph. V-B	36-108	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active
Inverter	Fault	Overtemperature Choke Ph. W-C	36-109	Inverter filter over-temperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active
Inverter	Fault	Fuse Blown B Phase U-A	36-122	Set by M.I. Phase U-B XP21 Pin 7 -8. Indicates output fuse Phase U is open.
Inverter	Fault	Fuse Blown B Phase V-B	36-123	Set by M.I. Phase V-B XP21 Pin 7 -8. Indicates output fuse Phase V is open.
Inverter	Fault	Fuse Blown B Phase W-C	36-124	Set by M.I. Phase W-B XP21 Pin 7 -8. Indicates output fuse Phase W is open.
Inverter	Fault	Overtemperature	36-125	Inverter B overtemperature fault Phase U-A
Inverter	Fault	Overtemperature	36-126	Inverter B overtemperature fault Phase V-B
Inverter	Fault	Overtemperature	36-127	Inverter B overtemperature fault Phase W-C
Inverter	Fault	Inverter DC/AC de-saturation	36-128	De-saturation Phase U group B
Inverter	Fault	Inverter DC/AC de-saturation	36-129	De-saturation Phase V group B
Inverter	Fault	Inverter DC/AC de-saturation	36-130	De-saturation Phase W group B
Inverter	Fault	Temp Probe B Broken Phase U-A	36-131	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).
Inverter	Fault	Temp Probe B Broken Phase V-B	36-132	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).
Inverter	Fault	Temp Probe B Broken Phase W-C	36-133	Inverter temperature sensor fault SW detected; based on M.I. value outside sensor limit interval $-15^{\circ}\text{C} < T < +150^{\circ}\text{C}$ for 60 seconds (P 780.23).

Component	Type	Text Display	ID	Description
Inverter	Fault	Overtemperature Choke B Ph. U-A	36-134	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active.
Inverter	Fault	Overtemperature Choke B Ph. V-B	36-135	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active.
Inverter	Fault	Overtemperature Choke B Ph. W-C	36-136	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 4-9) active.
Rectifier	Fault	E.P.O.	32-024	Depending on application: A02 stops rectifier.
Rectifier	Fault	Rectifier pre-charge failure	32-025	DC bus under threshold P135.101.
Rectifier	Fault	Rectifier pre-charge failure	32-026	DC bus under threshold P135.102.
Rectifier	Fault	Rectifier pre-charge failure	32-027	KM1 feedback not OK.
Rectifier	Fault	Rectifier Temperature fault	32-028	Rectifier Phase U temperature is greater then P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier Temperature fault	32-029	Rectifier Phase V temperature is greater then P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier Temperature fault	32-030	Rectifier Phase W temperature is greater then P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier DC Overvoltage	32-031	DC overvoltage.
Rectifier	Fault	Rectifier de-saturation failure	32-032	De-saturation Phase U (group A)
Rectifier	Fault	Rectifier de-saturation failure	32-033	De-saturation Phase V (group A)
Rectifier	Fault	Rectifier de-saturation failure	32-034	De-saturation Phase W (group A)
Rectifier	Fault	Rectifier synchronization failure	32-035	During standup, synchronization with the mains is not achieved in xxx sec.
Rectifier	Fault	Rectifier Overcurrent failure	32-036	Set when input current reaches the limit defined by P 1740.11 and last more 30 ms.
Rectifier	Fault	Fuse Blown Phase U-A	32-055	Set by M.I. Phase U XP21 pin 1 -2. Indicates input fuse Phase U open.
Rectifier	Fault	Fuse Blown Phase V-B	32-056	Set by M.I. Phase V XP21 pin 1 -2. Indicates input fuse Phase V open.
Rectifier	Fault	Fuse Blown Phase W-C	32-057	Set by M.I. Phase W XP21 pin 1 -2. Indicates input fuse Phase W open.
Rectifier	Fault	Temp Probe Broken Phase U-A	32-064	Rectifier temperature sensor fault SW detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C for 60 seconds (P 1780.6).
Rectifier	Fault	Temp Probe Broken Phase V-B	32-065	Rectifier temperature sensor fault SW detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C for 60 seconds (P 1780.6).
Rectifier	Fault	Temp Probe Broken Phase W-C	32-066	Rectifier temperature sensor fault SW detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C for 60 seconds (P 1780.6).
Rectifier	Fault	Overtemperature Choke Ph. U-A	32-067	Rectifier filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 1-6) active

Component	Type	Text Display	ID	Description
Rectifier	Fault	Overtemperature Choke Ph. V-B	32-068	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 1-6) active
Rectifier	Fault	Overtemperature Choke Ph. W-C	32-069	Inverter filter overtemperature. Any of Thermal Switch "ALA" (M.I. XP31 Pin 1-6) is active.
Rectifier	Fault	Fuse Blown B Phase U-A	32-076	Set by M.I. Phase U-B XP21 Pin 1 -2. Indicates input fuse Phase U is open.
Rectifier	Fault	Fuse Blown B Phase V-B	32-077	Set by M.I. Phase V-B XP21 Pin 1 -2. Indicates input fuse Phase V is open.
Rectifier	Fault	Fuse Blown B Phase W-C	32-078	Set by M.I. Phase W-B XP21 Pin 1 -2. Indicates input fuse Phase W is open.
Rectifier	Fault	Rectifier Temperature fault	32-079	Rectifier Phase U temperature is greater than P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier Temperature fault	32-080	Rectifier Phase V temperature is greater than P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier Temperature fault	32-081	Rectifier Phase W temperature is greater than P 1152 setting (def = 95°C).
Rectifier	Fault	Rectifier De-saturation Failure	32-082	De-saturation Phase U Group B.
Rectifier	Fault	Rectifier De-saturation Failure	32-083	De-saturation Phase V Group B.
Rectifier	Fault	Rectifier De-saturation Failure	32-084	De-saturation Phase W Group B.
Rectifier	Fault	Temp Probe B Broken Phase U-A	32-085	Rectifier temperature sensor fault SW has been detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C for 60 seconds (P 1780.6).
Rectifier	Fault	Temp Probe B Broken Phase V-B	32-086	Rectifier temperature sensor fault SW detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C foal seconds (P 1780.6).
Rectifier	Fault	Temp Probe B Broken Phase W-C	32-087	Rectifier temperature sensor fault SW detected; based on M.I. value outside sensor limit interval -15°C < T < +150°C for 60 seconds (P 1780.6).
Rectifier	Fault	Overtemperature Choke B Ph. U-A	32-088	Rectifier filter overtemperature. Any of the Thermal Switch "ALA" (M.I. XP31 pin 1-6) active.
Rectifier	Fault	Overtemperature Choke B Ph. V-B	32-089	Inverter filter overtemperature. Any of the Thermal Switch "ALA" (M.I. XP31 pin 1-6) is active.
Rectifier	Fault	Overtemperature Choke B Ph. W-C	32-090	Inverter filter overtemperature. Any of the Thermal Switch "ALA" (M.I. XP31 pin 1-6) is active.

This page intentionally left blank

### **Connect with Vertiv on Social Media**



<https://www.facebook.com/vertiv/>



<https://www.instagram.com/vertiv/>



<https://www.linkedin.com/company/vertiv/>



<https://www.x.com/Vertiv/>



---

Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082 USA

© 2026 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

SL-30837\_REVL\_04-26