


Vertiv CoolPhase Row CRD030 Unpacking Instructions



Unpacking

The following tools/equipment are required to unpack Vertiv™ CoolPhase Row CRD030:

- Safety boots.
- Gloves to avoid splinters when the panels are being handled.
- Fork lift or Pallet Jack to move the unit closer to its final location.

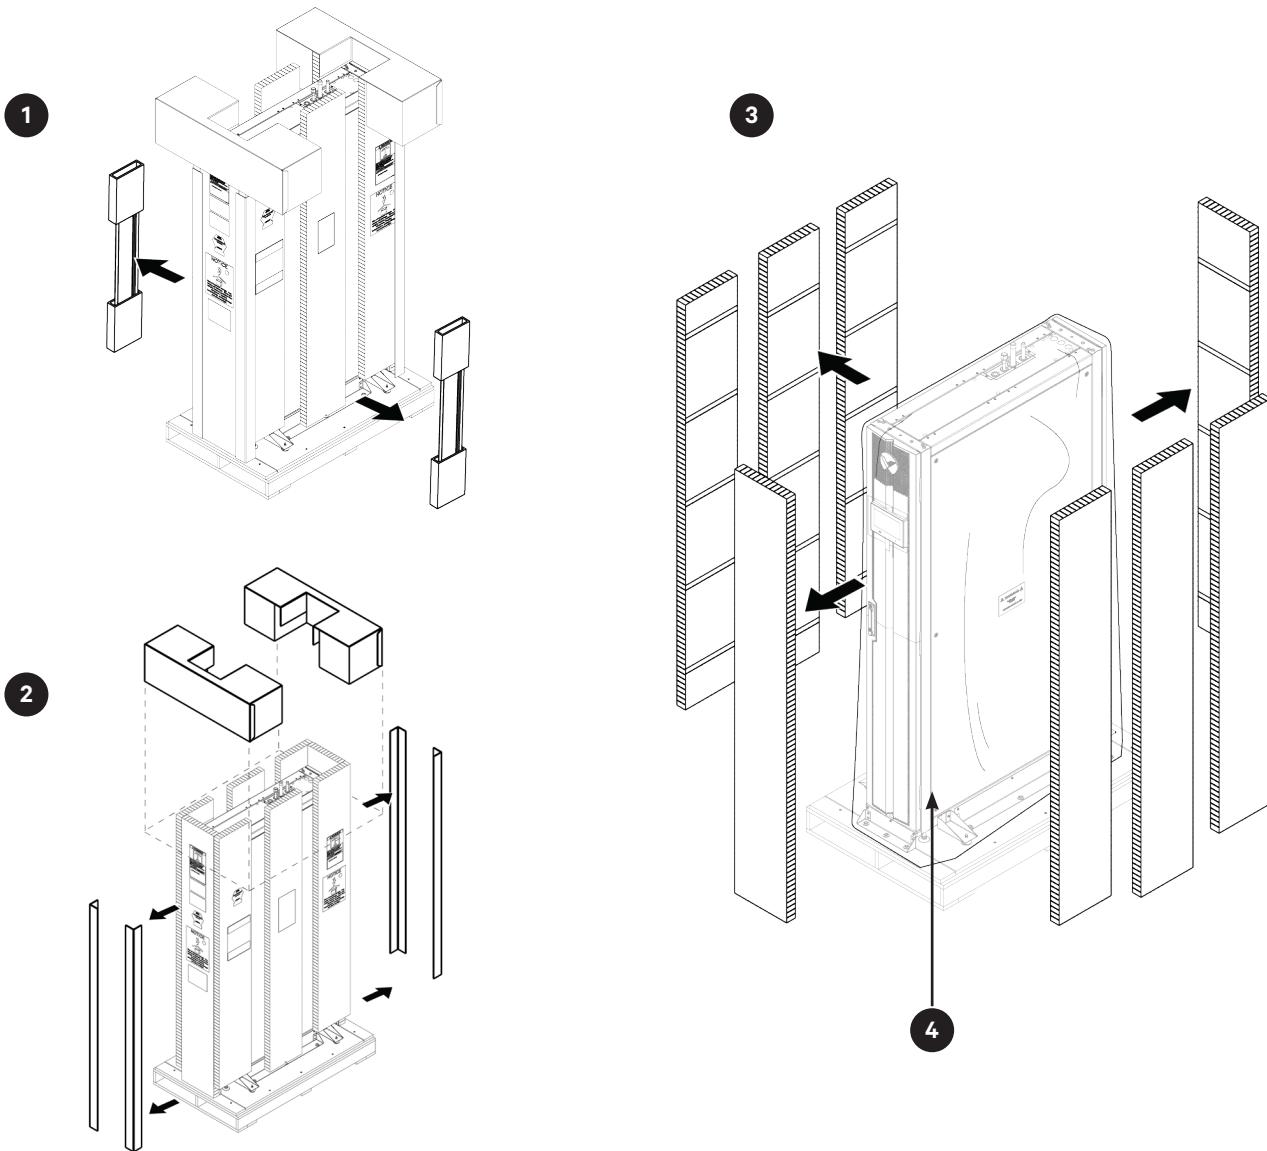

Follow this instructions to unpack the Unit:

1. Cut the plastic wrap, packing tape, polystrap with cutter or scissors and remove the ramps from the unit.
2. Remove the top side spacers and the corner protection.
3. Remove the honeycomb planks. Bag may remain over unit if needed to protect against dirt and/or debris until ready for install.
4. Take away all plastic wrap, refer to the Handling Instructions to remove the unit from the pallet and then take out the user manual for installation.

To contact Vertiv Technical Support: visit www.Vertiv.com

©2025 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications, rebates and other promotional offers are subject to change at Vertiv's sole discretion upon notice.

