Liebert® APS

Installer/User Guide

5 kVA to 20 kVA Modular UPS

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages result from use of this information or for any errors or omissions.

Refer to local regulations and building codes relating to the application, installation, and operation of this product. The consulting engineer, installer, and/or end user is responsible for compliance with all applicable laws and regulations relation to the application, installation, and operation of this product.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use, or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

Technical Support Site

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit https://www.vertiv.com/en-us/support/ for additional assistance.

Proprietary and Confidential ©2026 Vertiv Group Corp.

TABLE OF CONTENTS

1 Important Safety Information **1**
2 Product Description **5**
2.1 System Description 5
2.2 Features 10
2.3 Major Components 10
2.3.1 UPS Frame 11
2.3.2 User-Interface Module 12
2.3.3 System Control Module and System Monitor Module 12
2.3.4 Power Module 13
2.3.5 VRLA Battery Module 14
2.3.6 Lithium-ion Battery Module 14
2.3.7 Charger Module 15
2.3.8 External Battery Cabinet (EBC) 16
2.4 Operating Principle 17
2.5 Operating Modes 18
2.5.1 Normal Mode 18
2.5.2 Backup Mode 18
2.5.3 Auto Restart Mode 18
2.5.4 Bypass Mode 18
3 Installation **19**
3.1 Unpacking Inspection 19
3.2 Installation Environment 19
3.3 Installation Tools 19
3.3.1 Installation Site Considerations and Clearances 19
3.4 Removing the UPS from the Pallet 20
3.5 Installing the UPS 21
3.5.1 Tower Installation 21
3.5.2 Rack Installation 22
3.6 Installing Modules 25
3.6.1 Installing Power, VRLA Battery and Charger Modules 25
3.6.2 Installing Lithium-ion Battery Modules 26
3.6.3 Installing System Control and System Monitor Modules 28
3.7 Cable Connections 29
3.7.1 Connecting Cables on a Transformer-Free UPS 30
3.7.2 Connecting Cables on a Transformer-Based UPS 33
3.7.3 Connecting Cables on a Transformer-Free UPS with Dual Inverter Frames 38
3.7.4 Grounding Cable Size Recommendations 41
3.8 Connecting an External Battery Cabinet 42

3.9 Connecting Integrated Power Output Distribution (POD) 45
3.10 Commissioning/Startup Procedures 46
3.10.1 Checks before Commissioning/Startup 46
3.10.2 Commissioning/Startup with AC Power Available (Normal Mode Operation) 46
3.10.3 Commissioning/Startup without AC Power Available (Battery Mode Operation) 47
4 Communication 49
4.1 Vertiv™ IntelliSlot™ Ports 49
4.1.1 Vertiv™ IntelliSlot™ Network Cards 49
4.1.2 Vertiv™ Liebert® IntelliSlot™ Dry-contact Card (IS-RELAY) 50
4.1.3 Vertiv™ IntelliSlot™ EBC Card 50
4.2 Dry Contact Ports 50
4.2.1 Battery Mode Dry Contact 51
4.2.2 Low Battery Dry Contact 51
4.2.3 Any Mode Shutdown 51
4.2.4 Battery Mode Shutdown 51
4.3 Remote Emergency Power Off (REPO) 51
4.4 Long Run Time (LRT) Battery Temperature Probe Terminals 53
4.5 USB Port 53
4.6 LCD Port 53
5 Operation and Display Panel 55
5.1 Mimic LEDs 55
5.2 Audible Alarms 56
5.2.1 Control Buttons 57
5.3 LCD Screen and Menu Buttons 57
5.3.1 Startup Screen 57
5.3.2 Main Screen 57
5.3.3 Default Screen/Screen Saver 62
5.3.4 Screen Views 62
5.3.5 Entering a Password to Edit Settings 65
5.3.6 Editing Parameter Settings 65
5.3.7 Prompt Window 65
6 Troubleshooting 67
6.1 Active Alarms 67
6.2 Module Troubleshooting 71
6.3 Module Replacement 71
6.3.1 Removing Power, VRLA Battery and Charger Modules 71
6.3.2 Removing Lithium-ion Battery Modules 72
6.3.3 Removing System Control and System Monitor Modules 74
6.3.4 Replacing the User-Interface Module 75
7 Maintenance 77

Proprietary and Confidential ©2026 Vertiv Group Corp.

7.1 Proper Care 77
7.2 Scheduled Maintenance 78
7.3 Cleaning Fan Filters 78
7.3.1 Accessing the Top Filter 78
7.3.2 Accessing the Bezel Filter 79
7.3.3 Accessing the Bottom Fan Filter 80
8 Specifications 81
8.1 Estimated Battery Run Times: Model Number Digits 1-3 = AS1 or ASA 86
8.2 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS2 or ASB 90
8.3 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS3 or ASC 94
8.4 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS4 or ASD 98
8.5 Estimated Battery Run Times: Model Number Digits 1-3 = AS5 or ASE 102
8.6 Estimated Battery Run Times: Model Number Digits 1-3 = AS6 or ASF 106
8.7 Estimated Battery Run Times: Model-number Digits 1-3 = AL1 110
8.8 Estimated Battery Run Times: Model-number Digits 1-3 = AL2 114
8.9 Estimated Battery Run Times: Model-number Digits 1-3 = AL3 118
8.10 Estimated Battery Run Times: Model-number Digits 1-3 = AL4 122
8.11 Estimated Battery Run Times: Model-number Digits 1-3 = AL5 126
8.12 Estimated Battery Run Times: Model-number Digits 1-3 = AL6 130
Appendices 135
Appendix A: Technical Support and Contacts 135

This page intentionally left blank

Proprietary and Confidential ©2026 Vertiv Group Corp.

1 Important Safety Information

Save These Instructions

This manual contains important safety instructions. Read all safety, installation and operating instructions before operating the Vertiv™ Liebert® APS modular UPS system. Adhere to all warnings on the unit and in this manual. Follow all operating and user instructions. Individuals must fully understand this equipment to install and operate it.

The Liebert® APS is designed for commercial/industrial use only. It is not intended for use with life-support or other designated critical devices. Maximum load must not exceed that shown on the rating label. Install and operate the unit only in a clean indoor environment, free of conductive contaminants, moisture, flammable liquids, gases and corrosive substances. The Liebert® APS contains no user-serviceable parts. Refer all faults to your local dealer, local Vertiv representative or Vertiv Technical Support.

The Liebert® APS UPS system is designed for use on a properly earthed (grounded) "TN" electrical supply. The system must be installed by qualified personnel. A qualified electrician must review and approve customer supplied wiring, circuit breakers, and intended loads and verify correct input, output, and earth connections to ensure compliance with the technical standards and local electrical codes of practice.



WARNING! Risk of electric shock. Can cause equipment damage, injury and death. A battery can present a risk of electrical shock and high short circuit current.

The following precautions must be observed before replacing a battery pack:

- Wear rubber gloves and boots
- Remove rings, watches and other metal objects.
- Use tools with insulated handles.
- Do not lay tools or other metal objects on the batteries.
- If the battery kit is damaged in any way or shows signs of leakage, contact your local Vertiv representative immediately.
- Do not dispose of batteries in a fire. The batteries may explode.
- Handle, transport and recycle batteries in accordance with local regulations.

The Vertiv™ Liebert® APS is designed and manufactured to ensure personal safety, but improper use can result in electrical shock or fire. To ensure safety, observe the following precautions:

- Turn Off and unplug the Liebert® APS before cleaning it.
- Clean the unit with a dry cloth. Do not use liquid or aerosol cleaners.
- Never block or insert any objects into the ventilation holes or other openings of the Liebert® APS.
- Do not place the Liebert® APS power cord where it might be damaged.

This UPS contains no user-serviceable parts except for the user-replaceable module assemblies. The UPS On/Off push button does not electrically isolate internal parts.

All service and maintenance operations must be performed by properly trained and qualified personnel. Under no circumstances should unqualified or unauthorized personnel attempt to gain access to the internal portions of the Liebert® APS.

Proprietary and Confidential ©2026 Vertiv Group Corp.

ELECTROMAGNETIC COMPATIBILITY—The Vertiv™ Liebert® APS complies with the limits of Category C2, pursuant to IEC/EN/AS 62040-2, and for a Class A digital device, pursuant to Part 15 of FCC rules. Operation is subject to the following conditions:

- The output cables must be no longer than 10 m (32 ft).
- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation. Operating this device in a residential area is likely to cause harmful interference that users must correct at their own expense.

The Liebert® APS complies with the requirements of EMC Directive 2014/30/EU and the published technical standards. Continued compliance requires installation in accordance with these instructions and use of accessories approved by Vertiv.

Operate the unit in an indoor environment only in an ambient temperature range of 0 to 40°C (32 to 104°F). Install it in a clean environment, free from moisture, flammable liquids, gases and corrosive substances.

Do not continue to use the Liebert® APS if the front panel indications are not in accordance with these operating instructions or the performance alters in use. Refer all faults to your Vertiv representative or Technical Support.

Servicing of batteries must be performed or supervised by properly-trained and qualified personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from the batteries. Proper disposal of batteries is required. Refer to your local laws and regulations for disposal requirements.

Never block or insert any object into the ventilation holes or other openings.

DO NOT CONNECT equipment that could overload the UPS or demand DC current from the Liebert® APS, for example: electric drills, vacuum cleaners, laser printers, hair dryers or any appliance using half-wave rectification.

Storing magnetic media on top of the Liebert® APS may result in data loss or corruption.


Turn Off and isolate the Liebert® APS before cleaning it. Use only a soft cloth, never liquid or aerosol cleaners.

Information for the Protection of the Environment

UPS SERVICING—This unit makes use of components dangerous for the environment (electronic cards, electronic components). The components removed must be taken to specialized collection and disposal centers.

NOTICE TO EUROPEAN UNION CUSTOMERS: DISPOSAL OF OLD APPLIANCES—This product has been supplied from an environmentally aware manufacturer that complies with the Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU.

The symbol at right is placed on this product to encourage recycling wherever possible. Recycle this product through a recycling facility at the end of its service life. Do not dispose of this product as unsorted municipal waste. Follow local municipal waste ordinances for proper disposal provisions to reduce the environmental impact of waste electrical and electronic equipment (WEEE).

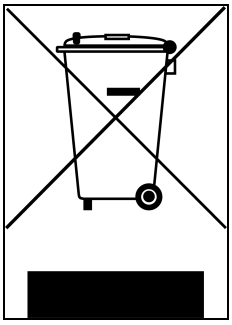

For information regarding the disposing of this equipment, visit www.Vertiv.com or contact Vertiv technical support. Refer to the inside front cover of this manual for contact information.

For information regarding the scrapping of this equipment, please browse https://www.vertiv.com/en-emea/ or call our worldwide technical support.

- Toll Free: 00 80011554499
- Toll Number Based in Italy: +39 0298250222

Table 1.1 Glossary of Symbols

Symbol	Description	Symbol	Description
	Risk of electrical shock		Recycle
	Indicates caution followed by important instructions		Equipment grounding conductor
	AC input		Bonded to ground
	AC output		Requests the user to consult the manual
	Indicates the unit contains a valve regulated lead acid battery		DC voltage
	Toggle between On and Off		Stand-by

Proprietary and Confidential ©2026 Vertiv Group Corp.

This page intentionally left blank

2 Product Description

To ensure proper installation and operation of this unit, please read this manual thoroughly.

The installation must be completed by trained professionals and follow all local codes. General operation of the units can be conducted without any specialized training.

2.1 System Description

The Vertiv™ Liebert® APS power system is a modular UPS that provides high reliability. It is intended for use with workstations, servers, networks, telecoms and other sensitive electronic equipment. It provides continuous, high-quality AC power to your equipment, protecting it from any power disturbance due to blackouts, brownouts, surges or noise interference.

The Liebert® APS UPS is an easily adaptable UPS system. By installing additional power or battery modules, you can expand your current system capacity, extend your backup runtime, or provide redundancy. The user interface lets you configure the operation according to application requirements. It also informs you of the status of the UPS and keeps a log of events.

The Liebert® APS series UPS contains both transformer-free and transformer-based UPS frames. The use of the transformer-free or transformer-based frames depends on the specific application requirements. The appearance of the different frames is shown in Figure 2.1 on the next page through Figure 2.4 on page 9.

Table 2.1 Frame Designation with VRLA Batteries


UPS Model Number Digits 1–3	Frame Type	Frame Rating
AS1 or ASA or AS5 or ASE	10 Bay Transformer-free	15 kVA redundant
AS2 or ASB or AS6 or ASF	16 Bay Transformer-free	20 kVA redundant
AS3 or ASC	12 Bay Transformer-based	15 kVA redundant
AS4 or ASD	16 Bay Transformer-based	20 kVA redundant

Table 2.2 Frame Designations with LIO Batteries

UPS Model Number Digits 1-3	Frame Type	Frame Rating
AL1 or AL5	10 Bay Transformer-free	15 kVA redundant
AL2 or AL6	16 Bay Transformer-free	20 kVA redundant
AL3	12 Bay Transformer-based	15 kVA redundant
AL4	16 Bay Transformer-based	20 kVA redundant


Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 2.1 16-bay Transformer-free UPS

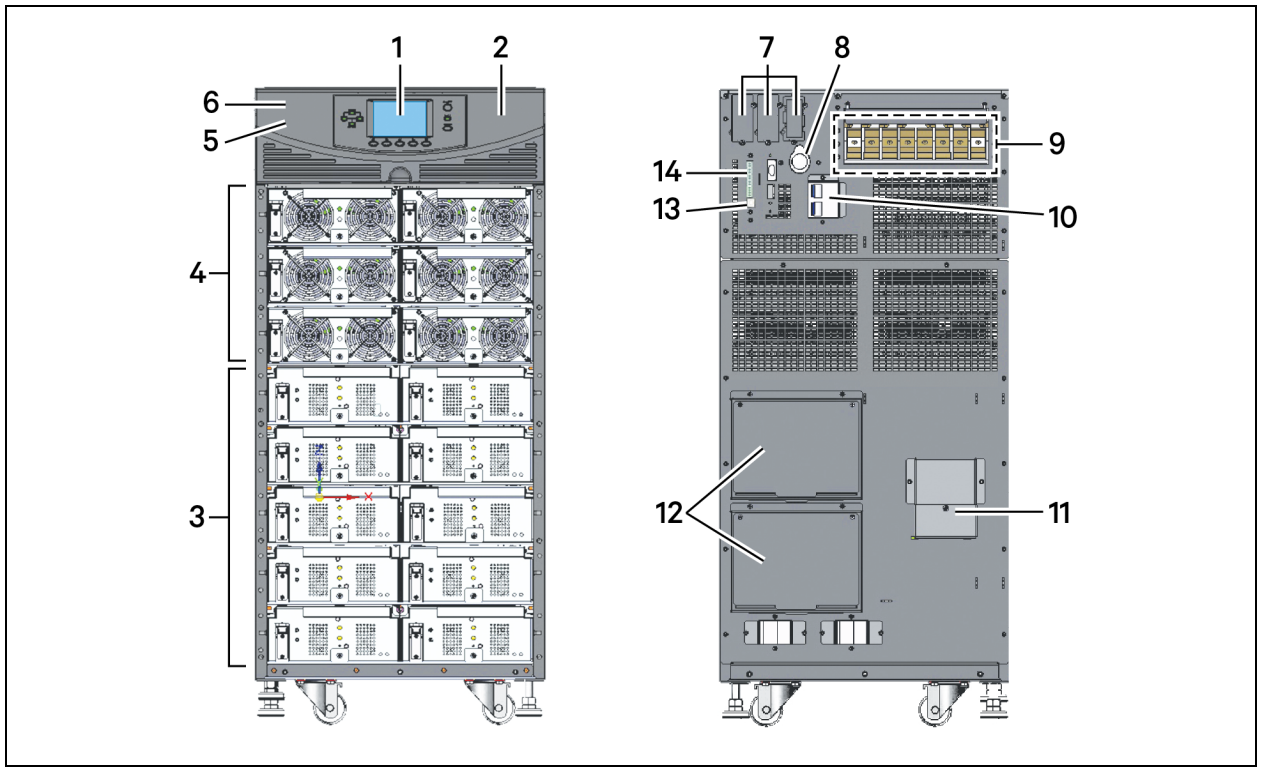

Item	Description	Item	Description
1	User-interface module	8	System enable switch
2	System control module (under cover)	9	Power input and output terminals
3	Bays for battery modules	10	Output breaker
4	Bays for power, charger, or battery modules	11	External battery cabinet connector
5	Input breaker (under cover)	12	POD ports
6	Manual bypass breaker (under cover)	13	USB port
7	Vertiv™ IntelliSlot™ ports	14	Dry contacts and REPO connections


Figure 2.2 10-bay transformer-free UPS

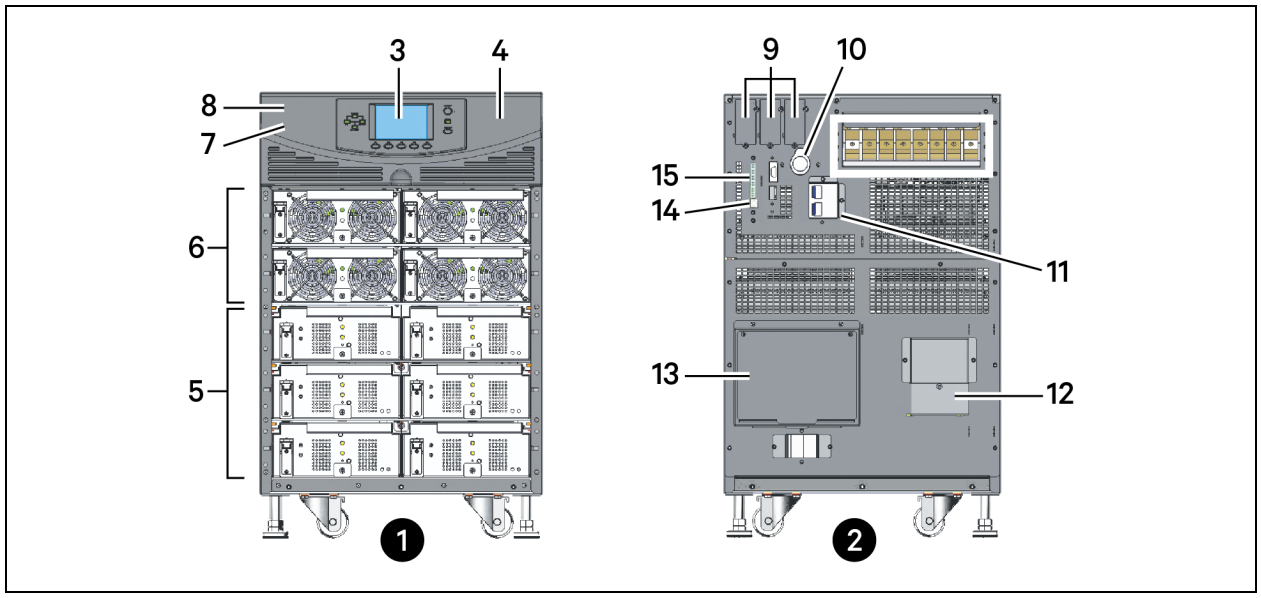

Item	Description	Item	Description
1	Front view with bezels removed	9	Vertiv™ IntelliSlot™ ports
2	Rear view	10	System enable switch
3	User-interface module	11	Output breaker
4	System control module (under cover)	12	External battery cabinet connector
5	Bays for battery modules	13	POD ports
6	Bays for power, charger, or battery modules	14	USB port
7	Input breaker (under cover)	15	Dry contacts and REPO connections
8	Manual bypass breaker (under cover)		


Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 2.3 12-bay transformer-based UPS

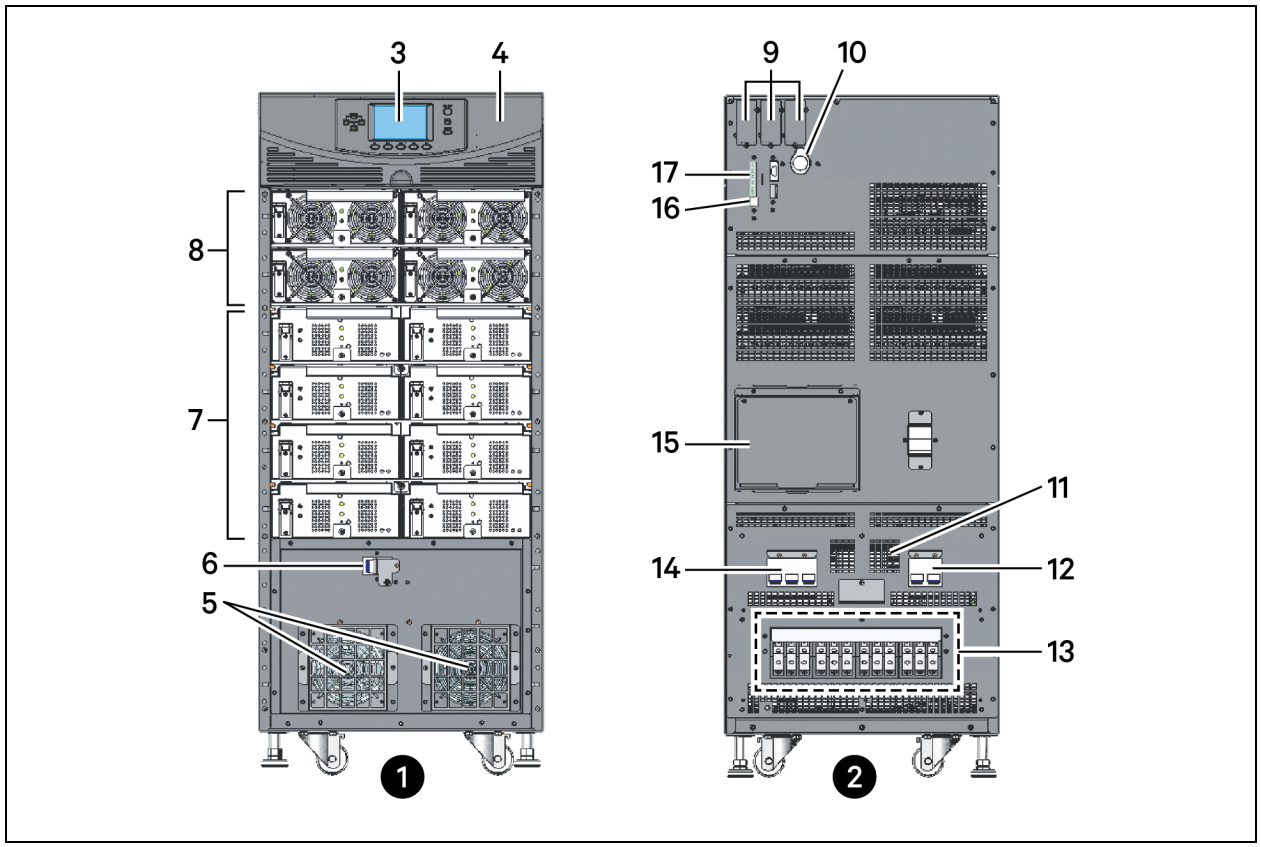

Item	Description	Item	Description
1	Front view with bezels removed	10	System enable switch
2	Rear view	11	External battery cabinet connector
3	User-interface module	12	Input breaker
4	System control module (under cover)	13	Power input and output terminals
5	Fans	14	Output breaker
6	Manual bypass breaker	15	POD ports
7	Bays for battery modules	16	USB port
8	Bays for power, charger, or battery modules	17	Dry contacts and REPO connections
9	Vertiv™ IntelliSlot™ ports		

Figure 2.4 16-bay Transformer-based UPS

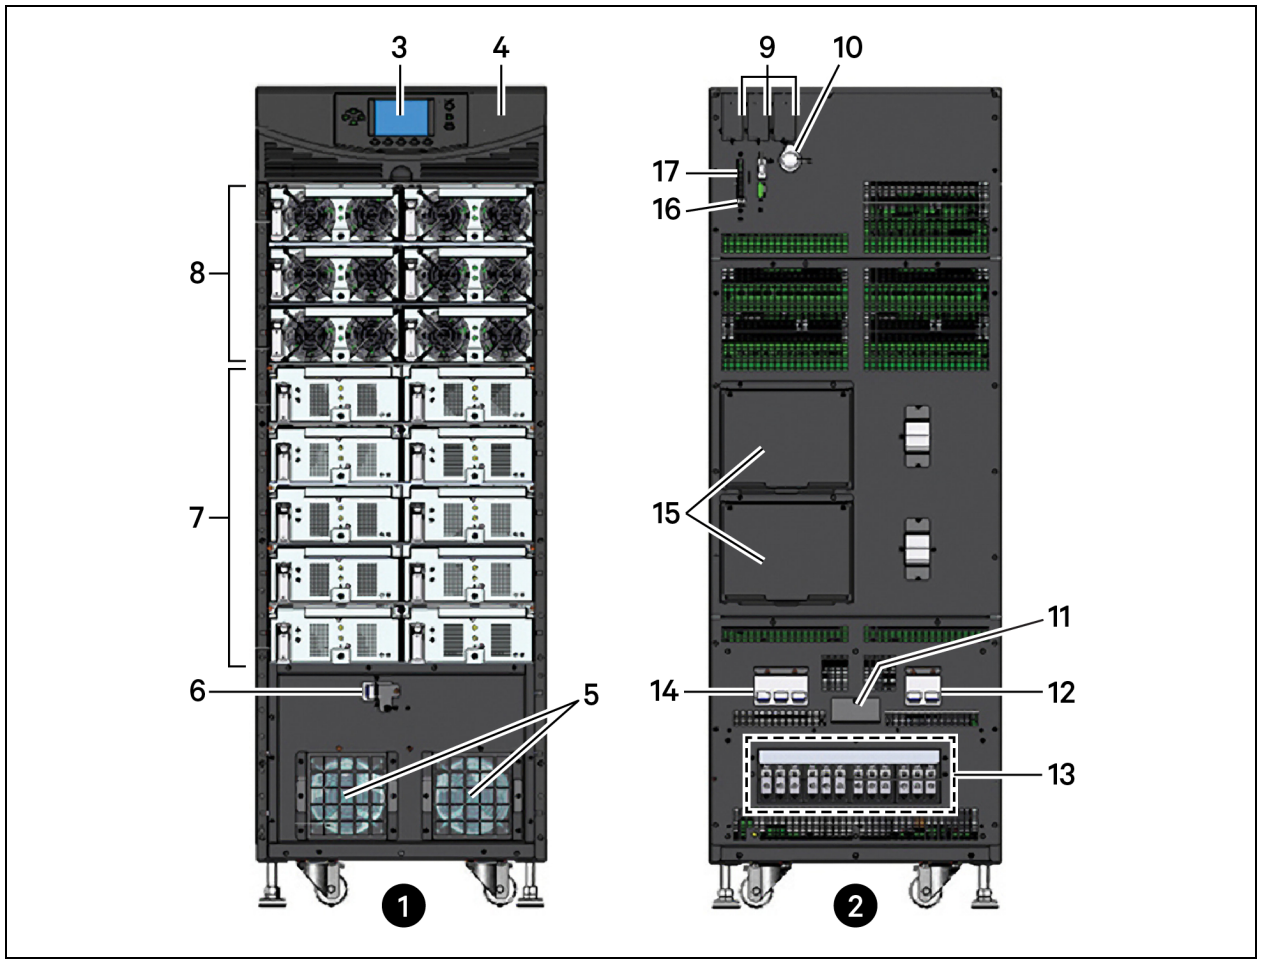

Item	Description	Item	Description
1	Front view with bezels removed	10	System enable switch
2	Rear view	11	External battery cabinet connector
3	User-interface module	12	Input breaker
4	System control module (under cover)	13	Power input and output terminals
5	Fans	14	Output breaker
6	Manual bypass breaker	15	POD ports
7	Bays for battery modules	16	USB port
8	Bays for power, charger, or battery modules	17	Dry contacts and REPO connections
9	Liebert® IntelliSlot ports		

Proprietary and Confidential ©2026 Vertiv Group Corp.

2.2 Features

- Flexible extension of capacity, up to 15 or 20 kVA modular power, depending upon frame rating
- VRLA or Lithium-ion battery modules available
- N + 1 redundancy, improving availability
- Modular design, modules hot-swappable by user
- Intelligent battery management
- External large batteries can be connected
- Internal automatic and manual bypass
- Transformer-based UPS frames provide output isolation transformer
- Optional 10 A battery charger module
- Continuous system monitoring
- User-friendly interface with audible alarms and event logs
- Supporting hot-pluggable and online update
- Compatible with backup generators

Standard Components

- UPS frame
- User-interface module for comprehensive user indications and programmable controls
- System-control modules and system-monitor module for system monitoring and communications
- Power modules for power conditioning
- Battery modules for backup power
- Charger module option for charging batteries and long run-time applications
- External battery cabinet prolongs system run time

Communications

- Dry contacts
- Vertiv™ IntelliSlot™ communication ports
- USB port

2.3 Major Components


This section provides a general description of each component and its functions. Please review this section carefully, as it will give you a better understanding of how the UPS operates.

2.3.1 UPS Frame

All UPS components are located in the Liebert® APS frame. The front of the UPS consists of a series of plastic bezels. Grasp the bezels from the sides and pull straight out to remove the bezel and reveal the battery/power-module bays. The standard-model frame provides cooling fans and a manual-bypass breaker on the top. The transformer-model frame provides a manual-bypass breaker on its bottom and fans on both top and bottom. The user-interface module is located above the power/battery-module bays for easy access, operation and for viewing UPS operating information. On the lower-right of the user-interface module are the system-control module bays. The UPS frames are shown in Figure 2.5 below.

NOTE: In the figure, the power module and battery module are extended for illustration purposes only. Extending more than one module at a time could cause the unit to tip over.

Figure 2.5 Example of UPS Frames with Bezels Removed

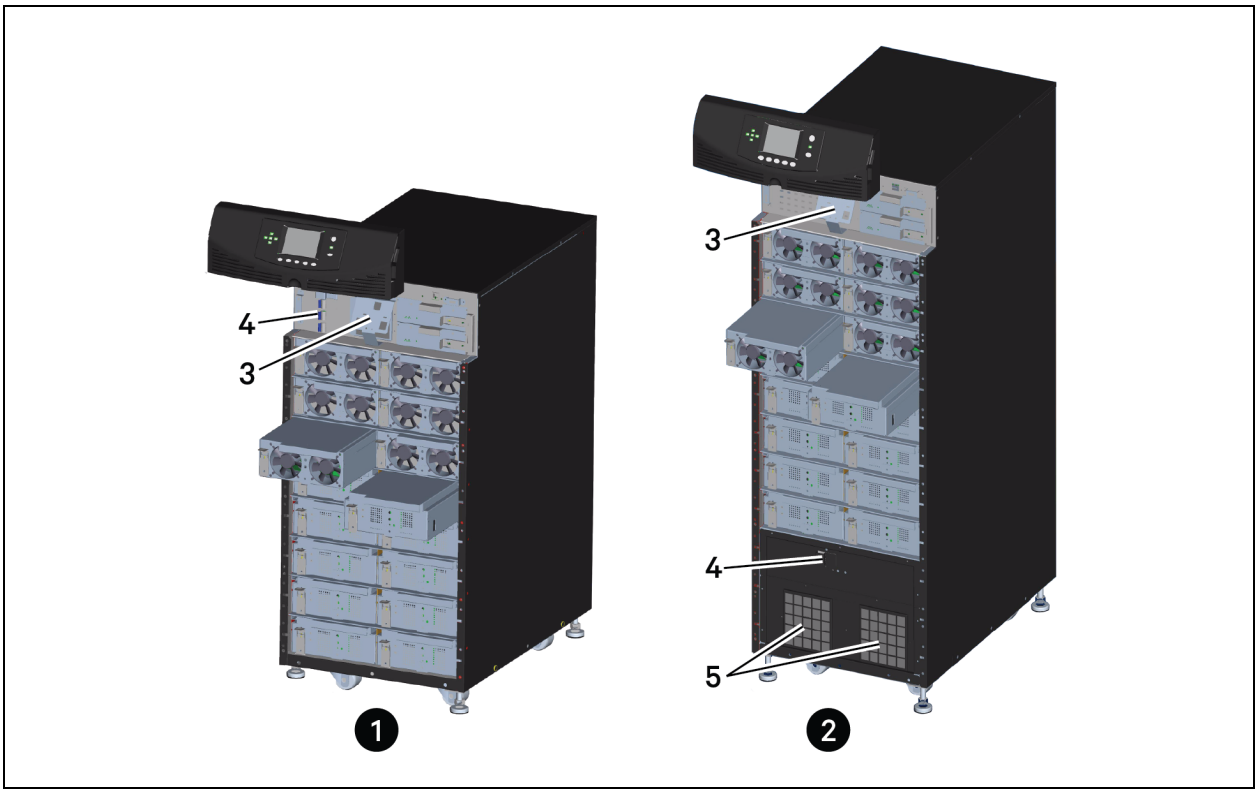

Item	Description	Item	Description
1	16-bay, transformer-free UPS	4	Manual bypass breaker
2	16-bay, transformer-based UPS	5	Fans
3	Fan, behind display bracket		

Proprietary and Confidential ©2026 Vertiv Group Corp.

2.3.2 User-Interface Module

The user-interface module, shown in Figure 2.6 below, is the primary source of communication between the UPS and the user. The user-interface module lets you:

- View the UPS status
- Configure the system
- Review the event log
- Silence the audible alarm

Refer to Operation and Display Panel on page 55 for details on operating the user-interface module.

Figure 2.6 User-Interface Module




2.3.3 System Control Module and System Monitor Module

The system control module and the system monitor module are the communication backbone of the UPS. They gather input from all modules and process the data to control system operation and monitor the condition of each module. Except for the silkscreen, the appearance of the system control module and the system monitor module appear as shown in Figure 2.7 on the facing page.

Under normal operation, the green status LED blinks and the yellow fault LED is Off. For any other condition, refer to Troubleshooting on page 67.

Figure 2.7 Example of System Control and System Monitor Module

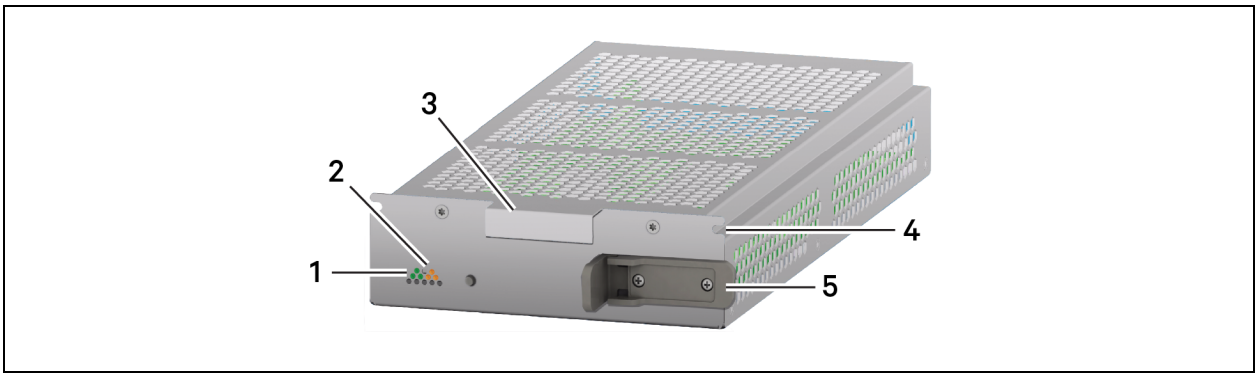


Item	Description	Item	Description
1	Status LED (green)	4	Securing hole
2	Fault LED (yellow)	5	Locking lever
3	Handle		

2.3.4 Power Module

Each power module, shown in Figure 2.8 below, is an independent 5 kVA unit, consisting of a power factor corrected rectifier, battery charger, and inverter with associated monitoring and control circuitry. The modules are connected in parallel for greater capacity and/or redundancy.

The power modules may be added or replaced online with no interruption or danger to the connected equipment or user.

Figure 2.8 Power Module

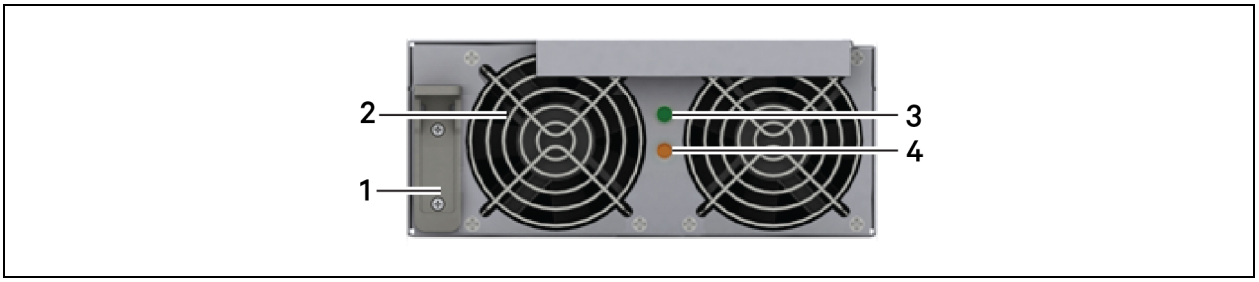

Item	Description	Item	Description
1	Locking Lever	3	Status LED (green)
2	Fan	4	Fault LED (yellow)

SKU	Description
APS5KPWRMOD1	2-phase Power Module 5kVA/4.5kW Used in AS5, AS6, AL5, AL6
APS5KPWRMOD2	1-Phase Power Module 5kVA/4.5kW Used in AS1, AS2, AS3, AS4, AL1, AL2, AL3, AL4

Proprietary and Confidential ©2026 Vertiv Group Corp.

2.3.5 VRLA Battery Module

When AC utility fails, the battery module supplies power to the load. Each battery module contains 6 individual 12 V, valve regulated lead acid (VRLA) battery blocks. Two battery modules are connected in series to form a battery string.

Each battery module, shown in Figure 2.9 below, has monitoring and controls that isolate the battery module in the event of a battery failure. The battery strings are connected in parallel to provide backup time and/or redundancy.


NOTE: Two battery modules must be installed in the same row to make a complete battery string.

The battery modules may be added or replaced on-line with no interruption or danger to the connected equipment if the UPS is not operating on battery.

Under normal operation, the green status LED blinks continuously and the yellow fault LED is Off. For any other condition, refer to Troubleshooting on page 67.

The external battery cabinet shall be used with the same battery chemistry (VRLA or LIO) as the UPS does not support mixing of battery chemistry.

Figure 2.9 VRLA Battery Module

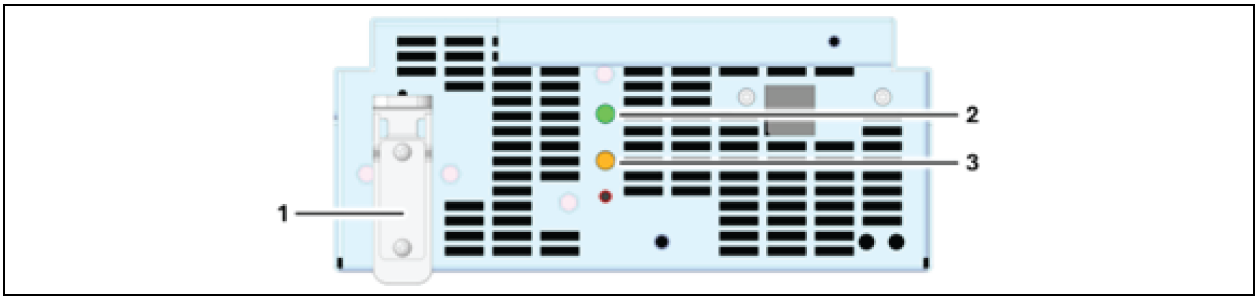

Item	Description
1	Locking Lever
2	Status LED (green)
3	Fault LED (yellow)

SKU	Description
APSBATMODCU	VRLA Battery Module String

2.3.6 Lithium-ion Battery Module

When AC utility fails, the battery module supplies power to the load. Each battery module contains a 24S2P Lithium-ion battery pack with a Battery Management System (BMS). All cells are Lithium Iron Phosphate chemistry. Two battery modules are connected in series to form a battery string. The LIO battery pack is custom designed and certified for this system and no substitutes are acceptable unless supplied by Vertiv.

Each Lithium-ion battery module ships with a metal blocking plate over the RJ-45 port used for the balancing cable. This metal plate must be removed from each module prior to installation to ensure the balancing cable can be connected. After inserting each module into the frame, the provided balancing cable should be connected between the modules in a string. The cable securing bracket must installed between the modules in the string after the balancing cable has been connected. See Installing Lithium-ion Battery Modules on page 26.

Each battery module, shown in Figure 2.10 below, has monitoring and controls that isolate the battery module in the event of a battery failure. The battery strings are connected in parallel to provide increased backup time and/or redundancy.


NOTE: Two battery modules must be installed in the same row to make a complete battery string.

The battery modules may be added or replaced online with no interruption or danger to the connected equipment if the UPS is not operating on battery.

Under normal operation, the green status LED blinks continuously and the yellow fault LED is Off. For any other condition, refer to Troubleshooting on page 67.

The external battery cabinet shall be used with the same battery chemistry (VRLA or LIO) as the UPS does not support mixing of battery chemistry.

Figure 2.10 Lithium-ion Battery Module

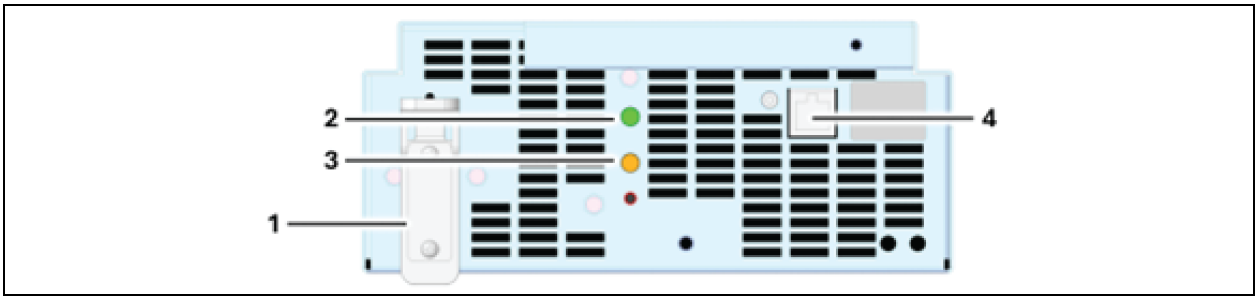

Item	Description
1	Locking Lever
2	Status LED (green)
3	Fault LED (yellow)
4	Balancing Cable Port

SKU	Description
APSLIBATMODHU	LIO Battery Module String


2.3.7 Charger Module

In AC mains mode, the charger module, shown in Figure 2.11 on the next page, charges the system battery modules or external battery cabinet. Each charger module is rated to deliver 10 A charging current. The charger module has an independent control function and maintains real-time communication with the system and the battery modules to ensure stable charging and fault protection.

The charger module may be added or replaced online with no interruption or danger to the user, connected battery system or connected equipment.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 2.11 Charger Module

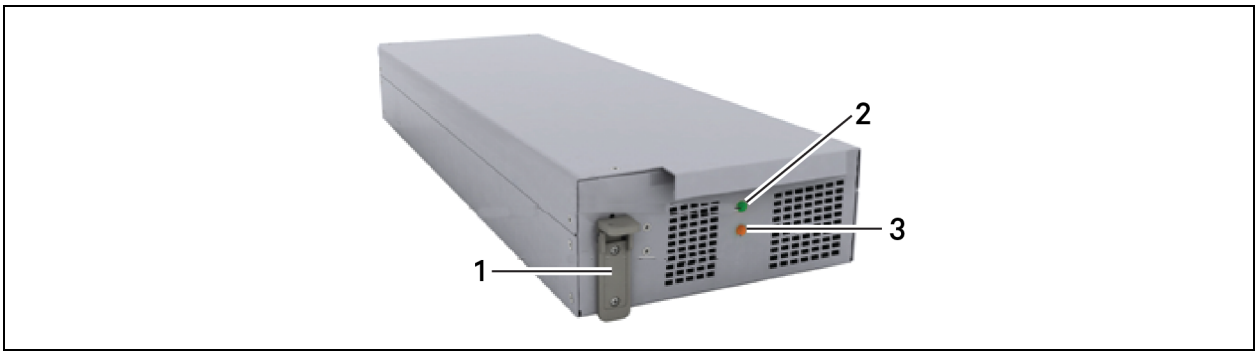

Item	Description
1	Locking Lever
2	Status LED (green)
3	Fault LED (yellow)

SKU	Description
APSCHRGRMOD	VRLA Battery Module String

2.3.8 External Battery Cabinet (EBC)

The external battery cabinet, shown in Figure 2.12 on the facing page, is divided into 9 rows: the upper 7 rows are used for the intelligent battery modules, and the lower 2 rows are used for over current protection for each battery cabinet. For normal operation, 2 battery modules must be inserted in the same row of the frame to create a complete string. The battery module strings work in parallel to provide longer backup time for the UPS. The Vertiv™ Liebert® APS can be configured with up to 4 external battery cabinets.

The external battery cabinet shall be used with the same battery chemistry (VRLA or LIO) as the UPS does not support mixing of battery chemistry. See Troubleshooting on page 67 for additional information on troubleshooting faults and alarms.

Figure 2.12 External Battery Cabinet




2.4 Operating Principle

The operating principle of the Vertiv™ Liebert® APS UPS as shown in Figure 2.13 below.

The UPS is composed of AC input, EMI filter, power module(s), battery module(s), user interface, control interface, system control module, output and bypass contactor, manual bypass, output transformer (certain frames only) and AC output.

Figure 2.13 Operating Principle Diagram

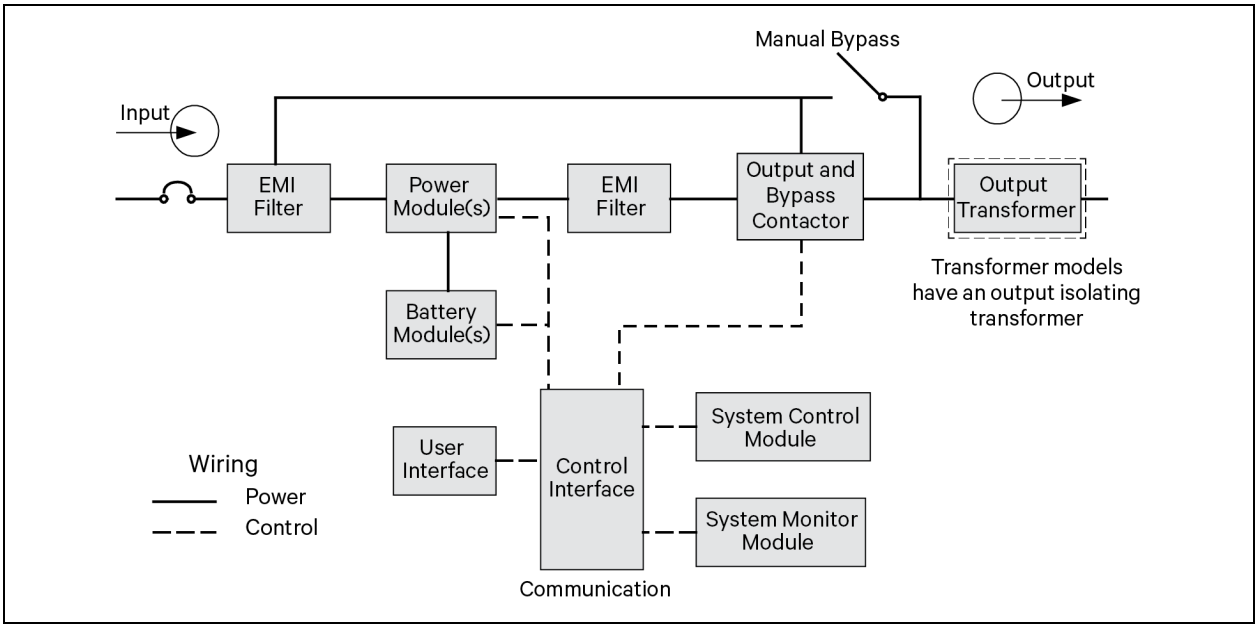

Proprietary and Confidential ©2026 Vertiv Group Corp.

2.5 Operating Modes

The Vertiv™ Liebert® APS is a true online double-conversion system, with the following operating modes:

- Normal Mode
- Backup Mode
- Auto Restart Mode
- Bypass Mode

2.5.1 Normal Mode

The power-module rectifier(s) derive power from a utility AC source and supply regulated DC power to the inverter. The module's inverter regenerates precise AC power to supply the connected equipment. The battery charger is in the power module and maintains a float-charge on the batteries of the UPS. The optional charger module can also charge the batteries to maintain a quicker recharge time for long backup time applications.

2.5.2 Backup Mode

When AC utility fails, the connected equipment is supplied power by the inverter, which obtains energy from the battery modules. The output power will not be interrupted during the failure or restoration of the AC utility/mains source.

2.5.3 Auto Restart Mode

After a power outage and complete battery discharge, and once AC utility is restored, the UPS automatically restarts and resumes supplying power to connected equipment. This feature is enabled at the factory, but can be disabled by you. You can also program two auto-restart delay settings from the LCD:

- Battery capacity level (%)
- Countdown timer

2.5.4 Bypass Mode

The bypass provides an alternate path for power to the connected equipment and operates as follows:

- Automatic: In the event of an internal fault or the inverter overload capacity be exceeded, the UPS performs an automatic transfer of the connected equipment from the inverter to the bypass source.
- Manual: If the UPS needs taken out of service for limited maintenance or repair, manual activation of the bypass causes an immediate transfer of the equipment from the inverter to the bypass source.

3 Installation

WARNING! Risk of electric shock.
Can cause equipment damage, injury and death. Before beginning installation, verify that all external over current protection devices are open (off), and that they are locked out and tagged appropriately to prevent activation during the installation, verify with a voltmeter that power is off and wear appropriate, OSHA approved personal protective equipment (PPE) per NFPA 70E. Failure to comply can cause serious injury or death. Before proceeding with installation, read all instructions. Follow all local codes.

3.1 Unpacking Inspection

Upon receipt, unpack the Vertiv™ Liebert® APS and conduct the following checks:

- Inspect the unit for shipping damage. If any shipping damage is found, report it to the carrier.
- Check against the delivery list to verify that the types of the accessories are complete and correct. If there is any discrepancy, contact the carrier and your Vertiv representative immediately.

CAUTION: The UPS is heavy, see Specifications on page 81, for the weight. Take proper precautions when lifting or moving the unit.

3.2 Installation Environment

NOTE: Operating the UPS in temperatures above 77°F (25°C) will reduce battery life.

The environment must be free of conductive contaminants and excessive moisture (water and condensation), flammable vapors, chemical fumes, corrosive gases and liquids.

3.3 Installation Tools

The following tools are required to properly set up your UPS:

- Pallet jack
- 17 mm (11/16 in.) wrench or socket
- 13 mm (1/2 in.) wrench or socket
- 10 mm wrench or socket
- #1 and #3 Phillips head screwdrivers
- Torque wrench

3.3.1 Installation Site Considerations and Clearances

Consider the weight and size of the Liebert® APS when deciding where to install the unit. Verify that the floor can support the weight of a fully-loaded unit, with any accessories and external cabinets.

The UPS is air-cooled by internal fans. Air is drawn into the front of the UPS and exhausted through ventilation grilles in the back. Verify that the UPS will be in a well-ventilated area with at least 6 in. (153 mm) clearance behind for ventilation and at least 39 in. (1 m) clearance in front for service and to meet local and national building codes.

Proprietary and Confidential ©2026 Vertiv Group Corp.

3.4 Removing the UPS from the Pallet


The unit frame is bolted to the shipping pallet for safety during shipping. We recommend keeping the unit bolted to the pallet and using a pallet jack to transport the unit to the installation location.

NOTE: The UPS is very heavy. At least two people should unload it from the pallet.

To unload the UPS:

1. Move the UPS to its installation location and remove the package paper.
2. Use a 17 mm (11/16 in.) wrench, to remove the 4 mounting bolts from the pallet brackets, see Figure 3.1 below.
3. Remove the mounting brackets from the UPS with a 10 mm wrench or socket or a #3 Phillips screwdriver.


Figure 3.1 Mounting Brackets Removal

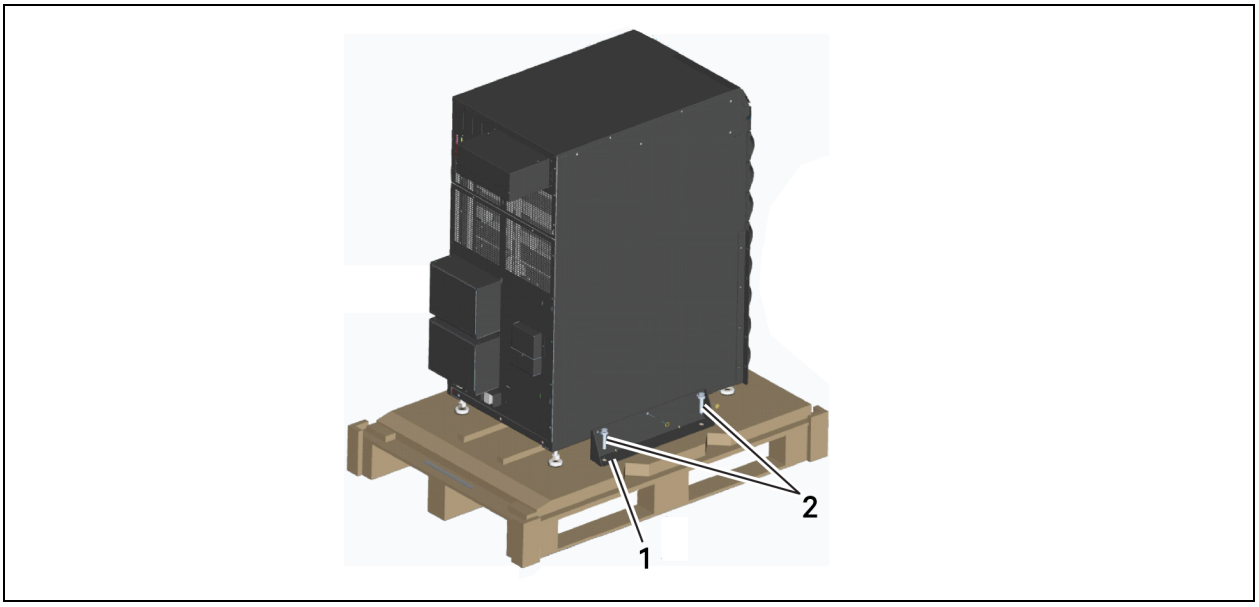

Item	Description
1	Mounting bracket (1 on each side)
2	Mounting bolts (4 places, 2 on each side)

4. Raise the 4 leveling feet to provide clearance between the pallet and the UPS frame.
5. Connect the ramp to the UPS pallet as shown in Figure 3.2 on the facing page, and roll the UPS slowly down the ramp until it is on a level surface.

Figure 3.2 Connect the Ramp and Roll UPS Off the Pallet

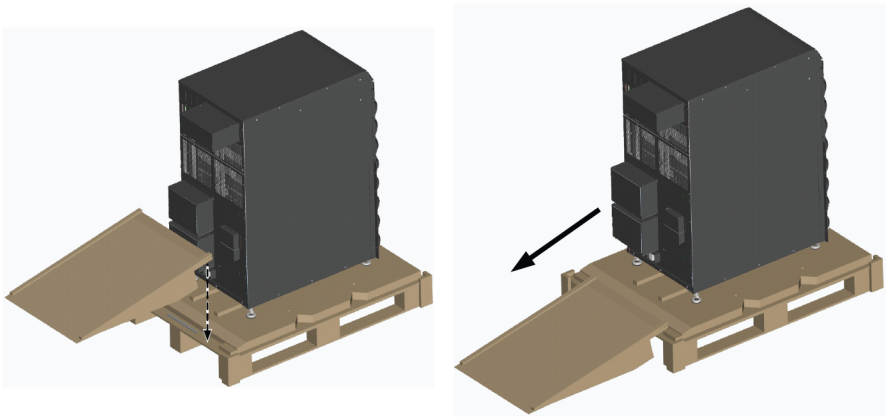


3.5 Installing the UPS

The Vertiv™ Liebert® APS may be installed as a tower or in a rack, depending on available space and use considerations. Determine the type of installation and follow the appropriate instructions. See Tower Installation below or Rack Installation on the next page.

3.5.1 Tower Installation

1. With the UPS in the installation location, adjust the leveling feet to secure its position, as shown in Figure 3.3 below.
   a. Use an open end wrench to turn the lower nut to raise or lower the leveling foot.
   b. After the unit is level, tighten the upper nut against the frame to prevent the height from changing.

Figure 3.3 Adjust the Leveling Feet

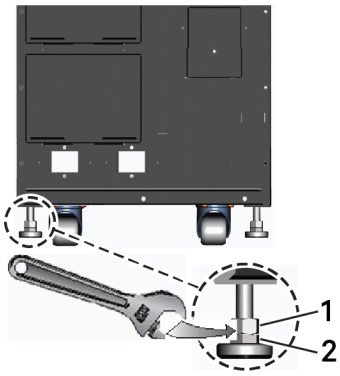


Item	Description
1	Upper nut
2	Lower nut

Proprietary and Confidential ©2026 Vertiv Group Corp.

2. For added stability or earthquake-resistant installations, the shipping brackets can be used to secure the unit to the floor.
    a. Referring to Figure 3.4 below, drill 10.3 mm (13/32 in.) holes in the floor to accommodate the mounting bolts removed from the pallet.
    b. Use the mounting screws to install the mounting brackets on the front and rear of the UPS (the brackets were removed from the sides of the unit when removing it from the pallet, see Figure 3.1 on page 20).
    c. Secure the mounting brackets to the floor with the mounting bolts in the drilled holes. For greater stability, use a higher-grade bolt.


Figure 3.4 Dimension Location of Drilled Holes for Stationary Mounting

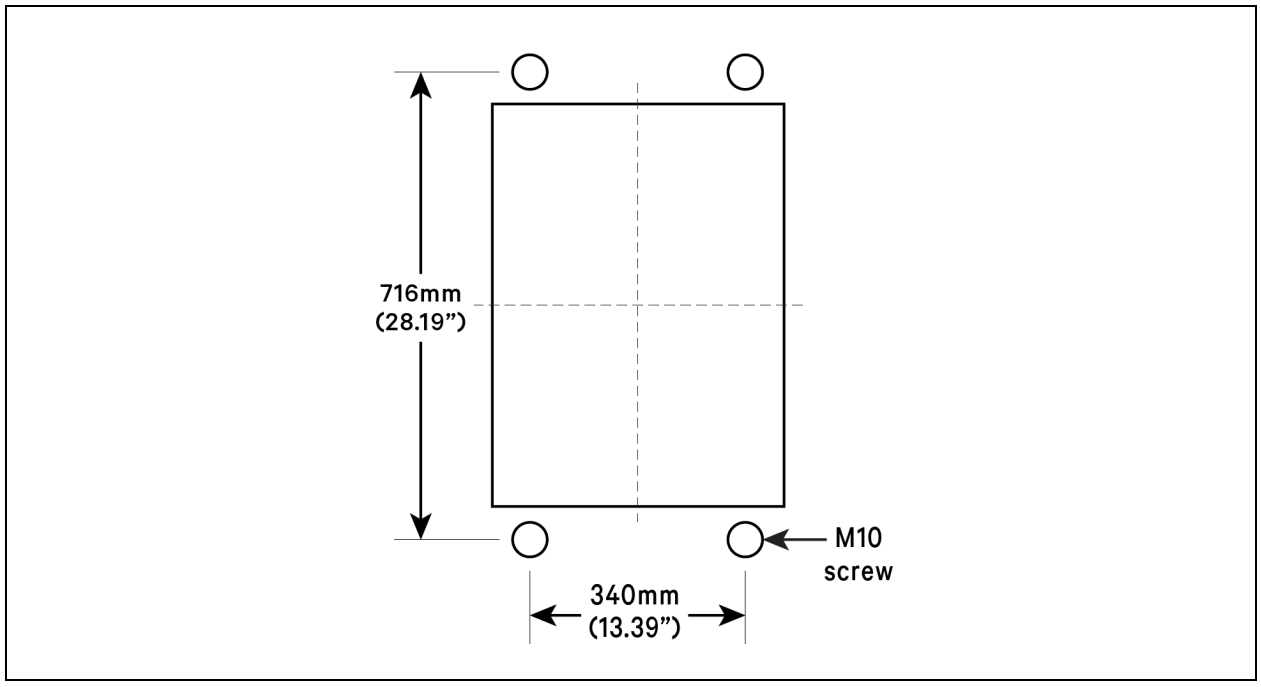

3.5.2 Rack Installation

1. Install the cage nuts on the corresponding positions in the rack, see Figure 3.5 on the facing page.
    a. Install cage nuts in the 2 lower square holes of 1U space and in the 2 upper square holes of 2U space on all 4 rack posts. These cage nuts secure the optional shelf that will support the weight of the Vertiv™ Liebert® APS.
    b. Install a cage nut in the middle square hole of 4U, 6U, 10U, 12U spaces, respectively in all 4 posts. These cage nuts help secure the UPS in the rack.
2. Install the rack-mount shelf on the corresponding position between 1U space and 2U space on the bottom of the rack, as shown in Figure 3.5 on the facing page.


Figure 3.5 Install Cage Nuts and Tray

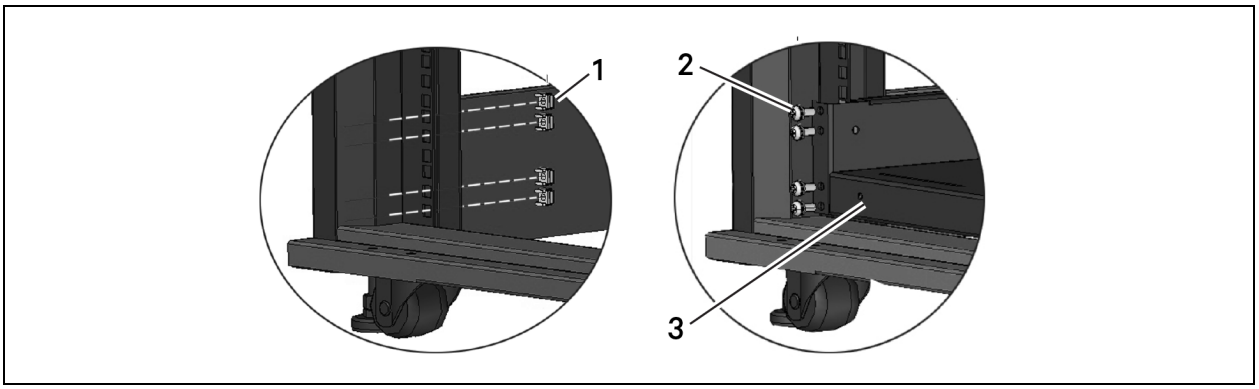

Item	Description
1	Cage nut
2	Screw (16 places)
3	Tray

3. Install the guide rails (ramp) in the mounting slot at the front of the tray, as shown in Figure 3.6 below.

Figure 3.6 Install the Guide Rails

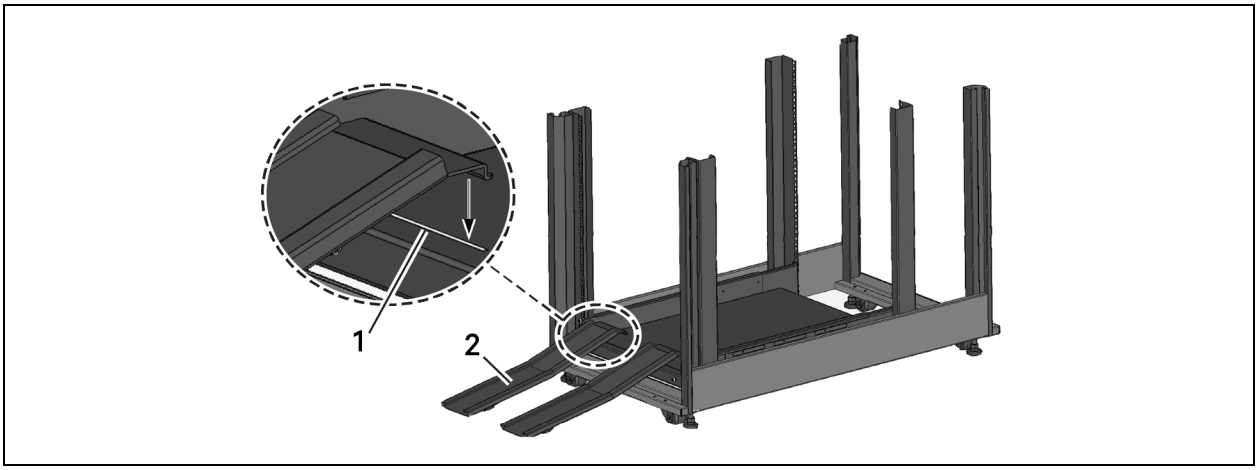


Item	Description
1	Mounting slot
2	Guide rail

4. Unscrew the 10 screws, 5 each side, on the front of the side panels of the UPS frame, and use the screws to attach the brackets to each side of the UPS frame, as shown in Figure 3.7 on the next page.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 3.7 Install the Brackets

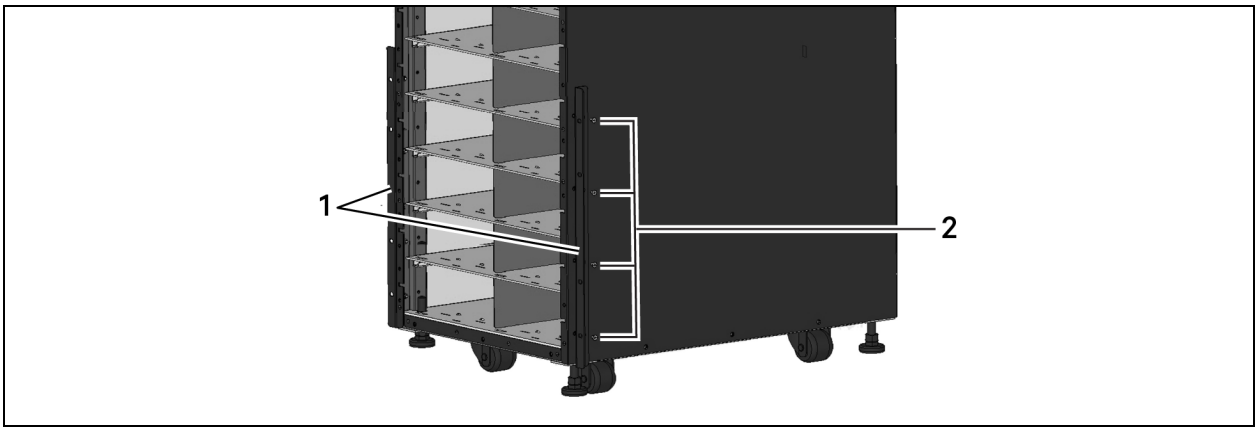


Item	Description
1	Brackets (1 each side)
2	Screws (8 places)

5. Push the Liebert® APS frame slowly, up the guide rails into the enclosure from the front. The rear of the UPS goes into the rack first when installing through the front of the rack.
6. Using 8 panel screws, 4 in each bracket, secure the UPS frame to the rack posts.

NOTE: You may need to adjust the leveling feet to align the holes.

7. Use 4 screws to install the metal plate (accessory in the rack-mount kit) on the corresponding position on the lower-front part of the UPS frame as shown in Figure 3.8 below.
8. Insert the plastic bezel into the square holes of the metal plate, see Figure 3.8 below.

Figure 3.8 Metal Plate and Square Holes for Bezel

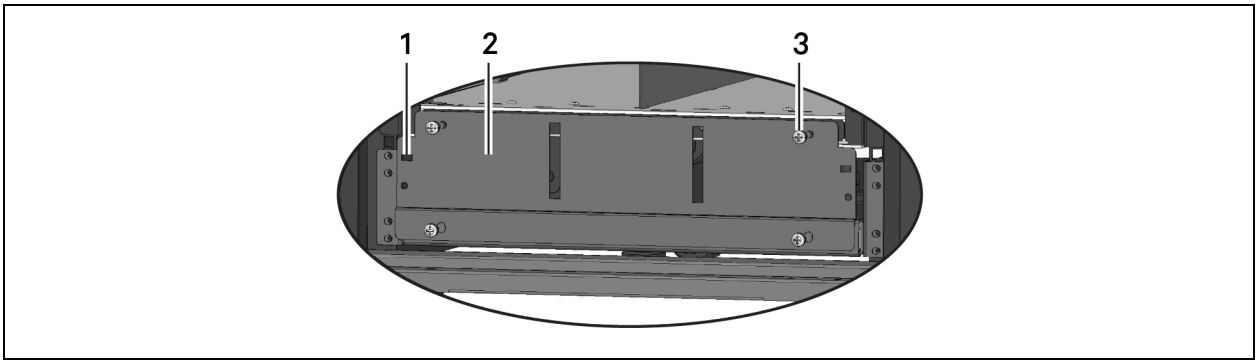

Item	Description
1	Square hole (4 places)
2	Metal plate
3	Screw (4 places)

3.6 Installing Modules

The Vertiv™ Liebert® APS ships configured from the factory (modules pre-populated) and tested as a system to your requirements. If you removed any modules to facilitate installation, refer to the following steps to re-insert them properly.

3.6.1 Installing Power, VRLA Battery and Charger Modules


1. With the plastic bezel removed, lift module to appropriate bay, resting end of module on bay shelf.

NOTE: Do not rest the module on any plastic bezels. It could damage the bezel.

NOTE: Two battery modules must be installed in the same row to complete the battery string.

2. Referring to Figure 3.9 below, slowly push the module until about 1/3 of the module is in the bay.
3. Lift the module up, then continue pushing until about 5 cm (2 in.) of the module remains outside the bay, then push it firmly and smoothly to insure that it is fully inserted.

Figure 3.9 Inserting Power, Battery and Charger Modules

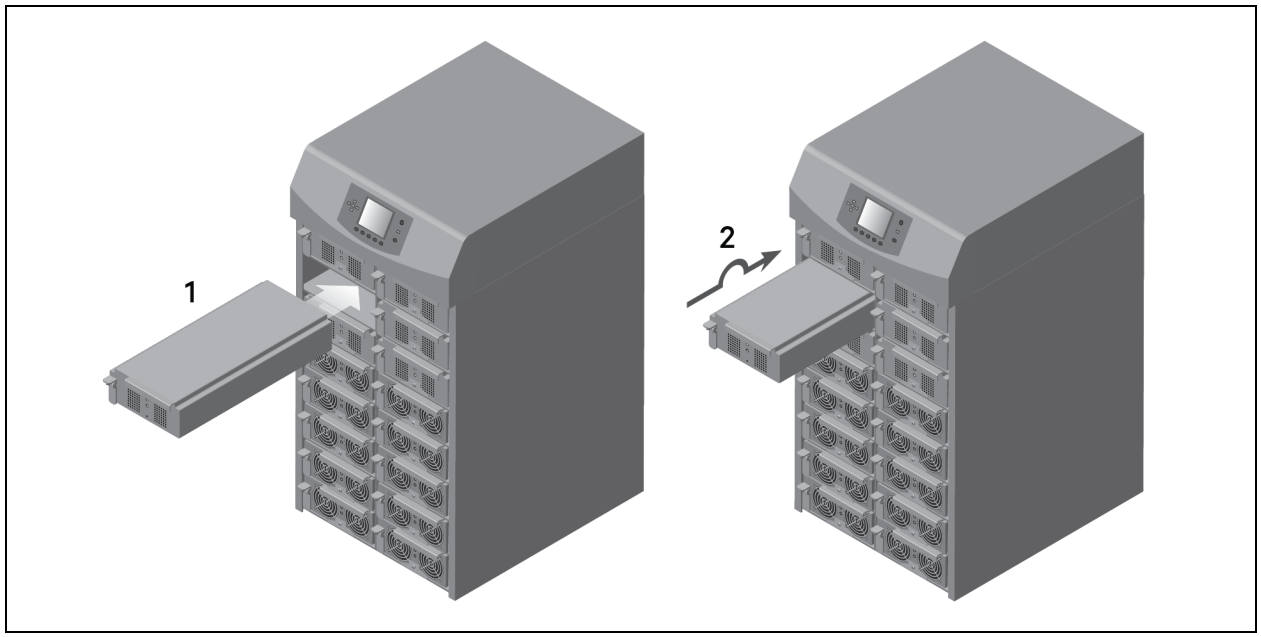

Item	Description
1	Push in slowly about 1/3 of the module.
2	Lift and push smoothly and firmly until fully inserted.


4. Pull out the lock lever slightly, and press the lever down slightly, see Figure 3.10 on the next page.

NOTE: If the lever does not press down smoothly, remove and reinstall the module.

5. Use a #2 Phillips screwdriver to install the module securing bracket as shown in Figure 3.10 on the next page.
6. Replace the plastic bezels.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 3.10 Lock Lever and Module Securing Bracket

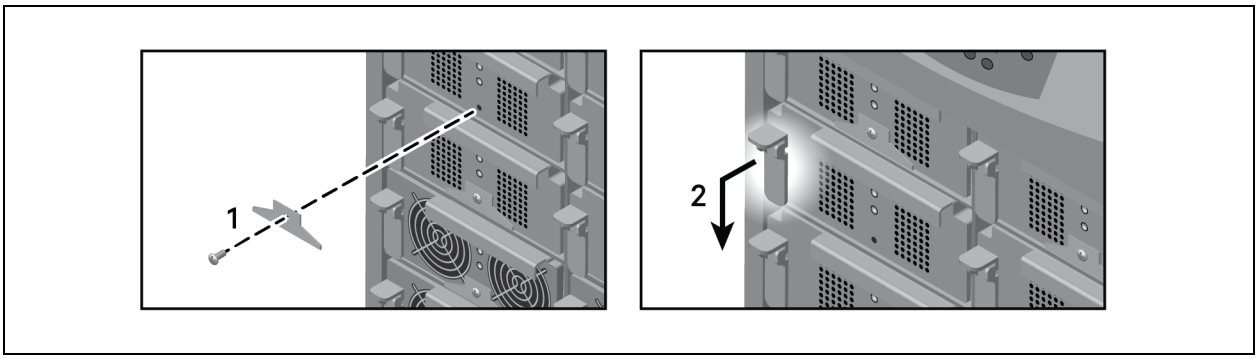

Item	Description
1	Install module securing bracket.
2	Pull out and down to secure lock lever.

3.6.2 Installing Lithium-ion Battery Modules

WARNING! Risk of electric shock and explosion.
Can cause equipment damage, injury and death. Do not dispose of the battery in a fire. The battery may explode. Do not open or damage the battery. Released electrolytes are toxic and harmful to skin and eyes. If electrolyte come into contact with the skin, wash the affected area immediately with plenty of clean water and get medical attention.

1. With the plastic bezel removed, lift module to appropriate bay, resting end of module on bay shelf.

NOTE: Do not rest the module on any plastic bezels. It could damage the bezel.

NOTE: Two battery modules must be installed in the same row to complete the battery string.

2. Referring to Figure 3.9 on the previous page, slowly push the module until about 1/3 of the module is in the bay.
3. Lift the module up, then continue pushing until about 5 cm (2 in.) of the module remains outside the bay, then push it firmly and smoothly to ensure that it is fully inserted.

NOTE: If the lever does not press down smoothly, remove and reinstall the module.


4. Use a #2 Phillips screwdriver to remove the RJ-45 protection plate, see Figure 3.11 on the facing page.
5. Connect the RJ-45 balancing cable between the left and right modules for each battery string.

NOTE: Lithium-ion battery modules will not operate with VRLA battery modules installed in the same system. If both battery module types are in use, NM38 and NE07 alarms will display to indicate a battery type mismatch.

6. Pull out the lock lever slightly, and press the lever down slightly, see Figure 3.10 above.
7. Use a #2 Phillips-head screwdriver to install the module securing bracket.
8. Use the screwdriver to install the bracket used to protect the battery module balancing cable.
9. Replace the plastic bezels.

WARNING! Risk of explosion.
Can cause equipment damage, injury and death. A battery can explode if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions included with the battery pack.

Figure 3.11 Installing a Lithium-ion Battery

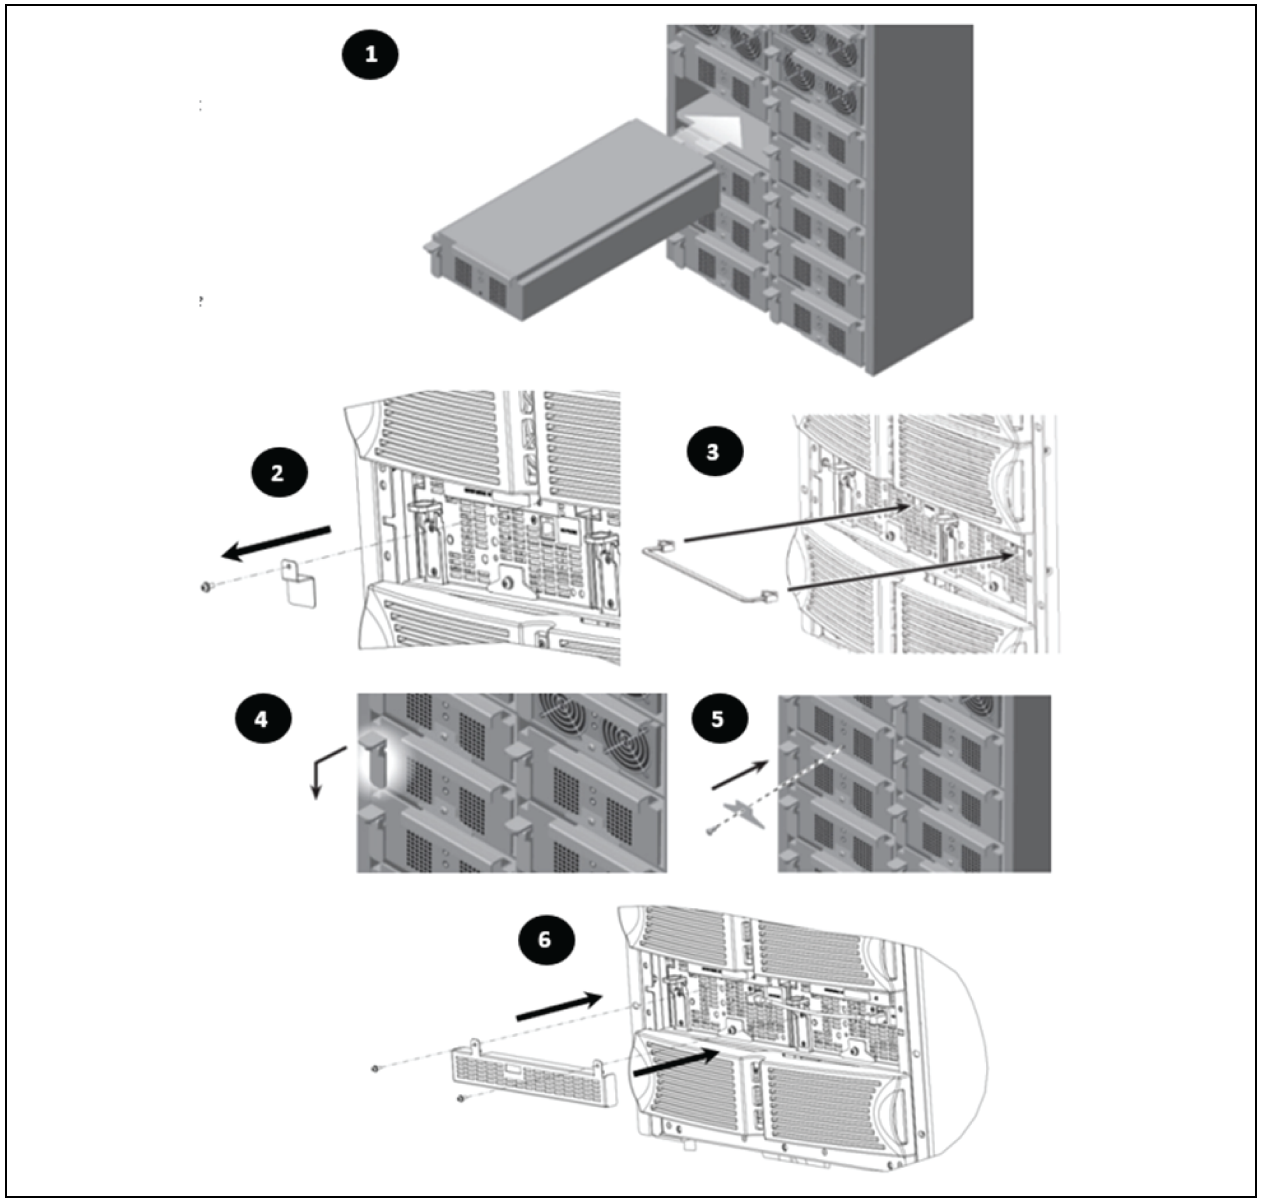

Item	Description
1	Insert a module into a cabinet bay
2	Remove the RJ-45 protection plate
3	Connect the LI balancing cable

Proprietary and Confidential ©2026 Vertiv Group Corp.

Item	Description
4	Engage the lock lever
5	Attach the module securing bracket
6	Install the cable securing bracket

3.6.3 Installing System Control and System Monitor Modules


NOTICE

Risk of unintended shutdown. Can cause equipment damage.

Do not remove both the control and the monitor modules at the same time. Removing both the control module and monitor module at the same time will cause the UPS to shut down and remove power from the load. Replace these modules one at a time.

1. Remove the display bezel and the user interface (LCD) module from the frame, as shown in Figure 3.12 below, then lay the user-interface module on top of the UPS.


Figure 3.12 Display Bezel and User-Interface Module Removal

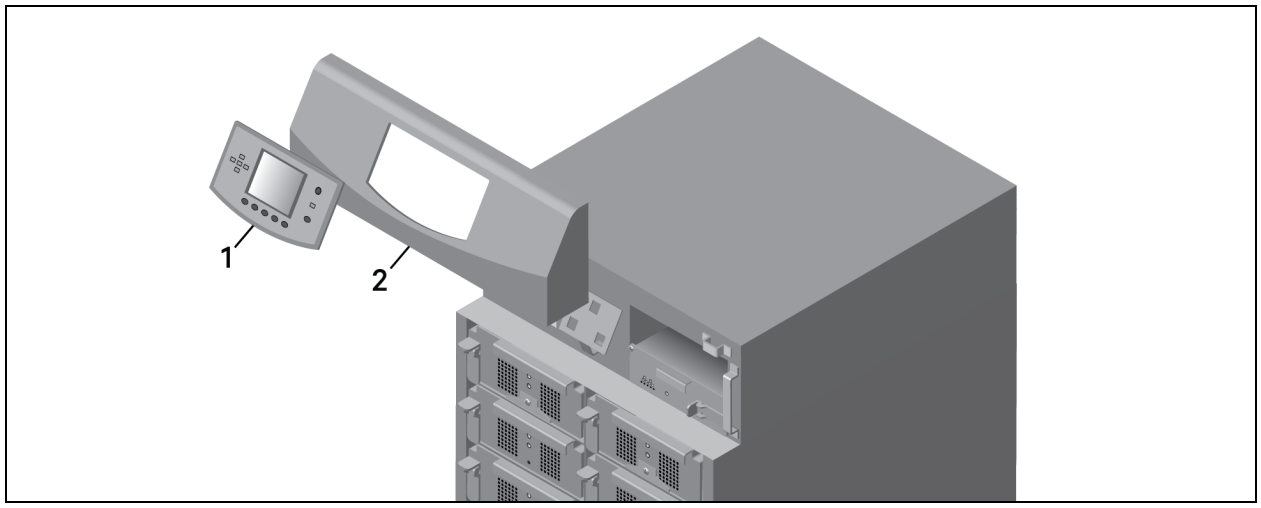

Item	Description
1	User-interface module
2	Display bezel

2. Push the module in slowly until about 1 cm (1/2 in) of the module remains outside the bay, as shown in Figure 3.13 below, then press it firmly and smoothly to ensure that it is fully inserted.
3. Pull out the lock lever slightly, then press the lever to the right into the bracket.

Figure 3.13 Insert the Module and Engage the Lock Lever

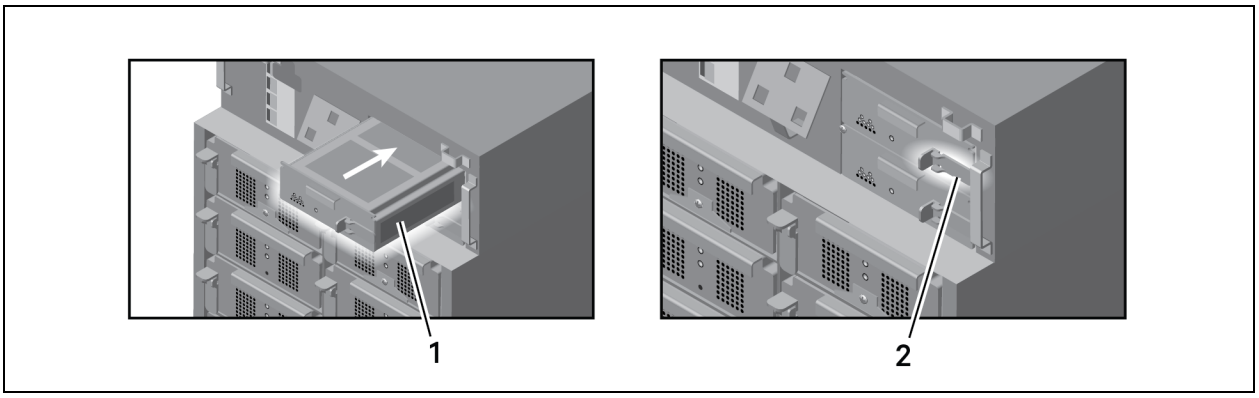

Item	Description
1	Push in smoothly and firmly until fully inserted.
2	Pull out slightly and slide lock lever to the right.

4. Use a #2 Phillips screwdriver to install the screws into the holes on each end of the inserted module.
5. Replace the user-interface module and display bezel.

3.7 Cable Connections

WARNING! Risk of electric shock. Can cause injury or death. Disconnect local and remote power supplies before working within. Read this section thoroughly before attempting to install wiring to this unit. Ensure that all the UPS input sources are disconnected off before attempting to install wiring to this unit. These UPS cables should be connected by a properly trained and qualified electrician.

Refer to the unit model number in Table 3.1 below to determine the instructions to use for installation.

Table 3.1 Cable Connection Method Reference

UPS Model Digits 1-3	Frame Type	Manual Section
AS1 or ASA or AL1	10 Bay Transformer-free	Connecting Cables on a Transformer-Free UPS on the next page.
AS2 or ASB or AL2	16 Bay Transformer-free	Connecting Cables on a Transformer-Free UPS on the next page.
AS3 or ASC or AL3	12 Bay Transformer-based	Connecting Cables on a Transformer-Based UPS on page 33.
AS4 or ASD or AL4	16 Bay Transformer-based	Connecting Cables on a Transformer-Based UPS on page 33.
AS5 or ASE or AL5	10 Bay Transformer-free	Connecting Cables on a Transformer-Free UPS with Dual Inverter Frames on page 38.
AS6 or ASF or AL6	16 Bay Transformer-free	Connecting Cables on a Transformer-Free UPS with Dual Inverter Frames on page 38.

Proprietary and Confidential ©2026 Vertiv Group Corp.

3.7.1 Connecting Cables on a Transformer-Free UPS

A junction box is factory-installed on each model of the Liebert APS to ease cable connection.

Select the appropriate input cables according to Table 3.2 below and Table 3.3 below based on the UPS rating and mains frequency however, it is recommended that you size the over current protection and wiring for the frame rating to easily allow upgrades to the UPS system.

Table 3.2 Input Cable Selection List—60 Hz

Maximum System Rated Load	Input voltage - 200 VAC		Input voltage - 208 VAC		Input voltage - 240 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	27 A	50 A	26 A	50 A	23 A	50 A
10 kVA	53 A	63 A	51 A	63 A	45 A	63 A
15 kVA	80 A	100 A	77 A	100 A	67 A	100 A
20 kVA	106 A	125 A	102 A	125 A	90 A	125 A

The power input and output terminals accept a maximum cable cross-sectional area of 53 mm^2 (1/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG); the rated torque is 4.52 Nm (40 in-lb).

Use of 90°C copper wire is recommended.

Table 3.3 Input Cable Selection List—50 Hz

Maximum System Rated Load	Input Voltage - 220 VAC		Input Voltage - 230 VAC		Input Voltage - 240 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	25 A	50 A	24 A	50 A	23 A	50 A
10 kVA	49 A	63 A	47 A	63 A	45 A	63 A
15 kVA	73 A	100 A	70 A	100 A	67 A	100 A
20 kVA	97 A	125 A	93 A	125 A	90 A	125 A

The power input and output terminals accept a maximum cable cross-sectional area of 53 mm^2 (1/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG); the rated torque is 4.52 Nm (40 in-lb).


Use of 90°C copper wire recommended.

To connect the cable:

NOTE: Input and output cables must be run in separate conduit before cable connection. If your input power grid is L-L line voltage, the input N of the power input and output terminals will connect live wire, so the output N of the power input and output terminals is also live wire.

1. Remove the knockouts at the junction box, see Figure 3.14 on the facing page, and pull the cables through them, leaving some slack for installation.


Figure 3.14 Knockouts in Units without Transformer

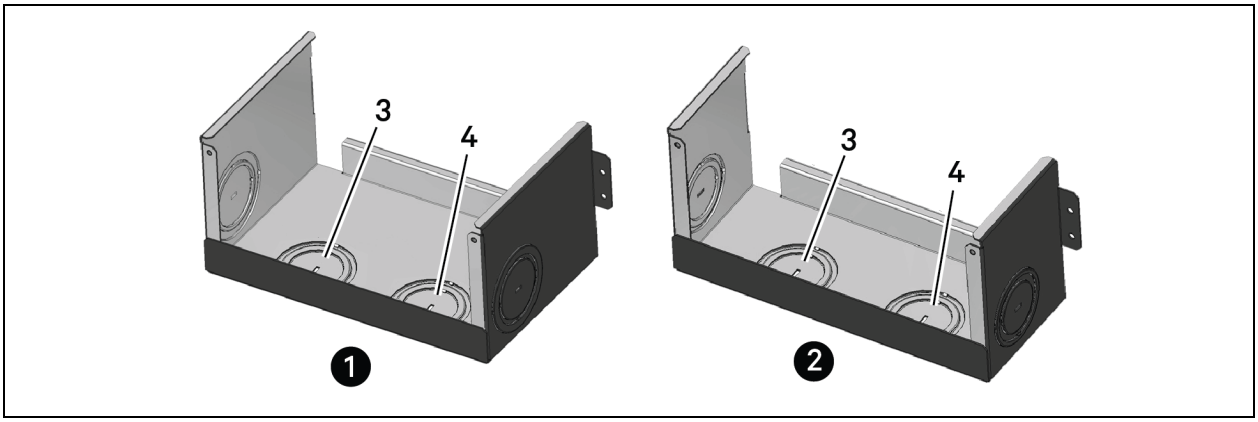

Item	Description	Item	Description
1	16-bay, no transformer	3	Output cable knockout
2	10-bay, no transformer	4	Input cable knockout

2. Connect the cables to the corresponding terminal of the power input and output terminals.
3. Using a 13 mm (1/2 in.) torque wrench, tighten the screws to 4.52 Nm (40 in-lb).
4. Respectively, secure the conduit of the input/output cables through the cable bridges on the rear panel of the UPS, see Figure 3.15 below.

Figure 3.15 Secure Cables on Cable Bridges

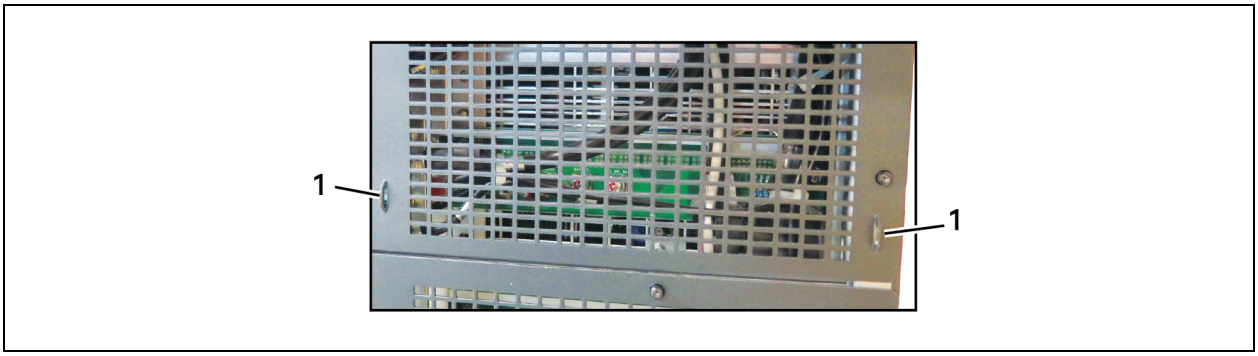

Item	Description
1	Cable bridge

The connection methods for single-phase and the 3-phase input modes are shown in Figure 3.16 on the next page and Figure 3.17 on the next page, respectively. Installation of the factory provided copper bar is essential in the single phase input mode. The copper busbar is in the accessory bag included with the UPS.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 3.16 Connection in Single Phase Input

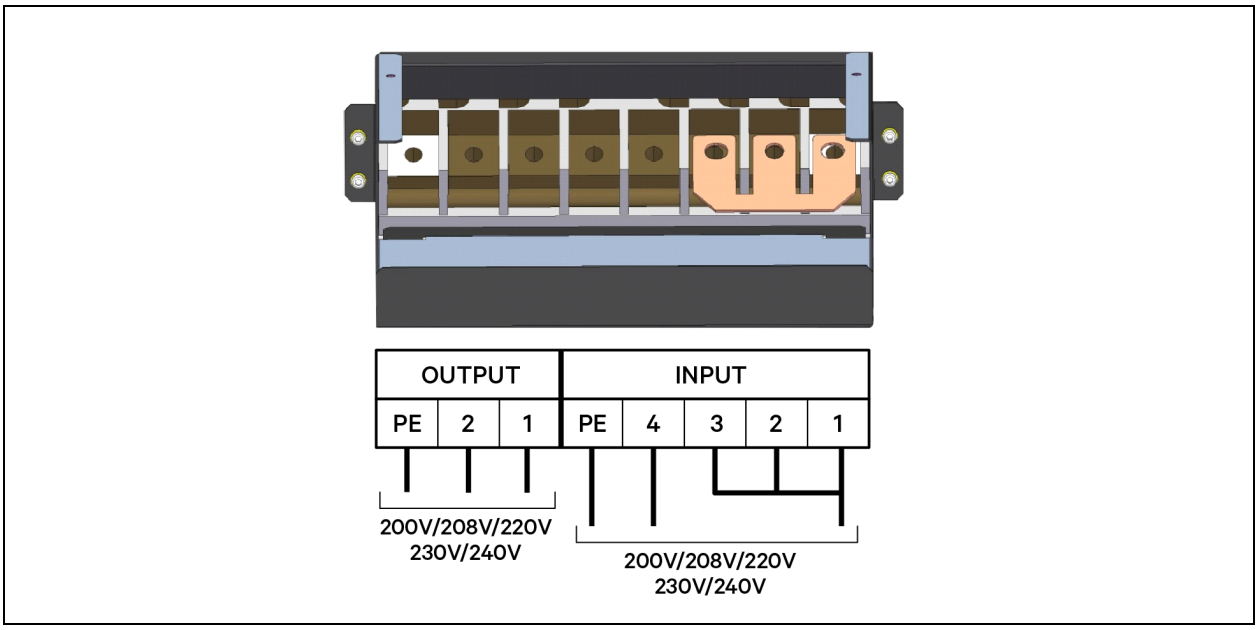


Figure 3.17 Connection in 3 Phase Input

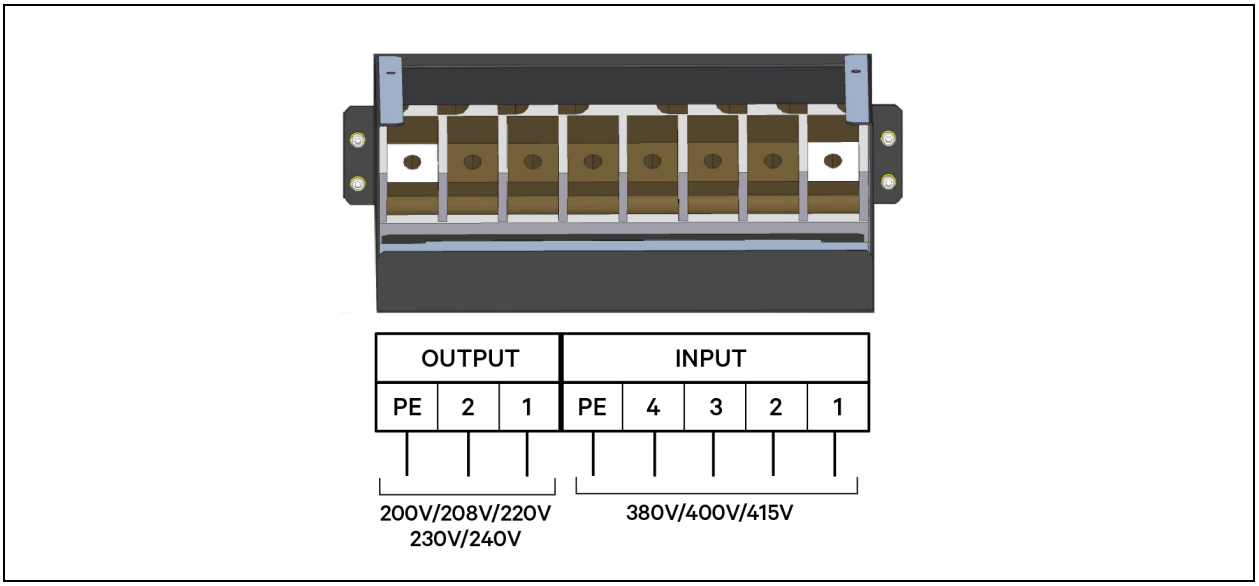


Table 3.4 Key to Connection in Single Phase Input on the previous page and Connection in Single Phase Input on the previous page UPS wiring

System Voltage	System Nominal Frequency	Input Terminal Block					Output Terminal Block		
		1	2	3	4	PE		2	PE
200	60	L1 *	L1 *	L1 *	L2	GND	L1	L2	GND
208	60	L1 *	L1 *	L1 *	L2	GND	L1	L2	GND
220	60	L1 *	L1 *	L1 *	L2	GND	L1	L2	GND
230	60	L1 *	L1 *	L1 *	L2	GND	L1	L2	GND
240	60	L1 *	L1 *	L1 *	L2	GND	L1	L2	GND
200	50	L *	L *	L *	N	PE	L	N	PE
220	50	L *	L *	L *	N	PE	L	N	PE
230	50	L *	L *	L *	N	PE	L	N	PE
240	50	L *	L *	L *	N	PE	L	N	PE
380	50	L1	L2	L3	N	PE	L	N	PE
400	50	L1	L2	L3	N	PE	L	N	PE
415	50	L1	L2	L3	N	PE	L	N	PE

This connection requires the factory-provided three-position busbar to connect the three terminal block positions.

3.7.2 Connecting Cables on a Transformer-Based UPS

NOTE: After the output transformer is installed, if the startup is on bypass, the UPS has a 6-cycle inrush current that is up to 20 times the rated output current. This must be taken into account when selecting the input-overload protection device at the AC-input supply-distribution point.

To avoid random tripping on startup, we recommend that the AC input supply be protected with a circuit breaker capable of withstanding this initial inrush (the MCB is derated according to the D curve or TYPE 4).

This UPS is fitted with EMI filters. Earth leakage current is less than 40 mA. Transient and steady state earth leakage currents may occur when starting the UPS. This should be taken into account when selecting transient RCCB or RCCD (leakage-current devices of the UPS and load).

The MCB of the AC power supply connected to the UPS input must bear this warning:

- Disconnect the connection with UPS before maintaining this circuit.
- The warning is required because the UPS has no auto-feeding protection device.
- The UPS grounding should be in accordance with local regulations.

A junction box is factory installed on all models of the Liebert® APS to ease cable connection.

Select the appropriate input cables according to Table 3.5 on the next page and Table 3.6 on the next page based upon the UPS rating and mains frequency. Vertiv recommends sizing the frame's overcurrent protection and wiring to permit easier UPS system upgrades.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 3.5 Input Cable Selection for Transformer-Based Frames (60 Hz)

Maximum System Rated Load	Input Voltage - 200 VAC		Input Voltage - 208 VAC		Input Voltage - 240 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	27 A	50 A	26 A	50 A	23 A	50 A
10 kVA	53 A	63 A	51 A	63 A	45 A	63 A
15 kVA	80 A	100 A	77 A	100 A	67 A	100 A
20 kVA	106 A	125 A	102 A	125 A	90 A	125 A

The power input and output terminals accept a maximum cable cross-sectional area of 70 mm^2 (2/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG). The rated torque is 12.43 Nm (110 in-lb).

90°C copper wire recommended.

Table 3.6 Input Cable Selection for Transformer-Based Frames (50 Hz)

Maximum System Rated Load	Input Voltage - 220 VAC		Input Voltage - 230 VAC		Input Voltage - 240 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	25 A	50 A	24 A	50 A	23 A	50 A
10 kVA	49 A	63 A	47 A	63 A	45 A	63 A
15 kVA	73 A	100 A	70 A	100 A	67 A	100 A
20 kVA	97 A	125 A	93 A	125 A	90 A	125 A

The power input and output terminals accept a maximum cable cross-sectional area of is 70 mm^2 (2/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG). The rated torque is 12.43 Nm (110 in-lb).

90°C copper wire recommended.

Configuring the Bypass Voltage

The UPS bypass voltage is factory-set to 208 V (the jumper copper bar is installed). If you have a utility supply of 200 V/220 V/230 V/240 V, you must change the bypass-voltage jumper to ensure correct output voltages when in bypass mode. The bypass voltage jumper settings are shown in **Figure 3.18** on the facing page and **Figure 3.19** on the facing page. Refer to Key to Connection Method UPS Input Wiring on page 37 for the proper setting according to the AC mains voltage configuration.

Figure 3.18 Setting Bypass Voltage Jumper (default: 208 VAC)


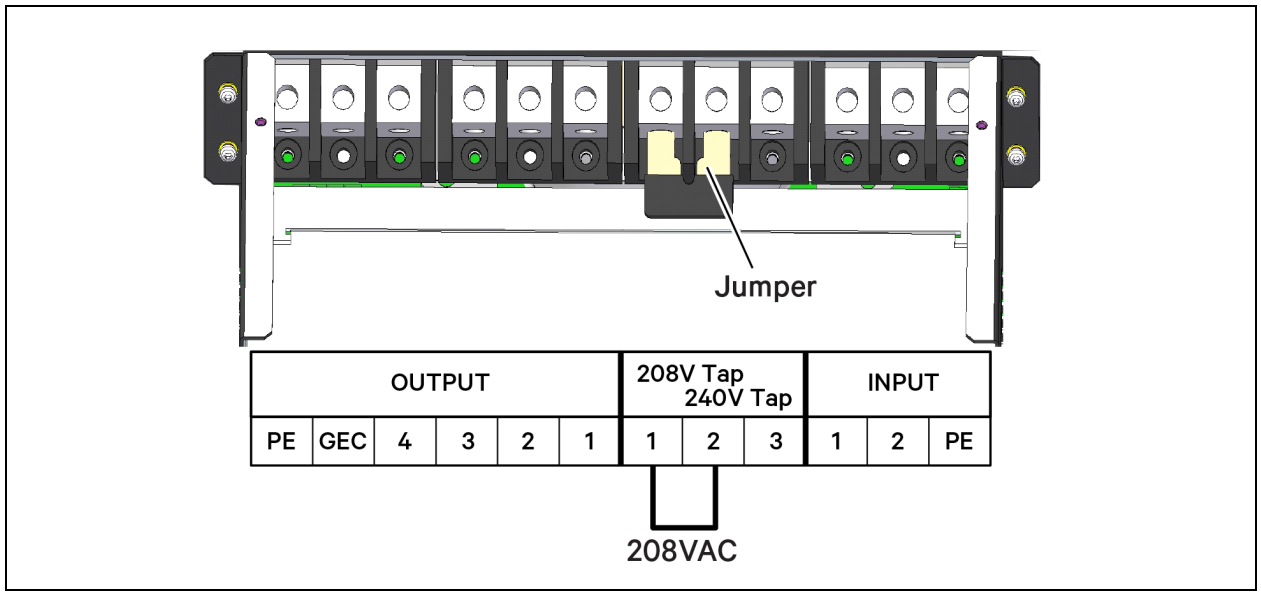


Figure 3.19 Setting Bypass Voltage Jumper (200/220/230/240 VAC)

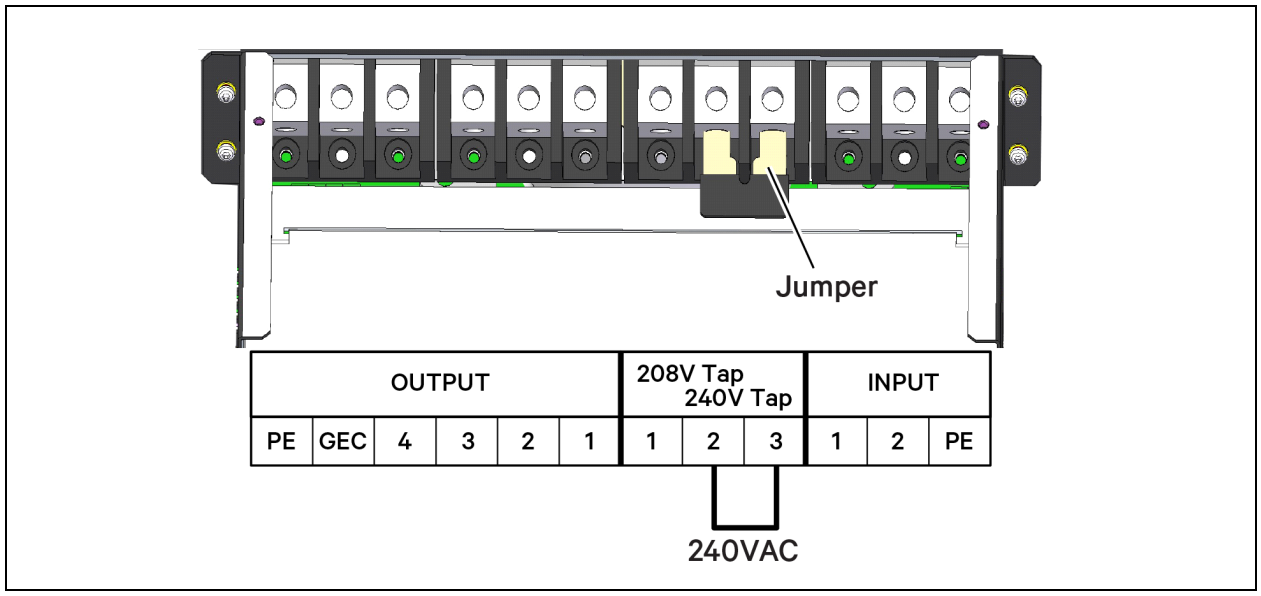


Proprietary and Confidential ©2026 Vertiv Group Corp.

Configuring the Neutral/Earth Jumper

The UPS contains an isolation transformer that generates a neutral conductor for the connected load. The UPS is a separately derived source and contains a neutral/earth jumper. You may need to remove a factory installed neutral/earth-jumper copper bar to comply with local codes and regulations.

Figure 3.20 Configuring the Neutral/Earth Jumper

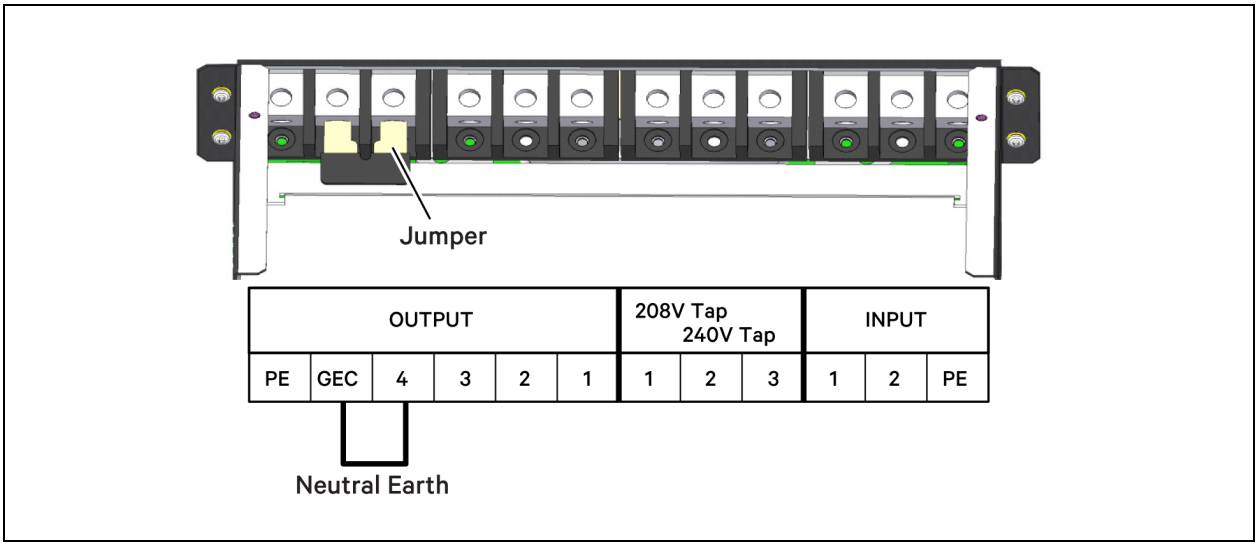


Connecting the Cables

NOTE: Input and output cables must be run in separate conduit before cable connection.

1. Remove the knockouts at the junction box, see Figure 3.21 below and pull the cables through them, leaving some slack for installation.


Figure 3.21 Knockouts in Units without a Transformer

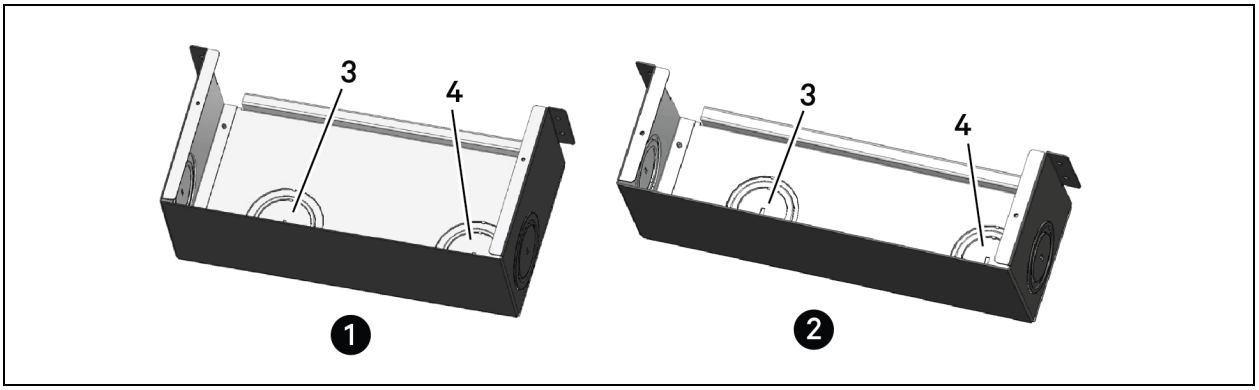

Item	Description	Item	Description
1	16-bay, with transformer	3	Output cable knockout
2	12-bay, with transformer	4	Input cable knockout

2. Connect the cable to the corresponding terminal of the power input and output terminals as shown in Figure 3.22 below.
3. Using a torque wrench, tighten the screws to 12.43 Nm (110 in-lb).

Figure 3.22 Connection Method

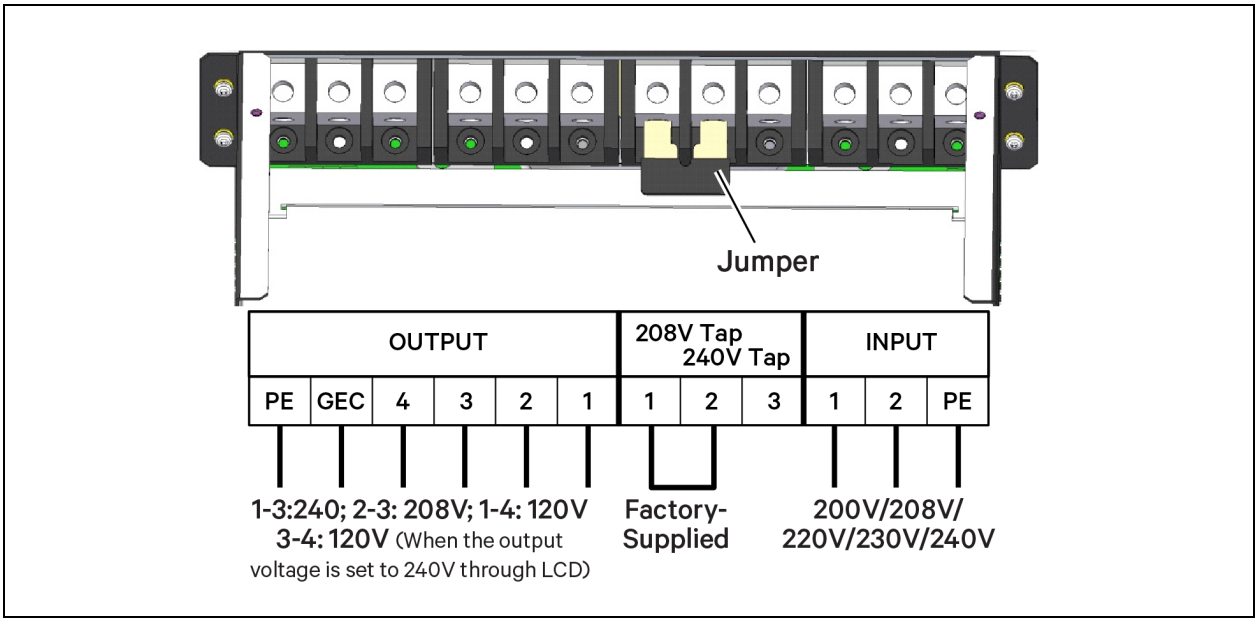

Refer to Input Cable Selection for Transformer-Based Frames (50 Hz) on page 34 for configuring the output cable. For standard voltages, make the connections shown in Table 3.7 below.

Table 3.7 Key to Connection Method UPS Input Wiring

System Voltage	System Nominal Frequency	Input Terminal Block		
		1	2	PE
200	60	L1	L2	GND
208	60	L1	L2	GND
220	60	L1	L2	GND
230	60	L1	L2	GND
240	60	L1	L2	GND
200	50	L	N	PE
220	50	L	N	PE
230	50	L	N	PE
240	50	L	N	PE

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 3.8 Key to Connection Method UPS Output Wiring

Output Voltage	Set Output Voltage by LCD	Bypass Voltage Jumper		Output Voltage (Between Terminals)			
		208 V TAP (1-2)	240 V TAP (2-3)	1-4	3-4	2-3	1-3
200/100	200	—	OK	100	100	173 (Do Not Use)	200
220/110	220	—	OK	110	110	190 (Do Not Use)	220
230/115	230	—	OK	115	115	199 (Do Not Use)	230
220/127	220	OK	—	127	127	220	254 (Do Not Use)
240/120	240	—	OK	120	120	208	240
208/120	208	OK	—	120	120	208	240

If the bypass voltage jumper copper bar is connected incorrectly, the system will report a fault alarm.

When wiring to single phase panels, connect to output terminals 1, 3, 4 and PE (GND) only.

Table 3.9 below shows the maximum load capacity of the output winding of the transformer-based UPS.

Table 3.9 Maximum Load Capacity of the Output Winding

UPS Model	Maximum Output Capacity, kVA (Between Terminals)			
	1-4	3-4	2-3	1-3
16-bay Transformer-based UPS	10	10	20	20
10-bay Transformer-based UPS	7.5	7.5	15	15

3.7.3 Connecting Cables on a Transformer-Free UPS with Dual Inverter Frames

A junction box is factory installed on all models of the Vertiv™ Liebert® APS to ease cable connection.

Select the appropriate input cables according to Table 3.10 below and Table 3.11 on the facing page based on the UPS rating and mains frequency. We recommend sizing the overcurrent protection and wiring for the frame rating to easily upgrade the UPS system.

Table 3.10 Input Cable Selection for Transformer-Free Dual Inverter Frames (50/60 Hz)

Maximum System Rated Load	Input Voltage – 200/100 VAC		Input Voltage – 208/120 VAC		Input Voltage – 240/120 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	23 A	50 A	21 A	50 A	21 A	50 A
10 kVA	46 A	63 A	42 A	63 A	42 A	63 A
15 kVA	68 A	100 A	62 A	100 A	62 A	100 A

Table 3.10 Input Cable Selection for Transformer-Free Dual Inverter Frames (50/60 Hz) (continued)

Maximum System Rated Load	Input Voltage – 200/100 VAC		Input Voltage – 208/120 VAC		Input Voltage – 240/120 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
20 kVA	91 A	125 A	83 A	125 A	83 A	125 A
The power input and output terminals accept a maximum cable cross-sectional area of 53 mm^2 (1/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG); and the rated torque is 4.52 Nm (40 in-lb). 90°C copper wire is recommended.						

Table 3.11 Input Cable Selection for Transformer-Free Dual Inverter Frames (50/60 Hz)

Maximum System Rated Load	Input Voltage – 220/110 VAC		Input Voltage – 230/115 VAC		Input Voltage – 220/127 VAC	
	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker	Maximum Current in UPS Mode	Recommended Input Protection Circuit Breaker
5 kVA	21 A	50 A	20 A	50 A	20 A	50 A
10 kVA	41 A	63 A	39 A	63 A	39 A	63 A
15 kVA	62 A	100 A	59 A	100 A	59 A	100 A
20 kVA	82 A	125 A	78 A	125 A	78 A	125 A
The power input and output terminals accept a maximum cable cross-sectional area of 53 mm^2 (1/0 AWG); the minimum cable cross-sectional area is 16 mm^2 (6 AWG); and the rated torque is 4.52 Nm (40 in-lb). 90°C copper wire is recommended.						


Proprietary and Confidential ©2026 Vertiv Group Corp.

To connect the cable:

NOTE: Input and output cables must be run in separate conduit before cable connection.

1. Remove the knockouts at the junction box, see Figure 3.23 below, and pull the cables through them, leaving some slack for installation.


Figure 3.23 Knockouts in Units without Transformer

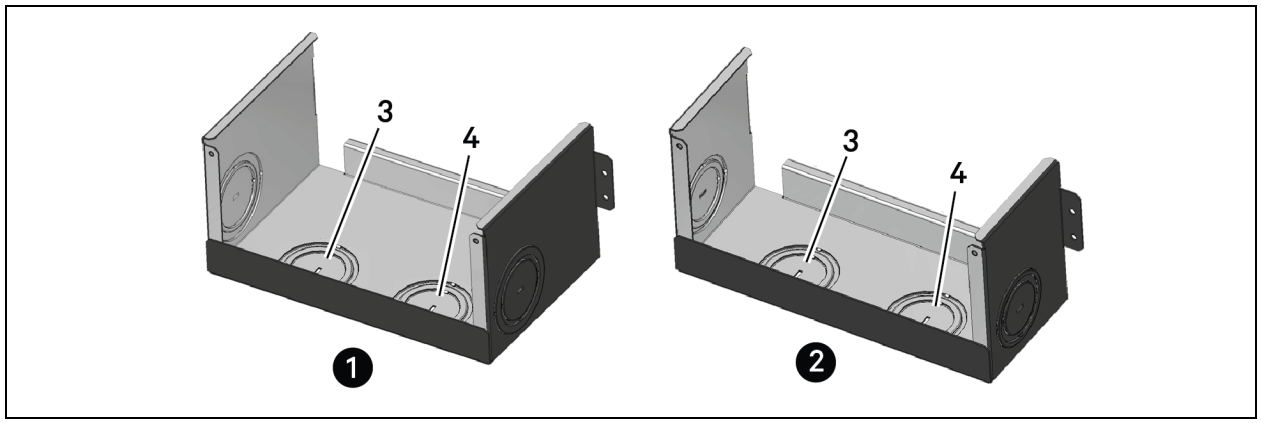

Item	Description	Item	Description
1	16-bay, no transformer	3	Output cable knockout
2	10-bay, no transformer	4	Input cable knockout

2. Connect the cables to the corresponding terminal of the power input and output terminals.
3. Using a 13 mm (1/2-in.) torque wrench, tighten the screws to 4.52 Nm (40 in-lb).
4. Respectively, secure the conduit of the input/output cables through the cable bridges on the rear panel of the UPS, see Figure 3.24 below.


Figure 3.24 Secure Cables on Cable Bridges

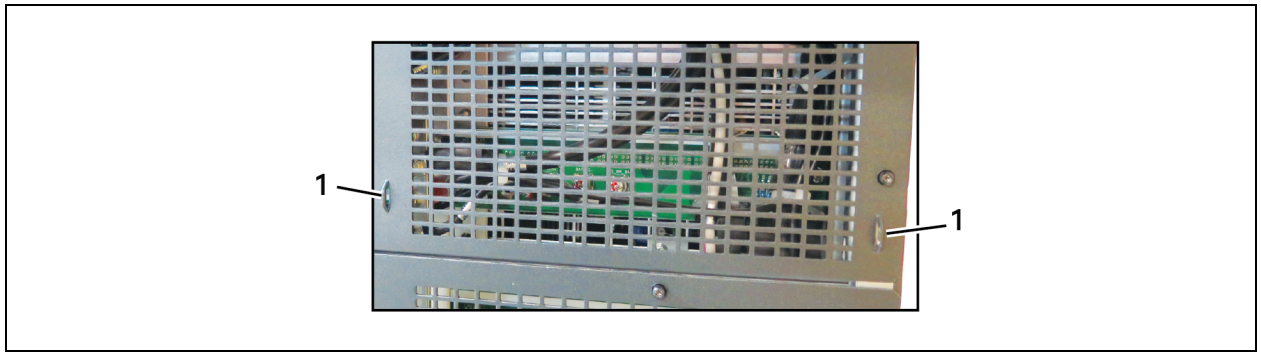

Item	Description
1	Cable bridge

The connection methods for single-phase and the 3-phase input modes are shown in Connecting Cables on a Transformer-free UPS with Dual Inverter Frames on page 39 and Connecting Cables on a Transformer-free UPS with Dual Inverter Frames on page 39, respectively. Installation of the factory provided copper bar is essential in the single phase input mode. The copper busbar is in the accessory bag included with the UPS.

Figure 3.25 Wiring Connections

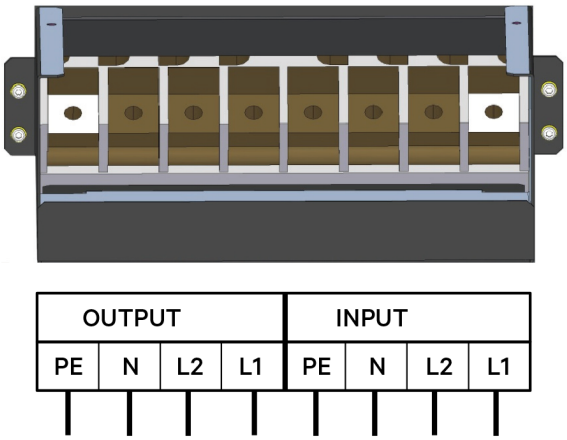

3.7.4 Grounding Cable Size Recommendations

When wiring up an APS configuration, it is important to select a proper earthing cable for your input/output connections. Table 3.12 below provides earth cable sizing recommendations based on configuration. Since APS is a scalable UPS system, it is important to ensure all wiring meets requirements when changes to the installation are made. All recommendations below assume use of copper wire. Automatic overcurrent device sizing guidance is offered in Connecting Cables on a Transformer-Free UPS on page 30 - Connecting Cables on a Transformer-Free UPS with Dual Inverter Frames on page 38, depending on configuration.

Table 3.12 Grounding Conductor Sizing

Rating or Setting of Automatic Overcurrent Device in Circuit Ahead of Equipment, Conduit, etc., Not Exceeding (Amperes)	Copper Wire Size (AWG)
50 A	10 AWG
63 A	8 AWG
100 A	8 AWG
125 A	6 AWG

Proprietary and Confidential ©2026 Vertiv Group Corp.

3.8 Connecting an External Battery Cabinet

Up to 4 external battery cabinets may be connected to the Vertiv™ Liebert® APS to provide longer battery run times.

The external battery cabinet (EBC) requires the optional EBC cable kit to connect to the UPS. The optional cable kits contain the power and communication cables required to operate and monitor the battery modules. The standard cable-kit lengths are 3.2 ft, 9.8 ft and 16.4 ft (1 m, 3 m, and 5 m) to accommodate varying site requirements.

To connect an external battery cabinet:


1. Locate the DC circuit breaker on the front bottom of the EBC frame behind the bottom two bezels, and verify that the circuit breaker is open.
2. Attach the EBC cable ground wire to either the ground-wire connection points labeled 5 or 6 in Figure 3.26 on the facing page or Figure 3.27 on page 44 (Depending on whether or not the UPS has a transformer).
   - Choose the connection point with the easiest access and that applies the least amount of stress to the ground wire after the DC connector is installed.
   - Connect one ground wire to the UPS and the other to the EBC.

IMPORTANT! Do not continue with installation until the ground wires are firmly installed.

3. After the frame grounds are properly bonded together, connect one end of the battery power connector to the external battery connector on the rear of the UPS frame as shown in Figure 3.26 on the facing page or Figure 3.27 on page 44, depending on your system.
4. Connect the other end to the closest corresponding port on the rear of the EBC frame.
5. Install and tighten the grounding screw on the battery cable assembly, on both the UPS and EBC ends. This screw also secures the cable assembly to the frames to prevent accidental disconnection.
6. For new systems that included an EBC, the EBC communication card should already be installed in the UPS frame (IntelliSlot port 3, typically).
   - If it is not installed, obtain the EBC communication card and insert it into any open IntelliSlot port (preferably port 3).
   - Connect the provided EBC communication cable to the UPS and EBC as shown in Connecting an External Battery Cabinet above or Figure 3.27 on page 44, depending on your system.
7. Check the EBC DIP-switch settings on the top rear of each EBC frame, and verify that they are set correctly according to Table 3.13 on page 45.
8. Close the EBC DC circuit breaker and replace the bezels back onto the EBC.

WARNING! Risk of hazardous voltage between UPS frames. Can cause damage to equipment, injury and death. Failure to open the EBC DC circuit breaker before connecting or disconnecting the battery cable between the UPS and EBC frames can result in hazardous voltages being present between the frames.


Figure 3.26 Connecting External Battery Cabinet (transformer-free UPS)

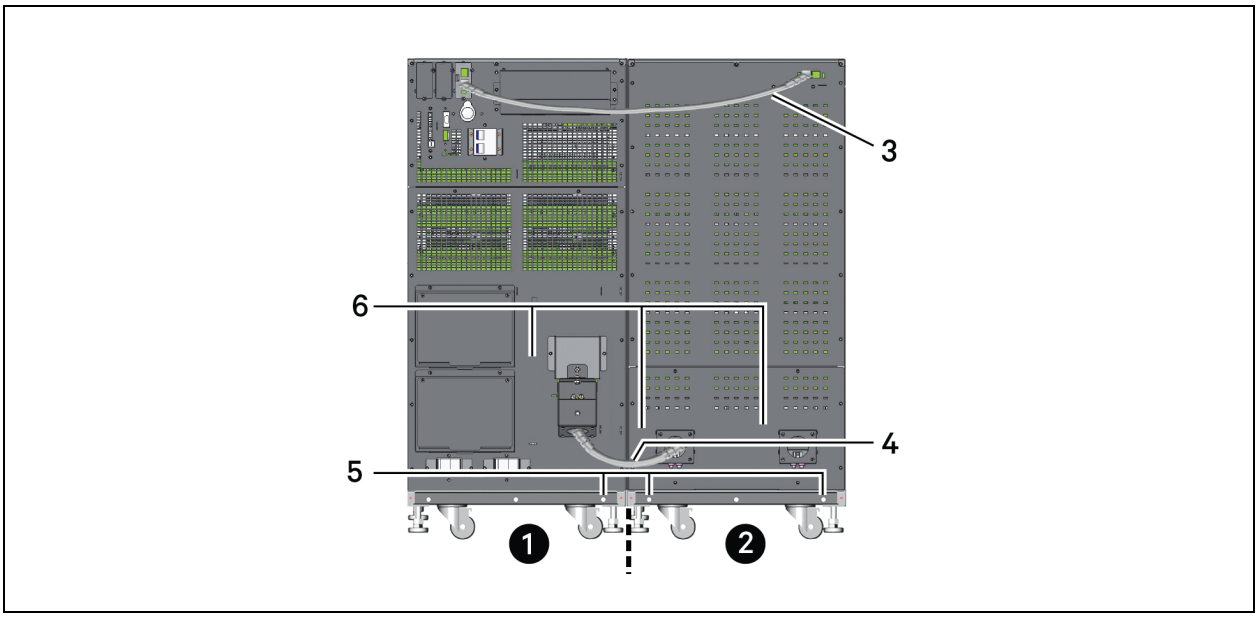

Item	Description	Item	Description
1	Liebert® APS	4	Battery cable
2	Battery cabinet	5	Ground-wire connection points
3	Communication cable	6	Ground-wire connection points

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 3.27 Connecting External Battery Cabinet (transformer-based UPS)

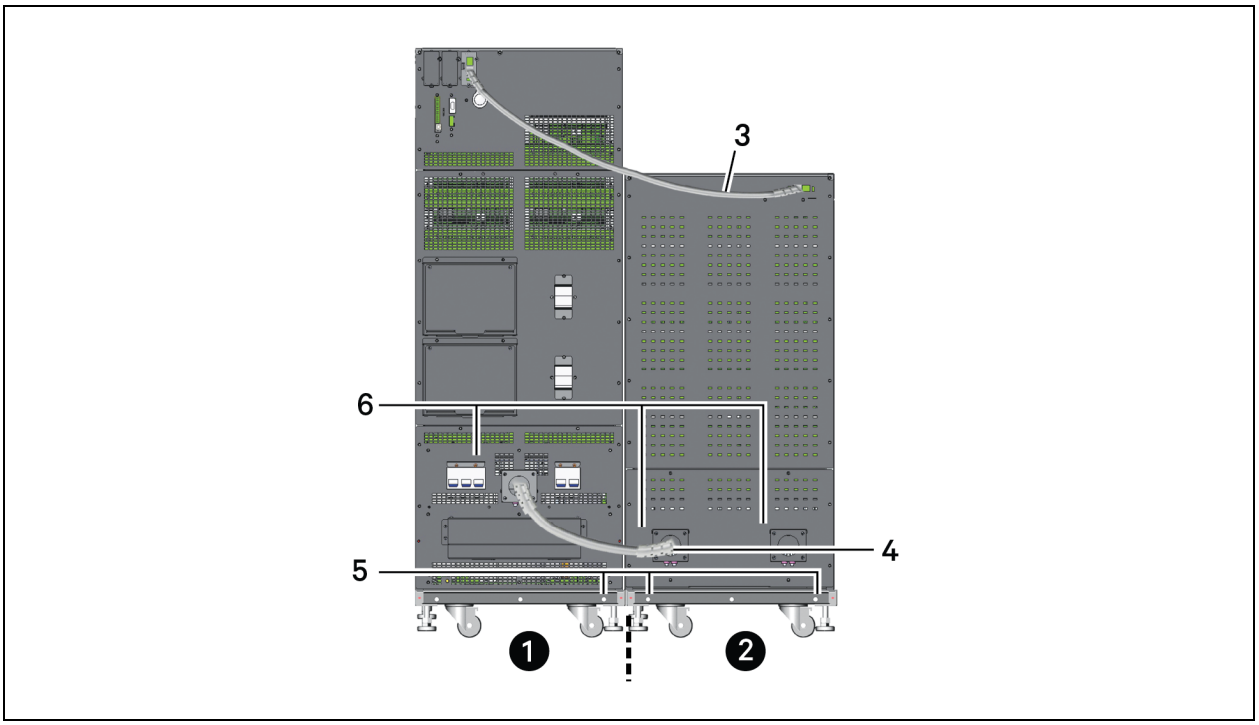

Item	Description	Item	Description
1	Vertiv™ Liebert® APS	3	Communication cable
2	Battery cabinet	4	Battery cable

9. After connecting the external battery cabinet, use the user interface to determine the number of external battery cabinets, see Figure 3.28 below.

   If the number displayed is not consistent with the actual number of installed external battery cabinets:

   - Make sure that each external battery cabinet contains two battery modules installed on the same row and the locking levers on both are in the locked position.
   - Make sure that the Vertiv™ IntelliSlot™ EBC card is installed properly and the communication cables are fully inserted in the connectors.
   - Make sure that the DIP-switch setting of each battery cabinet is correct using Table 3.13 below.

Figure 3.28 Battery Screen

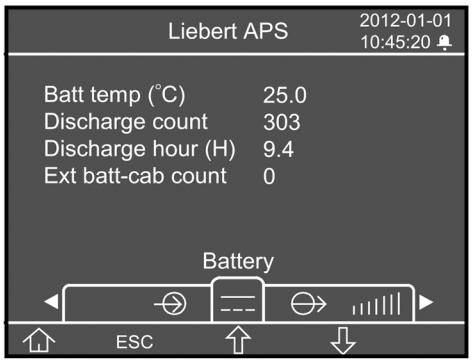


Table 3.13 EBC DIP Switch Settings

External Battery Cabinet Number	DIP Switch Setting	
	1	2
EBC 1	Down	Down
EBC 2	UP	Down
EBC 3	Down	UP
EBC 4	UP	UP
On the DIP switch: Down is On and Up is Off.		

3.9 Connecting Integrated Power Output Distribution (POD)

The rear panel of the Vertiv™ Liebert® APS let you add integrated distribution outlets (PODs) as an option for direct, AC-power connection of equipment to the UPS. PODs let you install and change distribution, if necessary, as equipment changes and while the UPS is still providing power.

To add or change the optional PODs:

1. Locate the POD breaker near the POD port and make sure that it is in the Off position.
2. Using a Phillips-head screwdriver, remove the two screws at the top of the POD cover plate and retain for later reattachment.
3. Remove the POD cover plate to expose the POD connectors.

Proprietary and Confidential ©2026 Vertiv Group Corp.

4. Insert the bottom of the POD into the slot provided, and then connect the POD connectors.

NOTE: The connector should connect only one way, matching the color of the pins.

NOTE: Distribution PODs PD2-101, PD2-102, PD2-103, PD2-104, PD2-105, PD2-106 and PD2-107 should not be used if the UPS output voltage is set to 220/127 V.

NOTE: When connecting distribution POD's to an AS3 or AS4 frame, the L-L output receptacles connect to the 240 V taps of the output transformer, not to the 208-V tap. Verify receptacle voltage and load ratings before energizing the load.

5. Secure the POD by using the two screws removed in *step* 2.
6. Repeat *step* 1 through *step* 5 to install a second POD on the UPS, only the 16-bay frame has two POD ports.
7. Connect the equipment to the appropriate outlets.
8. Close the POD breaker(s) to connect AC power to the outlets.
9. After commissioning the UPS, power-on the connected equipment per the manufacturer's instructions. See Commissioning/Startup Procedures below.

3.10 Commissioning/Startup Procedures

The Vertiv™ Liebert® APS can be commissioned with or without AC power being connected.

3.10.1 Checks before Commissioning/Startup

1. Verify that the AC-power connections are wired properly and that all connections are tight.
2. If using external battery cabinets or 3-party battery systems, verify that the DC-power and communication cables are connected properly and that all connections are tight.
3. Measure and record the AC-input voltage and frequency. These are required to properly configure the output voltage of the Liebert® APS system.
4. If any modules were removed from the Liebert® APS during installation, verify that all modules are fully-inserted and that the module locking levers are in the locked position.
5. For Remote Emergency Power Off (REPO) circuit:
   - If connecting the UPS to a REPO circuit, see Remote Emergency Power Off (REPO) on page 51 for the connection details and instructions.
   - If a REPO circuit is required or used, the factory-installed jumper must be removed from the terminal-block Pins 9-10 as described in Dry Contact Ports on page 50.
6. Verify that the internal bypass breaker in the UPS is in the open position with the guard in place and secure.

3.10.2 Commissioning/Startup with AC Power Available (Normal Mode Operation)

1. Verify that the up-stream mains AC breaker is closed.
2. Locate the UPS Enable switch on the rear of the unit protected by a clear plastic cover, and turn it On.
3. Locate the UPS input breaker on the front of transformer-free frame systems and on the rear of transformer-based frame systems, and turn it off.
   The initial system checks begin and power begins charging the battery.
4. Press the ON/OFF button on the LCD panel.
5. When asked to confirm, press Enter (F5 button) to turn on the UPS.

6. Close the UPS output breaker on the rear of the unit.
7. If supplying power to an external distribution panel, close all breakers to provide power to the equipment. If using the integral distribution PODs on the UPS or MBC, make sure that the individual POD breakers are closed.

3.10.3 Commissioning/Startup without AC Power Available (Battery Mode Operation)

NOTE: Starting the UPS system without AC power will discharge the batteries. If AC-mains power is not restored before the batteries discharge, the USP will shutdown and power will be lost to the connected equipment. If the UPS reaches the battery EOD level and shuts down, AC-mains power must be present to restart the UPS system.

1. Verify that the up-stream mains AC breaker is closed.
2. Locate the UPS Enable switch on the rear of the unit protected by a clear plastic cover, and turn it On.
3. Locate the “Battery Start” push button on either of the two control modules, then press and hold this button for 5 seconds.
   The initial system checks begin, and output power is automatically enabled.
4. Press the On/Off button on the LCD panel.
5. When asked to confirm, press Enter (F5 button) to turn on the UPS.
6. Close the output breaker on the rear of the unit.
7. If supplying power to an external distribution panel, close all breakers to provide power to the equipment. If using the integral distribution PODs on the UPS or MBC, make sure that the individual POD breakers are closed.
8. We recommend closing the UPS input breaker that is on the front of transformer-free frame systems and on the rear of transformer-based frame systems. If AC mains become available, the UPS will revert to AC power mode and begin recharging the battery.

Proprietary and Confidential ©2026 Vertiv Group Corp.

This page intentionally left blank

4 Communication


The rear panel of the Vertiv™ Liebert® APS includes the following communication ports:

- Vertiv™ IntelliSlot™ port—3
- Dry contact port—1
- REPO (Remote Emergency Power Off)—1
- LRT (Long Run Time) battery temperature probe terminal—1
- USB port—1

4.1 Vertiv™ IntelliSlot™ Ports

The 3 Vertiv™ IntelliSlot™ communication ports (see Figure 4.1 below) are for communication options. The Vertiv IntelliSlot ports and the USB port may be used at the same time.

Figure 4.1 Vertiv IntelliSlot Communication Port Location

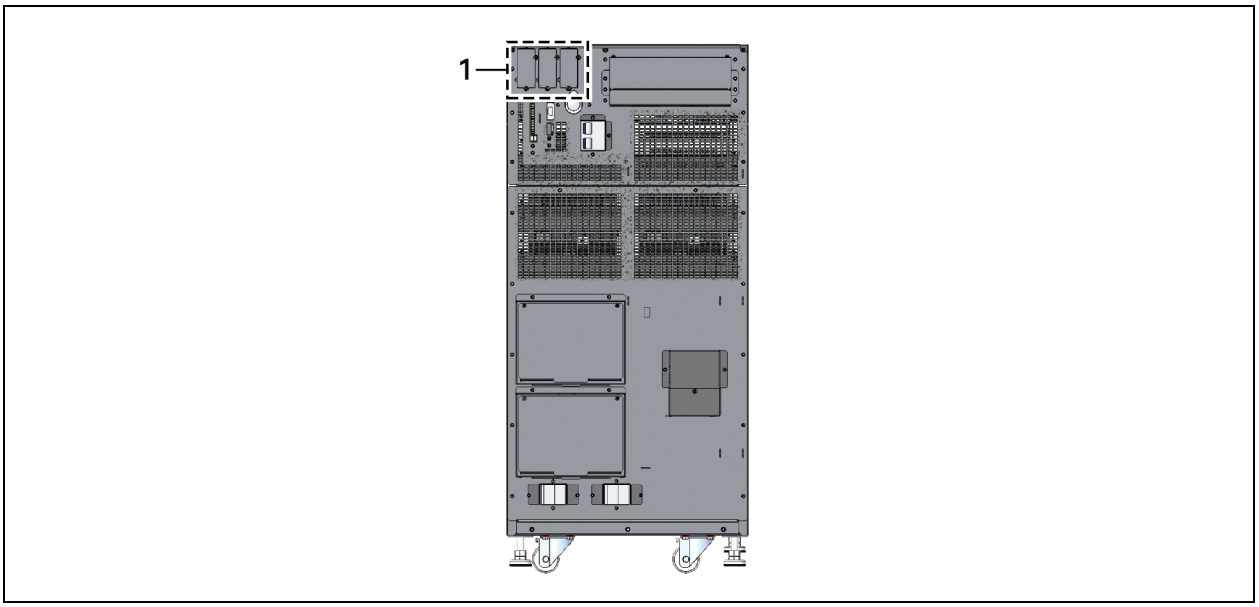

Item	Description
1	Vertiv IntelliSlot ports

4.1.1 Vertiv™ IntelliSlot™ Network Cards

- The RDU120 card is the standard network card provided with Liebert® APS since its launch. It provides web access, data via SNMP, Modbus and BACnet for Vertiv equipment. Using this card allows you to have real time view of parametric data and system statuses. It supports environmental monitoring via Geist Sensors for temperature, humidity, leak detection, door closures and contact closures.
- IS-UNITY-LIFE is another suitable network card for use with Liebert® APS. It is used for communication between the Liebert® APS and Vertiv™ Trellis® NMS and LIFE Services.

Proprietary and Confidential ©2026 Vertiv Group Corp.

- IS-UNITY-DP: is optional in place of the other cards if communication to two third-party platforms is required. Third-party platforms include SNMP and 485 (Modbus/BACnet) protocols. When used, this card also provides communication between the Liebert® APS and Vertiv™ Trellis NMS and LIFE Services. All communication protocols are active simultaneously.

4.1.2 Vertiv™ Liebert® IntelliSlot™ Dry-contact Card (IS-RELAY)

The IS-RELAY card provides dry-contact alarm information, including On Battery, On Bypass, Low Battery, Summary Alarm, UPS Fault and On UPS signals to a remote monitoring system. The card also accepts input signals to shut down the UPS during any mode of operation.

4.1.3 Vertiv™ IntelliSlot™ EBC Card

The EBC card monitors and manages the intelligent battery modules in external, matching battery cabinets.

4.2 Dry Contact Ports

Figure 2.1 on page 6 shows the location of the dry contact ports.

Figure 4.2 Pin Layout of the Dry Contacts

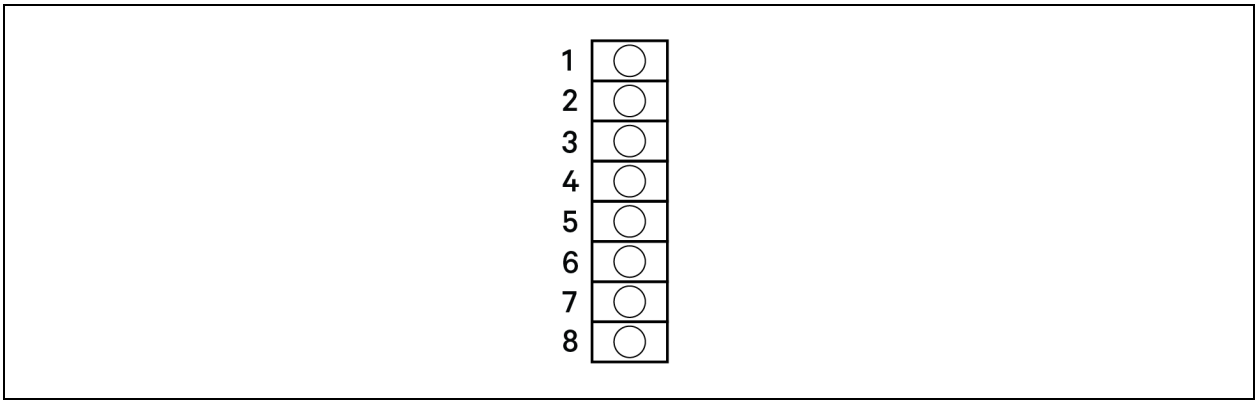


Table 4.1 Pin Definition for Dry Contact Port

Position	Name	Description
1	Battery Mode	Output dry contact of battery mode operation
2	Battery Mode	Output dry contact of battery mode operation
3	Low Battery	Output dry contact of low battery operation
4	Low Battery	Output dry contact of low battery operation
5	Any Mode Shut Down	Input dry contact of any mode shut down
6	GND	Any mode shutdown GND
7	Battery Mode Shut Down	Input dry contact of battery mode shut down
8	GND	Battery mode shutdown GND

4.2.1 Battery Mode Dry Contact

Pins 1 and 2: Output dry contact, normally open. The dry contact is closed when the UPS is operating on battery. The maximum voltage and current are 24 VDC and 0.3 A, respectively.

4.2.2 Low Battery Dry Contact

Pins 3 and 4: Output dry contact, normally open. When the UPS is operating on battery, the dry contact is closed upon battery low-voltage alarm. The maximum voltage and current are 24 VDC and 0.3 A, respectively.

4.2.3 Any Mode Shutdown

Pins 5 and 6: Input dry contact, normally open. After the external dry contact is closed (shorted), the UPS output will be shut down during any mode of operation (mains, battery, bypass).

4.2.4 Battery Mode Shutdown

Pins 7 and 8: Input dry contact, normally open. After the external dry contact is closed (shorted), the UPS output will be shut down only during battery mode operation.

NOTE: The default for the any-mode and battery-mode Shutdown features is "disabled." Using this function requires setting Remote Comms shutdown to "Enabled" in the Settings on the LCD user interface. You can also use the user-interface Settings to set the delay time for the UPS shutdown after the dry contact is closed. Enabling the feature on the LCD enables both shutdown methods.

4.3 Remote Emergency Power Off (REPO)

WARNING! Risk of electrical shock.
Can cause property damage, injury and death. Operating the REPO circuit WILL NOT trip the manual bypass breaker. If the REPO must shut off UPS output under all circumstances, you must tie the REPO into the breaker that feeds the UPS source. Otherwise, voltage may be present on the output connections if the unit is in manual bypass.

CAUTION: To maintain safety (SELV) barriers and electromagnetic compatibility, signal cables should be shielded and run separately from power cables.

NOTICE

Risk of improper installation. Can cause unintended UPS shutdown and loss of power to the load.

Run signal cables separately from power cables. Running cables in the same conduit can cause signal noise, possibly causing the system to shut down.

The Vertiv™ Liebert® APS is equipped with a REPO connection. Only the SELV (Safety Extra Low Voltage) circuit can be connected to the REPO terminal block. Figure 4.4 on the next page shows the schematic diagram of REPO switch connections.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 4.3 REPO Connector Pin Layout


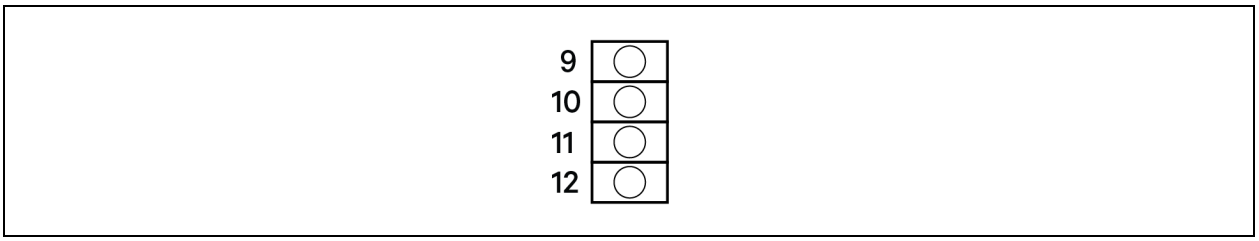


Table 4.2 Pin Definition of the REPO Dry Contact

Position	Name	Description
9	REPO +12V	REPO power, 12VDC 100mA
10	REPO Coil -NO	REPO normally-open nodes, shorting pins 9 and 10, REPO is triggered
11	REPO Coil -NC	REPO normally-closed nodes (fail-safe), shorting pins 9, 10, 11, 12, and opening pins 11 and 12, REPO is triggered
12	GND	Ground

Figure 4.4 REPO Switch Connections

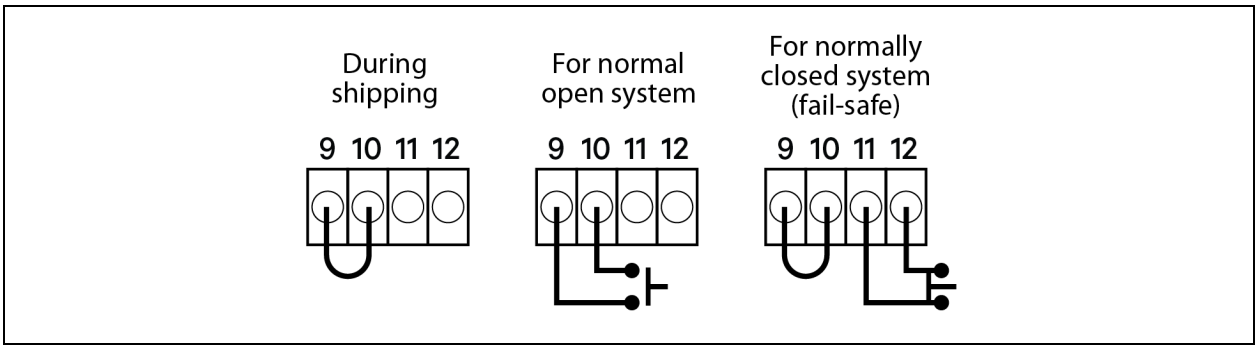

NOTE: A jumper is factory-installed between Pins 9 and 10 to disable the Main Control Switch, which prevents the UPS from being started accidentally during shipment and installation. This jumper must be removed before the unit can be started. If the installation does not require connection to a REPO system, the factory-installed jumper must be removed.

4.4 Long Run Time (LRT) Battery Temperature Probe Terminals

The Vertiv™ Liebert® APS contains a temperature-compensated battery-charging system. To use this feature with external LRT battery systems, connect Pins 13-16 of the contact terminal strip to a temperature sensor.

Figure 4.5 Pin Layout of the Temperature Sensor Terminal

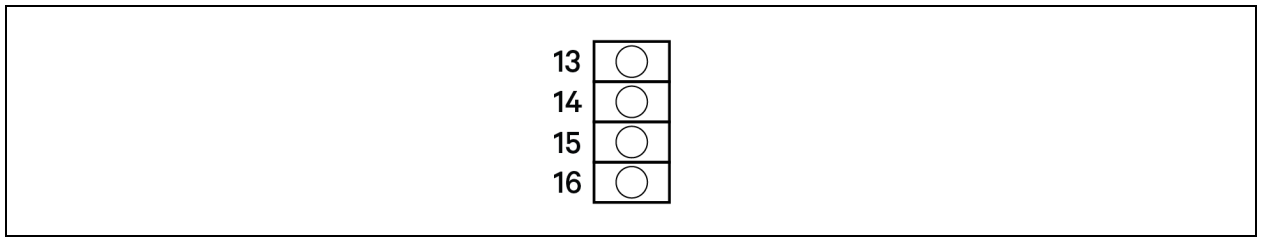


Table 4.3 Pin Definition of the Temperature Sensor Terminal

Position	Name	Description
13	Inside Battery Temperature	Locate battery temperature signal close to the UPS
14	Battery Temperature +12 V	Battery temperature signal power supply
15	Outside Battery Temperature	Locate battery temperature signal at UPS remote end
16	GND	GND

4.5 USB Port

The Liebert® APS contains a standard B type USB port on the rear of the unit to connect the UPS to a network server or other computer for monitoring with any operating system or built-in UPS support.


4.6 LCD Port

The LCD module contains the LCD port for power and data communication between the UPS monitor module and display module. The LCD module can be removed from the Liebert® APS and remotely located. A longer Ethernet cable must be used when installing the LCD module remotely. A standard Ethernet type cable (Category 5, with RJ-45 connectors, both ends meet T568B standard) can be used. Maximum cable length is 14 meters to ensure proper communication signals between the UPS and the LCD module.

The user-interface module provides three network ports and one USB port. Of those, one network port (LCD port) is used for power supply and communication of the user-interface module. Other network ports and the USB port are reserved for use only by customer-service personnel.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 4.6 LCD Port

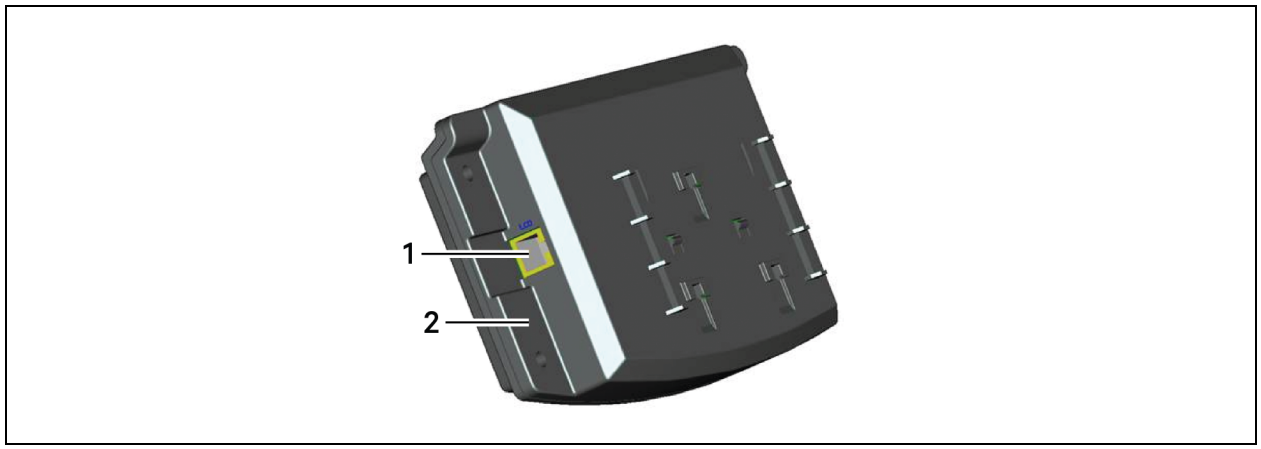


Item	Description
1	LCD port
2	user-interface module

5 Operation and Display Panel

The user-interface module is the operation and display panel composed of an LED mimic power flow diagram, fault LED indicator and LCD screen to show detailed operational information and UPS alarm list using the menu buttons.

Figure 5.1 Operation and Display on the User-Interface Module

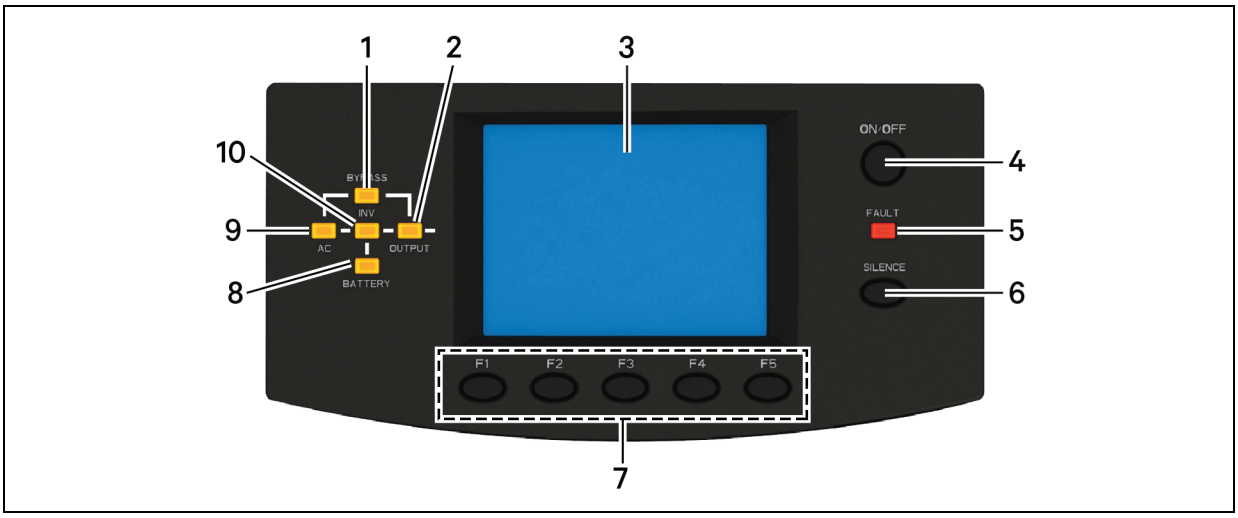

Item	Description	Item	Description
1	Bypass LED	6	Alarm silence button
2	Output LED	7	Menu buttons
3	LCD screen	8	Battery LED
4	On/Off button	9	AC LED
5	Fault LED	10	Inverter LED

5.1 Mimic LEDs

The mimic power-flow LEDs indicate current operating state of the UPS. Table 5.1 below describes the LED states.

Table 5.1 LED Descriptions

LED	State	Description
AC LED	On (Green)	The rectifier is functioning normally
	Flashing (Green)	The AC mains is normal, but the rectifier is not functioning properly
	On (Red)	The rectifier is faulty
	Off	The AC mains is abnormal, and the rectifier is not functioning

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 5.1 LED Descriptions (continued)

LED	State	Description
Battery LED	On (Green)	The battery is discharging
	Flashing (Green)	The battery has a pre-alarm of low voltage
	On (Red)	The DC-DC converter is faulty
	Off	The battery is charging, and the DC-DC converter is not functioning
Bypass LED	On (Green)	The bypass is supplying power
	On (Red)	The bypass is abnormal and not available
	Off	The bypass is normal, but not supplying output power
Inverter LED	On (green)	The inverter is supplying output power
	Flashing (green)	The inverter is starting up, in soft start or phase locked, and is not supplying output power
	On (red)	The inverter is faulty
	Off	The inverter is off
Output LED	On (green)	The UPS output is supplying power
	Flashing (green)	The UPS internal manual bypass is supplying output power
	On (red)	The UPS has output overload
	Off	The UPS does not have output power
Fault LED	On (yellow)	The UPS has an alarm or alarms
	On (red)	The UPS has one or more faults
	Off	UPS operating normally with no alarm or fault conditions

5.2 Audible Alarms

Three different audible alarms may occur during the UPS operation, described in Table 5.2 below.

Table 5.2 Audible Alarm Descriptions

Alarm sound	Meaning
One beep per second	When the UPS has an alarm, for example, AC fault (mains failure)
One beep every 0.5 second	Upon UPS output overload or low battery voltage alarm during discharge
Continuous beep	When the UPS has a fault

5.2.1 Control Buttons

The operation and display panel provides two control buttons described in.

Table 5.3 Control Buttons Functions

Control Button	Function
ON/OFF Button	Used to turn the UPS On and Off.
Alarm Silence Button	When an audible alarm sounds, pressing this button can silence the alarm. Pressing this button again can restart the audible alarm.
Buzzer Enable Switch	The switch on the side of the display can be used to enable/disable the audible alarm. If disabled, the LED will still indicate alarm status, but no audible alarm will sound.

5.3 LCD Screen and Menu Buttons

The operation and display panel provides an LCD screen and menu buttons (F1, F2, F3, F4, F5) described in Table 5.4 below.

The LCD is a 320 × 240 dot-matrix graphic display. You can browse the UPS input, output, load and battery parameters and obtain the current state and alarm information of the UPS. You also can perform relevant function/parameter settings and control operations.

Table 5.4 Function Descriptions of Menu Button

Button	F1	F2	F3	F4	F5
Function 1	Home	—	To Left	To Right	Enter
Function 2	—	ESC Exit	Up	Down	—

5.3.1 Startup Screen

When the UPS starts up, it conducts a self-test, and the LCD displays the startup screen, which lasts for 15 seconds.


5.3.2 Main Screen

The main screen is divided into four parts: system information window, data window, menu window and keyboard window as shown in Figure 5.2 on the next page .

The functions of F1 to F5 buttons change automatically according to the currently displayed screen. On any screen, press the F1 button to return to the Output screen.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 5.2 Main Screen

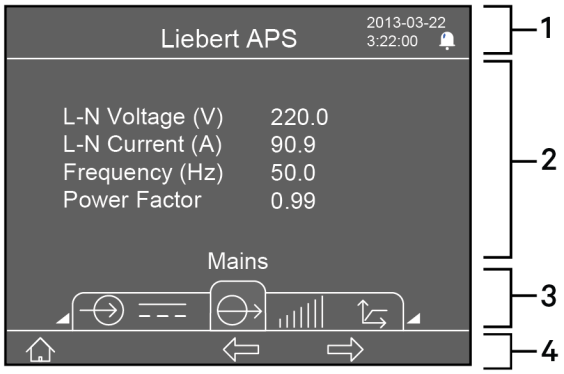

Item	Description
1	Information window, see System Information Window below.
2	Data window, see Menu Window and Data Window below.
3	Menu window, see Menu Window and Data Window below.
4	Keyboard window, see LCD Screen and Menu Buttons on the previous page.

System Information Window

The system information window displays the current date and time and the UPS name without the need to select an option or press a button.

Menu Window and Data Window

The menu window shows the menu name and navigates to menu items. Each menu item displays a set of data in the data window. You can browse the relevant parameters of the UPS and can adjust/set some operational parameters. Table 5.5 below describes the menu items and data displayed.

Table 5.5 Item Description of Menu Window and Data Window

Menu Name	Data Item	Data Description
Mains	L-N Voltage (V)	L-N input voltage
	L-N Current (A)	L-N input current
	Frequency (Hz)	Input frequency
	L-L Voltage (V)	L-L input voltage
	kVA	Input apparent power
	Power Factor	Input power factor

Table 5.5 Item Description of Menu Window and Data Window (continued)

Menu Name	Data Item	Data Description
Battery	Batt Voltage (V)	Battery bus voltage
	Batt Current (A)	Battery bus current
	Runtime (Min.)	Battery backup time remaining
	Batt Capacity (%)	Percentage of battery capacity
	Batt State	Charging, discharging or fully charged
	Batt String Count	Online battery string count
	Batt Temp (°C)	Battery temperature
	Discharge Count	Maximum historical discharge count within current battery modules
	Discharge Time (H)	Maximum historical discharge time within current battery modules
	EBC Count	Number of connected External Battery Cabinets
Output	L-N Voltage (V)	L-N Output Voltage
	L-N Current (A)	L-N Output Current
	Frequency (Hz)	Output Frequency
	Power Factor	Output Power Factor
	Line Voltage (V)	L-L Output Voltage (not displayed for single-phase output model)
Load	kVA	Output apparent power
	kW	Output active power
	Load Level (%)	Output loading, indicated in percentage of the UPS system rated load
	Crest Factor	Output current peak value factor
UPS Info	UPS ID	UPS ID
	LCD Module	If the module is online, the serial number and software version will be displayed
	Bypass Monitor Module	If the module is online, the serial number and software version will be displayed
	Bypass Control Module	If the module is online, the serial number and software version will be displayed
	Charger Module	If the module is online, the serial number and software version will be displayed
	Power Module	If the module is online, the serial number and software version will be displayed
	Battery Module	If the module is online, the serial number and software version will be displayed
Redundant State	PM Installed	The number of installed power modules
	PM	Whether there are redundant power modules supplying power.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 5.5 Item Description of Menu Window and Data Window (continued)

Menu Name	Data Item	Data Description
Settings	Set Redundancy Mode	Disabled/ Enabled. If Enabled, the system operational parameters will assume there is a redundant power module in the frame; if 'Disabled', the system operational parameters will assume that all power modules in the frame are not redundant. **NOTE: This item is closely related to the Redundant alarm setting.**
	Remote Comms Shutdown	Disabled/ Enabled. If 'Enabled,' this allows the UPS output power to be shutdown through remote communication, including the dry contacts and communication cards. **NOTE: This item is closely related to Remote shutdown delay.**
	Bypass Setting	Enables the bypass to supply power or not.
	Output Frequency	Sets the output frequency to allow frequency conversion operation.
	Output Voltage	Sets the output voltage level to match the mains input voltage.
	Inverter Sync Range	Sets the range of inverter synchronization for bypass frequency operation and availability.
	Remote Shutdown Delay	Sets the shutdown delay time for the remote signal operation.
	Bypass Upper Limit	Sets the upper limit of bypass voltage operation and availability.
	Bypass Lower Limit	Sets the lower limit of bypass voltage operation and availability.
	Guaranteed Shutdown	Disabled/ Enabled. If 'Enabled,' once a low battery alarm is generated during battery discharge, the UPS will continue battery mode operation until it reaches the end of discharge (EOD) setpoint, then will shut down output power, whether the AC mains recovers or not.
	Bypass Alarm Mode	Allows an alarm to be generated when the bypass is abnormal.
	Set RS232 Protocol	Because the slot 2 and the serial port on the rear panel cannot work at the same time, you must select one of them to work. If 'INTERFACE2' is selected, slot 2 can communicate; if 'RS232' is selected, the serial port can communicate.
	Auto Restart Mode	Allows auto restart after an EOD shutdown and AC mains returns.
	Auto Restart Capacity	Sets the battery capacity limit of auto restart feature. When AC mains power returns, the UPS will charge the battery to the specified battery capacity before enabling output power.
	Auto Restart Delay	Sets the delay time of auto restart feature. When AC mains power returns, the UPS will start a countdown timer based upon the setting before enabling output power.
	Display Contrast	Adjusts the contrast of LCD backlighting.
	Date and Time	Sets date and time.
	Command Password	Users can change the command password to prevent unauthorized users from changing any user configurable settings. The default password is 1234567. Once the password is changed, the default password is no longer operational, and users are then required to enter the new password to enter/change any 'Settings' or 'Battery settings'. If the new password is forgotten, contact your local customer service center for steps to reset the password back to the factory default.
	Max Load Alarm	Sets a maximum load alarm. This item is closely related to 'Max load threshold'.
	Max Load Threshold	Sets the threshold of maximum load alarm. When the UPS loads exceed the threshold, and the maximum load alarm is enabled, an alarm will be generated. This item is closely related to 'Max load alarm,' for example, set this item to

Table 5.5 Item Description of Menu Window and Data Window (continued)

Menu Name	Data Item	Data Description
		5.0 kVA, when the UPS loads exceed 5.0 kVA, an alarm will be generated.
	Redundant Alarm Mode	Allows alarm to be generated when the system loses redundant power module.
	Communication Address	Sets the UPS device address. This setting is only for the network card communication of newly emerging market.
	Air Filter Reminder	Set the reminder period of checking dust proof filter.
	Air Filter Type	Standard: Use this setting if air filter is not installed. Fine Dust: Use this setting if an air filter is installed.
	IT System Compatibility	Enabled - Neutral back-feed relay will open on battery mode. Disabled (Default) - Neutral back-feed relay is always closed.
	UPS ID	Users can set the UPS name to facilitate managing the UPS through remote communications.
	Company Name	Set the local service company name of the UPS.
	Contact Number	Set the local service telephone number of the UPS.
	Load factory defaults	Restores the setting items in 'Settings' menu to factory values.
Battery settings	Low battery Warning	Sets the battery low voltage alarm time
	Automatic Battery Test Interval	Sets the interval for the automatic battery test. Intervals of 8, 12, 16, 20, 26 weeks or Disable are available for selection. Factory default is 8 weeks.
	Auto Batt Test Start Day	Sets the day of the week for the automatic battery test
	Auto Batt Test Start Time	Sets the time of the day for the automatic battery test
	External Battery AH	Sets the AH capacity of external third party battery system to calculate the battery capacity and estimate the battery time remaining
	Load Factory Defaults	Restores the setting items in 'Battery set' menu to factory values
Language	Language Options	Provides a selection of seven languages: Chinese, English, French, Spanish, Italian, Russian and German
Alarms	Current Alarms	Displays the current alarms. See Active Alarms on page 67 for the UPS alarm list.
Records	Historical Alarms	Displays all historical alarms. See Active Alarms on page 67 for the UPS alarm list.
Module replacement	LCD Module	Displays the procedures for replacing LCD module
	Bypass Monitor Module	Displays the procedures for replacing system monitor module
	Bypass Control Module	Displays the procedures for replacing system control module
	Power Module	Displays the procedures for replacing power module
	Battery Module	Displays the procedures for replacing battery module
	Charger Module	Displays the procedures for replacing charger module

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 5.5 Item Description of Menu Window and Data Window (continued)

Menu Name	Data Item	Data Description
Service	Battery Maintenance Test	Battery maintenance test allows battery to discharge some voltage to obtain the battery activity. The loads must be within 0% ~ 90%, the battery capacity must be larger than 70%, and there is no battery fault and alarm in the system.
	Stop Battery Test	Stops battery maintenance test
	System Test	A UPS self-test, used to test whether the LEDs are normal. When you start this function, 5 seconds later, the screen will prompt a window to display the system self-test result.
	Stop Testing	Stops system test manually
	Freshening Charge	Boost charges the battery by force, manually
	Stop Freshening Charge	Stops freshening charge manually
	UPS ID	Allows customer service personnel to set the UPS ID, to facilitate maintenance
	Site ID	Allows customer service personnel to set the UPS address, to facilitate maintenance
	Tag Number	Allows customer service personnel to set the UPS tag, to facilitate maintenance
	Company Name	Allows customer service personnel to set the UPS company name, to facilitate maintenance
	Contact Number	Allows customer service personnel to set the UPS company contact number, to facilitate maintenance
	Frame S/N	Reset this when replacing the LCD board. The frame S/N is labeled on the frame.
	Normal Mode	Allows customer service personnel to set the UPS operating mode to normal online mode
	ECO Mode	Allows customer service personnel to set the UPS operating mode to ECO mode
	Enable Max Discharge Protection	By default, the UPS has a maximum discharge time to protect the batteries from a deep, slow discharge. After this time, the UPS will turn Off its output.
	Disable Max Discharge Protection	If this variable is set, there will be no time limit and the UPS will stay on battery until the EOD setpoint is reached. This may cause damage to some battery types and should only be used for DC sources that do not have slow discharge issues.
The Service screen is only for customer service personnel. It is not open to the user.		

Keyboard Window

The keyboard window displays the functions of the menu buttons, F1 ~ F5, and the function icons are described in Table 5.4 on page 57.

5.3.3 Default Screen/Screen Saver

While the UPS is operating, if there are no active alarms, the LCD enters screen saver mode after 2 minutes of no activity. After a brief delay, the LCD back light also turns off. Pressing any button will return to the original screen.

5.3.4 Screen Views

This section gives a detailed description of each display screen and its contents. The default “main screen” is the Output menu and its data. The navigation indicated for each screen is in reference to the Output screen.

Navigating to Screens and Screen Descriptions

AC Mains screen

From the main screen, press the F3 button twice.

The AC mains screen displays the input L-N voltage, L-N current, input frequency, L-L voltage, apparent power and power factor of three phases (L1, L2, L3).

Battery screen

From the main screen, press the F3 button once.

On the first battery screen, press F5 to change the function of the F2, F3, and F4 buttons from the primary functions to the secondary functions, described in Table 5.4 on page 57.

The battery screen displays Battery voltage, Battery current, Battery time remaining, Battery capacity, Battery state, Battery string count, Battery temperature, cumulative discharge count (highest of all installed battery modules), cumulative discharge time (in hours) and External battery cabinet count.

Output screen

Output is the default main screen.

The output screen displays L-N or L-L voltage, L-N or L-L current, Frequency and Power factor.

Load screen

From the main screen, press the F4 button once.

The load screen displays output kVA (Sout/apparent power), output kW (Pout/active power), load level and crest factor.

UPS Information Screen

From the main screen, press the F4 button twice.

The UPS information screen displays UPS ID (name set by user), serial number and software version of LCD module, system monitor module, system control module, charger module, power module and battery module (if the modules are installed and are online).

Redundancy Screen

From the main screen, press the F4 button three times.

The redundancy screen displays the number of installed power modules in the frame, and whether the system contains a redundant module or not.

Settings Screen

From the main screen, press the F4 button four times.
The settings screen is displayed in a total of nine screens as you scroll down.

On the first settings screen, press F5 to prompt a password window to pop up. After you enter the correct password, the function of the F2, F3, and F4 buttons switch from the primary functions to the secondary functions, described in Table 5.4 on page 57. To adjust the settings, see Entering a Password to Edit Settings on page 65, and Editing Parameter Settings on page 65.

 Proprietary and Confidential ©2026 Vertiv Group Corp.

Battery Setting Screen

From the main screen, press the **F4** button five times.

On the first settings screen, press **F5** button to prompt a password window to pop up. After you enter the correct password, the function of the F2, F3, and F4 buttons switch from the primary functions to the secondary functions, described in LCD Screen and Menu Buttons on page 57. To adjust the settings, see Entering a Password to Edit Settings on page 1, and Editing Parameter Settings on the facing page.

Language Selection Screen

From the main screen, press the **F4** button six times.

The language selection screen displays a choice of seven languages: Chinese, English, German, Russian, French, Italian and Spanish.

NOTE: The languages are displayed in their alphabet.

To set the language:

1. Press **F5**.
   The language option is highlighted.
2. Press **F3** or **F4** to navigate to the language to select.
3. Press **F5** to confirm the selection.
4. Once the screen language changes, press **F2** to exit language-setting mode.

Alarms Screen

From the main screen, press the **F4** button seven.

The alarms screen displays any current alarms of the UPS, including the alarm name, alarm ID code and alarm date/time stamp.

Records Screen

From the main screen, press the **F4** button eight times.

The records screen displays all historical alarms of the UPS, including the alarm name, alarm ID code, alarm date/time stamp and record number/total record count.

Module Replacement Screen

From the main screen, press the **F4** button nine times.

The module replacement screen displays the procedures for replacing all user-replaceable module assemblies in the UPS frame.

To view the module replacement procedure:

1. press **F5** to enter the module replacement.
   One module option is highlighted.
2. Press **F3** or **F4** to navigate to the procedure for the specific model, then press **F5** to view the procedures.
3. Once completed, press **F2** to exit.

5.3.5 Entering a Password to Edit Settings

1. On the password prompt window, press F5, the first digit becomes editable, press F3 to enter the correct number.
2. Press F4, the second digit becomes editable, press F3 to enter the correct number.
3. Enter the remaining password digits this method, then press F5 when complete.

5.3.6 Editing Parameter Settings

1. Press F4 to navigate to the parameter, and press F5 to enter edit mode.
2. Press F3 or F4 to select the item or change value, then press F5 to confirm the setting.
3. Press F2 to exit the edit setting mode.

5.3.7 Prompt Window

During system operation, alerts, reminders, and notifications pop up in a prompt window. Table 5.6 below describes the prompts and the action to take if needed.

Table 5.6 Information and Actions Required for the Prompt Window

Prompt Window	Explanation
Turn On/Off: Turn On UPS Cancel	When you press the ON/OFF button while UPS is Off.
Turn On/Off: Turn On INV Turn Off UPS	When you press the ON/OFF button while UPS is operating on bypass mode.
Turn On/Off: Transfer to Bypass Cancel	When you press the ON/OFF button while UPS is operating on inverter mode and bypass is qualified.
Turn On/Off: Turn Off UPS Cancel	When you press the ON/OFF button while UPS is operating on inverter mode and bypass is not qualified.
Enter password *******	After the control password is changed, you are required to enter the password when you want to enter “Settings,” “Battery set” and “Service” screens.
Output must be Off	While the UPS output is supplying power, this prompt appears when you want to set some key system parameters. You need to close the output before setting key parameters.
On manual bypass can't turn Off the load	This prompt appears when UPS operates on manual bypass and the ON/OFF button is pressed.
Please verify output settings before starting the UPS Escape: Ignore this message Enter: Go to Settings Screen	After the UPS is powered on, when you press the ON/OFF button for the first time, this prompt appears to remind you of viewing relevant setting.
Short Circuit Recovery	After the UPS output short circuits, wait 30 seconds before turning On the UPS again.
System is not ready	When the power modules in the frame are initializing or there are no power modules, this prompt appears when you press the ON/OFF button.
AC input not qualified, cannot start UPS	When the input voltage cannot meet the startup condition of the inverter, this prompt appears when you press the ON/OFF button.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 5.6 Information and Actions Required for the Prompt Window (continued)

Prompt Window	Explanation
Please check air filter	When you set Enabled for Air filter reminder, this prompt appears after the reminder time is up.
Removal of module will result in loss of output power	When only one of the system monitor module OR system control module is installed and active, when the locking level is moved to the unlock position, this prompt appears to remind user of loss of output power will occur if the module is removed from the system.
New Alarms Present Escape: Ignore this message Enter: Go to Alarms Screen	This prompt appears when a new alarm occurs.
Warning! Frame Fan Fault Reduce load or replace fan to avoid damage to bypass	This prompt appears when frame fan is in fault and load is heavy, user should reduce load or replace fan.
Bypass source not qualified, Can not switch to bypass	This prompt appears when bypass source is not qualified and inverter can't power on the load for transformer based frame.

6 Troubleshooting

This is the basic troubleshooting guide and required actions for maintaining the Vertiv™ Liebert® APS system.

6.1 Active Alarms

In the event of an alarm, the user interface display displays the latest alarm message. A list of possible alarm messages are described in Table 6.1 below. If an alarm occurs and you are uncertain of the corrective action to take, contact your local Vertiv representative.

Table 6.1 Alarm Message List

Alarm Message	Possible Cause	Corrective Action
Power Module Warning	One or more power modules are not operating correctly.	View the corresponding module serial number in the fault logs or event logs and contact your local Vertiv Services representative.
Power Module Fail	One or more power modules have a fault.	View the corresponding module serial number in the fault logs or event logs and either replace the module or contact your local Vertiv Services representative.
Power Module Over Temp Warning	One or more power modules are operating at an internal high temperature.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If these conditions do not exist, contact your local Vertiv Services personnel.
Power Module Over Temp Shutdown	One or more power modules have stopped operating due to an internal over temperature.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If these conditions do not exist, contact your local Vertiv Services representative.
Power Module Fan Failure	One or more of the power module fans has failed.	Check to see if the fan is blocked. If not, contact your local Vertiv Services representative.
Insufficient Capacity To Start Inverter	The load value exceeds the maximum load capacity of all operating modules.	Ensure all power modules are inserted and the locking lever is fully inserted. If all modules are active, add power modules to increase capacity or contact your local Vertiv Services representative.
PM Locking Lever In Remove Position	The power module locking lever is not in the locked position.	Check the locking lever to ensure it is fully inserted. If so, contact your local Vertiv Services representative.
Input Phase A Not Qualified	A-phase voltage is too high or too low.	Check the upstream feeder breaker or the UPS input breaker and reset if necessary, or contact your local Vertiv Services representative.
Input Phase B Not Qualified	B-phase voltage is too high or too low.	Check the upstream feeder breaker or the UPS input breaker and reset if necessary, or contact your local Vertiv Services representative.
Input Phase C Not Qualified	C-phase voltage is too high or too low.	Check the upstream feeder breaker or the UPS input breaker and reset if necessary or contact your local Vertiv Services representative.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 6.1 Alarm Message List (continued)

Alarm Message	Possible Cause	Corrective Action
L1 L2 Phase Reversed	Two phases are reversely connected.	Have a qualified electrician check the phase rotation at the distribution panel and/or at the UPS input terminal block. If this is not the problem, contact your local Vertiv Services representative.
Battery Reversed	The battery is reversely connected.	Have a qualified electrician check the wiring rotation at the external battery cabinet. If this is not the problem, contact your local Vertiv Services representative.
No Battery Modules Are Ready (NM38)	The battery module is not ready, and the yellow fault LED flashes.	Ensure that the battery module is fully inserted and locking levers are in the locked position. If this is not the problem, contact your local Vertiv Services representative.
	If present with NE07, this indicates that there is a mixture of LIO and VRLA battery modules in the system. One chemistry must be removed.	Remove one of the battery chemistries present. Check for mixture within a string. Only one chemistry can be present per installation (UPS or UPS + EBC).
All PM's Are Not Ready	The power module is not ready, and the yellow fault LED flashes.	Ensure that the power module is fully inserted in the upper frame bays and locking levers are in the locked position. If this is not the problem, contact your local Vertiv Services representative.
Power Module Redundancy Alarm	The UPS has no redundant power module	Add power modules or replace the faulty power module to obtain redundancy, or contact your local Vertiv Services representative.
Output Exceeds Max Load Setting	The maximum load alarm is effective, the actual load is larger than the setting	Either decrease load on the UPS or readjust the user programmable alarm set point from the LCD. It might also require another power module to increase capacity. If this is not the problem, contact your local Vertiv Services representative.
Turn Rocker Switch Off Before Removing	The bypass power is unqualified or the system output is disconnected. There is only one system monitor module or one system control module in the system, and the control lever is removed. The alarm reminds you to open the startup switch before pulling out the control module.	Open the startup switch.
Time to Check the Fan Filters for Excessive Dirt	When the air filter reminder is 'Enabled,' this message appears to remind users to check the air filters.	Check the air filters and clean them if necessary, or contact your local Vertiv Services representative.
No Matching Module (NM38)	Only one battery module is inserted into one row of bays in the system.	Ensure that there are a pair of battery modules in the same row of the frame, or contact your local Vertiv Services representative.
	If both modules are present and inserted (and the system has Lithium-ion battery modules) check to make sure the balancing cable is connected to both modules.	Connect balancing cable to module with alarm present or replace balancing cable if both modules are reporting the alarm.
Load Exceeds Battery Module Capacity	The system has determined the load exceeds the capacity of the battery.	Check to ensure that all battery modules are fully inserted and the locking lever is in the locked position. It is possible that more battery modules are required to increase battery run time. If this is not the problem, contact your local Vertiv Services representative.
Battery Cabinet Not Connected	The power cable of the external battery cabinet is not connected or fully inserted.	Connect the cable or contact your local Vertiv Services representative.

Table 6.1 Alarm Message List (continued)

Alarm Message	Possible Cause	Corrective Action
BM Lock Lever in Remove Position	The locking lever is not in the locked position.	Check the locking lever to ensure it is fully inserted. If so, contact your local Vertiv Services representative.
BM Over Temperature Warning	The internal battery module temperature is at an elevated level.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If this is not the problem, contact your local Vertiv Services representative.
Low Battery Warning	The battery capacity has reached the user programmable set point.	Check upstream feeder breaker or the UPS input breaker and reset if necessary. If this is not the problem, begin the orderly shutdown of all connected equipment as UPS shutdown is imminent.
Battery Module Warning	One or more battery modules are abnormal.	View the corresponding module serial number in the fault logs or event logs and contact your local Vertiv Services representative.
Battery Module Fail	One or more battery modules have a fault.	View the corresponding module serial number in the fault logs or event logs and either replace the module or contact your local Vertiv Services representative.
Battery Test Warning Weak Battery	One or more battery modules have detected batteries that are no longer in specification due to age or operating conditions.	Replace the battery string or contact your local Vertiv Services representative.
BM Temp Unbalance	The temperature difference between all the battery modules exceeds 10°C.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If this is not the problem, contact your local Vertiv representative.
Frame Fan Failure	The fan located behind the display panel has failed.	Contact your local Liebert Services representative for fan replacement.
Transformer Fan Failure	There is a transformer on the UPS frame and at least one transformer fan has failed.	Contact your local Liebert Services representative for fan replacement.
Transformer Temperature Warning	A high temperature condition has occurred in the output transformer area.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If this is not the problem, contact your local Vertiv Services representative.
Bypass Source Not Qualified	The UPS bypass functionality is not available because the input source is out of tolerance to the bypass voltage and/or frequency window.	No action necessary unless the AC input has been verified within bypass settings. If this is not the problem, contact your local Vertiv Services representative.
Output Is Off Abnormal Output Volt	The cable connection is wrong.	Check the power distribution.
System Control Module Lock Lever in Remove Position	The locking lever is not in the locked position.	Check the locking lever to ensure it is fully inserted. If so, contact your local Vertiv Services representative.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 6.1 Alarm Message List (continued)

Alarm Message	Possible Cause	Corrective Action
System Monitor Module Lock Lever in Remove Position	The locking lever is not in the locked position.	Check the locking lever to ensure it is fully inserted. If so, contact your local Vertiv Services representative.
Charger Module Warning	The charger module is not operating correctly.	View the corresponding module serial number in the fault logs or event logs, and contact your local Vertiv Services representative.
Charger Module Fail	The charger module has a fault.	View the corresponding module serial number in the fault logs or event logs, and either replace the module or contact your local Vertiv Services representative.
CM Power source Is Not Qualified	Check the power distribution.	Check upstream feeder breaker or the UPS input breaker and reset if necessary, or contact your local Vertiv Services representative
Charger Module LOCK Lever in Remove Position	The locking lever is not in the locked position.	Check the locking lever to ensure it is fully inserted. If so, contact your local Vertiv Services representative.
Charger Module Fan Failure	One or more of the charger module fans has failed.	Check to see if the fan is blocked. If not, contact your local Vertiv Services representative.
Charger Module Temperature Warning	One or more charger modules are operating at an internal high temperature.	Check the air filters located behind the bezels and clean if necessary, or check to see if the ambient temperature is too high. If this is not the problem, contact your local Vertiv Services representative.

6.2 Module Troubleshooting

The power, battery, charger, system-control and system-monitor module have two LEDs each to indicate the module operating state. The location of the LED is shown in the description of each module in Major Components on page 10, and Table 6.2 below describes the meaning the LED indicators.

Table 6.2 Descriptions of Module LEDs

Green Status LED	Yellow Fault LED	Descriptions of Module State
Off	Off	The module is not inserted into the frame, lock lever is in unlocked position or the system is off.
Off	On	The module is initializing (maximum 30 seconds[1]).
Flashing	Off	The module is operating normally.
Flashing	Flashing	The module is in startup mode or the module has an alarm[2].
Flashing	On	The module is faulty and off-line, and the control module is operating.
Off	Flashing	The module is not operating correctly, re-insert the module. If this persists, contact technical support personnel.
On	Off	
On	On	
On	Flashing	

1. If this condition persists for more than 30 seconds, verify that the lock lever is in the locked position. If it is not, the module is faulty.
2. If both green and yellow LEDs are flashing for more than 30 seconds, reinsert module.

6.3 Module Replacement

Follow these instructions when replacing or adding a system control, system monitor, power, battery, or charger module. Contact your Vertiv representative to purchase additional modules to expand your system or for replacement modules.

6.3.1 Removing Power, VRLA Battery and Charger Modules

WARNING! Risk of heavy unit falling over. Can cause equipment damage, injury or death. Read all of the instructions before attempting to move the unit, lift it, remove packaging or prepare the unit for installation. The UPS presents a tipping hazard. Do not remove more than one module at a time. Failure to do so may cause unit to tip over and cause serious injury.

1. Remove bezel cover to locate the faulty module. The yellow fault LED is illuminated on the faulty module.

NOTE: When removing bezels from a transformer-based UPS, note which have filters and replace them accordingly. Bezels from the modules have air filters. There are no filters on the bottom three transformer bezels. The transformer has a separate air filter.


NOTE: If your system does not contain a redundant module, you may need to manually place the UPS into manual bypass before removing modules to avoid accidental loss of output power for the connected equipment.

2. Use a Phillips screwdriver to remove the fastener (if installed).
3. Pull out the lock lever slightly and lift up, then wait a few seconds before continuing.

Proprietary and Confidential ©2026 Vertiv Group Corp.

4. Slide the module out about two-thirds of the way until it is stopped by the safety catch, then lift the module slightly and, while supporting the module, slide it completely out.

Figure 6.1 Removing a Module

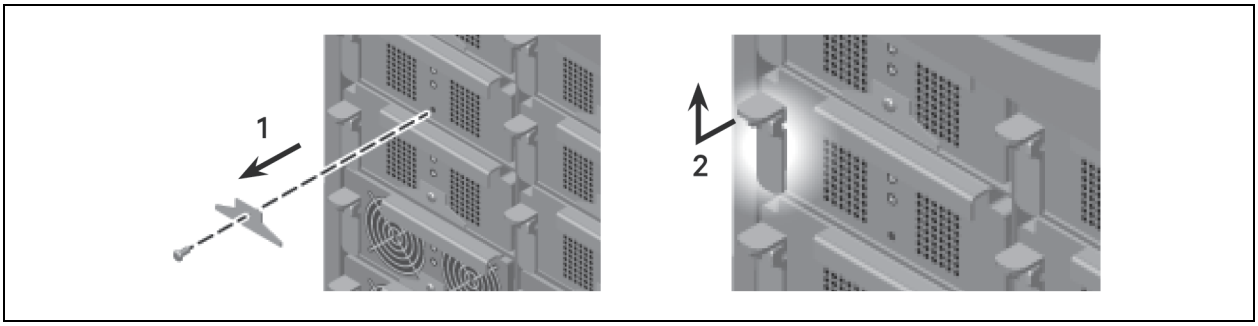

Item	Description
1	Remove module securing bracket if installed.
2	Pull up lock lever and wait a few seconds.

6.3.2 Removing Lithium-ion Battery Modules

WARNING! Risk of heavy unit falling over.
Can cause equipment damage, injury, or death. Read all of the instructions before attempting to move the unit, lift it, remove packaging, or prepare the unit for installation. The UPS presents a tipping hazard. Do not remove more than one module at a time. Failure to do so may cause the unit to tip over and cause serious injury.


1. Remove bezel cover to locate the faulty module. The yellow fault LED is illuminated on the faulty module.

NOTE: When removing bezels from a transformer-based UPS, note which have filters and replace them accordingly. Bezels from the modules have air filters. There are no filters on the bottom three transformer bezels. The transformer has a separate air filter.

NOTE: If your system does not contain a redundant module, you may need to manually place the UPS into manual bypass before removing modules to avoid accidental loss of output power for the connected equipment.

2. Use a Phillips-head screwdriver to remove the bracket protecting the cable.
3. Pull out the lock lever slightly and lift up, then wait a few seconds before continuing.
4. Disconnect the cell balancing cable from the modules.
5. Use a #2 Phillips-head screwdriver to remove the fastener.
6. Slide the module out about two-thirds of the way until it is stopped by the safety catch. Lift the module slightly and, while supporting the module, slide it completely out.

Figure 6.2 Lithium-ion Module Removal

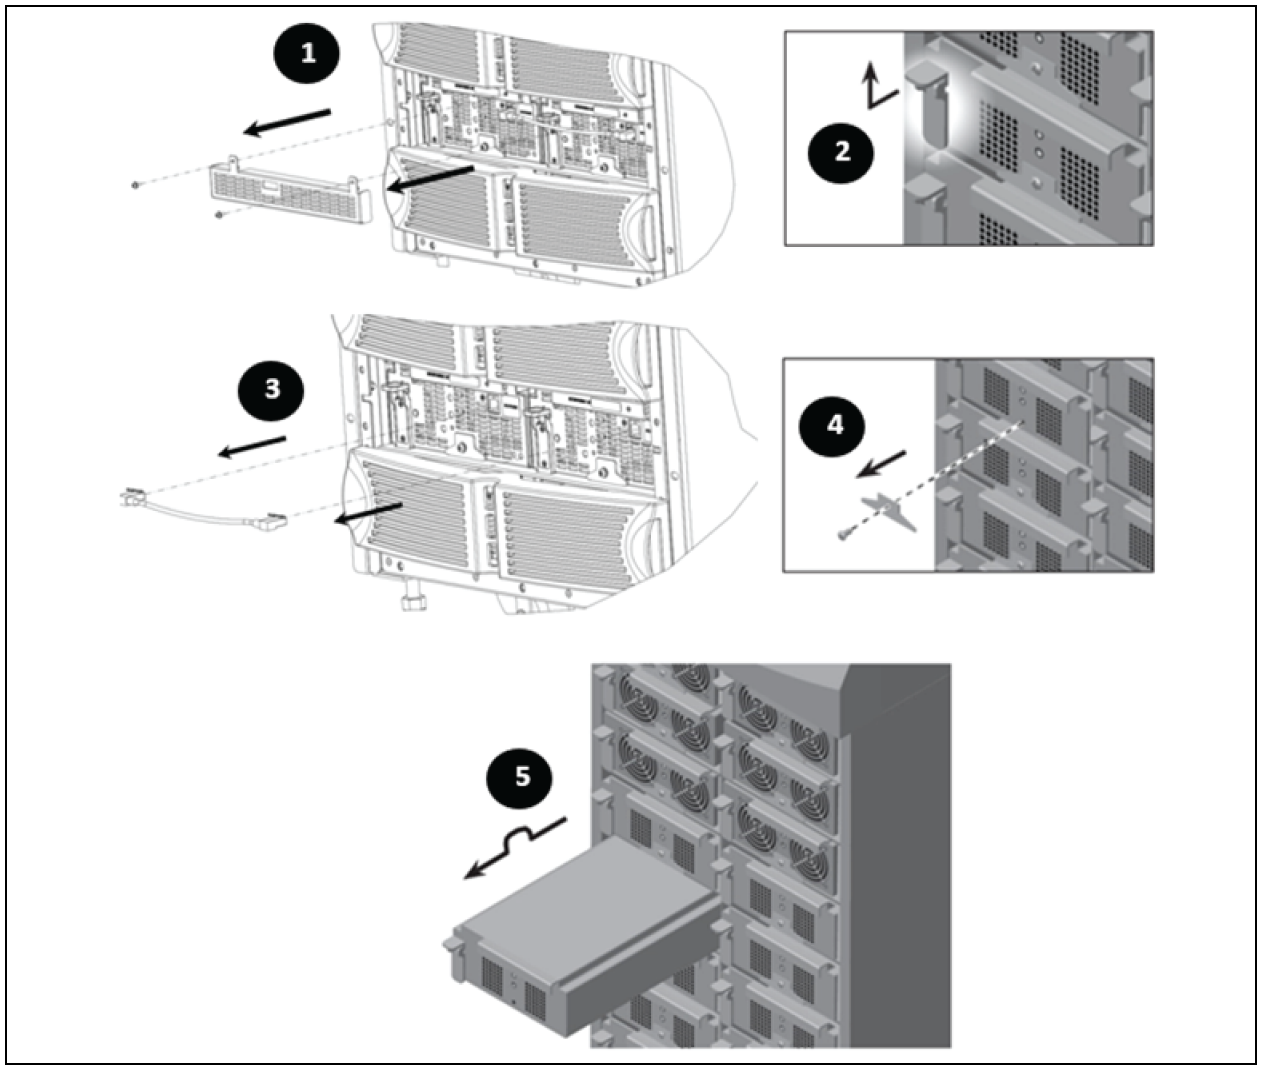

Item	Description
1	Remove cable securing bracket
2	Release the lock lever
3	Disconnect the LI Balancing cable
4	Remove the module securing bracket
5	Remove the module from the cabinet bay

Proprietary and Confidential ©2026 Vertiv Group Corp.

6.3.3 Removing System Control and System Monitor Modules

NOTICE

Risk of unintended shutdown. Can cause equipment damage.


Do not remove both the control and the monitor modules at the same time. Removing both the control module and monitor module at the same time will cause the UPS to shut down and remove power from the load. Replace these modules one at a time.

1. Remove the display bezel and the user interface (LCD) module from the frame, as shown in Figure 6.3 below, then lay the user-interface module on top of the UPS.
2. Locate the faulty module. The yellow fault LED is illuminated on the faulty module.

NOTE: If your system does not contain a redundant module, you may need to manually place the UPS into manual bypass before removing modules to avoid accidental loss of output power for the connected equipment.

3. Use a Phillips-head screwdriver to remove the screws from the 2 securing holes.


Figure 6.3 Display Bezel and User-Interface Module Removal

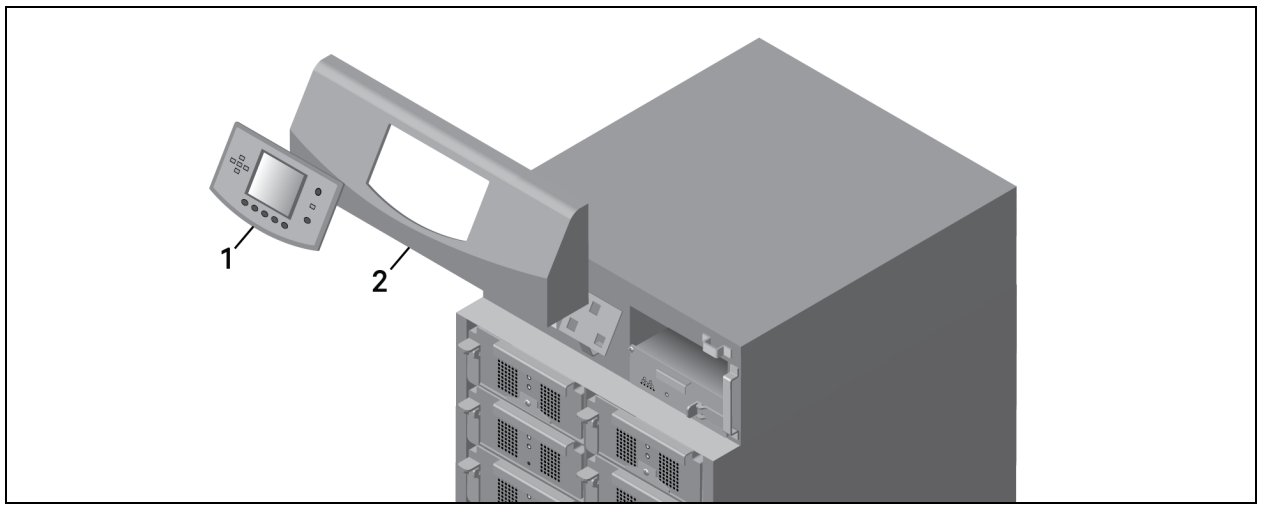

Item	Description
1	User-interface module
2	Display bezel

4. Pull out the lock lever slightly and pull to the left (see Figure 6.4 on the facing page), then wait a view seconds before continuing.
5. Making sure to support the module, slide it completely out of its control bay.

Figure 6.4 Releasing the Lock Lever

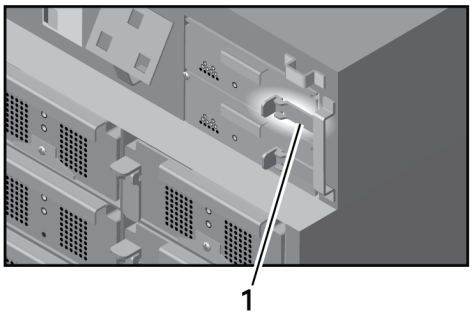

Item	Description
1	Lock lever


6.3.4 Replacing the User-Interface Module

Replace the user-interface module only while the Vertiv™ Liebert® APS is turned On (System Enable switch On and input power available). If this module is replaced while the UPS is Off, the UPS settings will be reset to factory defaults when the UPS is powered On with the new user-interface module installed.

1. Remove the display bezel on top of the frame, see Figure 6.5 on the next page.
2. Lift up the user-interface module, and put it on top of the UPS frame.
3. Disconnect the network cable from the user-interface module.
4. Connect the network cable to the new user-interface module.
5. Insert the new user-interface module into the clips and replace the display bezel.

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 6.5 Display Bezel and User-Interface Module Removal

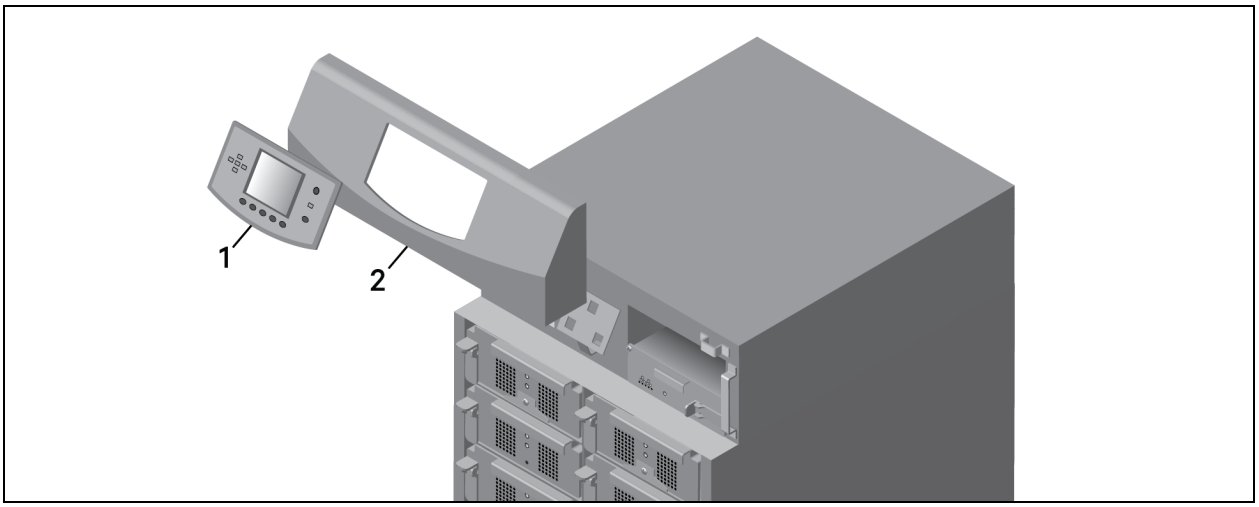

Item	Description
1	User-interface module
2	Display bezel

7 Maintenance

The UPS system operates with hazardous voltages. The repair work must be carried out only by qualified maintenance personnel.

WARNING! Risk of electric shock.
Even after the unit is disconnected from the mains (building wiring outlet), components inside the UPS system are still connected to the battery and electrically live and dangerous.

- Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high energy capacitors such as Bus capacitors.
- Only persons that are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.

WARNING! Risk of electric shock.
The battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground. Before touching, verify that no voltage is present

Batteries may cause electric shock and have a high short circuit current. Take the precautionary measures specified below and any other measures necessary when working with batteries:

- Remove wristwatches, rings, and other metal objects.
- Use only tools with insulated grips and handles.
- Do not dispose of batteries by burning them. This could cause battery explosion.
- Recycle or dispose of batteries according to local regulations.
- Do not open or destroy batteries. It can cause injury to the skin and eyes. It may be toxic.
- Replace fuses only with the same type and amperage in order to avoid fire hazards.
- Do not dismantle the UPS system.

Routine maintenance for the Vertiv™ Liebert® APS, includes proper care, scheduled maintenance and cleaning fan filters.

7.1 Proper Care

Proper maintenance of the UPS is imperative to optimal performance and life of the unit. We recommend that a certified technician perform preventive and corrective maintenance. Vertiv is dedicated to ensuring the highest level of performance and unmatched support for your Liebert® UPS. Contact your local Vertiv representative for service.

Proprietary and Confidential ©2026 Vertiv Group Corp.

7.2 Scheduled Maintenance

We recommend performing the following maintenance at least monthly:

- Clean unit.
- Clean or replace filters.
- Verify proper airflow.

We recommend performing the following maintenance annually:

- Verify that all power modules are operating properly.
- Verify that all battery modules are operating properly.
- Verify redundancy (if applicable).

7.3 Cleaning Fan Filters

The intake fans contain filters that must be replaced or cleaned periodically, depending on the surrounding environment. Check filters and replace them if they are very dirty or damaged.


To remove dirt and dust from a filter:

Use a vacuum or rinse out the filter under running water (with the dirt side down). If you cleaned it with water, blot the filters dry with a towel and allow it to air dry before reinstalling.

7.3.1 Accessing the Top Filter

1. Remove the display bezel.
2. Remove the user-interface module, and lay it on top of the UPS frame.
3. Remove the two screws on the LCD mounting plate.
4. Remove the screw in the middle of the filter assembly, remove the filter as shown in Figure 7.1 below, and clean the filters as described in Cleaning Fan Filters above.
5. Replace the filter, mounting plate, user-interface module and display bezel.

Figure 7.1 Replacing/Cleaning the Top Filter

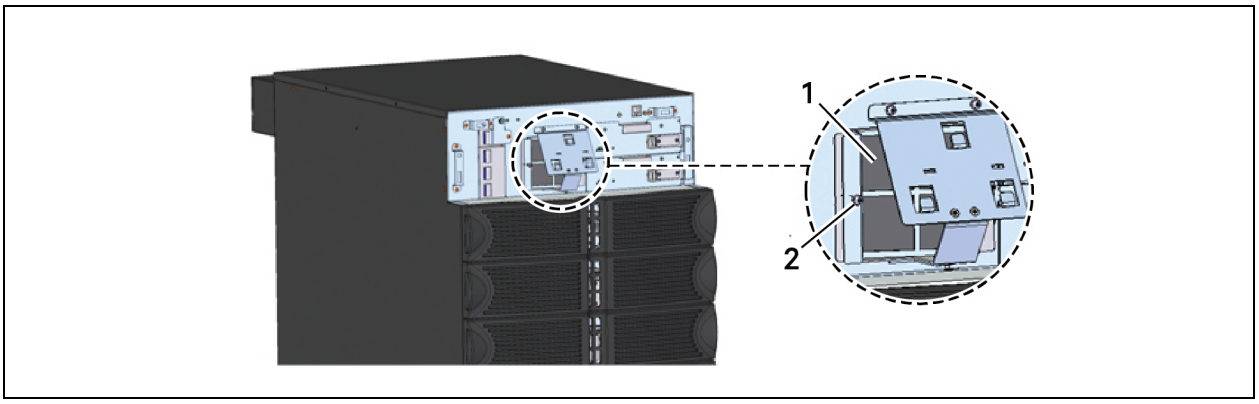


Item	Description
1	Filter
2	Screw (1 place)

7.3.2 Accessing the Bezel Filter

1. Remove the bezel from the frame.
2. Remove the filter assembly from the bezel, see Figure 7.2 below, and clean the filters as described in Cleaning Fan Filters on the previous page.
3. Replace the filter in the bezel and place the bezel on the frame.

Figure 7.2 Replacing/Cleaning the Bezel Filter

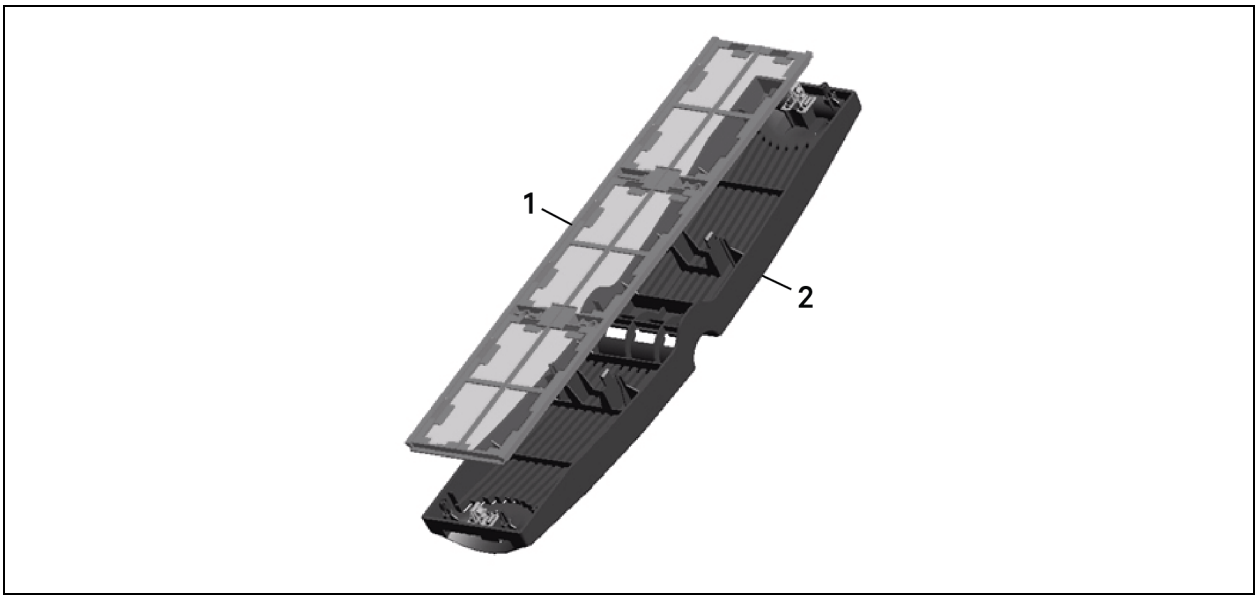

Item	Description
1	Filter
2	Bezel


Proprietary and Confidential ©2026 Vertiv Group Corp.

7.3.3 Accessing the Bottom Fan Filter

NOTE: Only transformer-based frames have bottom fans.

1. Remove the three lower bezels at the bottom of the frame.
2. Remove the screws and take out the filter, shown in Figure 7.3 below, and clean the filters as described in Cleaning Fan Filters on page 78.
3. Replace the filter and bezels.

Figure 7.3 Replacing/Cleaning the Bottom Fan Filter

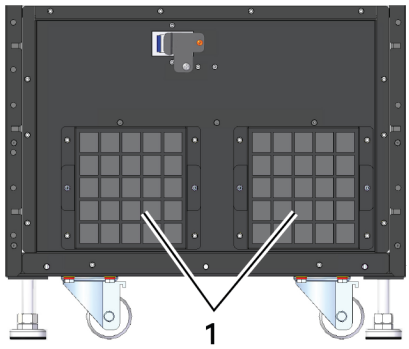

Item	Description
1	Filters

8 Specifications

Table 8.1 Vertiv™ Liebert® APS Specifications

Unit Size, Type	10 Bay	16 Bay	12 Bay	16 Bay	10 Bay	16 Bay
	No Transformer		Transformer-based		No Transformer Dual Inverter	
Frame Rating, kVA/kW	15/13.5	20/18	15/13.5	20/18	15/13.5	20/18
General & Environmental						
Conducted and Radiated EMC Levels	IEC/EN/AS 62040-2 Cat 2, CISPR22 Class A, FCC Part 15 Class A					
Compliant Safety Standards	IEC/EN/AS/BS 62040-1 UL 1778 5th Ed and CSA 22.2 No. 107.3-14				UL 1778 5th Ed and CSA 22.2 No. 107.3-14	
Compliant Immunity Standards	IEC/EN/AS 61000-4-2, 3, 4, 5, 6					
Transportation	Individual packaged modules meet ISTA-1A/1B, the complete system meets ISTA-1E Lithium-ion battery modules meet ISTA-2A and ISTA-3E					
Environmental	WEEE and ROHS, REACH Compliant					
Protection Degree IEC60529	IP 20					
Class of Equipment	Class 1					
Electrical Supply System	TN, TT, IT					
Color	RAL 7021					
Dimensions, W x D x H, in (mm)						
	17x32x27 (440x800x695)	17x34x38 (440x850x970)	17x32x42 (440x800x1060)	17x34x49 (440x850x1240)	17x32x27 (440x800x695)	17x34x38 (440x850x970)
Weight, lb. (kg)						
Unit Weight (empty frame)	280 (127)	320 (145.1)	510 (231.3)	540 244.9)	280 (127)	320 (145.1)
Shipping Weight (empty frame)	320 (145.1)	360 (163.3)	550 (249.5)	580 (263.1)	320 (145.1)	360 (163.3)
Unit Weight (frame rating populated w/VRLA)	565 (256.3)	700 (317.5)	795 (360.6)	920 (417.3)	565 (256.3)	700 (317.5)

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 8.1 Vertiv™ Liebert® APS Specifications (continued)

Unit Size, Type	10 Bay	16 Bay	12 Bay	16 Bay	10 Bay	16 Bay
	No Transformer		Transformer-based		No Transformer Dual Inverter	
Frame Rating, kVA/kW	15/13.5	20/18	15/13.5	20/18	15/13.5	20/18
Shipping Weight (frame rating populated w/VRLA)	605 (274.4)	740 (335.7)	835 (378.7)	960 (435.4)	605 (274.4)	740 (335.7)
Environmental						
Operating Temperature	0 - 40°C (32 - 104°F)					
Relative Humidity	0 - 95%, non-condensing					
Altitude	3000 m (10000 ft.), 25°C (77°F)					
Storage Temperature	–20 to 60°C (–4 to 140°F) [batteries are from –15 to 40°C (5 to 104°F)]					
Efficiency (AC-AC)	91.8-92.0%	91.6-92.0%	88.5-89.9%	88.6-89.7%	90.4-91.0%	90.0-91.0%
Nominal Heat Dissipation (maximum)	4208 BTU/Hr	5747 BTU/Hr	5528 BTU/Hr	7965 BTU/Hr	4904 BTU/Hr	6768 BTU/Hr
Acoustic Noise Level, dBA	< 55dB (≤ 50% load), < 65dB (51-100% load), at 1 meter					
Input Data						
Nominal Input Voltage, VAC	200/208/220/230/240, Single Phase				200/100, 220/110, 230/115, 240/120, 254/127, 208/120, 173/100, 190/110, 200/115, 220/127, Two Phase	
	380/400/415; Three-Phase		—	—		
Input Voltage Range	The input voltage range based on the output loading, refer to **Table 8.2** on page 84.					
Power Factor, Cos	Single-Phase Input, ≥ 0.99, Three-phase Input, ≥ 0.95		Single-Phase Input, ≥ 0.99			
Input Frequency, Nominal	50/60 Hz					
Input Current Distortion, THDi	≤ 5%					
Input Frequency Range	40 to 70 Hz, auto sensing					
VRLA Battery Module						
Lead-Acid Batteries Per String	12					

Table 8.1 Vertiv™ Liebert® APS Specifications (continued)

Unit Size, Type	10 Bay	16 Bay	12 Bay	16 Bay	10 Bay	16 Bay
	No Transformer		Transformer-based		No Transformer Dual Inverter	
Frame Rating, kVA/kW	15/13.5	20/18	15/13.5	20/18	15/13.5	20/18
Battery Cells Per String	72					
Battery Capacity	36 W, 15 min-rate to 1.67 V per cell, 25°C (77°F)					
Backup Time, Full Load	5 (for non-redundant system which has equal number of battery strings and power modules)					
Maximum Charge Current (Full, Load)	Power module internal charger: 1.8 A Charger module: 10 A					
Nominal Voltage	144 VDC					
Recharge Timer	< 5 Hr. to 90% capacity (PM internal charger with 1:1 ratio of PM to Battery Strings)					
LIO Battery Module						
LIO Modules per String	2					
Cell Configuration per String	48S2P (or 24S2P per module)					
Battery Capacity	480Wh					
Backup Time, Full Load	8 (for non-redundant system which has equal number of battery strings and power modules)					
Maximum Charge Current (Full, Load)	Power module internal charger: 1.8 A Charger module: 10 A					
Nominal Voltage	153.6 V					
Recharge Timer	< 4.5 Hr. to 90% capacity (PM internal charger with 1:1 ratio of PM to Battery Strings)					
Certification	UL 1973 3rd Edition					
Output Data						
Output Voltage, VAC	200/208/220/230/240 Single-Phase		100/100/173/200 110/110/190/220 115/115/199/230 120/120/208/240 Single-Phase		200/100, 220/110, 230/115, 240/120, 254/127, 208/120, 173/100, 190/110, 200/115, 220/127; Two-Phase	
Voltage Regulation	±3%					
Voltage Stability (100% Step Load)	±7%					
Voltage Recovery Time	≤ 60 ms					

Proprietary and Confidential ©2026 Vertiv Group Corp.

Table 8.1 Vertiv™ Liebert® APS Specifications (continued)

Unit Size, Type	10 Bay	16 Bay	12 Bay	16 Bay	10 Bay	16 Bay
	No Transformer		Transformer-based		No Transformer Dual Inverter	
Frame Rating, kVA/kW	15/13.5	20/18	15/13.5	20/18	15/13.5	20/18
Voltage Distortion	≤ 3%, linear load					
	≤ 5%, non-linear load		≤ 7%, non-linear load		≤ 5%, non-linear load	
Output Frequency	50/60 Hz					
Output Overload Capability	< 104% continuous					
	105% - 130% for 1 min					
	131% - 150% for 10 sec					
	151% - 200% for 1 sec					
	> 201% for 250 msec					

Table 8.2 Rated Input Voltage Range (Unit: VAC)

System Configuration	% UPS Load	Low Limit Value	High Limit Value
Dual-Inverter Configured to 120 or 127 VAC per Phase	>100%	98 ±3.1	139.5 ±3.1
	90% ~ 100%	89 ±3.1 ~ 98 ±3.1	
	70% ~ 90%	74 ±3.1 ~ 89 ±3.1	
	30% ~ 70%	60.5 ±3.1 ~ 74 ±3.1	
	<30%	60.5 ±3.1	
Dual-Inverter Configured to 100, 110 or 115 VAC per Phase	>100%	84 ±3.1	
	90% ~ 100%	80 ±3.1 ~ 84 ±3.1	
	70%~90%	72 ±3.1 ~ 80 ±3.1	
	40%~70%	60 ±3.1 ~ 72 ±3.1	
	<40%	60 ±3.1	
Single-Inverter Transformer-Based and Transformer-Free	>100%	170 ±5	280 ±5
	90% ~ 100%	160 ±5 ~ 170 ±5	
	70%~90%	140 ±5 ~ 160 ±5	
	50%~70%	120 ±5 ~ 140 ±5	
	<50%	120 ±5	

Table 8.3 Liebert® APS External Battery Cabinet Specifications

Parameters	AS7EBCNCC1BX000
General and Environmental	
Conducted and Radiated EMC Levels	IEC/EN/AS 62040-2—Class A, FCC Part 15 (Class A)
Safety Standards	IEC/EN/AS/BS 62040-1: UL 1778 5th Ed and CSA 22.2 No. 107.3
Immunity Standards	IEC/EN/AS 61000-4-2, 3, 4, 5, 6
Transportation	ISTA-1E
Dimensions, W x D x H	17 x 28 x 38 in. (440 x 712 x 970 mm)
Unit Weight	147.7 lb. (67 kg)
Shipping Weight	209.4 lb. (95 kg)
Environmental	
Operating Temperature	32 to 104°F (0 to 40°C)
Storage Temperature	Without battery: -4 to 140°F (-20 to 60°C) With battery: 5 to 104°F (-15 to 40°C)
Relative Humidity	0 - 95%, non-condensing
Altitude	10,000 ft (3000 m)
VRLA Battery Module	
Lead-Acid Batteries (per string)	12
Backup Time (Full Load), Minutes	See, *Estimated Battery Run Times: Model Number Digits 1-3 = AS1 or ASA* *on the next page* *through* *Estimated Battery Run Times: Model Number Digits 1-3 = AS6 or ASF* *on page 106*.
LIO Battery Module	
Lithium-ion Cells (per string)	48S2P
Backup Time (Full Load), Minutes	See, Estimated Battery Run Times: Model-number Digits 1-3 = AL1 on page 110 *through* Estimated Battery Run Times: Model-number Digits 1-3 = AL6 on page 130.
Up to four external battery cabinets can be connected to each UPS frame and each external battery cabinet can be configured with up to seven strings of batteries.	

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.1 Estimated Battery Run Times: Model Number Digits 1-3 = AS1 or ASA

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.1 10-Bay, Single-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AS1 or ASA


Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	5	16	26	39	48	63	76	93	105	120	130	139	146	152	157	162	166	186	196	204	212	220	226	304	310	315	320	324	328	332	336	339
	90%	4050	6	18	30	44	52	72	90	104	120	131	140	148	154	160	165	184	195	204	213	221	300	307	313	318	323	328	332	336	340	343	346	422
	80%	3600	8	21	36	48	66	81	102	120	132	142	150	157	163	180	193	204	214	223	303	310	316	322	327	332	336	341	344	420	423	426	429	432
	75%	3375	8	22	39	51	72	93	108	127	138	148	155	162	167	192	204	214	224	304	311	318	324	329	334	339	343	347	422	426	429	432	434	437
	70%	3150	9	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	421	425	428	432	434	437	440	442
	60%	2700	11	28	48	71	96	113	135	147	156	164	187	202	215	226	308	317	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450	452
	50%	2250	15	38	60	90	112	136	150	160	181	200	216	301	312	321	329	336	343	420	425	430	434	438	441	444	447	450	452	454	456	458	460	462
	40%	1800	19	47	78	110	138	154	165	197	216	304	316	327	336	344	422	428	433	438	442	446	449	452	455	457	460	462	464	466	467	480	-	-
	30%	1350	27	66	108	142	160	192	217	309	324	336	345	426	432	438	444	448	452	456	459	462	464	466	480	-	-	-	-	-	-	-	-	-
	25%	1125	35	79	130	155	188	219	313	329	342	424	432	439	445	450	454	458	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	44	104	148	185	222	319	337	422	432	441	448	453	458	462	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	99	166	312	345	437	450	459	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	33	39	44	48	52	63	70	76	81	93	99	105	110	120	126	131	135	139	143	146	149	152	155	157	160	-
	90%	8100	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	-
	80%	7200	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	138	142	146	150	154	157	160	163	165	180	187	193	199	-
	75%	6750	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	209	-
	70%	6300	-	9	17	25	33	42	48	53	69	77	91	100	107	120	127	134	140	145	149	153	157	160	164	166	184	191	198	204	210	215	220	-
	60%	5400	-	11	20	28	41	48	53	71	81	97	106	113	128	135	142	147	152	157	161	164	167	188	196	203	210	216	222	227	304	309	313	-
	50%	4500	-	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	331	334	-
	40%	3600	-	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	427	-
	30%	2700	-	27	46	67	91	109	130	143	153	161	167	194	208	220	302	311	318	325	332	337	342	347	423	427	430	434	437	440	442	442	445	447
	25%	2250	-	35	52	80	107	131	145	156	165	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	449	451	453	455	457	-
	20%	1800	-	44	73	105	133	149	161	186	207	223	309	320	330	338	345	423	428	433	438	441	445	448	451	454	456	459	461	463	464	466	480	-
	10%	900	-	99	144	166	213	312	331	345	428	436	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	12	16	19	22	26	30	35	39	43	46	48	51	53	63	68	72	76	80	83	93	97	101	105	108	111	120	124	-
	90%	12150	-	-	6	10	14	18	22	26	30	35	40	44	47	50	52	61	67	72	76	80	90	95	99	103	107	110	120	124	127	131	134	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	91	97	102	106	110	120	124	128	132	136	139	142	145	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	81	93	98	103	108	112	122	127	131	135	138	142	145	148	150	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	109	120	125	129	134	138	141	145	148	151	153	156	-
	60%	8100	-	-	11	18	23	28	37	43	48	52	64	71	78	83	97	103	109	113	125	131	135	140	144	147	151	154	157	159	162	164	166	-
	50%	6750	-	-	15	22	28	38	45	50	61	71	79	92	100	107	113	126	132	137	142	147	151	155	158	161	164	166	183	190	196	202	208	-
	40%	5400	-	-	20	28	40	47	53	69	79	94	104	111	126	133	140	145	151	155	159	163	166	184	192	199	206	213	219	224	301	306	310	-
	30%	4050	-	-	27	41	50	67	80	98	109	125	135	143	150	156	161	165	184	194	204	212	220	227	305	311	316	321	325	330	334	337	341	-
	25%	3375	-	-	35	48	65	80	101	113	131	141	149	156	162	167	191	202	212	221	301	308	314	320	326	330	335	339	343	347	422	425	428	-
	20%	2700	-	-	44	63	81	105	125	139	149	157	164	186	200	212	223	304	313	320	326	332	337	342	347	423	426	430	433	436	439	441	444	-
	10%	1350	-	-	98	132	152	165	201	222	311	324	335	344	424	430	436	441	445	449	453	456	459	461	464	466	480	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.2 10-Bay, Single-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

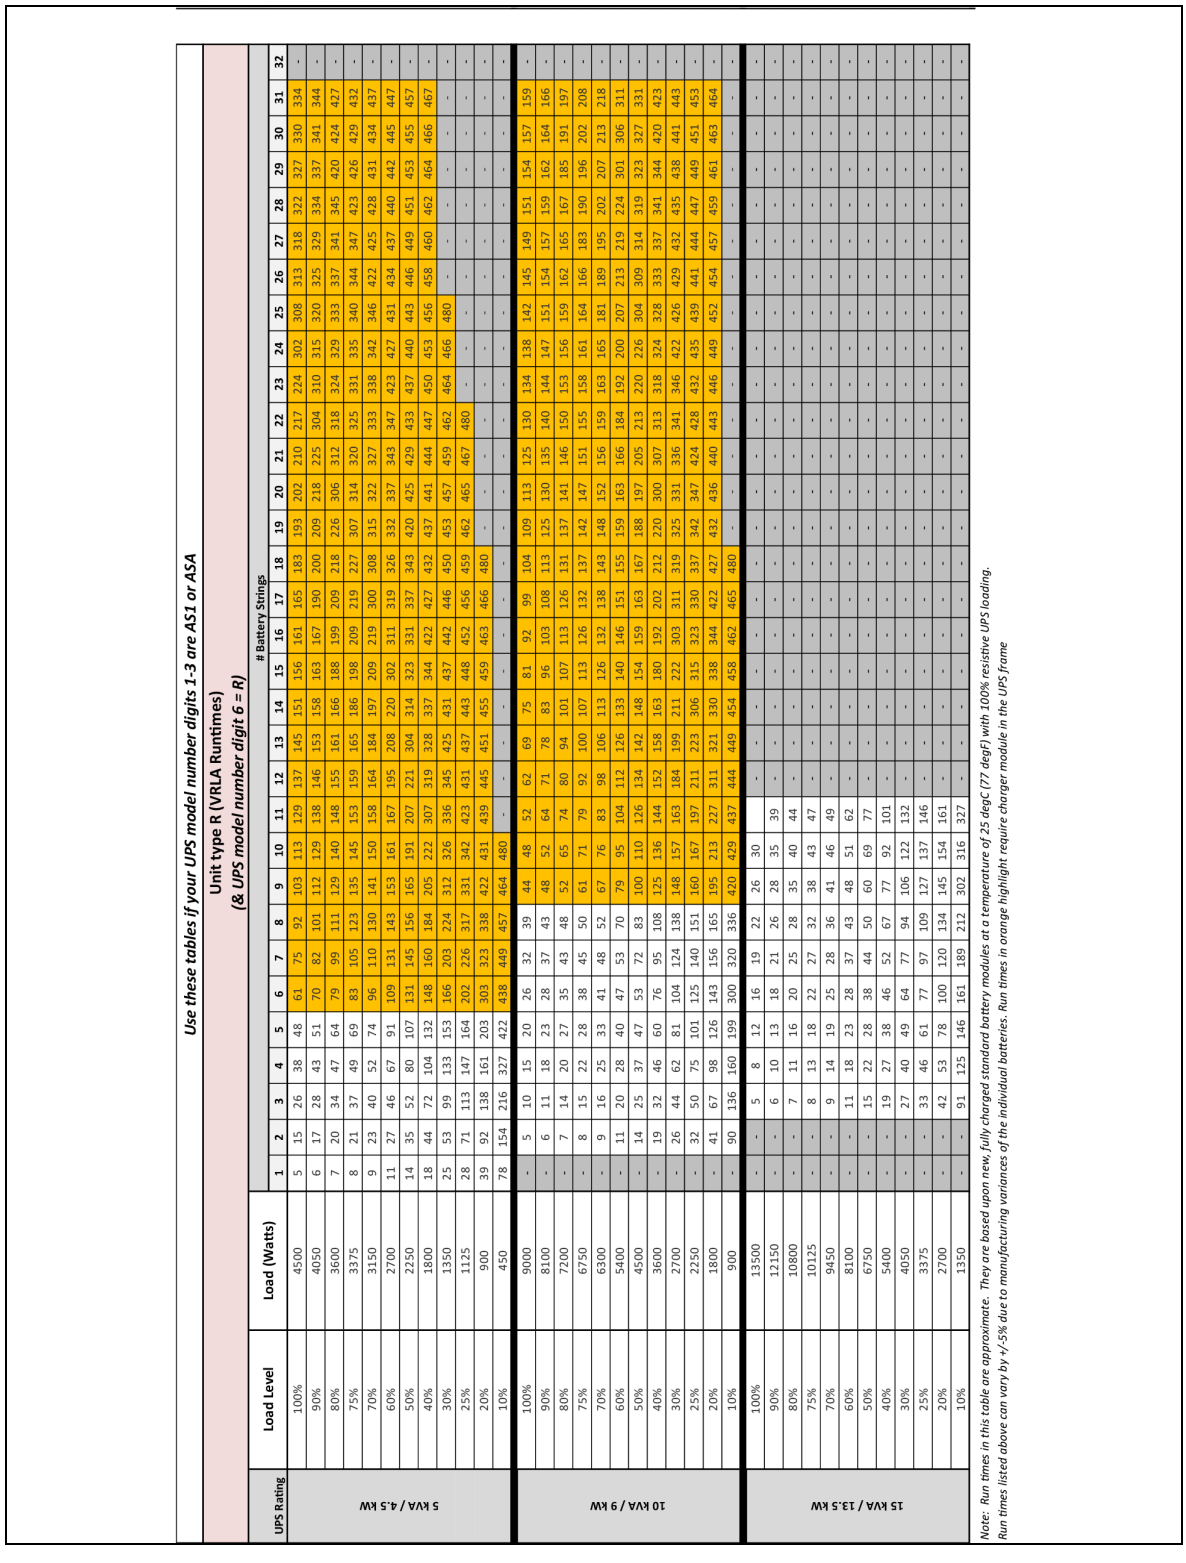

Use these tables if your UPS model number digits 1-3 are AS1 or ASA

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	5	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	330	334	-
	90%	4050	6	17	28	43	51	70	82	101	112	129	138	146	153	158	163	167	190	200	209	218	225	304	310	315	320	325	329	334	337	341	344	-
	80%	3600	7	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	427	-
	75%	3375	8	21	37	49	69	83	105	123	135	145	153	159	165	186	198	209	219	227	307	314	320	325	331	335	340	344	347	423	426	429	432	-
	70%	3150	9	23	40	52	74	96	110	130	141	150	158	164	184	197	209	219	300	308	315	322	327	333	338	342	346	422	425	428	431	434	437	-
	60%	2700	11	27	46	67	91	109	131	143	153	161	167	195	208	220	302	311	319	326	332	337	343	347	423	427	431	434	437	440	442	445	447	-
	50%	2250	14	35	52	80	107	131	145	156	165	191	207	221	304	314	323	331	337	343	420	425	429	433	437	440	443	446	449	451	453	455	457	-
	40%	1800	18	44	72	104	132	148	160	184	205	222	307	319	328	337	344	422	427	432	437	441	444	447	450	453	456	458	460	462	464	466	467	-
	30%	1350	25	53	99	133	153	166	203	224	312	326	336	345	425	431	437	442	446	450	453	457	459	462	464	466	480	-	-	-	-	-	-	-
	25%	1125	28	71	113	147	164	202	226	317	331	342	423	431	437	443	448	452	456	459	462	465	467	480	-	-	-	-	-	-	-	-	-	-
	20%	900	39	92	138	161	203	303	323	338	422	431	439	445	451	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	78	154	216	327	422	438	449	457	464	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	15	20	26	32	39	44	48	52	62	69	75	81	92	99	104	109	113	125	130	134	138	142	145	149	151	154	157	159	-
	90%	8100	-	6	11	18	23	28	37	43	48	52	64	71	78	83	96	103	108	113	125	130	135	140	144	147	151	154	157	159	162	164	166	-
	80%	7200	-	7	14	20	27	35	43	48	52	65	74	80	94	101	107	113	126	131	137	141	146	150	153	156	159	162	165	167	185	191	197	-
	75%	6750	-	8	15	22	28	38	45	50	61	71	79	92	100	107	113	126	132	137	142	147	151	155	158	161	164	166	183	190	196	202	208	-
	70%	6300	-	9	16	25	33	41	48	52	67	76	83	98	106	113	126	132	138	143	148	152	156	159	163	165	181	189	195	202	207	213	218	-
	60%	5400	-	11	20	28	40	47	53	70	79	95	104	112	126	133	140	146	151	155	159	163	166	184	192	200	207	213	219	224	301	306	311	-
	50%	4500	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	188	197	205	213	220	226	304	309	314	319	323	327	331	-
	40%	3600	-	19	32	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	307	313	318	324	328	333	337	341	344	420	423	-
	30%	2700	-	26	44	62	81	104	124	138	148	157	163	184	199	211	222	303	311	319	325	331	336	341	346	422	426	429	432	435	438	441	443	-
	25%	2250	-	32	50	75	101	125	140	151	160	167	197	211	223	306	315	323	330	337	342	347	424	428	432	435	439	441	444	447	449	451	453	-
	20%	1800	-	41	67	98	126	143	156	165	195	213	227	311	321	330	338	344	422	427	432	436	440	443	446	449	452	454	457	459	461	463	464	-
	10%	900	-	90	136	160	199	300	320	336	420	429	437	444	449	454	458	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	12	16	19	22	26	30	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	6	10	13	18	21	26	28	35	39	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	7	11	16	20	25	28	35	40	44	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	8	13	18	22	27	32	38	43	47	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	9	14	19	25	28	36	41	46	49	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	11	18	23	28	37	43	48	51	62	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	15	22	28	38	44	50	60	69	77	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	19	27	38	46	52	67	77	92	101	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	27	40	49	64	77	94	106	122	132	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	33	46	61	77	97	109	127	137	146	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	42	53	78	100	120	134	145	154	161	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	91	125	146	161	189	212	302	316	327	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.3 10-Bay, Single-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)


Use these tables if your UPS model number digits 1-3 are AS1 or ASA

Unit type B (VRLA Runtimes)
(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	5	16	26	39	48	63	76	93	105	120	130	139	146	152	157	162	166	186	196	204	212	220	226	304	310	315	320	324	328	332	336
	90%	4050	-	6	18	30	44	52	72	90	104	120	131	140	148	154	160	165	184	195	204	213	221	300	307	313	318	323	328	332	336	340	343	346
	80%	3600	-	8	21	36	48	66	81	102	120	132	142	150	157	163	180	193	204	214	223	303	310	316	322	327	332	336	341	344	420	423	426	429
	75%	3375	-	8	22	39	51	72	93	108	127	138	148	155	162	167	192	204	214	224	304	311	318	324	329	334	339	343	347	422	426	429	432	434
	70%	3150	-	9	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	421	425	428	432	434	437	440
	60%	2700	-	11	28	48	71	96	113	135	147	156	164	187	202	215	226	308	317	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450
	50%	2250	-	15	38	60	90	112	136	150	160	181	200	216	301	312	321	329	336	343	420	425	430	434	438	441	444	447	450	452	454	456	458	460
	40%	1800	-	19	47	78	110	138	154	165	197	216	304	316	327	336	344	422	428	433	438	442	446	449	452	455	457	460	462	464	466	467	480	-
	30%	1350	-	27	66	108	142	160	192	217	309	324	336	345	426	432	438	444	448	452	456	459	462	464	466	480	-	-	-	-	-	-	-	-
	25%	1125	-	35	79	130	155	188	219	313	329	342	424	432	439	445	450	454	458	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	44	104	148	185	222	319	337	422	432	441	448	453	458	462	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	99	166	312	345	437	450	459	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	33	39	44	48	52	63	70	76	81	93	99	105	110	120	126	131	135	139	143	146	149	152	155	157	-
	90%	8100	-	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	-
	80%	7200	-	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	138	142	146	150	154	157	160	163	165	180	187	193	-
	75%	6750	-	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	-
	70%	6300	-	-	9	17	25	33	42	48	53	69	77	91	100	107	120	127	134	140	145	149	153	157	160	164	166	184	191	198	204	210	215	-
	60%	5400	-	-	11	20	28	41	48	53	71	81	97	106	113	128	135	142	147	152	157	161	164	167	188	196	203	210	216	222	227	304	309	-
	50%	4500	-	-	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	331	-
	40%	3600	-	-	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	-
	30%	2700	-	-	27	46	67	91	109	130	143	153	161	167	194	208	220	302	311	318	325	332	337	342	347	423	427	430	434	437	440	442	445	-
	25%	2250	-	-	35	52	80	107	131	145	156	165	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	449	451	453	455	-
	20%	1800	-	-	44	73	105	133	149	161	186	207	223	309	320	330	338	345	423	428	433	438	441	445	448	451	454	456	459	461	463	464	466	-
	10%	900	-	-	99	144	166	213	312	331	345	428	436	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.4 10-Bay, Single-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

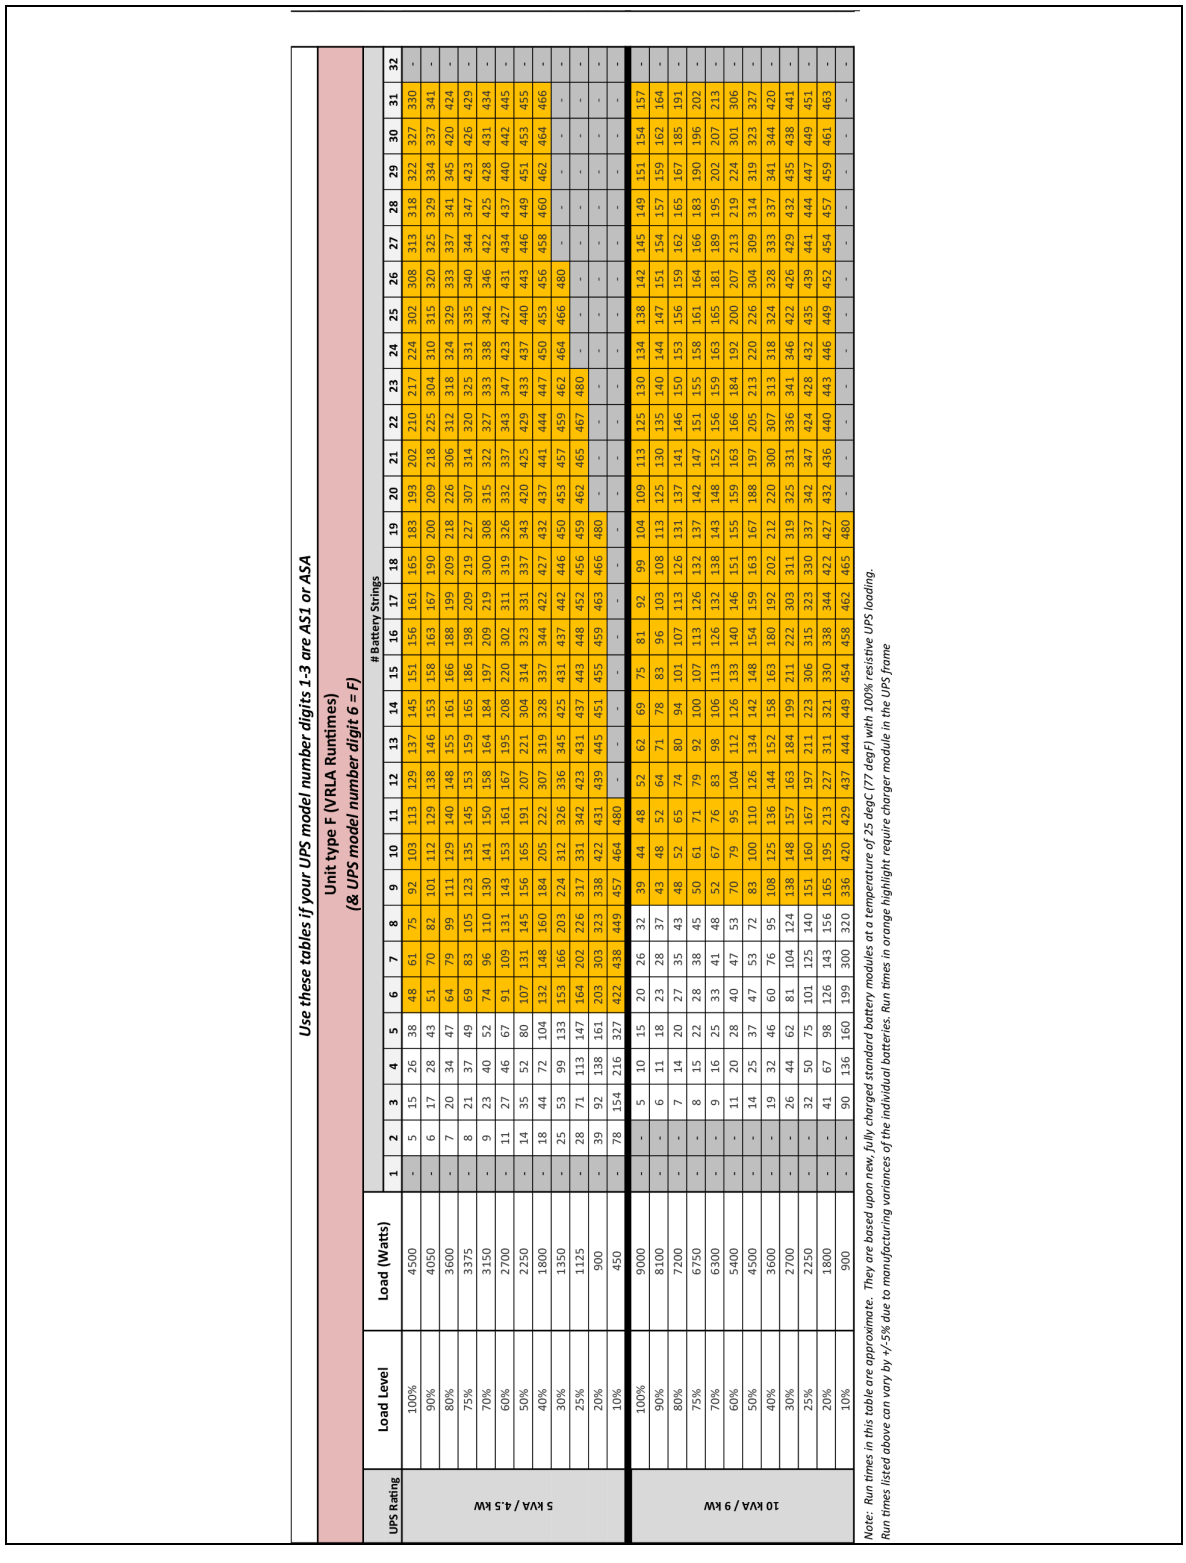

Use these tables if your UPS model number digits 1-3 are AS1 or ASA

Unit type F (VRLA Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	5	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	330	-
	90%	4050	-	6	17	28	43	51	70	82	101	112	129	138	146	153	158	163	167	190	200	209	218	225	304	310	315	320	325	329	334	337	341	-
	80%	3600	-	7	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	-
	75%	3375	-	8	21	37	49	69	83	105	123	135	145	153	159	165	186	198	209	219	227	307	314	320	325	331	335	340	344	347	423	426	429	-
	70%	3150	-	9	23	40	52	74	96	110	130	141	150	158	164	184	197	209	219	300	308	315	322	327	333	338	342	346	422	425	428	431	434	-
	60%	2700	-	11	27	46	67	91	109	131	143	153	161	167	195	208	220	302	311	319	326	332	337	343	347	423	427	431	434	437	440	442	445	-
	50%	2250	-	14	35	52	80	107	131	145	156	165	191	207	221	304	314	323	331	337	343	420	425	429	433	437	440	443	446	449	451	453	455	-
	40%	1800	-	18	44	72	104	132	148	160	184	205	222	307	319	328	337	344	422	427	432	437	441	444	447	450	453	456	458	460	462	464	466	-
	30%	1350	-	25	53	99	133	153	166	203	224	312	326	336	345	425	431	437	442	446	450	453	457	459	462	464	466	480	-	-	-	-	-	-
	25%	1125	-	28	71	113	147	164	202	226	317	331	342	423	431	437	443	448	452	456	459	462	465	467	480	-	-	-	-	-	-	-	-	-
	20%	900	-	39	92	138	161	203	303	323	338	422	431	439	445	451	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	78	154	216	327	422	438	449	457	464	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	15	20	26	32	39	44	48	52	62	69	75	81	92	99	104	109	113	125	130	134	138	142	145	149	151	154	157	-
	90%	8100	-	-	6	11	18	23	28	37	43	48	52	64	71	78	83	96	103	108	113	125	130	135	140	144	147	151	154	157	159	162	164	-
	80%	7200	-	-	7	14	20	27	35	43	48	52	65	74	80	94	101	107	113	126	131	137	141	146	150	153	156	159	162	165	167	185	191	-
	75%	6750	-	-	8	15	22	28	38	45	50	61	71	79	92	100	107	113	126	132	137	142	147	151	155	158	161	164	166	183	190	196	202	-
	70%	6300	-	-	9	16	25	33	41	48	52	67	76	83	98	106	113	126	132	138	143	148	152	156	159	163	165	181	189	195	202	207	213	-
	60%	5400	-	-	11	20	28	40	47	53	70	79	95	104	112	126	133	140	146	151	155	159	163	166	184	192	200	207	213	219	224	301	306	-
	50%	4500	-	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	188	197	205	213	220	226	304	309	314	319	323	327	-
	40%	3600	-	-	19	32	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	307	313	318	324	328	333	337	341	344	420	-
	30%	2700	-	-	26	44	62	81	104	124	138	148	157	163	184	199	211	222	303	311	319	325	331	336	341	346	422	426	429	432	435	438	441	-
	25%	2250	-	-	32	50	75	101	125	140	151	160	167	197	211	223	306	315	323	330	337	342	347	424	428	432	435	439	441	444	447	449	451	-
	20%	1800	-	-	41	67	98	126	143	156	165	195	213	227	311	321	330	338	344	422	427	432	436	440	443	446	449	452	454	457	459	461	463	-
	10%	900	-	-	90	136	160	199	300	320	336	420	429	437	444	449	454	458	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.2 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS2 or ASB

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.5 16-Bay, Single-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AS2 or ASB

Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	5	16	26	39	48	63	76	93	105	120	130	139	146	152	157	162	166	186	196	205	213	220	226	304	310	315	320	324	328	332	336	339	342	345	420
	90%	4050	6	18	30	44	52	72	90	103	120	131	140	148	154	160	165	183	194	204	213	221	300	307	313	318	323	328	332	336	340	343	346	421	424	427	429
	80%	3600	8	21	36	48	66	81	102	120	132	142	150	157	163	180	193	204	214	222	302	309	316	321	327	332	336	340	344	420	423	426	429	432	434	437	439
	75%	3375	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	214	223	303	311	317	323	329	334	338	343	347	422	425	429	431	434	437	439	441	443
	70%	3150	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	437	439	442	444	446	448
	60%	2700	11	28	48	70	95	112	134	146	156	163	186	201	215	226	307	316	323	330	336	341	346	423	427	430	434	437	440	443	445	447	450	452	454	455	457
	50%	2250	15	38	60	90	111	136	149	160	180	199	215	300	311	320	329	336	342	420	425	429	433	437	441	444	447	449	452	454	456	458	460	462	463	465	466
	40%	1800	19	46	77	109	137	153	164	195	215	302	315	326	335	343	421	427	432	437	441	445	448	451	454	457	459	461	463	465	467	480	-	-	-	-	-
	30%	1350	27	64	106	140	159	189	215	307	322	334	344	424	431	437	443	447	451	455	458	461	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	34	78	128	154	185	216	310	327	340	422	431	438	444	449	453	457	461	464	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	43	102	147	180	219	316	334	420	431	439	446	452	457	461	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	96	164	308	342	434	448	457	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	33	39	44	49	52	63	70	76	82	94	100	105	110	121	126	131	135	139	143	146	149	152	155	158	160	162	164	166	-
	90%	8100	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	184	189	195	-
	80%	7200	-	8	14	21	27	36	43	48	52	66	74	81	95	102	108	120	127	132	138	142	147	150	154	157	160	163	165	180	187	193	199	204	209	214	-
	75%	6750	-	8	16	22	30	39	46	51	63	72	80	93	101	108	120	127	133	139	144	148	152	156	159	162	165	167	186	192	199	204	210	215	220	224	-
	70%	6300	-	9	17	25	33	42	48	53	69	77	91	100	107	120	127	134	140	145	149	153	157	161	164	166	184	191	198	204	210	215	220	225	302	306	-
	60%	5400	-	12	21	30	41	48	60	72	81	97	106	120	128	136	142	148	152	157	161	164	180	188	196	204	210	217	222	300	305	309	314	318	321	325	-
	50%	4500	-	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	331	334	338	341	344	-
	40%	3600	-	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	427	429	432	434	-
	30%	2700	-	27	46	67	91	109	130	143	153	160	167	194	208	219	301	310	318	325	331	337	342	347	423	427	430	434	437	439	442	444	447	449	451	453	-
	25%	2250	-	35	52	80	107	131	145	156	164	190	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	459	461	462	-
	20%	1800	-	44	73	105	132	149	161	186	206	223	308	320	329	337	344	423	428	433	437	441	445	448	451	454	456	458	460	462	464	466	480	-	-	-	-
	10%	900	-	98	143	165	213	311	330	344	427	436	443	449	454	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	12	16	19	22	26	30	35	39	43	46	48	51	53	63	68	72	76	80	83	93	98	101	105	108	111	120	124	127	131	134	-
	90%	12150	-	-	6	10	14	18	22	26	30	35	40	44	47	50	52	61	67	72	76	80	90	95	99	103	107	111	120	124	128	131	134	137	140	143	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	129	132	136	139	142	145	148	150	153	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	155	158	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	161	163	-
	60%	8100	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	164	167	183	189	194	-
	50%	6750	-	-	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	167	184	190	197	203	208	213	218	222	-
	40%	5400	-	-	20	28	40	47	53	70	79	94	104	112	126	133	140	146	151	155	159	163	166	184	192	200	207	213	219	224	301	306	311	315	319	322	-
	30%	4050	-	-	27	41	50	67	80	98	109	125	135	143	150	156	161	165	184	195	204	212	220	227	305	311	316	321	326	330	334	337	341	344	347	422	-
	25%	3375	-	-	35	48	65	80	101	113	131	141	150	156	162	167	191	202	212	221	301	308	315	321	326	331	335	339	343	347	422	425	428	431	434	436	-
	20%	2700	-	-	44	63	82	105	126	139	149	158	164	187	201	213	224	305	313	320	327	333	338	343	347	423	427	430	433	436	439	442	444	446	448	450	-
	10%	1350	-	-	99	133	152	166	202	223	312	325	336	345	424	431	436	441	446	450	453	456	459	462	464	466	480	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	5	8	10	13	16	18	21	23	26	28	32	36	39	42	44	46	48	50	52	53	62	66	69	73	76	78	81	83	93	96	-	-
	90%	16200	-	-	-	6	9	11	14	18	20	23	27	28	34	37	41	43	46	48	50	52	53	64	68	71	75	78	81	83	93	97	100	103	106	-	-
	80%	14400	-	-	-	8	11	14	18	21	25	27	31	36	40	43	46	48	50	52	61	66	70	74	78	81	90	94	98	102	105	108	111	120	123	-	-
	75%	13500	-	-	-	8	12	16	19	22	26	30	35	39	43	46	48	51	53	62	67	72	76	79	83	93	97	101	104	108	111	120	123	127	130	-	-
	70%	12600	-	-	-	9	13	17	21	25	28	33	38	42	45	48	51	53	64	69	73	77	81	91	96	100	104	107	111	120	124	127	131	134	137	-	-
	60%	10800	-	-	-	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	150	-	-
	50%	9000	-	-	-	15	20	26	32	39	44	48	51	62	69	75	81	92	98	104	109	113	124	129	134	138	142	145	148	151	154	157	159	161	163	-	-
	40%	7200	-	-	-	20	27	35	42	47	52	64	72	79	92	100	106	112	124	130	135	140	144	148	152	155	158	161	164	167	188	195	202	209	215	221	226
	30%	5400	-	-	-	27	39	46	52	67	77	92	101	109	123	131	138	143	149	153	157	161	164	167	188	195	202	209	215	221	226	303	307	311	315	-	-
	25%	4500	-	-	-	36	46	52	70	81	98	108	123	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	320	324	328	331	335	-	-
	20%	3600	-	-	-	45	53	74	92	105	122	133	142	150	156	161	166	187	198	208	217	224	303	310	315	321	326	330	334	338	342	345	421	423	426	-	-
	10%	1800	-	-	-	99	127	144	157	166	197	214	300	312	322	331	339	345	423	428	433	437	441	444	447	450	453	455	457	459	461	463	465	466	480	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.6 16-Bay, Single-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AS2 or ASB

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	5	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	218	224	302	308	313	318	323	327	331	334	338	341	344	-
	90%	4050	6	17	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	225	303	309	315	320	325	329	333	337	341	344	347	422	425	-
	80%	3600	7	20	34	47	63	79	99	111	129	139	148	155	161	166	187	199	209	218	226	305	312	318	323	328	333	337	341	345	420	423	426	429	432	434	-
	75%	3375	8	21	37	49	69	83	105	123	135	145	153	159	165	186	198	209	219	227	307	314	320	325	331	335	340	344	347	423	426	429	432	434	437	439	-
	70%	3150	9	23	40	52	74	96	111	130	141	150	158	164	184	198	209	219	300	308	315	322	328	333	338	342	346	422	425	429	432	434	437	439	442	444	-
	60%	2700	11	28	46	68	92	110	131	144	153	161	180	196	209	221	303	312	319	326	332	338	343	420	424	428	431	434	437	440	443	445	447	450	452	453	-
	50%	2250	14	36	52	81	108	132	146	157	165	192	208	222	305	315	324	331	338	344	421	426	430	434	437	441	444	446	449	451	454	456	458	459	461	463	-
	40%	1800	18	44	73	104	132	149	161	185	206	222	308	319	329	337	344	422	428	433	437	441	445	448	451	453	456	458	460	462	464	466	467	480	-	-	-
	30%	1350	25	53	99	133	153	166	202	223	312	325	336	345	424	431	437	441	446	450	453	456	459	462	464	466	480	-	-	-	-	-	-	-	-	-	-
	25%	1125	28	70	112	146	163	200	225	315	329	341	422	430	437	442	447	451	455	458	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	38	90	136	160	199	300	320	336	420	429	437	444	449	454	458	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	73	149	207	320	345	433	445	454	461	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	32	39	44	48	52	62	69	76	81	93	99	104	109	120	125	130	134	138	142	145	149	152	154	157	159	162	164	166	-
	90%	8100	-	6	11	18	23	28	37	43	48	52	64	71	78	83	97	103	108	113	125	131	135	140	144	147	151	154	157	159	162	164	166	182	188	193	-
	80%	7200	-	7	14	20	27	36	43	48	52	66	74	81	94	101	108	113	126	132	137	142	146	150	153	157	160	162	165	167	185	192	197	203	208	213	-
	75%	6750	-	8	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	166	184	190	197	202	208	213	218	222	-
	70%	6300	-	9	17	25	33	42	48	53	68	76	90	99	106	113	126	133	138	144	148	152	156	160	163	166	182	189	196	202	208	213	218	223	300	304	-
	60%	5400	-	11	20	28	40	47	53	70	79	95	104	112	126	133	140	146	151	155	159	163	166	184	192	200	207	213	219	224	302	306	311	315	319	322	-
	50%	4500	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	187	197	205	213	219	226	304	309	314	319	323	327	331	334	338	341	-
	40%	3600	-	19	32	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	306	313	318	324	328	333	337	341	344	420	423	426	428	431	-
	30%	2700	-	26	44	62	80	104	124	138	148	156	163	184	198	211	221	303	311	318	325	331	336	341	346	422	425	429	432	435	438	440	443	445	447	449	-
	25%	2250	-	32	50	75	101	124	140	151	160	167	196	211	223	306	315	323	330	336	342	424	428	432	435	438	441	444	447	449	451	453	455	457	459	-	-
	20%	1800	-	41	67	98	125	143	156	165	194	212	227	311	321	330	337	344	422	427	432	436	440	443	446	449	452	454	456	459	461	462	464	466	467	480	-
	10%	900	-	83	135	159	199	227	320	335	347	429	437	443	449	454	458	461	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	12	16	19	22	26	30	35	39	43	46	48	51	53	63	67	72	76	79	83	93	97	101	105	108	111	120	124	127	130	-	-
	90%	12150	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	66	71	76	80	83	94	99	103	107	110	113	123	127	130	134	137	140	-	-
	80%	10800	-	-	7	11	16	20	25	28	35	40	45	48	51	53	65	71	76	80	91	96	101	105	109	113	123	128	131	135	138	141	144	147	150	-	-
	75%	10125	-	-	8	13	18	22	27	33	39	43	47	50	53	65	71	76	81	92	97	102	107	111	121	126	130	134	138	141	144	147	150	152	155	-	-
	70%	9450	-	-	9	14	19	25	28	36	42	46	50	53	64	71	77	81	93	99	104	109	113	124	129	133	137	140	144	147	150	153	155	157	160	-	-
	60%	8100	-	-	11	18	23	28	37	43	48	51	63	70	77	83	95	102	107	112	124	129	134	139	143	146	150	153	156	159	161	163	166	180	186	-	-
	50%	6750	-	-	15	22	28	38	45	50	60	69	77	90	98	105	111	124	130	136	141	145	150	153	157	160	163	165	180	187	193	199	205	210	215	-	-
	40%	5400	-	-	19	27	39	46	52	67	77	92	101	109	123	131	138	143	149	153	157	161	164	167	188	195	203	209	215	221	226	303	307	311	315	-	-
	30%	4050	-	-	27	40	49	64	77	95	106	122	132	140	147	153	158	163	167	189	198	207	215	222	300	306	312	317	322	326	330	334	337	341	344	-	-
	25%	3375	-	-	33	46	62	77	97	110	127	138	146	153	159	164	184	196	206	215	223	303	309	316	321	326	331	335	339	343	346	422	425	428	430	-	-
	20%	2700	-	-	42	53	78	101	121	135	145	154	161	167	193	205	216	226	307	314	321	327	333	338	342	347	422	426	429	432	435	438	440	443	445	-	-
	10%	1350	-	-	92	126	147	161	190	213	302	316	328	338	346	425	431	436	441	445	449	452	455	458	460	463	465	467	480	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	5	8	10	13	16	18	21	23	26	28	32	36	39	42	44	46	48	50	52	53	62	66	69	73	76	78	81	83	93	96	-	-
	90%	16200	-	-	-	6	9	11	14	18	20	23	26	28	34	37	41	43	46	48	50	52	53	63	67	71	75	78	81	83	93	96	100	103	105	-	-
	80%	14400	-	-	-	7	10	14	17	20	23	27	31	35	39	43	45	48	50	52	61	65	70	74	77	80	83	93	97	101	104	107	110	113	122	-	-
	75%	13500	-	-	-	8	11	15	18	22	26	28	34	38	42	45	48	50	52	61	66	71	75	79	82	92	96	100	103	107	110	113	122	126	129	-	-
	70%	12600	-	-	-	9	13	17	20	25	28	33	38	42	45	48	50	53	62	68	72	76	80	90	94	99	103	106	110	113	122	126	129	133	136	-	-
	60%	10800	-	-	-	11	16	20	25	28	35	40	44	48	51	53	65	70	75	80	90	95	100	104	109	112	122	127	130	134	137	141	143	146	149	-	-
	50%	9000	-	-	-	15	20	26	31	38	43	47	51	60	67	73	79	90	96	102	107	111	122	127	131	136	139	143	146	149	152	155	157	160	162	-	-
	40%	7200	-	-	-	19	26	33	41	46	51	62	70	77	83	97	104	109	121	127	133	138	142	146	150	153	156	159	162	164	167	184	190	195	201	-	-
	30%	5400	-	-	-	27	37	45	51	65	75	83	98	107	120	128	134	141	146	151	155	159	162	165	182	190	197	204	210	216	221	226	303	307	311	-	-
	25%	4500	-	-	-	34	44	51	67	78	94	104	113	128	136	143	149	154	159	163	166	185	194	202	210	216	223	300	306	311	315	319	323	327	331	-	-
	20%	3600	-	-	-	43	52	71	83	102	113	130	139	147	153	159	164	180	192	202	211	219	226	305	311	316	321	326	330	334	338	342	345	420	423	-	-
	10%	1800	-	-	-	95	122	140	153	163	189	207	222	307	317	326	334	341	347	424	429	433	437	441	444	447	450	452	455	457	459	461	463	464	466	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.7 16-Bay, Single-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AS2 or ASB

Unit type B (VRLA Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	16	26	39	48	63	76	93	105	120	130	139	146	152	157	162	166	186	196	205	213	220	226	304	310	315	320	324	328	332	336	339	342	345
	90%	4050	-	6	18	30	44	52	72	90	103	120	131	140	148	154	160	165	183	194	204	213	221	300	307	313	318	323	328	332	336	340	343	346	421	424	427
	80%	3600	-	8	21	36	48	66	81	102	120	132	142	150	157	163	180	193	204	214	222	302	309	316	321	327	332	336	340	344	420	423	426	429	432	434	437
	75%	3375	-	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	214	223	303	311	317	323	329	334	338	343	347	422	425	429	431	434	437	439	441
	70%	3150	-	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	437	439	442	444	446
	60%	2700	-	11	28	48	70	95	112	134	146	156	163	186	201	215	226	307	316	323	330	336	341	346	423	427	430	434	437	440	443	445	447	450	452	454	455
	50%	2250	-	15	38	60	90	111	136	149	160	180	199	215	300	311	320	329	336	342	420	425	429	433	437	441	444	447	449	452	454	456	458	460	462	463	465
	40%	1800	-	19	46	77	109	137	153	164	195	215	302	315	326	335	343	421	427	432	437	441	445	448	451	454	457	459	461	463	465	467	480	-	-	-	-
	30%	1350	-	27	64	106	140	159	189	215	307	322	334	344	424	431	437	443	447	451	455	458	461	463	466	480	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	34	78	128	154	185	216	310	327	340	422	431	438	444	449	453	457	461	464	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	43	102	147	180	219	316	334	420	431	439	446	452	457	461	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	96	164	308	342	434	448	457	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	33	39	44	49	52	63	70	76	82	94	100	105	110	121	126	131	135	139	143	146	149	152	155	158	160	162	164	-
	90%	8100	-	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	184	189	-
	80%	7200	-	-	8	14	21	27	36	43	48	52	66	74	81	95	102	108	120	127	132	138	142	147	150	154	157	160	163	165	180	187	193	199	204	209	-
	75%	6750	-	-	8	16	22	30	39	46	51	63	72	80	93	101	108	120	127	133	139	144	148	152	156	159	162	165	167	186	192	199	204	210	215	220	-
	70%	6300	-	-	9	17	25	33	42	48	53	69	77	91	100	107	120	127	134	140	145	149	153	157	161	164	166	184	191	198	204	210	215	220	225	302	-
	60%	5400	-	-	12	21	30	41	48	60	72	81	97	106	120	128	136	142	148	152	157	161	164	180	188	196	204	210	217	222	300	305	309	314	318	321	-
	50%	4500	-	-	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	327	331	334	338	341	-
	40%	3600	-	-	20	34	47	64	79	99	111	129	140	148	155	161	166	188	199	209	218	226	306	312	318	324	329	333	337	341	345	420	424	427	429	432	-
	30%	2700	-	-	27	46	67	91	109	130	143	153	160	167	194	208	219	301	310	318	325	331	337	342	347	423	427	430	434	437	439	442	444	447	449	451	-
	25%	2250	-	-	35	52	80	107	131	145	156	164	190	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	459	461	-
	20%	1800	-	-	44	73	105	132	149	161	186	206	223	308	320	329	337	344	423	428	433	437	441	445	448	451	454	456	458	460	462	464	466	480	-	-	-
	10%	900	-	-	98	143	165	213	311	330	344	427	436	443	449	454	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	12	16	19	22	26	30	35	39	43	46	48	51	53	63	68	72	76	80	83	93	98	101	105	108	111	120	124	127	131	-
	90%	12150	-	-	-	6	10	14	18	22	26	30	35	40	44	47	50	52	61	67	72	76	80	90	95	99	103	107	111	120	124	128	131	134	137	140	-
	80%	10800	-	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	129	132	136	139	142	145	148	150	-
	75%	10125	-	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	155	-
	70%	9450	-	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	161	-
	60%	8100	-	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	164	167	183	189	-
	50%	6750	-	-	-	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	167	184	190	197	203	208	213	218	-
	40%	5400	-	-	-	20	28	40	47	53	70	79	94	104	112	126	133	140	146	151	155	159	163	166	184	192	200	207	213	219	224	301	306	311	315	319	-
	30%	4050	-	-	-	27	41	50	67	80	98	109	125	135	143	150	156	161	165	184	195	204	212	220	227	305	311	316	321	326	330	334	337	341	344	347	-
	25%	3375	-	-	-	35	48	65	80	101	113	131	141	150	156	162	167	191	202	212	221	301	308	315	321	326	331	335	339	343	347	422	425	428	431	434	-
	20%	2700	-	-	-	44	63	82	105	126	139	149	158	164	187	201	213	224	305	313	320	327	333	338	343	347	423	427	430	433	436	439	442	444	446	448	-
	10%	1350	-	-	-	99	133	152	166	202	223	312	325	336	345	424	431	436	441	446	450	453	456	459	462	464	466	480	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	8	10	13	16	18	21	23	26	28	32	36	39	42	44	46	48	50	52	53	62	66	69	73	76	78	81	83	93	-	-
	90%	16200	-	-	-	-	6	9	11	14	18	20	23	27	28	34	37	41	43	46	48	50	52	53	64	68	71	75	78	81	83	93	97	100	103	-	-
	80%	14400	-	-	-	-	8	11	14	18	21	25	27	31	36	40	43	46	48	50	52	61	66	70	74	78	81	90	94	98	102	105	108	111	120	-	-
	75%	13500	-	-	-	-	-	8	12	16	19	22	26	30	35	39	43	46	48	51	53	62	67	72	76	79	83	93	97	101	104	108	111	120	123	127	-
	70%	12600	-	-	-	-	9	13	17	21	25	28	33	38	42	45	48	51	53	64	69	73	77	81	91	96	100	104	107	111	120	124	127	131	134	-	-
	60%	10800	-	-	-	-	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	-	-
	50%	9000	-	-	-	-	15	20	26	32	39	44	48	51	62	69	75	81	92	98	104	109	113	124	129	134	138	142	145	148	151	154	157	159	161	-	-
	40%	7200	-	-	-	-	20	27	35	42	47	52	64	72	79	92	100	106	112	124	130	135	140	144	148	152	155	158	161	164	166	182	189	195	200	-	-
	30%	5400	-	-	-	-	27	39	46	52	67	77	92	101	109	123	131	138	143	149	153	157	161	164	167	188	195	202	209	215	221	226	303	307	311	-	-
	25%	4500	-	-	-	-	36	46	52	70	81	98	108	123	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	320	324	328	331	-	-
	20%	3600	-	-	-	-	45	53	74	92	105	122	133	142	150	156	161	166	187	198	208	217	224	303	310	315	321	326	330	334	338	342	345	421	423	-	-
	10%	1800	-	-	-	-	99	127	144	157	166	197	214	300	312	322	331	339	345	423	428	433	437	441	444	447	450	453	455	457	459	461	463	465	466	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.8 16-Bay, Single-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AS2 or ASB

Unit type F (VRLA Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	15	26	38	48	61	75	92	103	113	129	137	145	151	156	161	165	183	193	202	210	218	224	302	308	313	318	323	327	331	334	338	341	-
	90%	4050	-	6	17	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	225	303	309	315	320	325	329	333	337	341	344	347	422	-
	80%	3600	-	7	20	34	47	63	79	99	111	129	139	148	155	161	166	187	199	209	218	226	305	312	318	323	328	333	337	341	345	420	423	426	429	432	-
	75%	3375	-	8	21	37	49	69	83	105	123	135	145	153	159	165	186	198	209	219	227	307	314	320	325	331	335	340	344	347	423	426	429	432	434	437	-
	70%	3150	-	9	23	40	52	74	96	111	130	141	150	158	164	184	198	209	219	300	308	315	322	328	333	338	342	346	422	425	429	432	434	437	439	442	-
	60%	2700	-	11	28	46	68	92	110	131	144	153	161	180	196	209	221	303	312	319	326	332	338	343	420	424	428	431	434	437	440	443	445	447	450	452	-
	50%	2250	-	14	36	52	81	108	132	146	157	165	192	208	222	305	315	324	331	338	344	421	426	430	434	437	441	444	446	449	451	454	456	458	459	461	-
	40%	1800	-	18	44	73	104	132	149	161	185	206	222	308	319	329	337	344	422	428	433	437	441	445	448	451	453	456	458	460	462	464	466	467	480	-	-
	30%	1350	-	25	53	99	133	153	166	202	223	312	325	336	345	424	431	437	441	446	450	453	456	459	462	464	466	480	-	-	-	-	-	-	-	-	-
	25%	1125	-	28	70	112	146	163	200	225	315	329	341	422	430	437	442	447	451	455	458	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	38	90	136	160	199	300	320	336	420	429	437	444	449	454	458	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	73	149	207	320	345	433	445	454	461	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	32	39	44	48	52	62	69	76	81	93	99	104	109	120	125	130	134	138	142	145	149	152	154	157	159	162	164	-
	90%	8100	-	-	6	11	18	23	28	37	43	48	52	64	71	78	83	97	103	108	113	125	131	135	140	144	147	151	154	157	159	162	164	166	182	188	-
	80%	7200	-	-	7	14	20	27	36	43	48	52	66	74	81	94	101	108	113	126	132	137	142	146	150	153	157	160	162	165	167	185	192	197	203	208	-
	75%	6750	-	-	8	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	166	184	190	197	202	208	213	218	-
	70%	6300	-	-	9	17	25	33	42	48	53	68	76	80	99	106	113	126	133	138	144	148	152	156	160	163	166	182	189	196	202	208	213	218	223	300	-
	60%	5400	-	-	11	20	28	40	47	53	70	79	95	104	112	126	133	140	146	151	155	159	163	184	192	200	207	213	219	224	302	306	311	315	319	-	-
	50%	4500	-	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	187	197	205	213	219	226	304	309	314	319	323	327	331	334	338	-
	40%	3600	-	-	19	32	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	306	313	318	324	328	333	337	341	344	420	423	426	428	-
	30%	2700	-	-	26	44	62	80	104	124	138	148	156	163	184	198	211	221	303	311	318	325	331	336	341	346	422	425	429	432	435	438	440	443	445	447	-
	25%	2250	-	-	32	50	75	101	124	140	151	160	167	196	211	223	306	315	323	330	336	342	347	424	428	432	435	438	441	444	447	449	451	453	455	457	-
	20%	1800	-	-	41	67	98	125	143	156	165	194	212	227	311	321	330	337	344	422	427	432	436	440	443	446	449	452	454	456	459	461	462	464	466	467	-
	10%	900	-	-	83	135	159	199	227	320	335	347	429	437	443	449	454	458	461	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	12	16	19	22	26	30	35	39	43	46	48	51	53	63	67	72	76	79	83	93	97	101	105	108	111	120	124	127	-	-
	90%	12150	-	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	66	71	76	80	83	94	99	103	107	110	113	123	127	130	134	137	-	-
	80%	10800	-	-	-	7	11	16	20	25	28	35	40	45	48	51	53	65	71	76	80	91	96	101	105	109	113	123	128	131	135	138	141	144	147	-	-
	75%	10125	-	-	-	8	13	18	22	27	33	39	43	47	50	53	65	71	76	81	92	97	102	107	111	121	126	130	134	138	141	144	147	150	152	-	-
	70%	9450	-	-	-	9	14	19	25	28	36	42	46	50	53	64	71	77	81	93	99	104	109	113	124	129	133	137	140	144	147	150	153	155	157	-	-
	60%	8100	-	-	-	11	18	23	28	37	43	48	51	63	70	77	83	95	102	107	112	124	129	134	139	143	146	150	153	156	159	161	163	166	180	-	-
	50%	6750	-	-	-	15	22	28	38	45	50	60	69	77	90	98	105	111	124	130	136	141	145	150	153	157	160	163	165	180	187	193	199	205	210	-	-
	40%	5400	-	-	-	19	27	39	46	52	67	77	92	101	109	123	131	138	143	149	153	157	161	164	167	188	195	203	209	215	221	226	303	307	311	-	-
	30%	4050	-	-	-	27	40	49	64	77	95	106	122	132	140	147	153	158	163	167	189	198	207	215	222	300	306	312	317	322	326	330	334	337	341	-	-
	25%	3375	-	-	-	33	46	62	77	97	110	127	138	146	153	159	164	184	196	206	215	223	303	309	316	321	326	331	335	339	343	346	422	425	428	-	-
	20%	2700	-	-	-	42	53	78	101	121	135	145	154	161	167	193	205	216	226	307	314	321	327	333	338	342	347	422	426	429	432	435	438	440	443	-	-
	10%	1350	-	-	-	92	126	147	161	190	213	302	316	328	338	346	425	431	436	441	445	449	452	455	458	460	463	465	467	480	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	8	10	13	16	18	21	23	26	28	32	36	39	42	44	46	48	50	52	53	62	66	69	73	76	78	81	83	93	-	-
	90%	16200	-	-	-	-	6	9	11	14	18	20	23	26	28	34	37	41	43	46	48	50	52	53	63	67	71	75	78	81	83	93	96	100	103	-	-
	80%	14400	-	-	-	-	7	10	14	17	20	23	27	31	35	39	43	45	48	50	52	61	65	70	74	77	80	83	93	97	101	104	107	110	113	-	-
	75%	13500	-	-	-	-	8	11	15	18	22	26	28	34	38	42	45	48	50	52	61	66	71	75	79	82	92	96	100	103	107	110	113	122	126	-	-
	70%	12600	-	-	-	-	9	13	17	20	25	28	33	38	42	45	48	50	53	62	68	72	76	80	90	94	99	103	106	110	113	122	126	129	133	-	-
	60%	10800	-	-	-	-	11	16	20	25	28	35	40	44	48	51	53	65	70	75	80	90	95	100	104	109	112	122	127	130	134	137	141	143	146	-	-
	50%	9000	-	-	-	-	15	20	26	31	38	43	47	51	60	67	73	79	90	96	102	107	111	122	127	131	136	139	143	146	149	152	155	157	160	-	-
	40%	7200	-	-	-	-	19	26	33	41	46	51	62	70	77	83	97	104	109	121	127	133	138	142	146	150	153	156	159	162	164	167	184	190	195	-	-
	30%	5400	-	-	-	-	27	37	45	51	65	75	83	98	107	120	128	134	141	146	151	155	159	162	165	182	190	197	204	210	216	221	226	303	307	-	-
	25%	4500	-	-	-	-	34	44	51	67	78	94	104	113	128	136	143	149	154	159	163	166	185	194	202	210	216	223	300	306	311	315	319	323	327	-	-
	20%	3600	-	-	-	-	43	52	71	83	102	113	130	139	147	153	159	164	180	192	202	211	219	226	305	311	316	321	326	330	334	338	342	345	420	-	-
	10%	1800	-	-	-	-	95	122	140	153	163	189	207	222	307	317	326	334	341	347	424	429	433	437	441	444	447	450	452	455	457	459	461	463	464	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.3 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS3 or ASC

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.9 12-Bay, Single-Phase, Transformer-Based Unit Type N (UPS Model Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AS3 or ASC

Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	5	15	26	38	47	60	74	90	102	112	127	136	143	150	155	160	164	181	191	200	208	215	222	300	306	311	316	321	325	329	333	336	339
	90%	4050	6	17	28	42	51	69	82	101	111	128	137	145	152	158	163	167	189	199	208	216	224	302	309	314	319	324	329	333	337	340	343	347	421
	80%	3600	7	20	34	47	63	79	99	111	129	139	148	155	160	166	187	198	209	218	226	305	312	318	323	328	333	337	341	345	420	423	426	429	432
	75%	3375	8	21	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	434	437
	70%	3150	9	23	40	52	74	96	110	130	141	150	157	164	184	197	209	219	300	308	315	321	327	332	337	342	346	422	425	428	431	434	437	439	441
	60%	2700	11	27	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	442	445	447	449	451
	50%	2250	14	36	52	81	108	132	146	157	165	192	208	222	305	315	324	331	338	344	421	426	430	434	437	441	444	446	449	451	453	456	457	459	461
	40%	1800	18	44	73	105	133	149	161	186	207	223	309	320	330	338	345	423	428	433	438	441	445	448	451	454	456	459	461	463	464	466	480	-	-
	30%	1350	25	53	101	135	154	167	206	227	315	328	338	347	427	433	438	443	448	451	455	458	460	463	465	467	480	-	-	-	-	-	-	-	-
	25%	1125	31	73	122	149	166	207	302	320	334	345	426	433	439	445	450	454	457	461	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	40	96	141	164	208	308	327	342	425	434	441	448	453	457	461	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	82	158	225	333	427	442	453	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	15	20	26	31	38	43	48	51	61	68	74	80	91	97	103	108	112	123	128	133	137	140	144	147	150	153	156	158	160	-
	90%	8100	-	6	11	17	23	28	37	43	47	51	62	70	76	82	95	101	107	112	123	129	134	138	142	146	149	152	155	158	161	163	165	167	-
	80%	7200	-	7	13	20	27	35	42	47	52	64	72	79	92	99	106	112	124	130	135	140	144	148	152	155	158	161	164	166	182	189	194	200	-
	75%	6750	-	8	15	22	28	38	45	50	60	70	78	90	99	106	112	124	131	136	141	146	150	154	157	160	163	166	181	188	194	200	206	211	-
	70%	6300	-	9	16	23	32	41	47	52	66	75	83	97	105	112	125	131	137	142	147	151	155	159	162	165	167	187	193	200	206	211	216	221	-
	60%	5400	-	11	20	28	39	47	53	69	79	94	103	111	125	133	139	145	150	155	159	162	166	183	191	199	206	212	218	224	301	305	310	314	-
	50%	4500	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	188	197	205	213	220	226	304	309	314	319	323	327	331	334	-
	40%	3600	-	19	33	46	60	76	95	108	126	136	145	152	158	163	181	193	203	213	221	300	307	313	319	324	329	333	338	341	345	420	423	426	-
	30%	2700	-	26	44	62	81	104	125	138	149	157	164	185	200	212	223	304	312	319	326	332	337	342	346	422	426	430	433	436	438	441	443	446	-
	25%	2250	-	32	50	76	102	125	140	152	161	180	197	212	224	307	316	324	331	337	343	420	424	428	432	436	439	442	445	447	449	452	454	456	-
	20%	1800	-	41	67	98	126	143	156	165	195	213	227	311	322	330	338	344	422	427	432	436	440	443	447	449	452	455	457	459	461	463	464	466	-
	10%	900	-	83	135	159	197	226	319	335	347	428	436	443	448	453	457	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	34	38	42	45	47	50	52	60	65	70	74	78	81	91	95	99	102	106	109	112	121	125	-
	90%	12150	-	-	6	9	13	17	21	25	28	34	39	43	46	49	51	53	65	70	74	78	82	92	97	101	105	108	112	121	125	129	132	135	-
	80%	10800	-	-	7	11	16	20	25	28	35	40	44	47	50	53	64	70	75	79	83	95	99	104	108	112	122	126	130	133	137	140	143	146	-
	75%	10125	-	-	8	12	17	22	26	32	38	43	46	50	52	63	70	75	80	90	96	101	105	110	113	124	128	132	136	139	143	146	148	151	-
	70%	9450	-	-	9	14	18	23	28	35	41	45	49	52	63	69	75	80	91	97	102	107	111	122	127	131	135	139	142	145	148	151	154	156	-
	60%	8100	-	-	11	17	23	28	36	42	47	51	61	69	76	81	94	100	106	111	122	128	133	137	141	145	148	152	155	157	160	162	165	167	-
	50%	6750	-	-	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	139	144	148	152	155	159	162	164	167	184	191	197	202	208	-
	40%	5400	-	-	19	27	38	46	52	67	76	91	100	109	122	130	137	143	148	152	157	160	164	167	186	194	201	207	213	219	224	301	306	310	-
	30%	4050	-	-	27	40	49	64	77	95	106	122	132	140	147	153	158	163	167	188	198	207	215	222	300	306	312	317	321	326	330	334	337	341	-
	25%	3375	-	-	34	47	62	78	98	110	128	138	147	154	160	165	185	197	207	216	224	304	310	316	322	327	332	336	340	344	347	422	425	428	-
	20%	2700	-	-	43	60	79	102	123	136	147	155	162	181	196	208	219	301	309	316	323	329	335	340	344	420	424	428	431	434	437	439	442	444	-
	10%	1350	-	-	97	131	151	164	199	220	309	322	333	343	422	429	435	440	444	448	452	455	458	460	463	465	467	480	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.10 12-Bay, Single-Phase, Transformer-Based Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AS3 or ASC

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	5	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	187	197	205	213	219	226	304	309	314	319	323	327	331	334	-
	90%	4050	5	16	27	41	50	67	80	98	109	126	135	143	150	156	161	165	185	195	205	213	221	227	306	311	317	322	326	330	334	338	341	344	-
	80%	3600	7	19	33	46	61	76	96	108	126	137	145	152	158	164	182	193	204	213	222	301	308	314	320	325	330	334	338	342	345	421	424	426	-
	75%	3375	7	20	36	48	66	81	101	113	132	142	150	157	163	167	192	203	213	222	302	309	315	321	327	331	336	340	344	347	423	426	429	431	-
	70%	3150	8	22	39	50	71	92	107	126	138	147	155	161	167	190	203	213	222	303	310	317	323	328	333	338	342	346	422	425	428	431	434	436	-
	60%	2700	10	26	44	63	81	105	126	139	149	157	164	186	200	213	223	304	313	320	326	332	338	342	347	423	426	430	433	436	439	441	444	446	-
	50%	2250	13	32	50	76	102	125	140	152	161	180	197	212	224	307	316	324	331	337	343	420	424	428	432	436	439	442	445	447	449	452	454	456	-
	40%	1800	16	41	66	97	125	142	155	165	193	211	226	310	320	329	337	343	421	426	431	435	439	443	446	449	451	454	456	458	460	462	464	465	-
	30%	1350	22	50	91	125	147	161	190	212	302	316	328	337	346	425	431	436	441	445	448	452	455	458	460	462	465	467	480	-	-	-	-	-	-
	25%	1125	27	64	106	140	158	188	214	306	321	334	344	424	431	437	442	447	451	454	458	461	463	466	480	-	-	-	-	-	-	-	-	-	-
	20%	900	35	79	130	155	188	219	313	329	342	424	432	439	445	450	454	458	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	71	147	203	317	342	431	443	452	459	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	15	20	26	31	38	43	47	51	60	67	74	79	90	96	102	107	112	122	127	132	136	140	143	147	150	152	155	158	160	-
	90%	8100	-	6	11	17	22	28	36	42	47	51	61	69	75	81	93	100	106	111	122	127	132	137	141	145	148	151	154	157	160	162	164	166	-
	80%	7200	-	7	13	19	26	34	41	47	51	63	71	78	90	98	105	110	122	128	134	139	143	147	151	154	157	160	163	165	167	186	192	197	-
	75%	6750	-	8	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	140	144	148	152	156	159	162	164	167	184	191	197	202	208	-
	70%	6300	-	9	16	23	31	40	47	51	65	74	81	95	103	110	123	129	135	141	145	150	154	157	160	163	166	183	190	196	202	208	213	218	-
	60%	5600	-	11	19	27	38	46	52	67	77	91	101	109	123	131	137	143	148	153	157	161	164	167	187	195	202	208	214	220	225	302	307	311	-
	50%	4500	-	14	25	36	46	52	70	81	98	108	122	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	319	324	327	331	-
	40%	3600	-	18	30	44	52	73	91	105	121	132	141	149	155	161	165	186	197	206	215	223	302	308	314	320	325	329	333	337	341	344	420	423	-
	30%	2700	-	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	421	425	428	432	434	437	440	442	-
	25%	2250	-	28	48	71	96	113	135	147	156	164	187	202	215	226	308	316	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450	452	-
	20%	1800	-	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461	462	-
	10%	900	-	75	124	151	167	211	306	323	336	347	428	435	441	447	451	455	459	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	33	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	6	9	13	17	21	25	28	34	38	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	7	11	16	20	25	28	34	39	43	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	8	12	17	21	26	31	37	42	46	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	9	13	18	23	28	35	40	45	49	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	11	17	22	28	36	42	47	51	60	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	14	21	27	36	43	49	53	67	75	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	18	27	37	45	51	65	75	83	99	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	26	38	48	61	75	91	103	113	129	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	32	45	53	75	94	107	124	135	143	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	41	52	75	97	112	131	142	151	159	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	82	121	143	158	183	206	225	311	323	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.11 12-Bay, Single-Phase, Transformer-Based Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AS3 or ASC

Unit type B (VRLA Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	-	5	15	26	38	47	60	74	90	102	112	127	136	143	150	155	160	164	181	191	200	208	215	222	300	306	311	316	321	325	329	333	336
	90%	4050	-	6	17	28	42	51	69	82	101	111	128	137	145	152	158	163	167	189	199	208	216	224	302	309	314	319	324	329	333	337	340	343	347
	80%	3600	-	7	20	34	47	63	79	99	111	129	139	148	155	160	166	187	198	209	218	226	305	312	318	323	328	333	337	341	345	420	423	426	429
	75%	3375	-	8	21	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	434
	70%	3150	-	9	23	40	52	74	96	110	130	141	150	157	164	184	197	209	219	300	308	315	321	327	332	337	342	346	422	425	428	431	434	437	439
	60%	2700	-	11	27	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	442	445	447	449
	50%	2250	-	14	36	52	81	108	132	146	157	165	192	208	222	305	315	324	331	338	344	421	426	430	434	437	441	444	446	449	451	453	456	457	459
	40%	1800	-	18	44	73	105	133	149	161	186	207	223	309	320	330	338	345	423	428	433	438	441	445	448	451	454	456	459	461	463	464	466	480	-
	30%	1350	-	25	53	101	135	154	167	206	227	315	328	338	347	427	433	438	443	448	451	455	458	460	463	465	467	480	-	-	-	-	-	-	-
	25%	1125	-	31	73	122	149	166	207	302	320	334	345	426	433	439	445	450	454	457	461	463	466	480	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	40	96	141	164	208	308	327	342	425	434	441	448	453	457	461	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	82	158	225	333	427	442	453	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	15	20	26	31	38	43	48	51	61	68	74	80	91	97	103	108	112	123	128	133	137	140	144	147	150	153	156	158	-
	90%	8100	-	-	6	11	17	23	28	37	43	47	51	62	70	76	82	95	101	107	112	123	129	134	138	142	146	149	152	155	158	161	163	165	-
	80%	7200	-	-	7	13	20	27	35	42	47	52	64	72	79	92	99	106	112	124	130	135	140	144	148	152	155	158	161	164	166	182	189	194	-
	75%	6750	-	-	8	15	22	28	38	45	50	60	70	78	90	99	106	112	124	131	136	141	146	150	154	157	160	163	166	181	188	194	200	205	-
	70%	6300	-	-	9	16	23	32	41	47	52	66	75	83	97	105	112	125	131	137	142	147	151	155	159	162	165	167	187	193	200	206	211	216	-
	60%	5400	-	-	11	20	28	39	47	53	69	79	94	103	111	125	133	139	145	150	155	159	162	166	183	191	199	206	212	218	224	301	305	310	-
	50%	4500	-	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	188	197	205	213	220	226	304	309	314	319	323	327	331	-
	40%	3600	-	-	19	33	46	60	76	95	108	126	136	145	152	158	163	181	193	203	213	221	300	307	313	319	324	329	333	338	341	345	420	423	-
	30%	2700	-	-	26	44	62	81	104	125	138	149	157	164	185	200	212	223	304	312	319	326	332	337	342	346	422	426	430	433	436	438	441	443	-
	25%	2250	-	-	32	50	76	102	125	140	152	161	180	197	212	224	307	316	324	331	337	343	420	424	428	432	436	439	442	445	447	449	452	454	-
	20%	1800	-	-	41	67	98	126	143	156	165	195	213	227	311	322	330	338	344	422	427	432	436	440	443	447	449	452	455	457	459	461	463	464	-
	10%	900	-	-	83	135	159	197	226	319	335	347	428	436	443	448	453	457	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	34	38	42	45	47	50	52	60	65	70	74	78	81	91	95	99	102	106	109	112	121	-
	90%	12150	-	-	-	6	9	13	17	21	25	28	34	39	43	46	49	51	53	65	70	74	78	82	92	97	101	105	108	112	121	125	129	132	-
	80%	10800	-	-	-	7	11	16	20	25	28	35	40	44	47	50	53	64	70	75	79	83	95	99	104	108	112	122	126	130	133	137	140	143	-
	75%	10125	-	-	-	8	12	17	22	26	32	38	43	46	50	52	63	70	75	80	90	96	101	105	110	113	124	128	132	136	139	143	146	148	-
	70%	9450	-	-	-	9	14	18	23	28	35	41	45	49	52	63	69	75	80	91	97	102	107	111	122	127	131	135	139	142	145	148	151	154	-
	60%	8100	-	-	-	11	17	23	28	36	42	47	51	61	69	76	81	94	100	106	111	122	128	133	137	141	145	148	152	155	157	160	162	165	-
	50%	6750	-	-	-	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	139	144	148	152	155	159	162	164	167	184	191	197	202	-
	40%	5400	-	-	-	19	27	38	46	52	67	76	91	100	109	122	130	137	143	148	152	157	160	164	167	186	194	201	207	213	219	224	301	306	-
	30%	4050	-	-	-	27	40	49	64	77	95	106	122	132	140	147	153	158	163	167	188	198	207	215	222	300	306	312	317	321	326	330	334	337	-
	25%	3375	-	-	-	34	47	62	78	98	110	128	138	147	154	160	165	185	197	207	216	224	304	310	316	322	327	332	336	340	344	347	422	425	-
	20%	2700	-	-	-	43	60	79	102	123	136	147	155	162	181	196	208	219	301	309	316	323	329	335	340	344	420	424	428	431	434	437	439	442	-
	10%	1350	-	-	-	97	131	151	164	199	220	309	322	333	343	422	429	435	440	444	448	452	455	458	460	463	465	467	480	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.12 12-Bay, Single-Phase, Transformer-Based Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AS3 or ASC

Unit type F (VRLA Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	-	5	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	187	197	205	213	219	226	304	309	314	319	323	327	331	-
	90%	4050	-	5	16	27	41	50	67	80	98	109	126	135	143	150	156	161	165	185	195	205	213	221	227	306	311	317	322	326	330	334	338	341	-
	80%	3600	-	7	19	33	46	61	76	96	108	126	137	145	152	158	164	182	193	204	213	222	301	308	314	320	325	330	334	338	342	345	421	424	-
	75%	3375	-	7	20	36	48	66	81	101	113	132	142	150	157	163	167	192	203	213	222	302	309	315	321	327	331	336	340	344	347	423	426	429	-
	70%	3150	-	8	22	39	50	71	92	107	126	138	147	155	161	167	190	203	213	222	303	310	317	323	328	333	338	342	346	422	425	428	431	434	-
	60%	2700	-	10	26	44	63	81	105	126	139	149	157	164	186	200	213	223	304	313	320	326	332	338	342	347	423	426	430	433	436	439	441	444	-
	50%	2250	-	13	32	50	76	102	125	140	152	161	180	197	212	224	307	316	324	331	337	343	420	424	428	432	436	439	442	445	447	449	452	454	-
	40%	1800	-	16	41	66	97	125	142	155	165	193	211	226	310	320	329	337	343	421	426	431	435	439	443	446	449	451	454	456	458	460	462	464	-
	30%	1350	-	22	50	91	125	147	161	190	212	302	316	328	337	346	425	431	436	441	445	448	452	455	458	460	462	465	467	480	-	-	-	-	-
	25%	1125	-	27	64	106	140	158	188	214	306	321	334	344	424	431	437	442	447	451	454	458	461	463	466	480	-	-	-	-	-	-	-	-	-
	20%	900	-	35	79	130	155	188	219	313	329	342	424	432	439	445	450	454	458	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	71	147	203	317	342	431	443	452	459	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	15	20	26	31	38	43	47	51	60	67	74	79	90	96	102	107	112	122	127	132	136	140	143	147	150	152	155	158	-
	90%	8100	-	-	6	11	17	22	28	36	42	47	51	61	69	75	81	93	100	106	111	122	127	132	137	141	145	148	151	154	157	160	162	164	-
	80%	7200	-	-	7	13	19	26	34	41	47	51	63	71	78	90	98	105	110	122	128	134	139	143	147	151	154	157	160	163	165	167	186	192	-
	75%	6750	-	-	8	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	140	144	148	152	156	159	162	164	167	184	191	197	202	-
	70%	6300	-	-	9	16	23	31	40	47	51	65	74	81	95	103	110	123	129	135	141	145	150	154	157	160	163	166	183	190	196	202	208	213	-
	60%	5400	-	-	11	19	27	38	46	52	67	77	91	101	109	123	131	137	143	148	153	157	161	164	167	187	195	202	208	214	220	225	302	307	-
	50%	4500	-	-	14	25	36	46	52	70	81	98	108	122	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	319	324	327	-
	40%	3600	-	-	18	30	44	52	73	91	105	121	132	141	149	155	161	165	186	197	206	215	223	302	308	314	320	325	329	333	337	341	344	420	-
	30%	2700	-	-	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	421	425	428	432	434	437	440	-
	25%	2250	-	-	28	48	71	96	113	135	147	156	164	187	202	215	226	308	316	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450	-
	20%	1800	-	-	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461	-
	10%	900	-	-	75	124	151	167	211	306	323	336	347	428	435	441	447	451	455	459	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	-	6	9	13	17	21	25	28	34	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	-	7	11	16	20	25	28	34	39	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	-	8	12	17	21	26	31	37	42	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	-	9	13	18	23	28	35	40	45	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	-	11	17	22	28	36	42	47	51	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	-	14	21	27	36	43	49	53	67	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	-	18	27	37	45	51	65	75	83	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	-	26	38	48	61	75	91	103	113	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	-	32	45	53	75	94	107	124	135	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	-	41	52	75	97	112	131	142	151	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	-	82	121	143	158	183	206	225	311	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.4 Estimated Battery Run Times: Model Number Digits 1 to 3 = AS4 or ASD

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.13 16-Bay, Single-Phase, Transformer-Based Unit Type N (UPS Model Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AS4 or ASD

Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

| UPS Rating | Load Level | Load (Watts) | # Battery Strings | | |

Figure 8.14 16-Bay, Single-Phase, Transformer-Based Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AS4 or ASD

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	5	14	25	37	47	53	72	83	100	110	125	134	142	148	154	159	163	167	187	196	205	212	219	226	303	309	314	318	323	327	331	334	337	341	-
	90%	4050	5	16	27	41	50	67	80	98	109	126	135	143	150	156	161	165	185	195	204	213	220	227	305	311	317	321	326	330	334	338	341	344	347	422	-
	80%	3600	7	19	33	46	60	76	96	108	126	136	145	152	158	164	181	193	204	213	221	301	308	314	319	325	329	334	338	342	345	420	423	426	429	432	-
	75%	3375	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	302	309	315	321	326	331	336	340	344	347	423	426	429	431	434	436	-
	70%	3150	8	22	38	50	71	92	107	126	137	147	155	161	166	190	202	213	222	302	310	317	323	328	333	338	342	346	421	425	428	431	434	436	439	441	-
	60%	2700	10	26	44	63	81	105	125	139	149	157	164	186	200	212	223	304	312	320	326	332	337	342	347	423	426	430	433	436	439	441	444	446	448	450	-
	50%	2250	13	32	50	76	102	125	140	152	160	180	197	212	224	306	316	324	331	337	342	420	424	428	432	436	439	442	444	447	449	452	454	456	457	459	-
	40%	1800	16	41	66	97	124	142	155	165	193	211	226	310	320	329	336	343	421	426	431	435	439	443	446	449	451	454	456	458	460	462	464	465	467	480	-
	30%	1350	22	50	91	125	146	160	189	212	301	316	327	337	345	424	430	436	440	444	448	452	455	457	460	462	464	466	480	-	-	-	-	-	-	-	-
	25%	1125	26	63	105	139	158	187	214	305	321	333	343	423	430	437	442	446	450	454	457	460	463	465	467	480	-	-	-	-	-	-	-	-	-	-	-
	20%	900	34	79	129	155	187	218	312	328	341	423	432	439	445	450	454	458	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	70	146	201	315	341	430	442	451	459	464	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	15	20	26	31	38	43	47	51	60	67	74	79	90	96	102	107	112	122	127	132	136	140	143	147	150	152	155	158	160	162	164	-
	90%	8100	-	6	11	17	22	28	36	42	47	51	61	69	75	81	93	100	106	111	122	127	132	137	141	145	148	151	154	157	160	162	164	166	182	188	-
	80%	7200	-	7	13	19	26	34	41	47	51	62	71	78	90	98	104	110	122	128	134	138	143	147	151	154	157	160	163	165	167	185	191	197	202	207	-
	75%	6750	-	8	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	140	144	148	152	156	159	162	164	167	184	191	197	202	208	213	217	-
	70%	6300	-	9	16	23	31	40	47	51	65	74	81	95	103	110	122	129	135	141	145	150	154	157	160	163	166	183	190	196	202	208	213	218	223	227	-
	60%	5400	-	11	19	27	38	46	52	67	77	92	101	109	123	131	137	143	148	153	157	161	164	167	187	195	202	208	214	220	225	302	307	311	315	319	-
	50%	4500	-	14	25	36	46	52	70	81	98	108	123	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	320	324	328	331	335	338	-
	40%	3600	-	18	30	44	52	73	91	105	121	132	141	149	155	161	165	186	197	206	215	223	302	308	314	320	325	329	333	337	341	344	420	423	425	428	-
	30%	2700	-	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	422	425	428	432	434	437	440	442	444	446	-
	25%	2250	-	28	48	71	96	113	135	147	156	164	187	202	215	226	308	316	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450	452	454	456	-
	20%	1800	-	38	61	91	112	137	150	161	182	201	217	302	312	322	330	337	343	421	426	430	434	438	441	445	447	450	452	455	457	459	461	462	464	465	-
	10%	900	-	75	124	151	167	210	305	322	336	347	427	435	441	446	451	455	458	462	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	33	38	41	45	47	50	52	60	65	70	74	77	81	90	94	98	102	105	109	112	121	124	127	-	-
	90%	12150	-	-	6	9	13	17	21	25	28	34	38	42	46	48	51	53	64	69	74	78	81	91	96	100	104	108	111	120	124	128	131	134	137	-	-
	80%	10800	-	-	7	11	16	20	25	28	34	39	43	47	50	52	63	69	74	78	82	93	98	103	107	111	121	125	129	132	136	139	142	145	147	-	-
	75%	10125	-	-	8	12	17	21	26	31	37	42	46	49	52	63	69	74	79	83	95	100	105	109	113	123	127	131	135	139	142	145	148	150	153	-	-
	70%	9450	-	-	9	13	18	23	28	35	40	45	49	52	62	69	74	79	90	96	101	106	111	121	126	130	134	138	141	145	148	150	153	155	158	-	-
	60%	8100	-	-	11	17	22	28	36	42	47	51	60	68	75	81	93	99	105	110	121	127	132	136	140	144	148	151	154	157	159	162	164	166	181	-	-
	50%	6750	-	-	14	21	27	36	43	49	53	67	75	82	95	103	109	121	127	133	138	143	147	151	155	158	161	163	166	182	188	195	200	206	211	-	-
	40%	5400	-	-	18	27	37	45	51	65	75	83	99	107	120	128	135	141	146	151	155	159	162	166	182	190	197	204	210	216	221	226	303	308	312	-	-
	30%	4050	-	-	26	38	48	61	75	91	103	113	129	137	144	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	326	330	334	337	341	-	-
	25%	3375	-	-	32	45	53	75	93	106	124	134	143	151	157	162	167	189	200	210	218	226	305	311	317	322	327	331	336	339	343	346	422	424	427	-	-
	20%	2700	-	-	41	52	75	97	111	131	142	151	158	164	186	199	211	221	302	309	317	323	329	334	339	343	347	423	426	429	432	435	438	440	442	-	-
	10%	1350	-	-	82	121	143	158	182	206	224	311	323	333	341	421	427	433	437	442	446	449	452	455	458	460	462	464	466	480	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	5	7	10	12	15	18	20	22	26	27	31	34	38	40	43	45	47	49	51	52	60	64	67	70	73	76	79	81	90	93	-	-
	90%	16200	-	-	-	6	9	11	14	17	20	23	26	28	32	36	39	42	45	47	49	51	53	61	65	69	72	76	79	81	90	94	97	100	103	-	-
	80%	14400	-	-	-	7	10	13	17	20	23	26	30	34	38	42	44	47	49	51	53	63	68	72	75	79	82	91	95	99	102	105	108	111	120	-	-
	75%	13500	-	-	-	8	11	14	18	21	25	28	33	37	41	44	47	49	52	53	64	69	73	77	80	83	94	98	101	105	108	111	120	123	127	-	-
	70%	12600	-	-	-	9	12	16	20	23	27	32	36	41	44	47	50	52	60	66	70	75	78	82	92	96	100	104	108	111	120	124	127	130	133	-	-
	60%	10800	-	-	-	11	16	20	25	28	34	39	43	47	50	52	63	69	74	78	82	93	98	103	107	111	120	124	128	132	136	139	142	145	147	-	-
	50%	9000	-	-	-	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	160	-	-
	40%	7200	-	-	-	19	26	32	40	46	50	60	68	76	82	95	102	108	113	125	131	136	140	144	148	152	155	158	161	163	165	180	186	192	197	-	-
	30%	5400	-	-	-	26	36	44	50	62	73	81	96	104	111	125	132	138	144	149	153	157	161	164	167	185	193	199	206	212	217	222	227	304	308	-	-
	25%	4500	-	-	-	32	43	50	64	76	91	102	111	125	133	140	146	152	156	161	164	180	189	198	205	212	218	224	302	307	312	316	320	324	328	-	-
	20%	3600	-	-	-	42	50	68	80	99	110	126	136	144	150	156	161	166	186	196	205	213	221	300	306	312	317	322	326	331	334	338	342	345	420	-	-
	10%	1800	-	-	-	90	111	136	149	160	180	199	215	300	311	320	328	336	342	420	425	429	433	437	440	444	446	449	452	454	456	458	460	462	463	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.15 16-Bay, Single-Phase, Transformer-Based Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AS4 or ASD


Unit type B (VRLA Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	15	26	38	47	60	73	90	102	111	127	136	143	149	155	160	164	180	190	199	207	215	222	300	306	311	316	320	325	329	332	336	339	342
	90%	4050	-	6	17	28	42	51	69	81	100	111	128	137	145	152	157	162	167	188	198	208	216	223	302	308	314	319	324	328	332	336	340	343	346	421	424
	80%	3600	-	7	19	34	47	63	78	98	110	128	139	147	154	160	165	186	197	208	217	225	304	311	317	322	327	332	336	340	344	347	423	426	428	431	434
	75%	3375	-	8	21	37	49	68	83	104	122	134	144	152	159	164	184	197	208	217	226	306	313	319	324	330	334	339	343	346	422	425	428	431	434	436	438
	70%	3150	-	9	23	40	51	74	95	110	129	141	150	157	163	183	196	208	218	227	307	314	321	327	332	337	341	345	421	425	428	431	434	436	439	441	443
	60%	2700	-	11	27	46	67	91	109	130	143	153	160	167	194	208	219	301	310	318	325	331	337	342	347	423	427	430	434	437	439	442	444	447	449	451	453
	50%	2250	-	14	35	52	80	107	131	145	156	164	190	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	459	461	462
	40%	1800	-	18	44	73	104	132	149	160	185	206	222	308	319	329	337	344	422	428	433	437	441	444	448	451	453	456	458	460	462	464	466	467	480	-	-
	30%	1350	-	25	53	100	134	154	167	205	226	314	327	337	346	426	432	438	443	447	451	454	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-
	25%	1125	-	30	72	120	148	165	205	301	319	332	344	425	432	439	444	449	453	457	460	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	40	94	140	163	206	306	326	340	424	433	440	447	452	457	460	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	81	157	222	331	426	441	451	459	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	15	20	26	31	38	43	48	51	61	68	74	80	91	97	103	108	112	123	128	133	137	140	144	147	150	153	156	158	160	163	165
	90%	8100	-	-	6	11	17	23	28	37	43	47	51	62	70	76	82	95	101	107	112	123	129	134	138	142	146	149	152	155	158	161	163	165	167	185	190
	80%	7200	-	-	7	13	20	27	35	42	47	52	64	72	79	92	99	106	112	124	130	135	140	144	148	152	155	158	161	164	166	182	189	194	200	205	210
	75%	6750	-	-	8	15	22	28	38	45	50	60	70	77	90	98	106	112	124	131	136	141	146	150	153	157	160	163	165	181	188	194	200	205	211	215	220
	70%	6300	-	-	9	16	23	32	41	47	52	66	75	83	97	105	112	125	131	137	142	147	151	155	159	162	167	186	193	200	206	211	216	221	226	302	
	60%	5400	-	-	11	20	28	39	47	53	69	79	94	103	111	125	133	139	145	150	155	159	162	166	183	191	199	206	212	218	223	301	305	310	314	318	322
	50%	4500	-	-	14	25	37	47	53	72	83	100	110	126	134	142	148	154	159	163	167	187	197	205	213	219	226	304	309	314	319	323	327	331	334	338	341
	40%	3600	-	-	19	32	46	60	76	95	108	125	136	145	152	158	163	180	192	203	212	221	300	307	313	319	324	329	333	337	341	345	420	423	426	429	431
	30%	2700	-	-	26	44	62	81	104	125	138	149	157	164	185	199	212	222	304	312	319	326	332	337	342	346	422	426	429	433	436	438	441	443	446	448	450
	25%	2250	-	-	32	50	76	102	125	140	152	161	180	197	212	224	307	316	324	331	337	343	420	424	428	432	436	439	442	445	447	449	452	454	456	457	459
	20%	1800	-	-	41	67	98	126	143	156	165	195	213	227	311	321	330	338	344	422	427	432	436	440	443	447	449	452	454	457	459	461	463	464	466	467	480
	10%	900	-	-	83	135	159	197	226	319	335	347	428	436	443	449	453	457	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	34	38	42	45	48	50	52	61	66	70	74	78	81	91	95	99	103	106	109	112	121	125	128	-
	90%	12150	-	-	-	-	6	9	13	17	21	25	28	34	39	43	46	49	51	53	65	70	74	78	82	92	97	101	105	109	112	121	125	129	132	135	138
	80%	10800	-	-	-	7	11	16	20	25	28	35	40	44	47	50	53	64	70	75	79	83	95	100	104	108	112	122	126	130	134	137	140	143	146	148	-
	75%	10125	-	-	-	8	12	17	22	27	32	38	43	47	50	53	64	70	75	80	90	96	101	106	110	120	124	129	133	136	140	143	146	148	151	154	-
	70%	9450	-	-	-	9	14	18	23	28	35	41	45	49	52	63	70	75	80	91	97	103	107	112	122	127	131	135	139	142	146	149	151	154	156	159	-
	60%	8100	-	-	-	11	17	23	28	36	42	47	51	61	69	76	81	94	100	106	111	122	128	133	137	141	145	149	152	155	157	160	162	165	167	183	-
	50%	6750	-	-	-	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	139	144	148	152	155	159	162	164	167	184	191	197	202	208	213	-
	40%	5400	-	-	-	19	27	38	46	52	66	76	91	100	108	122	130	137	142	148	152	157	160	164	167	186	193	201	207	213	219	224	301	306	310	314	-
	30%	4050	-	-	-	27	40	49	64	77	94	106	122	132	140	147	153	158	163	167	188	198	207	214	222	300	306	312	317	321	326	330	334	337	340	344	-
	25%	3375	-	-	-	34	47	62	78	98	110	128	138	147	154	160	165	185	197	207	216	224	304	310	316	322	327	332	336	340	344	347	422	425	428	431	-
	20%	2700	-	-	-	43	60	79	102	122	136	147	155	162	181	195	208	219	300	309	316	323	329	334	339	344	420	424	427	431	434	437	439	442	444	446	-
	10%	1350	-	-	-	96	130	151	164	198	220	309	322	333	342	422	429	435	440	444	448	452	455	458	460	463	465	467	480	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	7	10	12	15	18	20	22	26	27	31	34	38	40	43	45	47	49	51	52	60	64	67	70	74	76	79	81	90	-	-
	90%	16200	-	-	-	-	6	9	11	14	17	20	23	26	28	32	36	40	42	45	47	49	51	53	62	66	69	73	76	79	82	91	94	97	101	-	-
	80%	14400	-	-	-	-	7	10	13	17	20	23	27	30	35	38	42	45	47	50	52	53	64	68	72	76	79	82	92	96	99	103	106	109	112	-	-
	75%	13500	-	-	-	-	8	11	15	18	22	26	28	33	38	41	45	47	50	52	60	65	70	74	77	81	90	94	98	102	105	109	112	121	124	-	-
	70%	12600	-	-	-	-	9	12	16	20	23	27	32	37	41	44	47	50	52	61	66	71	75	79	83	93	97	101	105	108	112	121	125	128	131	-	-
	60%	10800	-	-	-	-	11	16	20	25	28	35	40	44	47	50	53	64	69	75	79	83	94	99	104	108	111	121	126	130	133	137	140	143	145	-	-
	50%	9000	-	-	-	-	14	20	25	30	37	43	47	50	53	67	73	78	83	95	101	106	111	121	126	131	135	139	143	146	149	152	154	157	159	-	-
	40%	7200	-	-	-	-	19	26	33	41	46	51	61	70	77	83	97	103	109	121	127	132	137	142	146	150	153	156	159	162	164	167	183	189	195	-	-
	30%	5400	-	-	-	-	27	37	45	51	65	75	83	98	107	120	128	135	141	146	151	155	159	162	165	182	190	197	204	210	216	221	226	303	307	-	-
	25%	4500	-	-	-	-	34	44	51	67	78	94	105	113	128	136	143	149	154	159	163	166	186	195	203	210	217	223	301	306	311	316	320	324	328	-	-
	20%	3600	-	-	-	-	43	52	71	83	102	113	130	139	147	153	159	164	181	192	202	211	219	227	305	311	317	322	326	331	335	339	342	345	420	-	-
	10%	1800	-	-	-	-	96	123	141	154	164	190	209	223	308	318	327	335	342	420	425	430	434	438	441	445	448	450	453	455	457	459	461	463	465	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.16 16-Bay, Single-Phase, Transformer-Based Unit Type F (UPS Model-Number Digit 6 = F)

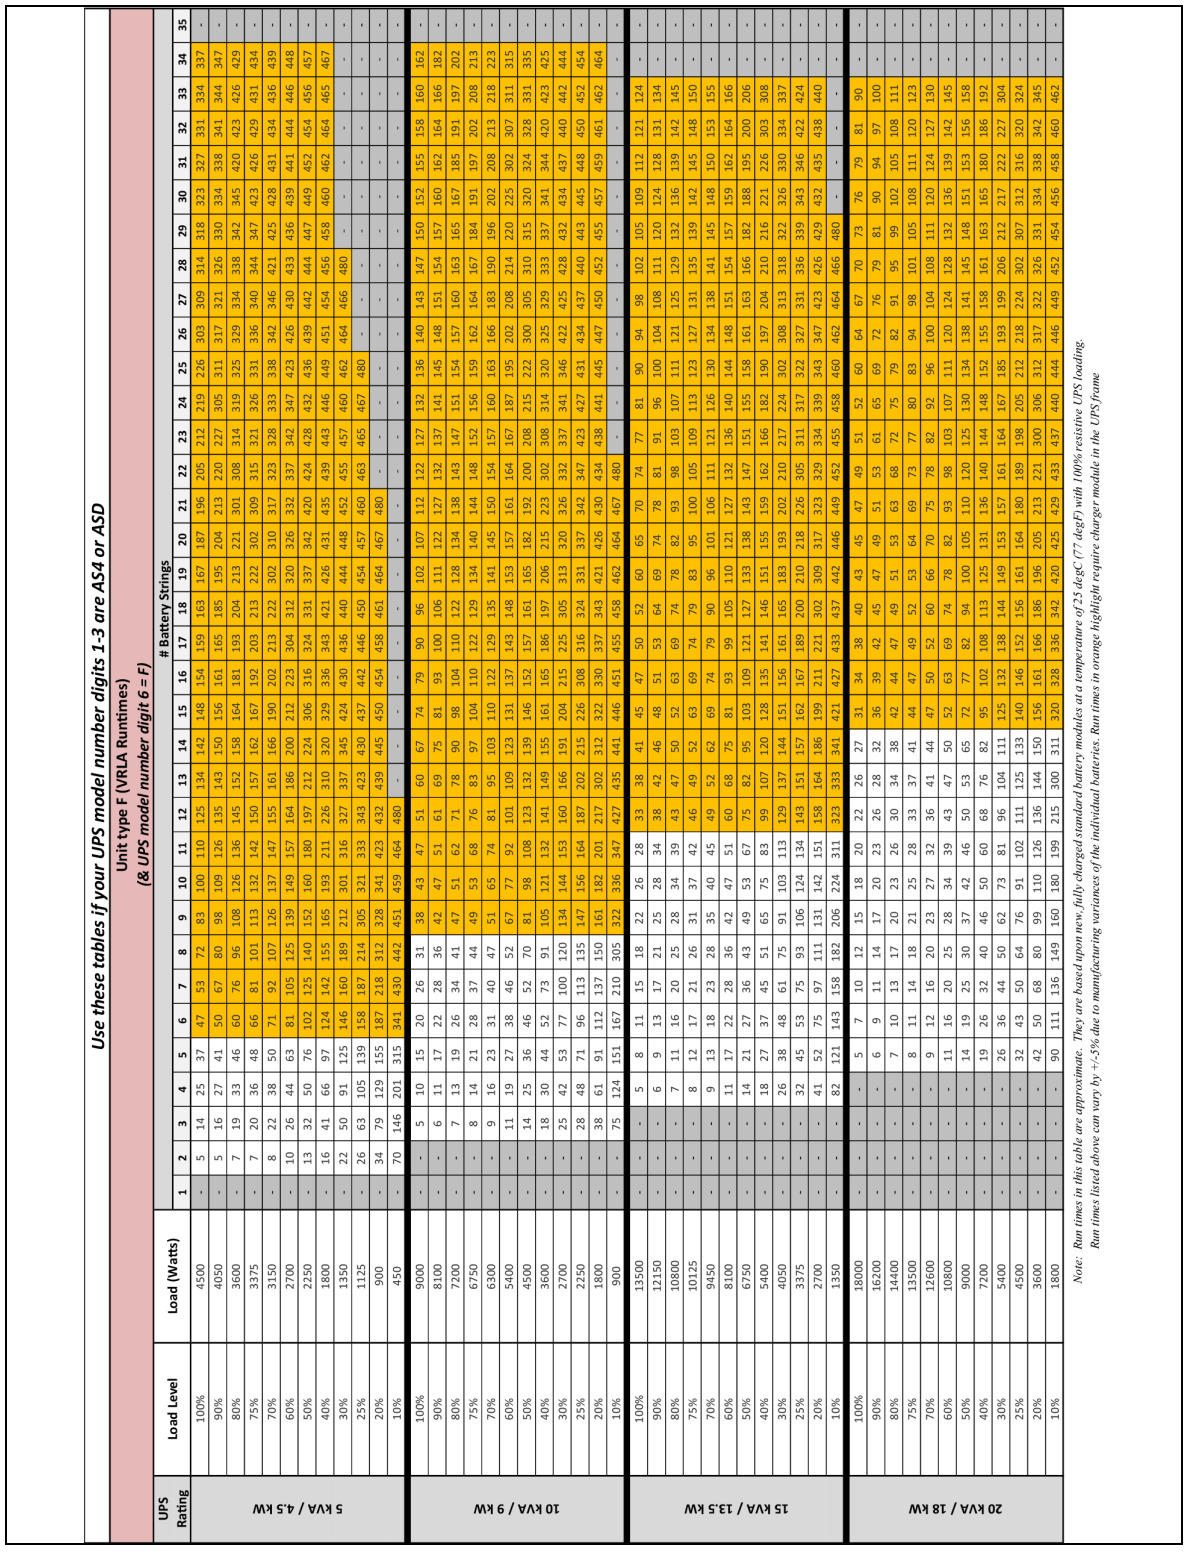

Use these tables if your UPS model number digits 1-3 are AS4 or ASD

Unit type F (VRLA Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	14	25	37	47	53	72	83	100	110	125	134	142	148	154	159	163	167	187	196	205	212	219	226	303	309	314	318	323	327	331	334	337	-
	90%	4050	-	5	16	27	41	50	67	80	98	109	126	135	143	150	156	161	165	185	195	204	213	220	227	305	311	317	321	326	330	334	338	341	344	347	-
	80%	3600	-	7	19	33	46	60	76	96	108	126	136	145	152	158	164	181	193	204	213	221	301	308	314	319	325	329	334	338	342	345	420	423	426	429	-
	75%	3375	-	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	302	309	315	321	326	331	336	340	344	347	423	426	429	431	434	-
	70%	3150	-	8	22	38	50	71	92	107	126	137	147	155	161	166	190	202	213	222	302	310	317	323	328	333	338	342	346	421	425	428	431	434	436	439	-
	60%	2700	-	10	26	44	63	81	105	125	139	149	157	164	186	200	212	223	304	312	320	326	332	337	342	347	423	426	430	433	436	439	441	444	446	448	-
	50%	2250	-	13	32	50	76	102	125	140	152	160	180	197	212	224	306	316	324	331	337	342	420	424	428	432	436	439	442	444	447	449	452	454	456	457	-
	40%	1800	-	16	41	66	97	124	142	155	165	193	211	226	310	320	329	336	343	421	426	431	435	439	443	446	449	451	454	456	458	460	462	464	465	467	-
	30%	1350	-	22	50	91	125	146	160	189	212	301	316	327	337	345	424	430	436	440	444	448	452	455	457	460	462	464	466	480	-	-	-	-	-	-	-
	25%	1125	-	26	63	105	139	158	187	214	305	321	333	343	423	430	437	442	446	450	454	457	460	462	464	467	480	-	-	-	-	-	-	-	-	-	-
	20%	900	-	34	79	129	155	187	218	312	328	341	423	432	439	445	450	454	458	461	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	70	146	201	315	341	430	442	451	459	464	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	15	20	26	31	38	43	47	51	60	67	74	79	90	96	102	107	112	122	127	132	136	140	143	147	150	152	155	158	160	162	-
	90%	8100	-	-	6	11	17	22	28	36	42	47	51	61	69	75	81	93	100	106	111	122	127	132	137	141	145	148	151	154	157	160	163	165	167	166	182	-
	80%	7200	-	-	7	13	19	26	34	41	47	51	62	71	78	90	98	104	110	122	128	134	138	143	147	151	154	157	160	163	165	167	185	191	197	202	-
	75%	6750	-	-	8	14	21	28	37	44	49	53	68	76	83	97	104	110	122	129	134	140	144	148	152	156	159	162	164	167	184	191	197	202	208	213	-
	70%	6300	-	-	9	16	23	31	40	47	51	65	74	81	95	103	110	122	129	135	141	145	150	154	157	160	163	166	183	190	196	202	208	213	218	223	-
	60%	5400	-	-	11	19	27	38	46	52	67	77	92	101	109	123	131	137	143	148	153	157	161	164	167	187	195	202	208	214	220	225	302	307	311	315	-
	50%	4500	-	-	14	25	36	46	52	70	81	98	108	123	132	139	146	152	157	161	165	182	192	200	208	215	222	300	305	310	315	320	324	328	331	335	-
	40%	3600	-	-	18	30	44	52	73	91	105	121	132	141	149	155	161	165	186	197	206	215	223	302	308	314	320	325	329	333	337	341	344	420	423	425	-
	30%	2700	-	-	25	42	53	77	100	120	134	144	153	160	166	191	204	215	225	305	313	320	326	332	337	341	346	422	425	428	432	434	437	440	442	444	-
	25%	2250	-	-	28	48	71	96	113	135	147	156	164	187	202	215	226	308	316	324	331	337	342	347	423	427	431	434	437	440	443	445	448	450	452	454	-
	20%	1800	-	-	38	61	91	112	137	150	161	182	201	217	302	312	322	330	337	343	421	426	430	434	438	441	445	447	450	452	455	457	459	461	462	464	-
	10%	900	-	-	75	124	151	167	210	305	322	336	347	427	435	441	446	451	455	458	462	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	33	38	41	45	47	50	52	60	65	70	74	77	81	90	94	98	102	105	109	112	121	124	-	-
	90%	12150	-	-	-	-	6	9	13	17	21	25	28	34	38	42	46	48	51	53	64	69	74	78	81	91	96	100	104	108	111	120	124	128	131	134	-	-
	80%	10800	-	-	-	7	11	16	20	25	28	34	39	43	47	50	52	63	69	74	78	82	93	98	103	107	111	121	125	129	132	136	139	142	145	-	-
	75%	10125	-	-	-	8	12	17	21	26	31	37	42	46	49	52	63	69	74	79	83	95	100	105	109	113	123	127	131	135	139	142	145	148	150	-	-
	70%	9450	-	-	-	9	13	18	23	28	35	40	45	49	52	62	69	74	79	90	96	101	106	111	121	126	130	134	138	141	145	148	150	153	155	-	-
	60%	8100	-	-	-	11	17	22	28	36	42	47	51	60	68	75	81	93	99	105	110	121	127	132	136	140	144	148	151	154	157	159	162	164	166	-	-
	50%	6750	-	-	-	14	21	27	36	43	49	53	67	75	82	95	103	109	121	127	133	138	143	147	151	155	158	161	163	166	182	188	195	200	206	-	-
	40%	5400	-	-	-	18	27	37	45	51	65	75	83	99	107	120	128	135	141	146	151	155	159	162	166	182	190	197	204	210	216	221	226	303	308	-	-
	30%	4050	-	-	-	26	38	48	61	75	91	103	113	129	137	144	151	156	161	165	183	193	202	210	217	224	302	308	313	318	322	326	330	334	337	-	-
	25%	3375	-	-	-	32	45	53	75	93	106	124	134	143	151	157	162	167	189	200	210	218	226	305	311	317	322	327	331	336	339	343	346	422	424	-	-
	20%	2700	-	-	-	41	52	75	97	111	131	142	151	158	164	186	199	211	221	302	309	317	323	329	334	339	343	347	423	426	429	432	435	438	440	-	-
	10%	1350	-	-	-	82	121	143	158	182	206	224	311	323	333	341	421	427	433	437	442	446	449	452	455	458	460	462	464	466	480	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	7	10	12	15	18	20	22	26	27	31	34	38	40	43	45	47	49	51	52	60	64	67	70	73	76	79	81	90	-	-
	90%	16200	-	-	-	-	6	9	11	14	17	20	23	26	28	32	36	39	42	45	47	49	51	53	61	65	69	72	76	79	81	90	94	97	100	-	-
	80%	14400	-	-	-	-	7	10	13	17	20	23	26	30	34	38	42	44	47	49	51	53	63	68	72	75	79	82	91	95	99	102	105	108	111	-	-
	75%	13500	-	-	-	-	8	11	14	18	21	25	28	33	37	41	44	47	49	52	53	64	69	73	77	80	83	94	98	101	105	108	111	120	123	-	-
	70%	12600	-	-	-	-	9	12	16	20	23	27	32	36	41	44	47	50	52	60	66	70	75	78	82	92	96	100	104	108	111	120	124	127	130	-	-
	60%	10800	-	-	-	-	11	16	20	25	28	34	39	43	47	50	52	63	69	74	78	82	93	98	103	107	111	120	124	128	132	136	139	142	145	-	-
	50%	9000	-	-	-	-	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	-	-
	40%	7200	-	-	-	-	19	26	32	40	46	50	60	68	76	82	95	102	108	113	125	131	136	140	144	148	152	155	158	161	163	165	180	186	192	-	-
	30%	5400	-	-	-	-	26	36	44	50	62	73	81	96	104	111	125	132	138	144	149	153	157	161	164	167	185	193	199	206	212	217	222	227	304	-	-
	25%	4500	-	-	-	-	32	43	50	64	76	91	102	111	125	133	140	146	152	156	161	164	180	189	198	205	212	218	224	302	307	312	316	320	324	-	-
	20%	3600	-	-	-	-	42	50	68	80	99	110	126	136	144	150	156	161	166	186	196	205	213	221	300	306	312	317	322	326	331	334	338	342	345	-	-
	10%	1800	-	-	-	-	90	111	136	149	160	180	199	215	300	311	320	328	336	342	420	425	429	433	437	440	444	446	449	452	454	456	458	460	462	-	-


Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.5 Estimated Battery Run Times: Model Number Digits 1-3 = AS5 or ASE

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.17 10-Bay, 2-Phase, No Transformer Unit Type N (UPS Model Number Digit 6 = N)

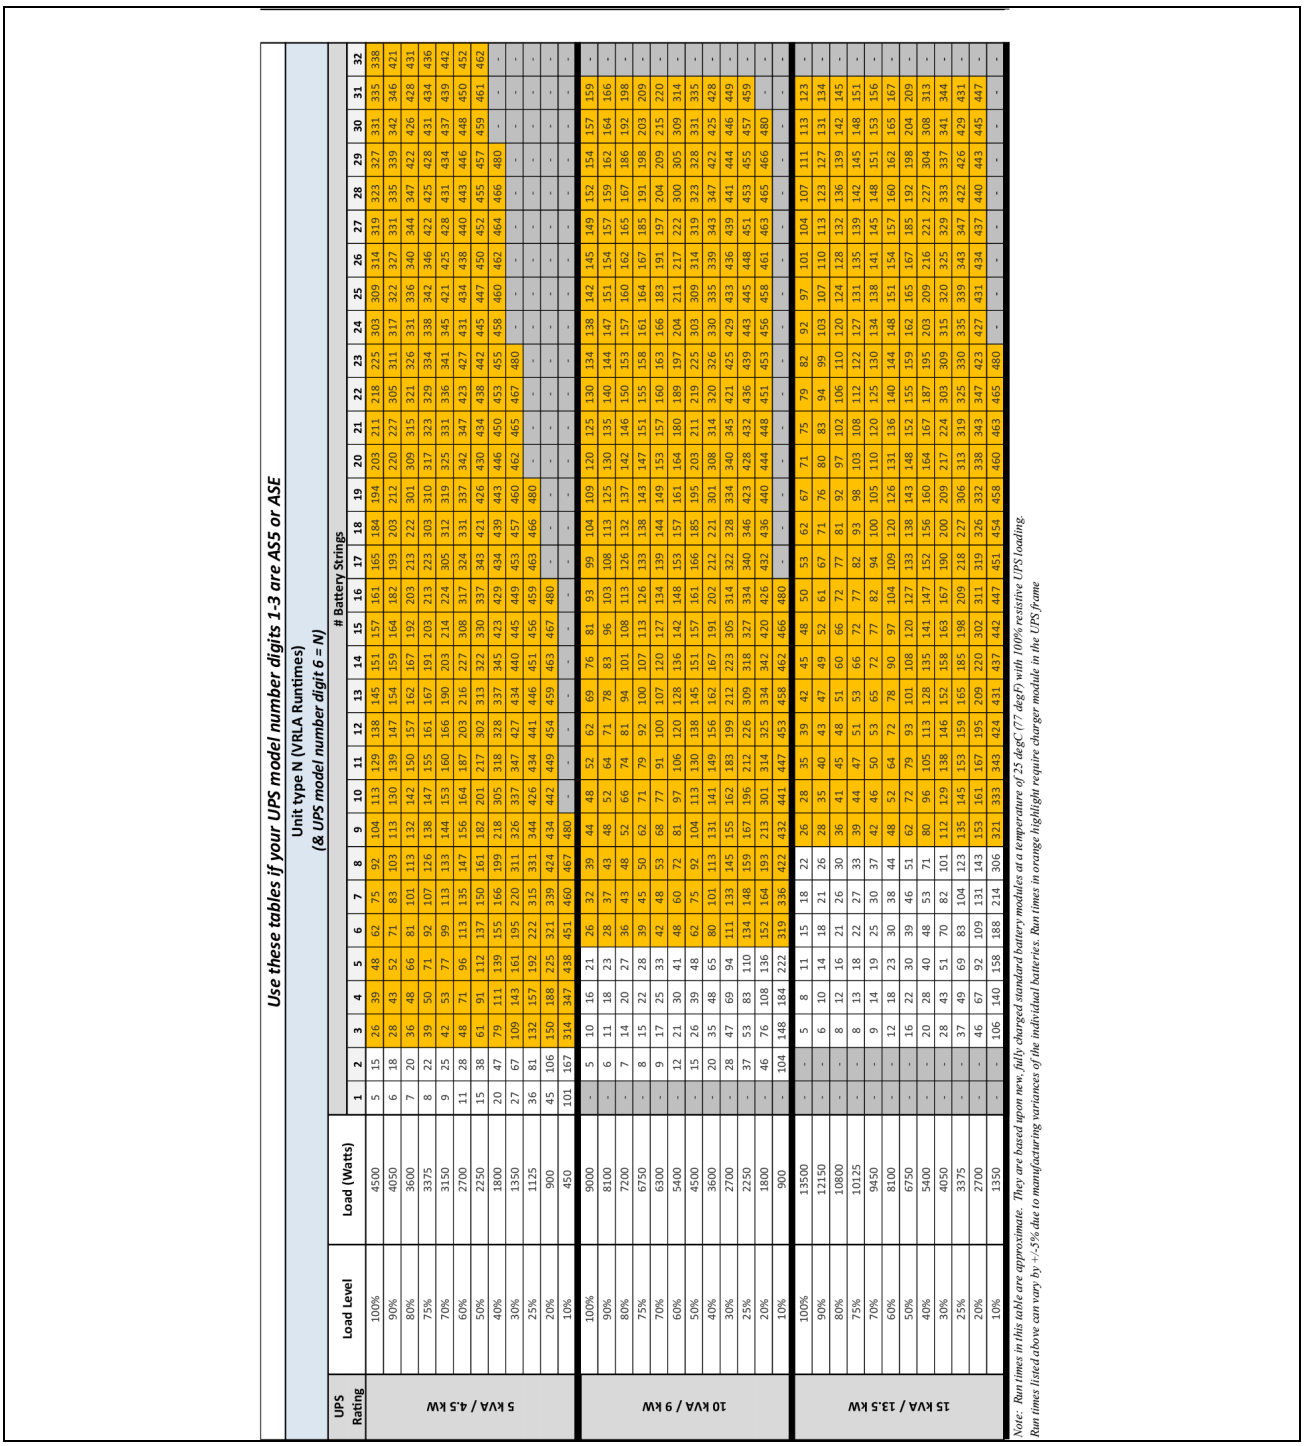

Use these tables if your UPS model number digits 1-3 are AS5 or ASE

Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	5	15	26	39	48	62	75	92	104	113	129	138	145	151	157	161	165	184	194	203	211	218	225	303	309	314	319	323	327	331	335	338
	90%	4050	5	15	26	39	48	62	75	92	104	113	129	138	145	151	157	161	165	184	194	203	211	218	225	303	309	314	319	323	327	331	335	338
	80%	3600	6	18	28	43	52	71	83	103	113	130	139	147	154	159	164	182	193	203	212	220	227	305	311	317	322	327	331	335	339	342	346	421
	75%	3375	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	301	309	315	321	326	331	336	340	344	347	422	426	428	431
	70%	3150	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	213	223	303	310	317	323	329	334	338	342	346	422	425	428	431	434	436
	60%	2700	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	437	439	442
	50%	2250	11	28	48	71	96	113	135	147	156	164	187	203	216	227	308	317	324	331	337	342	347	423	427	431	434	438	440	443	446	448	450	452
	40%	1800	15	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461	462
	30%	1350	20	47	79	111	139	155	166	199	218	305	318	328	337	345	423	429	434	439	443	446	450	453	455	458	460	462	464	466	480	-	-	-
	25%	1125	27	67	109	143	161	195	220	311	326	337	347	427	434	440	445	449	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-
	20%	900	36	81	132	157	192	222	315	331	344	426	434	441	446	451	456	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	45	106	150	188	225	321	339	424	434	442	449	454	459	463	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
			101	167	314	347	438	451	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	32	39	44	48	52	62	69	76	81	93	99	104	109	120	125	130	134	138	142	145	149	152	154	157	159	-
	90%	8100	-	6	11	18	23	28	37	43	48	52	64	71	78	83	96	103	108	113	125	130	135	140	144	147	151	154	157	159	162	164	166	-
	80%	7200	-	7	14	20	27	36	43	48	52	66	74	81	94	101	108	113	126	132	137	142	146	150	153	157	160	162	165	167	186	192	198	-
	75%	6750	-	8	15	22	28	39	45	50	62	71	79	92	100	107	113	126	133	138	143	147	151	155	158	161	164	167	185	191	198	203	209	-
	70%	6300	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	-
	60%	5400	-	12	21	30	41	48	60	72	81	97	106	120	128	136	142	148	153	157	161	164	180	189	197	204	211	217	222	300	305	309	314	-
	50%	4500	-	15	26	39	48	62	75	92	104	113	130	138	145	151	157	166	185	195	203	211	219	225	303	309	314	319	323	328	331	335	-	-
	40%	3600	-	20	35	48	65	80	101	113	131	141	149	156	162	167	191	202	212	221	301	308	314	320	326	330	335	339	343	347	422	425	428	-
	30%	2700	-	28	47	69	94	111	133	145	155	162	183	199	212	223	305	314	322	328	334	340	345	421	425	429	433	436	439	441	444	446	449	-
	25%	2250	-	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	-
	20%	1800	-	46	76	108	136	152	164	193	213	301	314	325	334	342	420	426	432	436	440	444	448	451	453	456	458	461	463	465	466	480	-	-
	10%	900	-	104	148	184	222	319	336	422	432	441	447	453	458	462	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	101	104	107	111	113	123	-
	90%	12150	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	67	71	76	80	83	94	99	103	107	110	113	123	127	131	134	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	-
	60%	8100	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	-
	50%	6750	-	-	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	209	-
	40%	5400	-	-	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	-
	30%	4050	-	-	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	224	303	309	315	320	325	329	333	337	341	344	-
	25%	3375	-	-	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	-
	20%	2700	-	-	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	443	445	447	-
	10%	1350	-	-	106	140	158	188	214	306	321	333	343	424	431	437	442	447	451	454	458	460	463	465	480	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.18 10-Bay, 2-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are ASS or ASE

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																												
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	5	16	26	39	48	62	76	93	104	120	130	138	145	152	157	162	166	185	195	204	212	219	226	304	309	314	319	324	328	332	335	-
	90%	4050	6	18	28	43	52	71	83	102	113	130	139	147	154	159	164	181	193	203	211	219	227	305	311	317	322	327	331	335	339	342	345	-
	80%	3600	7	20	35	48	65	80	100	113	131	141	149	156	162	167	190	202	212	221	301	308	314	320	325	330	335	339	343	346	422	425	428	-
	75%	3375	8	22	38	50	70	91	106	125	137	146	154	161	166	189	201	212	221	302	309	316	322	327	332	337	341	345	421	424	427	430	433	-
	70%	3150	9	25	41	52	76	98	112	132	143	152	159	165	188	201	212	222	303	311	318	324	330	335	340	344	420	424	427	430	433	436	438	-
	60%	2700	11	28	47	69	94	111	133	145	155	163	183	199	212	224	306	314	322	329	335	340	345	421	426	429	433	436	439	442	444	447	449	-
	50%	2250	14	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	-
	40%	1800	19	46	76	108	136	152	163	192	212	300	313	324	333	341	420	426	431	436	440	444	447	450	453	456	458	460	462	464	466	480	-	-
	30%	1350	26	62	104	138	157	185	212	304	319	332	342	422	429	436	441	446	450	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-
	25%	1125	32	76	125	152	180	212	307	324	337	420	429	436	442	447	452	456	459	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	42	99	144	166	214	312	331	345	428	437	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	91	160	301	337	430	444	455	462	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	109	120	125	130	135	139	142	146	149	152	155	157	160	-
	90%	8100	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	-
	80%	7200	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	187	193	199	-
	75%	6750	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	164	167	185	192	198	204	209	-
	70%	6300	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	-
	60%	5400	-	11	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	-
	50%	4500	-	15	26	38	48	61	74	91	103	112	128	137	144	150	156	160	165	182	192	201	209	216	223	301	307	312	317	322	326	330	333	-
	40%	3600	-	20	34	47	63	78	98	111	129	139	147	154	160	165	186	198	208	217	225	305	311	317	323	328	332	337	341	344	420	423	426	-
	30%	2700	-	27	46	67	91	109	130	143	152	160	167	194	207	219	301	310	318	325	331	337	342	346	423	427	430	433	436	439	442	444	447	-
	25%	2250	-	35	52	80	107	131	145	156	164	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	-
	20%	1800	-	44	73	105	133	149	161	187	207	224	309	320	330	338	345	423	429	433	438	442	445	448	451	454	456	459	461	463	465	466	480	-
	10%	900	-	100	145	167	216	314	333	346	429	438	445	451	456	460	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	35	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	6	10	14	18	22	26	30	35	40	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	12	18	23	30	38	44	48	52	64	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	15	22	28	39	45	50	62	71	79	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	20	28	40	47	53	70	79	95	104	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	28	42	50	68	80	99	110	126	136	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	36	48	66	81	102	120	133	142	151	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	45	65	83	107	128	141	151	159	165	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	102	136	155	180	207	300	316	329	339	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.19 10-Bay, 2-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)


Use these tables if your UPS model number digits 1-3 are AS5 or ASE

Unit Type B (VRLA Runtimes)
(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																												
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	5	15	26	39	48	62	75	92	104	113	129	138	145	151	157	161	165	184	194	203	211	218	225	303	309	314	319	323	327	331	335
	90%	4050	-	6	18	28	43	52	71	83	103	113	130	139	147	154	159	164	182	193	203	212	220	227	305	311	317	322	327	331	335	339	342	346
	80%	3600	-	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	301	309	315	321	326	331	336	340	344	347	422	426	428
	75%	3375	-	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	213	223	303	310	317	323	329	334	338	342	346	422	425	428	431	434
	70%	3150	-	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	437	439
	60%	2700	-	11	28	48	71	96	113	135	147	156	164	187	203	216	227	308	317	324	331	337	342	347	423	427	431	434	438	440	443	446	448	450
	50%	2250	-	15	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461
	40%	1800	-	20	47	79	111	139	155	166	199	218	305	318	328	337	345	423	429	434	439	443	446	450	453	455	458	460	462	464	466	480	-	-
	30%	1350	-	27	67	109	143	161	195	220	311	326	337	347	427	434	440	445	449	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-
	25%	1125	-	36	81	132	157	192	222	315	331	344	426	434	441	446	451	456	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	45	106	150	188	225	321	339	424	434	442	449	454	459	463	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	101	167	314	347	438	451	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	101	104	107	111	113	123	-
	90%	8100	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	67	71	76	80	83	94	99	103	107	110	113	123	127	131	134	-
	80%	7200	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	-
	75%	6750	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	-
	70%	6300	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	-
	60%	5400	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	-
	50%	4500	-	-	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	209	-
	40%	3600	-	-	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	-
	30%	2700	-	-	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	224	303	309	315	320	325	329	333	337	341	344	-
	25%	2250	-	-	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	-
	20%	1800	-	-	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	443	445	447	-
	10%	900	-	-	106	140	158	188	214	306	321	333	343	424	431	437	442	447	451	454	458	460	463	465	480	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.20 10-Bay, 2-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

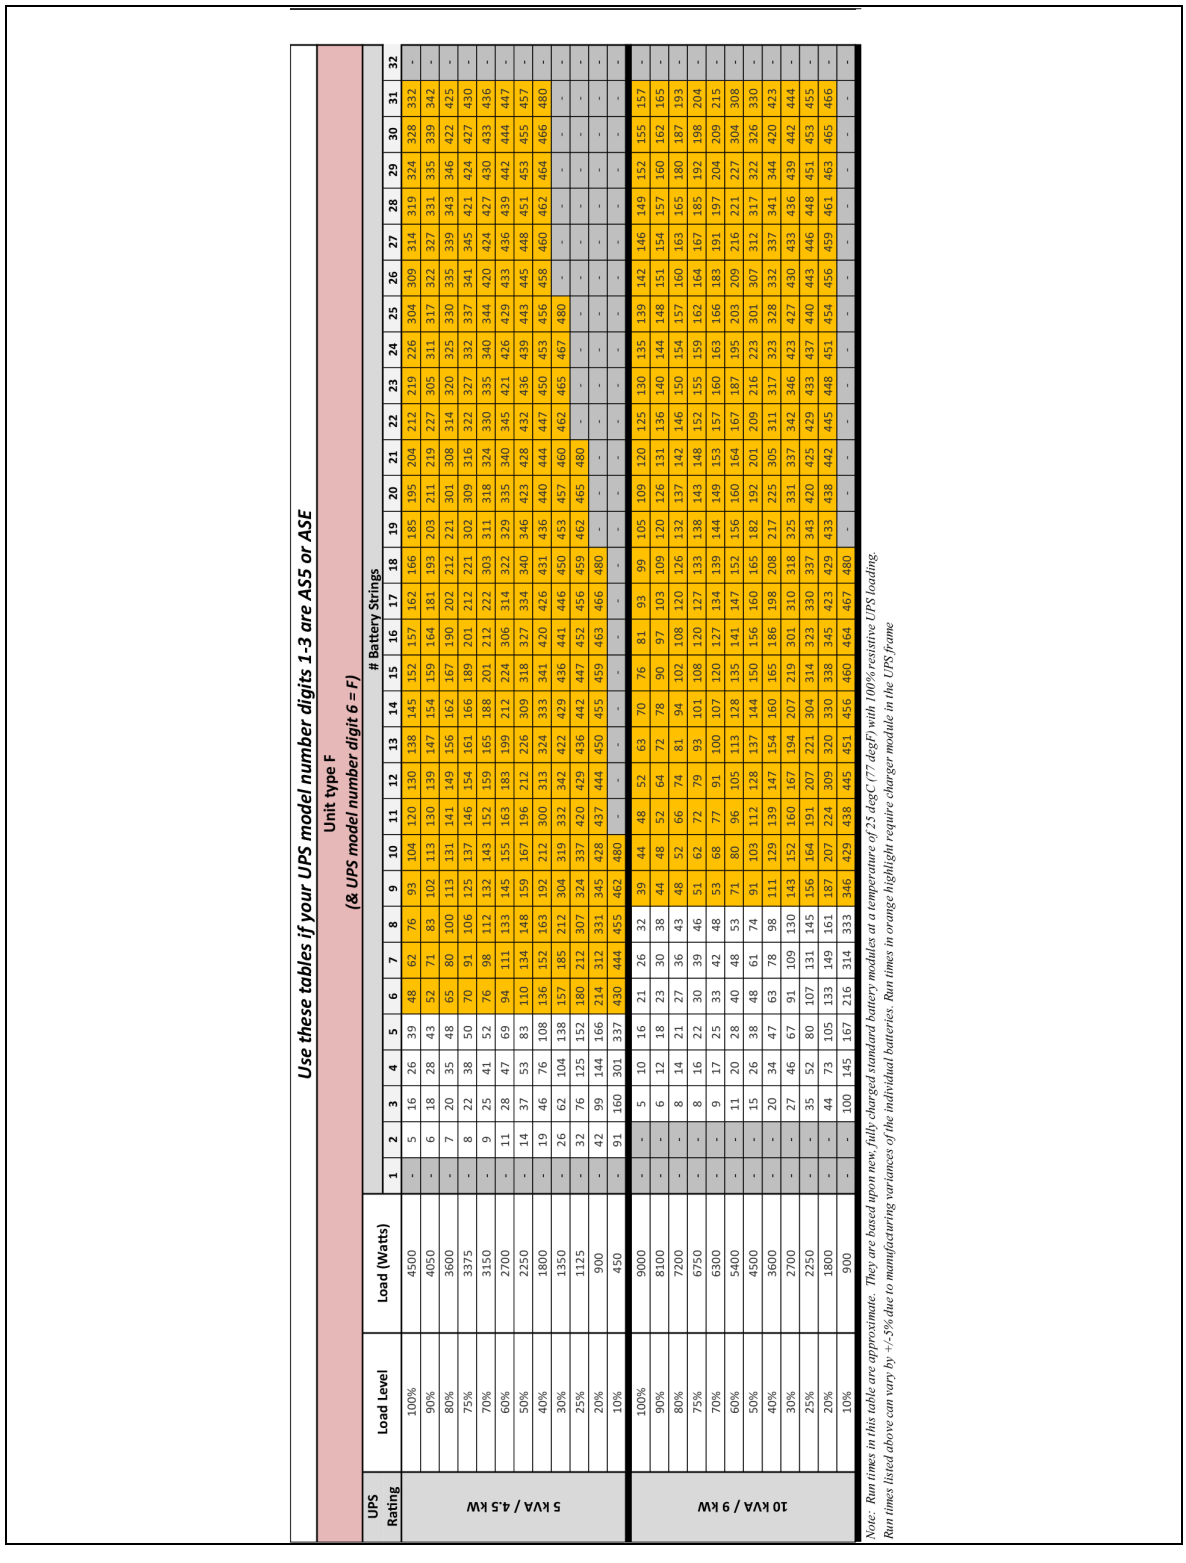

Use these tables if your UPS model number digits 1-3 are AS5 or ASE

Unit type F

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																												
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	5	16	26	39	48	62	76	93	104	120	130	138	145	152	157	162	166	185	195	204	212	219	226	304	309	314	319	324	328	332	-
	90%	4050	-	6	18	28	43	52	71	83	102	113	130	139	147	154	159	164	181	193	203	211	219	227	305	311	317	322	327	331	335	339	342	-
	80%	3600	-	7	20	35	48	65	80	100	113	131	141	149	156	162	167	190	202	212	221	301	308	314	320	325	330	335	339	343	346	422	425	-
	75%	3375	-	8	22	38	50	70	91	106	125	137	146	154	161	166	189	201	212	221	302	309	316	322	327	332	337	341	345	421	424	427	430	-
	70%	3150	-	9	25	41	52	76	98	112	132	143	152	159	165	188	201	212	222	303	311	318	324	330	335	340	344	420	424	427	430	433	436	-
	60%	2700	-	11	28	47	69	94	111	133	145	155	163	183	199	212	224	306	314	322	329	335	340	345	421	426	429	433	436	439	442	444	447	-
	50%	2250	-	14	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	-
	40%	1800	-	19	46	76	108	136	152	163	192	212	300	313	324	333	341	420	426	431	436	440	444	447	450	453	456	458	460	462	464	466	480	-
	30%	1350	-	26	62	104	138	157	185	212	304	319	332	342	422	429	436	441	446	450	453	457	460	462	465	467	480	-	-	-	-	-	-	-
	25%	1125	-	32	76	125	152	180	212	307	324	337	420	429	436	442	447	452	456	459	462	465	480	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	42	99	144	166	214	312	331	345	428	437	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	91	160	301	337	430	444	455	462	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	109	120	125	130	135	139	142	146	149	152	155	157	-
	90%	8100	-	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	-
	80%	7200	-	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	187	193	-
	75%	6750	-	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	164	167	185	192	198	204	-
	70%	6300	-	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	-
	60%	5400	-	-	11	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	-
	50%	4500	-	-	15	26	38	48	61	74	91	103	112	128	137	144	150	156	160	165	182	192	201	209	216	223	301	307	312	317	322	326	330	-
	40%	3600	-	-	20	34	47	63	78	98	111	129	139	147	154	160	165	186	198	208	217	225	305	311	317	323	328	332	337	341	344	420	423	-
	30%	2700	-	-	27	46	67	91	109	130	143	152	160	167	194	207	219	301	310	318	325	331	337	342	346	423	427	430	433	436	439	442	444	-
	25%	2250	-	-	35	52	80	107	131	145	156	164	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	-
	20%	1800	-	-	44	73	105	133	149	161	187	207	224	309	320	330	338	345	423	429	433	438	442	445	448	451	454	456	459	461	463	465	466	-
	10%	900	-	-	100	145	167	216	314	333	346	429	438	445	451	456	460	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.6 Estimated Battery Run Times: Model Number Digits 1-3 = AS6 or ASF

NOTE: Run times for frames beginning with AS_ indicate run times with VRLA batteries.

Figure 8.21 16-Bay, 2-Phase, No Transformer Unit Type N (UPS Model Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AS6 or ASF

Unit type N (VRLA Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																	
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	5	15	26	39	48	62	75	92	104	113	129	138	145	151	157	161	165	184	194	203	211	218	225	303	309	314	319	323	327	331	335	338	341	344	347
	90%	4050	6	18	28	43	52	71	83	103	113	130	139	147	154	159	164	182	193	203	212	220	227	305	311	317	322	327	331	335	339	342	346	421	423	426	429
	80%	3600	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	301	309	315	321	326	331	336	340	344	347	422	426	428	431	434	436	438
	75%	3375	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	213	223	303	310	317	323	329	334	338	342	346	422	425	428	431	434	436	439	441	443
	70%	3150	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	434	437	439	442	444	446
	60%	2700	11	28	48	71	96	113	135	147	156	164	187	203	216	227	308	317	324	331	337	342	347	423	427	431	434	438	440	443	446	448	450	452	454	456	458
	50%	2250	15	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461	462	464	465	467
	40%	1800	20	47	79	111	139	155	166	199	218	305	318	328	337	345	423	429	434	439	443	446	450	453	455	458	460	462	464	466	480	-	-	-	-	-	-
	30%	1350	27	67	109	143	161	195	220	311	326	337	347	427	434	440	445	449	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	36	81	132	157	192	222	315	331	344	426	434	441	446	451	456	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	45	106	150	188	225	321	339	424	434	442	449	454	459	463	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	101	167	314	347	438	451	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	32	39	44	48	52	62	69	76	81	93	99	104	109	120	125	130	134	138	142	145	149	152	154	157	159	162	164	166	-
	90%	8100	-	6	11	18	23	28	37	43	48	52	64	71	78	83	96	103	108	113	125	130	135	140	144	147	151	154	157	159	162	164	166	182	188	193	-
	80%	7200	-	7	14	20	27	36	43	45	52	66	74	81	94	101	108	113	126	132	133	138	142	146	150	153	157	160	162	165	167	186	192	198	203	208	213
	75%	6750	-	8	15	22	28	39	45	50	62	71	79	92	100	107	113	126	134	139	143	147	151	155	158	161	164	167	185	191	198	203	209	214	219	223	-
	70%	6300	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	225	301	305	-
	60%	5400	-	12	21	30	41	48	60	72	81	97	106	120	128	136	142	148	153	157	161	164	180	189	197	204	211	217	222	300	305	309	314	318	322	325	-
	50%	4500	-	15	26	39	48	62	75	92	104	113	130	138	145	151	157	161	166	185	195	203	211	219	225	303	309	314	319	323	328	331	335	338	342	345	-
	40%	3600	-	20	35	48	65	80	101	113	131	141	149	156	162	167	191	202	212	221	301	308	314	320	326	330	335	339	343	347	422	425	428	431	433	436	-
	30%	2700	-	28	47	69	94	111	133	145	155	162	183	199	212	223	305	314	322	328	334	340	345	421	425	429	433	436	439	441	444	446	449	451	453	455	-
	25%	2250	-	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	461	462	464	-
	20%	1800	-	46	76	108	136	152	164	193	213	301	314	325	334	342	420	426	432	436	440	444	448	451	453	456	458	461	463	465	466	480	-	-	-	-	-
	10%	900	-	104	148	184	222	319	336	422	432	441	447	453	458	462	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	101	104	107	111	113	123	126	130	133	-
	90%	12150	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	67	71	76	80	83	94	99	103	107	110	113	123	127	131	134	137	140	143	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	150	153	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	155	158	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	161	163	-
	60%	8100	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	184	189	195	-
	50%	6750	-	-	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	209	215	219	224	-
	40%	5400	-	-	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	317	321	324	-
	30%	4050	-	-	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	224	303	309	315	320	325	329	333	337	341	344	347	422	425	-
	25%	3375	-	-	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	434	437	439	-
	20%	2700	-	-	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	443	445	447	449	451	453	-
	10%	1350	-	-	106	140	158	188	214	306	321	333	343	424	431	437	442	447	451	454	458	460	463	465	480	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	5	7	10	12	15	18	20	23	26	28	31	35	38	41	43	46	48	49	51	53	61	65	68	71	74	77	80	82	91	94	-	-
	90%	16200	-	-	-	6	9	11	14	18	20	23	26	28	33	37	40	43	45	48	50	51	53	63	67	70	74	77	80	83	93	97	101	104	107	110	113	122	-	-
	80%	14400	-	-	-	7	10	14	17	20	23	27	31	35	39	42	45	48	50	52	60	65	69	73	77	80	83	93	97	101	104	107	110	113	122	-	-	-
	75%	13500	-	-	-	8	11	15	18	22	26	28	34	39	42	45	48	50	52	62	66	71	75	79	82	92	96	100	104	107	110	113	122	126	129	-	-	-
	70%	12600	-	-	-	9	13	17	20	25	28	33	38	42	45	48	51	53	63	68	73	77	81	90	95	99	103	107	110	113	123	127	130	133	136	-	-	-
	60%	10800	-	-	-	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	150	-	-	-
	50%	9000	-	-	-	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	110	120	125	130	135	139	142	146	149	152	155	157	160	162	164	-	-	-
	40%	7200	-	-	-	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	186	192	198	204	209	-	-	-
	30%	5400	-	-	-	28	40	48	53	70	80	95	105	112	127	134	141	146	151	156	160	163	167	186	194	201	208	214	220	225	302	307	312	316	320	-	-	-
	25%	4500	-	-	-	38	47	60	73	90	102	111	127	136	143	149	155	160	164	180	190	199	207	214	221	300	305	311	316	320	324	328	332	336	339	-	-	-
	20%	3600	-	-	-	46	62	77	97	110	127	138	146	153	159	165	184	196	206	215	223	303	310	316	321	326	331	335	339	343	347	422	425	428	430	-	-	-
	10%	1800	-	-	-	105	133	149	161	187	207	224	309	320	330	338	345	423	428	433	438	442	445	448	451	454	456	459	461	463	464	466	480	480	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.22 16-Bay, 2-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AS6 or ASF

Unit type R (VRLA Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	5	16	26	39	48	62	76	93	104	120	130	138	145	152	157	162	166	185	195	204	212	219	226	304	309	314	319	324	328	332	335	339	342	345	-
	90%	4050	6	18	28	43	52	71	83	102	113	130	139	147	154	159	164	181	193	203	211	219	227	305	311	317	322	327	331	335	339	342	345	420	423	426	-
	80%	3600	7	20	35	48	65	80	100	113	131	141	149	156	162	167	190	202	212	221	301	308	314	320	325	330	335	339	343	346	422	425	428	431	433	436	-
	75%	3375	8	22	38	50	70	91	106	125	137	146	154	161	166	189	201	212	221	302	309	316	322	327	332	337	341	345	421	424	427	430	433	436	438	440	-
	70%	3150	9	25	41	52	76	98	112	132	143	152	159	165	188	201	212	222	303	311	318	324	330	335	340	344	420	424	427	430	433	436	438	441	443	445	-
	60%	2700	11	28	47	69	94	111	133	145	155	163	183	199	212	224	306	314	322	329	335	340	345	421	426	429	433	436	439	442	444	447	449	451	453	455	-
	50%	2250	14	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	461	462	464	-
	40%	1800	19	46	76	108	136	152	163	192	212	300	313	324	333	341	420	426	431	436	440	444	447	450	453	456	458	460	462	464	466	480	-	-	-	-	-
	30%	1350	26	62	104	138	157	185	212	304	319	332	342	422	429	436	441	446	450	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	32	76	125	152	180	212	307	324	337	420	429	436	442	447	452	456	459	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	42	99	144	166	214	312	331	345	428	437	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	91	160	301	337	430	444	455	462	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	5	10	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	109	120	125	130	135	139	142	146	149	152	155	157	160	162	164	166	-
	90%	8100	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	183	189	194	-
	80%	7200	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	187	193	199	204	209	214	-
	75%	6750	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	164	167	185	192	198	204	209	214	219	224	-
	70%	6300	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	225	301	305	-
	60%	5600	-	11	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	317	321	324	-
	50%	4500	-	15	26	38	48	61	74	91	103	112	128	137	144	150	156	160	165	182	192	201	209	216	223	301	307	312	317	322	326	330	333	337	340	343	-
	40%	3600	-	20	34	47	63	78	98	111	129	139	147	154	160	165	186	198	208	217	225	305	311	317	323	328	332	337	341	344	420	423	426	429	431	434	-
	30%	2700	-	27	46	67	91	109	130	143	152	160	167	194	207	219	301	310	318	325	331	337	342	346	423	427	430	433	436	439	442	444	447	449	451	453	-
	25%	2250	-	35	52	80	107	131	145	156	164	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	459	461	462	-
	20%	1800	-	44	73	105	133	149	161	187	207	224	309	320	330	338	345	423	429	433	438	442	445	448	451	454	456	459	461	463	465	466	480	-	-	-	-
	10%	900	-	100	145	167	216	314	333	346	429	438	445	451	456	460	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	100	104	107	111	113	123	126	130	-	-
	90%	12150	-	-	6	10	14	18	22	26	30	35	40	44	47	50	52	61	67	72	76	80	90	94	99	103	107	110	120	124	127	131	134	137	140	-	-
	80%	10800	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	150	-	-
	75%	10125	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	155	-	-
	70%	9450	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	161	-	-
	60%	8100	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	164	167	183	189	-	-
	50%	6750	-	-	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	167	184	191	197	203	208	213	218	-	-
	40%	5400	-	-	20	28	40	47	53	70	79	95	104	112	126	134	140	146	151	155	159	163	166	185	193	200	207	214	219	225	302	307	311	315	319	-	-
	30%	4050	-	-	28	42	50	68	80	99	110	126	136	144	151	156	161	166	186	196	205	214	221	300	306	312	317	322	327	331	335	338	342	345	420	-	-
	25%	3375	-	-	36	48	66	81	102	120	133	142	151	157	163	181	193	204	214	223	303	310	316	322	327	332	337	341	345	420	423	426	429	432	435	-	-
	20%	2700	-	-	45	65	83	107	128	141	151	159	165	190	204	216	226	307	315	322	329	334	340	344	421	425	428	432	435	438	440	443	445	447	449	-	-
	10%	1350	-	-	102	136	155	180	207	300	316	329	339	420	427	433	439	444	448	452	455	458	461	463	466	480	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	5	7	10	12	15	18	20	23	26	28	32	35	38	41	44	46	48	50	51	53	61	65	69	72	75	78	80	83	92	95	-	-
	90%	16200	-	-	-	6	9	11	14	18	20	23	26	28	33	37	40	43	45	48	50	51	53	63	67	70	74	77	80	83	92	95	99	102	105	-	-
	80%	14400	-	-	-	7	10	14	17	20	23	27	31	35	39	42	45	48	50	52	60	65	69	73	77	80	83	93	97	100	104	107	110	113	122	-	-
	75%	13500	-	-	-	8	11	15	18	22	26	28	34	38	42	45	48	50	52	61	66	71	75	79	82	92	96	100	103	107	110	113	122	126	129	-	-
	70%	12600	-	-	-	9	13	17	20	25	28	33	38	42	45	48	50	53	63	68	73	77	80	90	95	99	103	107	110	113	123	126	130	133	136	-	-
	60%	10800	-	-	-	11	16	20	25	28	36	41	45	48	51	53	66	71	76	81	91	97	101	106	110	113	124	128	132	135	139	142	145	147	150	-	-
	50%	9000	-	-	-	15	20	26	32	39	44	48	52	62	69	75	81	92	99	104	109	113	125	130	134	138	142	145	148	151	154	157	159	161	164	-	-
	40%	7200	-	-	-	20	27	35	42	48	52	65	73	80	93	101	107	113	125	131	136	141	145	149	153	156	159	162	165	167	184	191	197	202	207	-	-
	30%	5400	-	-	-	28	39	47	53	69	79	94	103	111	125	133	139	145	150	155	159	162	166	183	191	198	205	212	218	223	300	305	310	314	318	-	-
	25%	4500	-	-	-	37	46	53	72	82	100	110	125	134	141	148	153	158	162	166	186	196	204	212	218	225	303	308	313	318	322	326	330	334	337	-	-
	20%	3600	-	-	-	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	306	313	318	324	328	333	337	341	344	420	423	426	428	-	-
	10%	1800	-	-	-	102	129	146	159	180	201	218	304	316	326	334	341	420	425	430	435	439	443	446	449	452	454	457	459	461	463	464	466	480	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.23 16-Bay, 2-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AS6 or ASF

Unit type B (VRLA Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	15	26	39	48	62	75	92	104	113	129	138	145	151	157	161	165	184	194	203	211	218	225	303	309	314	319	323	327	331	335	338	341	344
	90%	4050	-	6	18	28	43	52	71	83	103	113	130	139	147	154	159	164	182	193	203	212	220	227	305	311	317	322	327	331	335	339	342	346	421	423	426
	80%	3600	-	7	20	36	48	66	81	101	113	132	142	150	157	162	167	192	203	213	222	301	309	315	321	326	331	336	340	344	347	422	426	428	431	434	436
	75%	3375	-	8	22	39	50	71	92	107	126	138	147	155	161	167	191	203	213	223	303	310	317	323	329	334	338	342	346	422	425	428	431	434	436	439	441
	70%	3150	-	9	25	42	53	77	99	113	133	144	153	160	166	190	203	214	224	305	312	319	325	331	336	341	345	421	425	428	431	434	437	439	442	444	446
	60%	2700	-	11	28	48	71	96	113	135	147	156	164	187	203	216	227	308	317	324	331	337	342	347	423	427	431	434	438	440	443	446	448	450	452	454	456
	50%	2250	-	15	38	61	91	112	137	150	161	182	201	217	302	313	322	330	337	343	421	426	430	434	438	442	445	447	450	452	455	457	459	461	462	464	465
	40%	1800	-	20	47	79	111	139	155	166	199	218	305	318	328	337	345	423	429	434	439	443	446	450	453	455	458	460	462	464	466	480	-	-	-	-	-
	30%	1350	-	27	67	109	143	161	195	220	311	326	337	347	427	434	440	445	449	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	36	81	132	157	192	222	315	331	344	426	434	441	446	451	456	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	45	106	150	188	225	321	339	424	434	442	449	454	459	463	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	101	167	314	347	438	451	460	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	32	39	44	48	52	62	69	76	81	93	99	104	109	120	125	130	134	138	142	145	149	152	154	157	159	162	164	-
	90%	8100	-	-	6	11	18	23	28	37	43	48	52	64	71	78	83	96	103	108	113	125	130	135	140	144	147	151	154	157	159	162	164	166	182	188	-
	80%	7200	-	-	7	14	20	27	36	43	48	52	66	74	81	94	101	108	113	126	132	137	142	146	150	153	157	160	162	165	167	186	192	198	203	208	-
	75%	6750	-	-	8	15	22	28	39	45	50	62	71	79	92	100	107	113	126	133	138	143	147	151	155	158	161	164	167	185	191	198	203	209	214	219	-
	70%	6300	-	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	225	301	-
	60%	5400	-	-	12	21	30	41	48	60	72	81	97	106	120	128	136	142	148	153	157	161	164	180	189	197	204	211	217	222	300	305	309	314	318	322	-
	50%	4500	-	-	15	26	39	48	62	75	92	104	113	130	138	145	151	157	161	166	185	195	203	211	219	225	303	309	314	319	323	327	331	335	338	342	-
	40%	3600	-	-	20	35	48	65	80	101	113	131	141	149	156	162	167	191	202	212	221	301	308	314	320	326	330	335	339	343	347	422	425	428	431	433	-
	30%	2700	-	-	28	47	69	94	111	133	145	155	162	183	199	212	223	305	314	322	328	334	340	345	421	425	429	433	436	439	441	444	446	449	451	453	-
	25%	2250	-	-	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	461	462	-
	20%	1800	-	-	46	76	108	136	152	164	193	213	301	314	325	334	342	420	426	432	436	440	444	448	451	453	456	458	461	463	465	466	480	-	-	-	-
	10%	900	-	-	104	148	184	222	319	336	422	432	441	447	453	458	462	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	101	104	107	111	113	123	126	130	-
	90%	12150	-	-	-	6	10	14	18	21	26	28	35	40	43	47	49	52	61	67	71	76	80	83	94	99	103	107	110	113	123	127	131	134	137	140	-
	80%	10800	-	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	150	-
	75%	10125	-	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	155	-
	70%	9450	-	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	161	-
	60%	8100	-	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	104	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	184	189	-
	50%	6750	-	-	-	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	165	167	185	192	198	204	209	215	219	-
	40%	5400	-	-	-	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	317	321	-
	30%	4050	-	-	-	28	43	51	70	82	101	112	129	138	146	152	158	163	167	190	200	209	217	224	303	309	315	320	325	329	333	337	341	344	347	422	-
	25%	3375	-	-	-	37	49	69	83	104	123	135	145	153	159	165	185	198	209	218	227	306	313	319	325	330	335	339	343	347	422	426	429	431	434	437	-
	20%	2700	-	-	-	46	67	92	109	131	143	153	161	167	195	209	220	302	311	319	326	332	338	343	347	423	427	431	434	437	440	443	445	447	449	451	-
	10%	1350	-	-	-	106	140	158	188	214	306	321	333	343	424	431	437	442	447	451	454	458	460	463	465	480	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	7	10	12	15	18	20	23	26	28	31	35	38	41	43	46	48	49	51	53	61	65	68	71	74	77	80	82	91	-	-
	90%	16200	-	-	-	-	6	9	11	14	18	20	23	26	28	33	37	40	43	45	48	50	51	53	63	67	70	74	77	80	82	92	95	99	102	-	-
	80%	14400	-	-	-	-	7	10	14	17	20	23	27	31	35	39	42	45	48	50	52	60	65	69	73	77	80	83	93	97	101	104	107	110	113	-	-
	75%	13500	-	-	-	-	8	11	15	18	22	26	28	34	39	42	45	48	50	52	62	66	71	75	79	82	92	96	100	104	107	110	113	122	126	-	-
	70%	12600	-	-	-	-	9	13	17	20	25	28	33	38	42	45	48	51	53	63	68	73	77	81	90	95	99	103	107	110	113	123	127	130	133	-	-
	60%	10800	-	-	-	-	12	16	21	26	30	36	41	45	48	51	60	66	72	77	82	92	97	102	106	110	120	124	128	132	136	139	142	145	148	-	-
	50%	9000	-	-	-	-	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	110	120	125	130	135	139	142	146	149	152	155	157	160	162	-	-
	40%	7200	-	-	-	-	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	186	192	198	204	-	-
	30%	5400	-	-	-	-	28	40	48	53	70	80	95	105	112	127	134	141	146	151	156	160	163	167	186	194	201	208	214	220	225	302	307	312	316	-	-
	25%	4500	-	-	-	-	38	47	60	73	90	102	111	127	136	143	149	155	160	164	180	190	199	207	214	221	300	305	311	316	320	324	328	332	336	-	-
	20%	3600	-	-	-	-	46	62	77	97	110	127	138	146	153	159	165	184	196	206	215	223	303	310	316	321	326	331	335	339	343	347	422	425	428	-	-
	10%	1800	-	-	-	-	105	133	149	161	187	207	224	309	320	330	338	345	423	428	433	438	442	445	448	451	454	456	459	461	463	464	466	480	480	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.24 16-Bay, 2-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AS6 or ASF

Unit type F (VRLA Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	5	16	26	39	48	62	76	93	104	120	130	138	145	152	157	162	166	185	195	204	212	219	226	304	309	314	319	324	328	332	335	339	342	-
	90%	4050	-	6	18	28	43	52	71	83	102	113	130	139	147	154	159	164	181	193	203	211	219	227	305	311	317	322	327	331	335	339	342	345	420	423	-
	80%	3600	-	7	20	35	48	65	80	100	113	131	141	149	156	162	167	190	202	212	221	301	308	314	320	325	330	335	339	343	346	422	425	428	431	433	-
	75%	3375	-	8	22	38	50	70	91	106	125	137	146	154	161	166	189	201	212	221	302	309	316	322	327	332	337	341	345	421	424	427	430	433	436	438	-
	70%	3150	-	9	25	41	52	76	98	112	132	143	152	159	165	188	201	212	222	303	311	318	324	330	335	340	344	420	424	427	430	433	436	438	441	443	-
	60%	2700	-	11	28	47	69	94	111	133	145	155	163	183	199	212	224	306	314	322	329	335	340	345	421	426	429	433	436	439	442	444	447	449	451	453	-
	50%	2250	-	14	37	53	83	110	134	148	159	167	196	212	226	309	318	327	334	340	346	423	428	432	436	439	443	445	448	451	453	455	457	459	461	462	-
	40%	1800	-	19	46	76	108	136	152	163	192	212	300	313	324	333	341	420	426	431	436	440	444	447	450	453	456	458	460	462	464	466	480	-	-	-	-
	30%	1350	-	26	62	104	138	157	185	212	304	319	332	342	422	429	436	441	446	450	453	457	460	462	465	467	480	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	32	76	125	152	180	212	307	324	337	420	429	436	442	447	452	456	459	462	465	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	42	99	144	166	214	312	331	345	428	437	444	450	455	459	463	466	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	91	160	301	337	430	444	455	462	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	5	10	16	21	26	32	39	44	48	52	63	70	76	81	93	99	105	109	120	125	130	135	139	142	146	149	152	155	157	160	162	164	-
	90%	8100	-	-	6	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	165	167	183	189	-
	80%	7200	-	-	8	14	21	27	36	43	48	52	66	74	81	94	102	108	120	126	132	137	142	146	150	154	157	160	163	165	180	187	193	199	204	209	-
	75%	6750	-	-	8	16	22	30	39	46	51	62	72	79	93	101	108	120	127	133	138	143	148	152	155	159	162	164	167	185	192	198	204	209	214	219	-
	70%	6300	-	-	9	17	25	33	42	48	53	68	77	91	100	107	120	127	134	139	144	149	153	157	160	163	166	183	191	197	204	209	215	220	225	301	-
	60%	5400	-	-	11	20	28	40	48	53	71	80	96	105	113	128	135	141	147	152	156	160	164	167	187	195	203	209	216	221	227	304	308	313	317	321	-
	50%	4500	-	-	15	26	38	48	61	74	91	103	112	128	137	144	150	156	160	165	182	192	201	209	216	223	301	307	312	317	322	326	330	333	337	340	-
	40%	3600	-	-	20	34	47	63	78	98	111	129	139	147	154	160	165	186	198	208	217	225	305	311	317	323	328	332	337	341	344	420	423	426	429	431	-
	30%	2700	-	-	27	46	67	91	109	130	143	152	160	167	194	207	219	301	310	318	325	331	337	342	346	423	427	430	433	436	439	442	444	447	449	451	-
	25%	2250	-	-	35	52	80	107	131	145	156	164	191	207	221	304	314	323	330	337	343	420	425	429	433	437	440	443	446	448	451	453	455	457	459	461	-
	20%	1800	-	-	44	73	105	133	149	161	187	207	224	309	320	330	338	345	423	429	433	438	442	445	448	451	454	456	459	461	463	465	466	480	-	-	-
	10%	900	-	-	100	145	167	216	314	333	346	429	438	445	451	456	460	464	467	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	5	8	11	15	18	22	26	28	35	39	42	45	48	50	53	62	67	71	75	79	82	92	97	100	104	107	111	113	123	126	-	-
	90%	12150	-	-	-	6	10	14	18	22	26	30	35	40	44	47	50	52	61	67	72	76	80	90	94	99	103	107	110	120	124	127	131	134	137	-	-
	80%	10800	-	-	-	8	12	16	21	26	30	36	41	45	48	51	60	66	72	77	81	92	97	102	106	110	120	124	128	132	136	139	142	145	148	-	-
	75%	10125	-	-	-	8	13	18	22	27	33	39	44	47	51	53	66	72	77	82	93	98	103	108	112	122	127	131	135	139	142	145	148	151	153	-	-
	70%	9450	-	-	-	9	14	19	25	30	37	42	46	50	53	65	72	77	82	94	100	105	110	120	125	130	134	138	141	145	148	151	153	156	158	-	-
	60%	8100	-	-	-	12	18	23	30	38	44	48	52	64	72	78	90	97	103	109	120	126	131	136	140	144	148	151	154	157	160	162	164	167	183	-	-
	50%	6750	-	-	-	15	22	28	39	45	50	62	71	79	92	100	107	113	126	132	138	143	147	151	155	158	161	164	167	184	191	197	203	208	213	-	-
	40%	5400	-	-	-	20	28	40	47	53	70	79	95	104	112	126	134	140	146	151	155	159	163	166	185	193	200	207	214	219	225	302	307	311	315	-	-
	30%	4050	-	-	-	28	42	50	68	80	99	110	126	136	144	151	156	161	166	186	196	205	214	221	300	306	312	317	322	327	331	335	338	342	345	-	-
	25%	3375	-	-	-	36	48	66	81	102	120	133	142	151	157	163	181	193	204	214	223	303	310	316	322	327	332	337	341	345	420	423	426	429	432	-	-
	20%	2700	-	-	-	45	65	83	107	128	141	151	159	165	190	204	216	226	307	315	322	329	334	340	344	421	425	428	432	435	438	440	443	445	447	-	-
	10%	1350	-	-	-	102	136	155	180	207	300	316	329	339	420	427	433	439	444	448	452	455	458	461	463	466	480	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	5	7	10	12	15	18	20	23	26	28	32	35	38	41	44	46	48	50	51	53	61	65	69	72	75	78	80	83	92	-	-
	90%	16200	-	-	-	-	6	9	11	14	18	20	23	26	28	33	37	40	43	45	48	50	51	53	63	67	70	74	77	80	83	92	95	99	102	-	-
	80%	14400	-	-	-	-	7	10	14	17	20	23	27	31	35	39	42	45	48	50	52	60	65	69	73	77	80	83	93	97	100	104	107	110	113	-	-
	75%	13500	-	-	-	-	8	11	15	18	22	26	28	34	38	42	45	48	50	52	61	66	71	75	79	82	92	96	100	103	107	110	113	122	126	-	-
	70%	12600	-	-	-	-	9	13	17	20	25	28	33	38	42	45	48	50	53	63	68	73	77	80	90	95	99	103	107	110	113	123	126	130	133	-	-
	60%	10800	-	-	-	-	11	16	20	25	28	36	41	45	48	51	53	66	71	76	81	91	97	101	106	110	113	124	128	132	135	139	142	145	147	-	-
	50%	9000	-	-	-	-	15	20	26	32	39	44	48	52	62	69	75	81	92	99	104	109	113	125	130	134	138	142	145	148	151	154	157	159	161	-	-
	40%	7200	-	-	-	-	20	27	35	42	48	52	65	73	80	93	101	107	113	125	131	136	141	145	149	153	156	159	162	165	167	184	191	197	202	-	-
	30%	5400	-	-	-	-	28	39	47	53	69	79	94	103	111	125	133	139	145	150	155	159	162	166	183	191	198	205	212	218	223	300	305	310	314	-	-
	25%	4500	-	-	-	-	37	46	53	72	82	100	110	125	134	141	148	153	158	162	166	186	196	204	212	218	225	303	308	313	318	322	326	330	334	-	-
	20%	3600	-	-	-	-	46	60	76	95	108	125	136	144	152	158	163	180	192	202	212	220	300	306	313	318	324	328	333	337	341	344	420	423	426	-	-
	10%	1800	-	-	-	-	102	129	146	159	180	201	218	304	316	326	334	341	420	425	430	435	439	443	446	449	452	454	457	459	461	463	464	466	480	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.7 Estimated Battery Run Times: Model-number Digits 1-3 = AL1

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.25 10-Bay, Single-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL1


Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	8	18	27	37	46	56	66	76	85	95	104	114	124	134	143	153	163	173	183	192	202	212	222	231	241	251	260	270	280	289	299	309
	90%	4050	10	20	30	41	52	63	73	84	95	105	116	127	138	148	160	171	181	192	203	214	225	236	246	257	268	278	289	300	312	322	333	344
	80%	3600	11	22	34	46	58	71	83	95	106	118	131	143	156	168	180	192	204	217	229	241	253	265	277	289	301	314	326	338	350	363	375	387
	75%	3375	12	24	37	49	63	75	88	101	113	127	140	152	166	179	192	205	218	231	244	257	270	282	295	308	322	335	348	361	374	386	399	412
	70%	3150	12	26	39	53	67	81	94	108	121	136	149	164	178	191	205	219	233	247	261	274	288	302	317	330	344	358	385	399	413	427	441	-
	60%	2700	14	30	46	62	78	94	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	351	367	383	399	415	430	446	462	-	-	-
	50%	2250	17	36	54	74	92	111	130	149	169	187	207	226	244	263	282	301	321	340	359	378	396	415	434	453	472	-	-	-	-	-	-	-
	40%	1800	21	44	68	90	113	137	160	183	207	230	253	276	299	323	346	369	393	416	439	462	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	28	58	88	118	149	179	210	240	270	300	331	362	392	422	452	482	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	33	69	104	139	175	211	247	282	318	354	389	424	460	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	41	84	128	171	215	258	301	345	388	432	475	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	82	167	252	337	421	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	37	42	47	51	56	62	66	71	76	81	85	90	95	100	105	109	114	119	124	129	134	139	144	148	-
	90%	8100	-	10	15	20	25	31	36	41	46	52	57	63	68	74	79	84	90	95	100	105	111	116	121	127	133	138	143	149	155	160	166	-
	80%	7200	-	11	17	22	28	34	41	46	52	58	65	71	77	83	89	95	101	107	113	119	125	131	137	143	149	156	162	168	174	180	186	-
	75%	6750	-	12	18	24	30	37	43	49	56	63	69	76	82	88	95	101	107	114	120	127	133	140	146	153	160	166	173	179	186	192	198	-
	70%	6300	-	12	19	26	33	40	46	53	61	67	74	81	88	94	101	108	115	122	129	136	143	150	157	164	171	178	185	192	199	206	213	-
	60%	5400	-	15	22	30	38	46	54	63	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	-
	50%	4500	-	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	266	276	286	295	-
	40%	3600	-	22	33	45	56	69	80	92	104	115	128	139	151	163	175	187	199	211	223	234	246	258	270	281	293	305	318	329	341	353	365	-
	30%	2700	-	29	44	59	75	90	105	120	136	151	167	183	198	214	229	244	260	275	290	306	322	337	353	368	383	399	414	429	445	460	-	-
	25%	2250	-	34	51	70	88	105	123	141	160	178	195	214	232	250	268	285	303	322	340	358	376	394	412	430	448	466	-	-	-	-	-	-
	20%	1800	-	42	64	85	107	129	150	173	195	217	239	261	282	304	327	349	371	392	414	436	458	480	-	-	-	-	-	-	-	-	-	-
	10%	900	-	83	125	168	211	253	296	339	382	424	467	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	12	15	18	21	24	27	30	34	37	40	43	46	50	53	56	59	63	66	69	73	76	79	82	85	88	92	95	98	-
	90%	12150	-	-	10	13	16	20	23	27	30	34	37	41	45	48	52	55	58	63	66	70	74	77	81	84	88	91	95	98	102	105	109	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	91	95	99	102	106	110	114	118	123	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	49	53	58	63	67	71	75	80	84	88	92	96	101	105	109	113	118	122	127	131	-
	70%	9450	-	-	12	17	21	26	30	35	39	44	48	53	57	63	67	72	76	81	85	90	94	99	103	108	112	117	121	127	131	136	140	-
	60%	8100	-	-	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	126	132	137	142	148	154	159	164	-
	50%	6750	-	-	17	24	30	36	43	49	55	62	68	75	81	87	93	100	106	112	119	126	132	138	145	151	158	164	171	177	183	190	196	-
	40%	5400	-	-	22	30	37	45	53	61	69	77	84	92	100	108	115	124	132	139	147	156	164	171	179	187	195	203	211	219	227	235	242	-
	30%	4050	-	-	29	39	49	59	70	80	90	100	110	120	131	141	151	162	172	182	192	203	213	224	234	244	254	264	274	285	295	305	316	-
	25%	3375	-	-	34	46	57	70	82	93	105	117	129	141	154	166	178	190	201	214	226	238	250	262	273	285	297	310	322	334	346	358	370	-
	20%	2700	-	-	42	56	71	85	99	114	129	143	159	173	187	202	217	232	246	261	275	290	304	320	334	349	363	378	392	407	421	436	450	-
	10%	1350	-	-	83	111	139	168	196	225	253	282	311	339	367	396	424	452	481	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.26 10-Bay, Single-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

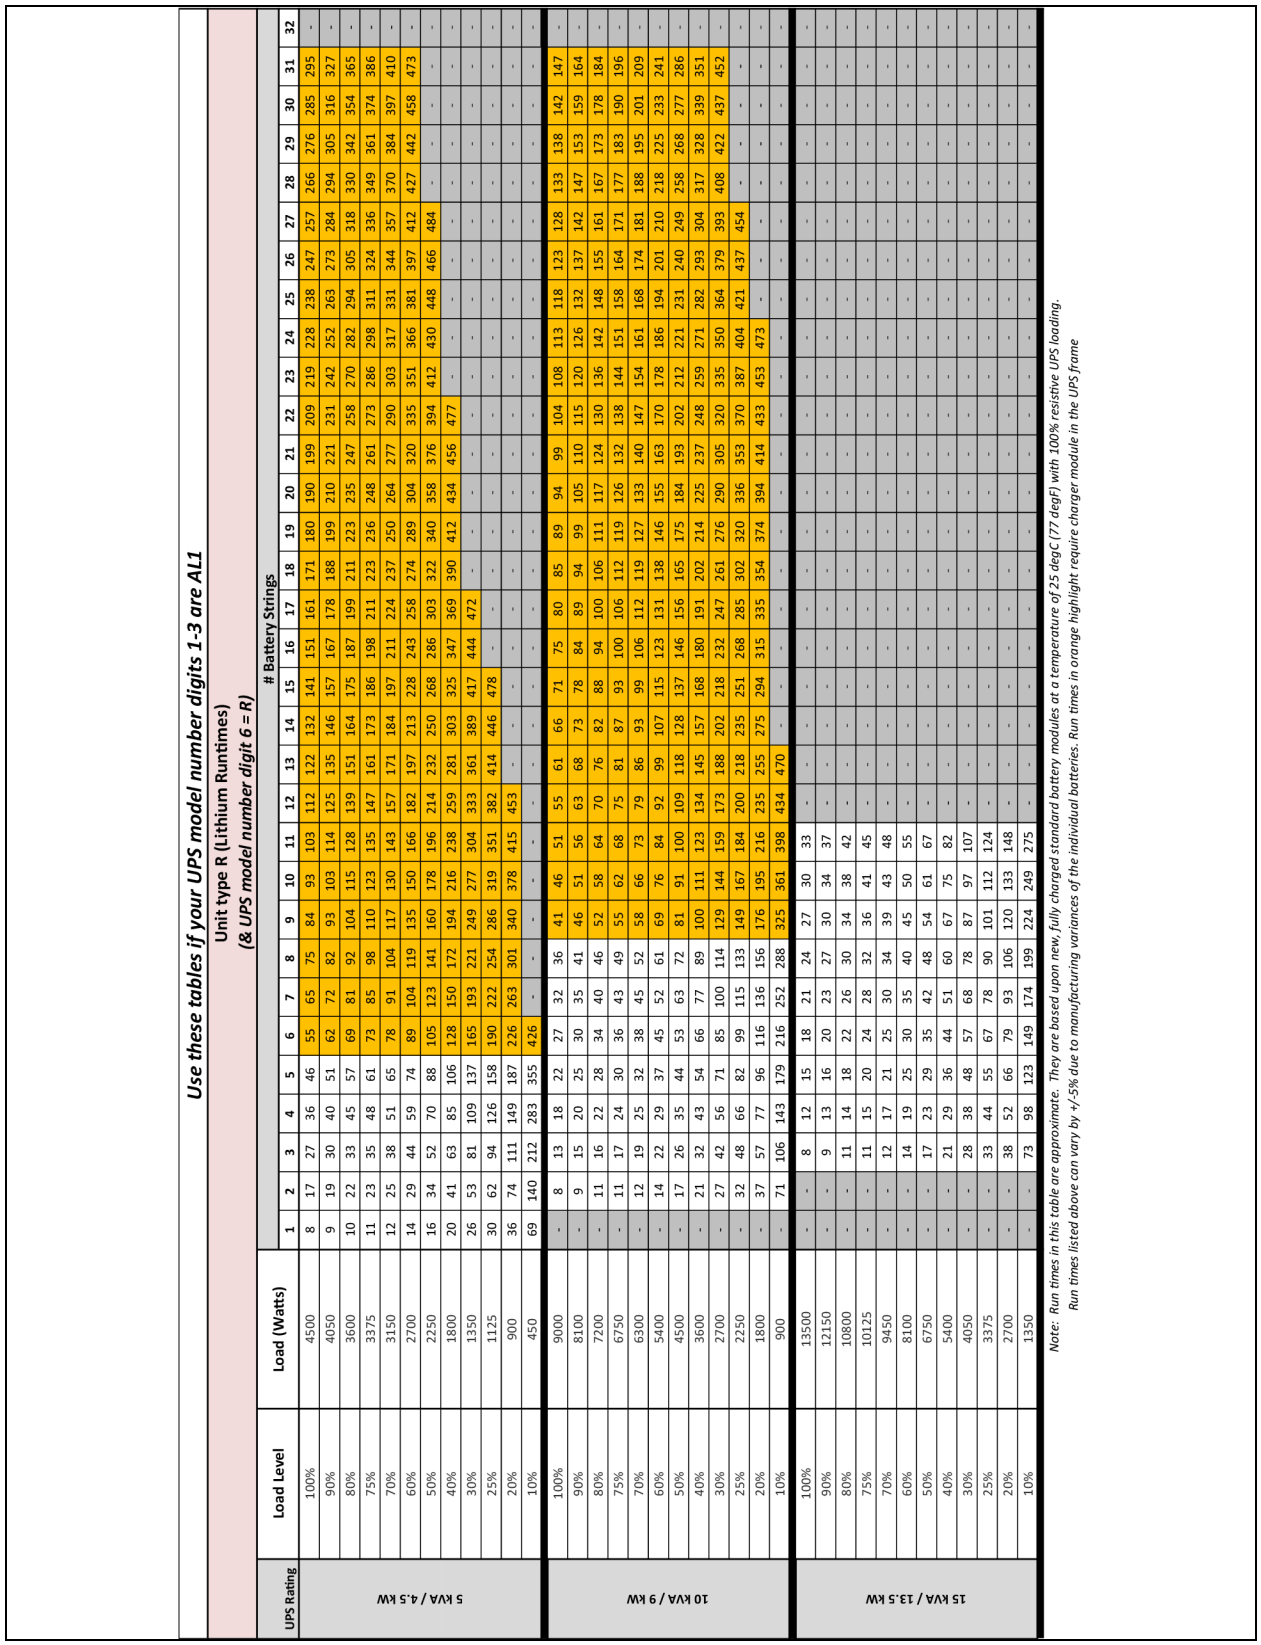

Use these tables if your UPS model number digits 1-3 are AL1

Unit type R (Lithium Runtimes)

(& UPS model number digit 6 = R)


UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	8	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	266	276	285	295	-
	90%	4050	9	19	30	40	51	62	72	82	93	103	114	125	135	146	157	167	178	188	199	210	221	231	242	252	263	273	284	294	305	316	327	-
	80%	3600	10	22	33	45	57	69	81	92	104	115	128	139	151	164	175	187	199	211	223	235	247	258	270	282	294	305	318	330	342	354	365	-
	75%	3375	11	23	35	48	61	73	85	98	110	123	135	147	161	173	186	198	211	223	236	248	261	273	286	298	311	324	336	349	361	374	386	-
	70%	3150	12	25	38	51	65	78	91	104	117	130	143	157	171	184	197	211	224	237	250	264	277	290	303	317	331	344	357	370	384	397	410	-
	60%	2700	14	29	44	59	74	89	104	119	135	150	166	182	197	213	228	243	258	274	289	304	320	335	351	366	381	397	412	427	442	458	473	-
	50%	2250	16	34	52	70	88	105	123	141	160	178	196	214	232	250	268	286	303	322	340	358	376	394	412	430	448	466	484	-	-	-	-	-
	40%	1800	20	41	63	85	106	128	150	172	194	216	238	259	281	303	325	347	369	390	412	434	456	477	-	-	-	-	-	-	-	-	-	-
	30%	1350	26	53	81	109	137	165	193	221	249	277	304	333	361	389	417	444	472	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	30	62	94	126	158	190	222	254	286	319	351	382	414	446	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	36	74	111	149	187	226	263	301	340	378	415	453	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	69	140	212	283	355	426	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	89	94	99	104	108	113	118	123	128	133	138	142	147	-
	90%	8100	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	126	132	137	142	147	153	159	164	-
	80%	7200	-	11	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	111	117	124	130	136	142	148	155	161	167	173	178	184	-
	75%	6750	-	11	17	24	30	36	43	49	55	62	68	75	81	87	93	100	106	112	119	126	133	144	154	161	168	174	181	188	195	201	209	-
	70%	6300	-	12	19	25	32	38	45	52	58	66	73	79	86	93	99	106	112	119	127	133	140	147	154	161	168	174	181	188	195	201	209	-
	60%	5400	-	14	22	29	37	45	52	61	69	76	84	92	99	107	115	123	131	138	146	155	163	170	178	186	194	201	210	218	225	233	241	-
	50%	4500	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	165	175	184	193	202	212	221	231	240	249	258	268	277	286	-
	40%	3600	-	21	32	43	54	66	77	89	100	111	123	134	145	157	168	180	191	202	214	225	237	248	259	271	282	293	304	317	328	339	351	-
	30%	2700	-	27	42	56	71	85	100	114	129	144	159	173	188	202	218	232	247	261	276	290	305	320	335	350	364	379	393	408	422	437	452	-
	25%	2250	-	32	48	66	82	99	115	133	149	167	184	200	218	235	251	268	285	302	320	336	353	370	387	404	421	437	454	-	-	-	-	-
	20%	1800	-	37	57	77	96	116	136	156	176	195	216	235	255	275	294	315	335	354	374	394	414	433	453	473	-	-	-	-	-	-	-	-
	10%	900	-	71	106	143	179	216	252	288	325	361	398	434	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	12	15	18	21	24	27	30	33	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	11	14	18	22	26	30	34	38	42	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	11	15	20	24	28	32	36	41	45	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	12	17	21	25	30	34	39	43	48	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	14	19	25	30	35	40	45	50	55	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	17	23	29	35	42	48	54	61	67	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	21	29	36	44	51	60	67	75	82	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	28	38	48	57	68	78	87	97	107	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	33	44	55	67	78	90	101	112	124	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	38	52	66	79	93	106	120	133	148	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	73	98	123	149	174	199	224	249	275	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.

Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.27 10-Bay, Single-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)

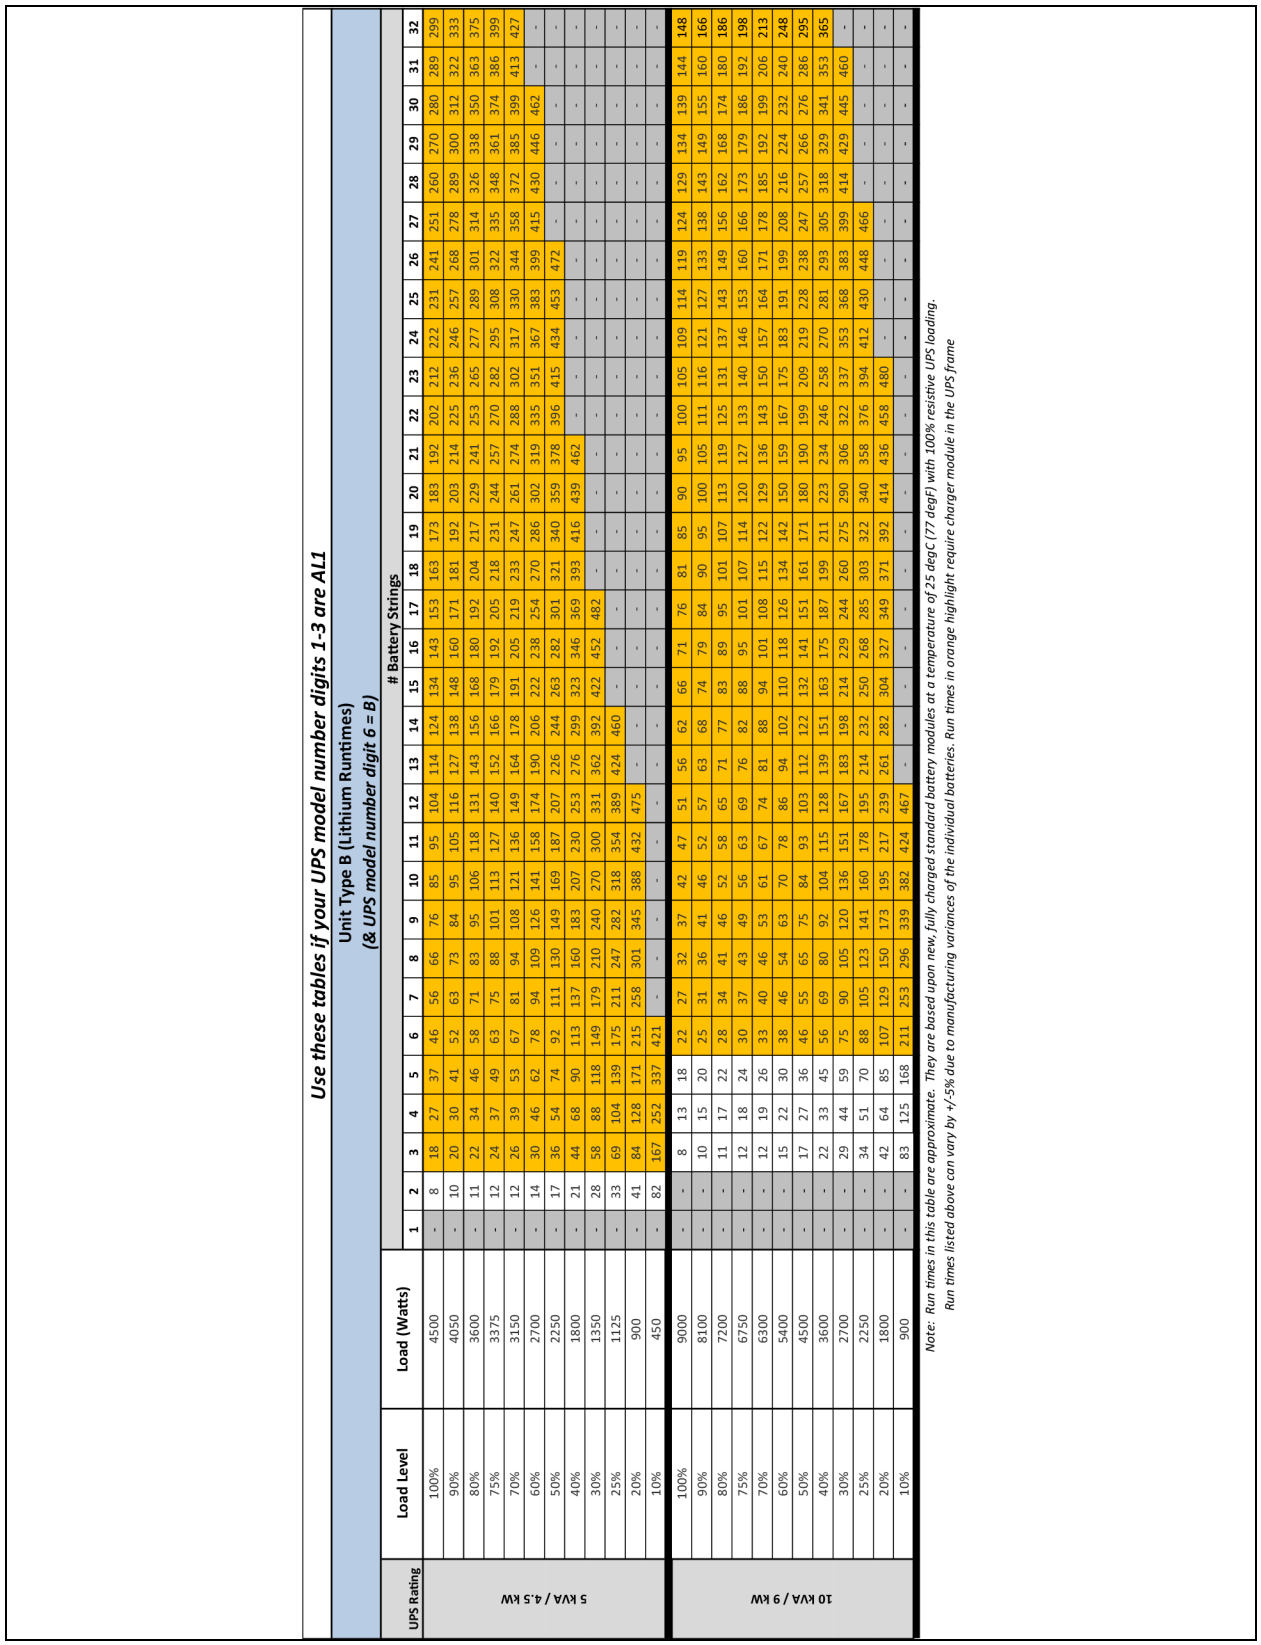

Use these tables if your UPS model number digits 1-3 are AL1

Unit Type B (Lithium Runtimes)


(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	8	18	27	37	46	56	66	76	85	95	104	114	124	134	143	153	163	173	183	192	202	212	222	231	241	251	260	270	280	289	299
	90%	4050	-	10	20	30	41	52	63	73	84	95	105	116	127	138	148	160	171	181	192	203	214	225	236	246	257	268	278	289	300	312	322	333
	80%	3600	-	11	22	34	46	58	71	83	95	106	118	131	143	156	168	180	192	204	217	229	241	253	265	277	289	301	314	326	338	350	363	375
	75%	3375	-	12	24	37	49	63	75	88	101	113	127	140	152	166	179	192	205	218	231	244	257	270	282	295	308	322	335	348	361	374	386	399
	70%	3150	-	12	26	39	53	67	81	94	108	121	136	149	164	178	191	205	219	233	247	261	274	288	302	317	330	344	358	372	385	399	413	427
	60%	2700	-	14	30	46	62	78	94	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	351	367	383	399	415	430	446	462	-	-
	50%	2250	-	17	36	54	74	92	111	130	149	169	187	207	226	244	263	282	301	321	340	359	378	396	415	434	453	472	-	-	-	-	-	-
	40%	1800	-	21	44	68	90	113	137	160	183	207	230	253	276	299	323	346	369	393	416	439	462	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	28	58	88	118	149	179	210	240	270	300	331	362	392	422	452	482	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	33	69	104	139	175	211	247	282	318	354	389	424	460	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	41	84	128	171	215	258	301	345	388	432	475	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	82	167	252	337	421	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	37	42	47	51	56	62	66	71	76	81	85	90	95	100	105	109	114	119	124	129	134	139	144	148
	90%	8100	-	-	10	15	20	25	31	36	41	46	52	57	63	68	74	79	84	90	95	100	105	111	116	121	127	133	138	143	149	155	160	166
	80%	7200	-	-	11	17	22	28	34	41	46	52	58	65	71	77	83	89	95	101	107	113	119	125	131	137	143	149	156	162	168	174	180	186
	75%	6750	-	-	12	18	24	30	37	43	49	56	63	69	76	82	88	95	101	107	114	120	127	133	140	146	153	160	166	173	179	186	192	198
	70%	6300	-	-	12	19	26	33	40	46	53	61	67	74	81	88	94	101	108	115	122	129	136	143	150	157	164	171	178	185	192	199	206	213
	60%	5400	-	-	15	22	30	38	46	54	63	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248
	50%	4500	-	-	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	266	276	286	295
	40%	3600	-	-	22	33	45	56	69	80	92	104	115	128	139	151	163	175	187	199	211	223	234	246	258	270	281	293	305	318	329	341	353	365
	30%	2700	-	-	29	44	59	75	90	105	120	136	151	167	183	198	214	229	244	260	275	290	306	322	337	353	368	383	399	414	429	445	460	-
	25%	2250	-	-	34	51	70	88	105	123	141	160	178	195	214	232	250	268	285	303	322	340	358	376	394	412	430	448	466	-	-	-	-	-
	20%	1800	-	-	42	64	85	107	129	150	173	195	217	239	261	282	304	327	349	371	392	414	436	458	480	-	-	-	-	-	-	-	-	-
	10%	900	-	-	83	125	168	211	253	296	339	382	424	467	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.

Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.28 10-Bay, Single-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

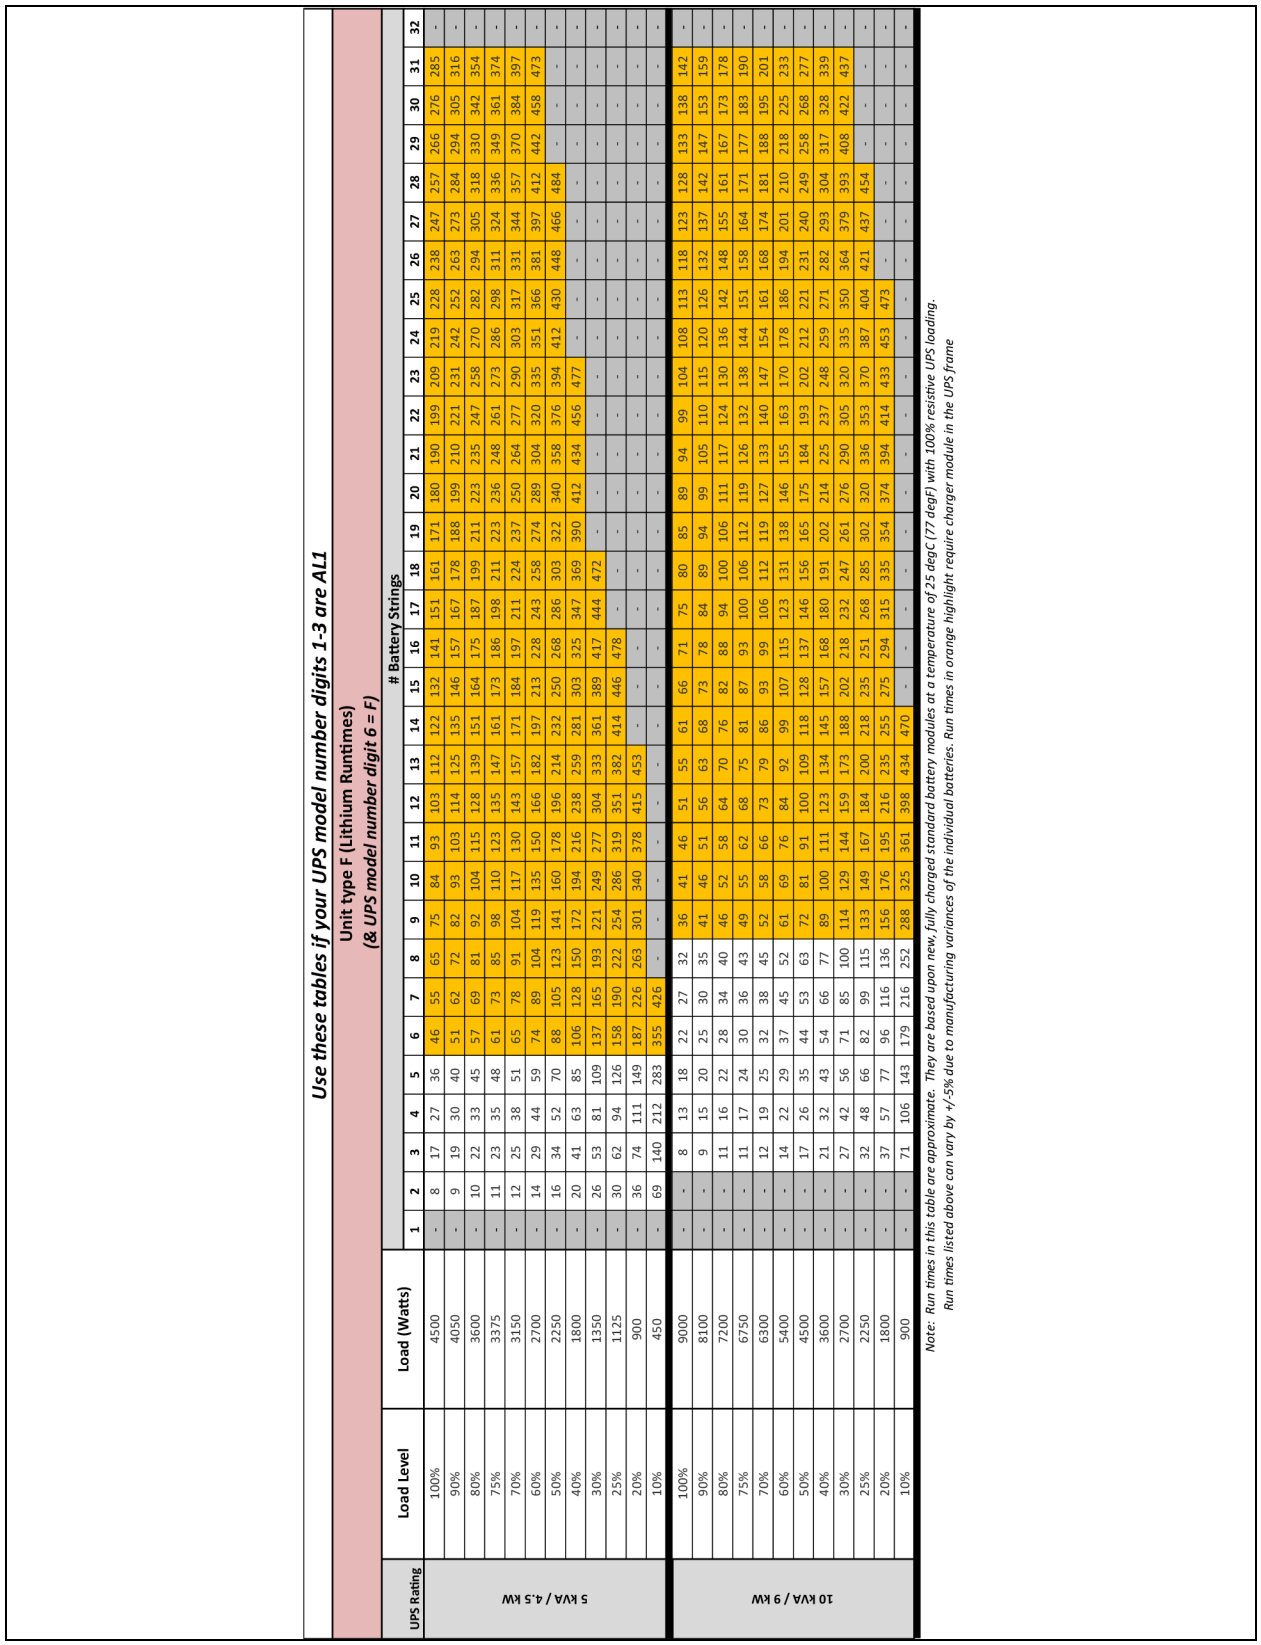

Use these tables if your UPS model number digits 1-3 are AL1

Unit type F (Lithium Runtimes)
(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	8	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	266	276	285	-
	90%	4050	-	9	19	30	40	51	62	72	82	93	103	114	125	135	146	157	167	178	188	199	210	221	231	242	252	263	273	284	294	305	316	-
	80%	3600	-	10	22	33	45	57	69	81	92	104	115	128	139	151	164	175	187	199	211	223	235	247	258	270	282	294	305	318	330	342	354	-
	75%	3375	-	11	23	35	48	61	73	85	98	110	123	135	147	161	173	186	198	211	223	236	248	261	273	286	298	311	324	336	349	361	374	-
	70%	3150	-	12	25	38	51	65	78	91	104	117	130	143	157	171	184	197	211	224	237	250	264	277	290	303	317	331	344	357	370	384	397	-
	60%	2700	-	14	29	44	59	74	89	104	119	135	150	166	182	197	213	228	243	258	274	289	304	320	335	351	366	381	397	412	442	458	473	-
	50%	2250	-	16	34	52	70	88	105	123	141	160	178	196	214	232	250	268	286	303	322	340	358	376	394	412	430	448	466	484	-	-	-	-
	40%	1800	-	20	41	63	85	106	128	150	172	194	216	238	259	281	303	325	347	369	390	412	434	456	477	-	-	-	-	-	-	-	-	-
	30%	1350	-	26	53	81	109	137	165	193	221	249	277	304	333	361	389	417	444	472	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	30	62	94	126	158	190	222	254	286	319	351	382	414	446	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	36	74	111	149	187	226	263	301	340	378	415	453	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	69	140	212	283	355	426	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	89	94	99	104	108	113	118	123	128	133	138	142	-
	90%	8100	-	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	126	132	137	142	147	153	159	-
	80%	7200	-	-	11	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	111	117	124	130	136	142	148	155	161	167	173	178	-
	75%	6750	-	-	11	17	24	30	36	43	49	55	62	68	75	81	87	93	100	106	112	119	126	132	138	144	151	158	164	171	177	183	190	-
	70%	6300	-	-	12	19	25	32	38	45	52	58	66	73	79	86	93	99	106	112	119	127	133	140	147	154	161	168	174	181	188	195	201	-
	60%	5400	-	-	14	22	29	37	45	52	61	69	76	84	92	99	107	115	123	131	138	146	155	163	170	178	186	194	201	210	218	225	233	-
	50%	4500	-	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	165	175	184	193	202	212	221	231	240	249	258	268	277	-
	40%	3600	-	-	21	32	43	54	66	77	89	100	111	123	134	145	157	168	180	191	202	214	225	237	248	259	271	282	293	304	317	328	339	-
	30%	2700	-	-	27	42	56	71	85	100	114	129	144	159	173	188	202	218	232	247	261	276	290	305	320	335	350	364	379	393	408	422	437	-
	25%	2250	-	-	32	48	66	82	99	115	133	149	167	184	200	218	235	251	268	285	302	320	336	353	370	387	404	421	437	454	-	-	-	-
	20%	1800	-	-	37	57	77	96	116	136	156	176	195	216	235	255	275	294	315	335	354	374	394	414	433	453	473	-	-	-	-	-	-	-
	10%	900	-	-	71	106	143	179	216	252	288	325	361	398	434	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.8 Estimated Battery Run Times: Model-number Digits 1-3 = AL2

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.29 16-Bay, Single-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL2

Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	8	18	27	37	46	56	66	76	85	95	104	114	124	134	143	154	164	173	183	192	202	212	222	232	241	251	261	271	280	290	300	310	320	330	339
	90%	4050	10	20	30	41	52	63	74	84	95	105	116	127	138	149	160	171	182	192	203	214	225	236	247	257	268	279	290	300	312	323	333	344	355	366	377
	80%	3600	11	22	34	46	58	71	83	94	106	118	131	143	156	168	180	192	204	217	229	241	253	265	277	289	301	314	326	338	350	362	374	386	399	411	423
	75%	3375	11	24	36	49	63	75	88	100	113	126	139	152	166	178	191	204	217	230	243	256	269	281	294	307	321	334	347	359	372	385	398	411	424	436	449
	70%	3150	12	26	39	52	67	80	94	107	120	135	148	163	176	190	204	218	232	245	259	272	286	300	314	328	342	355	369	383	397	410	424	438	451	465	-
	60%	2700	14	30	45	62	77	93	108	125	140	157	173	188	204	221	236	252	268	284	300	316	332	348	364	380	396	411	427	443	459	475	-	-	-	-	-
	50%	2250	17	35	54	73	92	110	129	148	168	186	205	224	243	262	281	299	319	338	357	375	394	413	432	451	469	-	-	-	-	-	-	-	-	-	-
	40%	1800	21	44	67	90	113	136	160	183	206	229	252	275	298	322	345	369	392	415	438	461	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	28	57	88	117	148	178	209	238	268	298	329	359	389	419	449	479	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	33	68	102	137	172	208	242	277	313	347	382	417	452	487	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	40	82	124	167	209	251	293	336	378	420	462	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	79	161	243	325	406	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	9	13	18	23	27	32	37	42	47	51	56	62	66	71	76	81	86	90	95	100	105	110	114	119	125	129	134	139	144	149	154	159	164	-
	90%	8100	-	10	15	20	25	31	36	41	47	52	57	63	68	74	79	84	90	95	100	106	111	116	122	128	133	138	144	149	155	161	166	171	177	182	-
	80%	7200	-	11	17	22	28	34	41	46	52	58	65	71	77	83	89	95	101	107	113	119	125	131	137	143	149	156	162	168	174	181	187	193	199	205	-
	75%	6750	-	12	18	24	30	37	43	49	56	63	69	76	82	88	95	101	107	114	120	127	134	140	146	153	160	167	173	179	186	192	199	205	212	219	-
	70%	6300	-	12	19	26	33	40	46	53	61	67	74	81	88	94	101	108	115	122	129	136	143	150	157	164	171	178	185	192	199	206	213	220	227	234	-
	60%	5400	-	15	22	30	38	46	54	63	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	256	264	272	-
	50%	4500	-	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	267	276	286	295	305	315	325	-
	40%	3600	-	22	33	45	56	69	80	92	104	115	128	139	151	163	175	187	199	211	223	234	246	258	270	281	293	305	318	329	341	353	365	377	388	400	-
	30%	2700	-	29	44	59	75	90	105	120	136	151	167	182	198	214	229	244	260	275	290	305	322	337	352	368	383	398	414	429	444	460	475	-	-	-	-
	25%	2250	-	34	51	70	87	105	123	141	160	177	195	214	231	249	267	285	303	322	339	357	375	393	411	429	447	465	-	-	-	-	-	-	-	-	-
	20%	1800	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	82	124	166	208	250	292	334	376	418	460	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	12	15	18	21	24	27	31	34	37	40	43	47	50	53	56	59	63	66	70	73	76	79	82	86	89	92	95	98	101	105	108	-
	90%	12150	-	-	10	13	16	20	23	27	31	34	37	41	45	48	52	55	59	63	67	70	74	77	81	84	88	91	95	98	102	106	109	113	116	120	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	91	95	99	103	107	111	115	119	123	127	131	135	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	93	97	101	105	109	114	118	123	127	131	136	140	144	-
	70%	9450	-	-	12	17	21	26	30	35	40	44	48	53	57	63	67	72	76	81	85	90	94	99	103	108	113	117	122	127	131	136	141	145	150	155	-
	60%	8100	-	-	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	127	132	137	142	148	154	159	165	170	175	181	-
	50%	6750	-	-	18	24	30	36	43	49	55	62	69	75	81	87	94	100	106	112	119	126	132	138	145	151	158	165	171	177	184	190	196	203	210	216	-
	40%	5400	-	-	22	30	37	45	53	61	69	77	85	92	100	108	116	124	132	140	148	156	164	172	180	188	195	203	212	220	228	235	243	251	259	267	-
	30%	4050	-	-	29	39	49	59	70	80	91	101	111	121	132	142	152	163	174	184	194	204	215	225	236	246	256	266	277	287	297	308	319	329	339	350	-
	25%	3375	-	-	34	46	57	70	82	94	105	117	130	142	154	166	178	190	202	215	227	239	250	262	274	286	298	311	323	335	347	359	371	383	395	407	-
	20%	2700	-	-	42	56	71	85	99	113	128	143	158	172	187	201	216	231	245	260	274	289	303	318	333	347	362	376	391	405	420	434	449	463	478	-	-
	10%	1350	-	-	82	110	138	167	195	223	251	279	307	336	364	392	420	448	476	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	8	11	13	15	18	20	22	25	27	30	32	34	37	39	42	44	46	49	51	53	56	58	61	64	66	68	71	73	75	78	-	-
	90%	16200	-	-	-	9	12	15	17	20	22	25	28	30	33	35	38	41	44	46	49	51	54	57	59	63	65	68	71	73	76	79	81	84	86	-	-
	80%	14400	-	-	-	11	14	17	19	22	25	28	31	34	37	40	43	46	49	52	55	58	62	65	68	71	74	77	80	83	85	88	91	94	97	-	-
	75%	13500	-	-	-	12	15	18	21	24	27	30	33	37	40	43	46	49	52	56	59	63	66	69	72	75	79	82	85	88	91	94	98	101	104	-	-
	70%	12600	-	-	-	12	16	19	22	26	29	33	36	40	43	46	50	53	56	60	64	67	71	74	77	81	84	88	91	94	98	101	104	108	111	-	-
	60%	10800	-	-	-	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	74	78	82	86	90	94	98	102	106	110	114	118	123	127	130	-	-
	50%	9000	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	84	89	94	99	103	108	113	117	123	128	132	137	142	147	151	157	-	-
	40%	7200	-	-	-	22	28	34	40	45	51	57	64	69	75	81	87	93	98	104	110	116	122	128	134	140	146	152	159	164	170	176	182	188	194	-	-
	30%	5400	-	-	-	29	37	44	52	59	68	75	83	91	98	106	113	121	129	137	145	152	161	169	176	184	192	199	208	215	223	231	239	246	254	-	-
	25%	4500	-	-	-	34	43	52	62	70	79	88	97	106	115	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	287	296	-	-
	20%	3600	-	-	-	42	52	64	74	85	96	107	117	129	139	150	162	173	184	194	206	217	228	239	249	260	271	282	293	304	316	326	337	348	359	-	-
	10%	1800	-	-	-	82	103	124	145	167	188	209	230	251	272	293	315	336	357	378	399	420	441	462	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.30 16-Bay, Single-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AL2

Unit type R (Lithium Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	8	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	229	238	248	257	267	276	286	295	305	315	325	-
	90%	4050	9	20	30	40	51	62	72	83	93	103	114	125	135	146	157	168	178	189	199	210	221	231	242	253	263	274	284	295	305	317	327	338	349	359	-
	80%	3600	10	22	33	45	57	69	81	92	104	115	128	139	151	164	175	187	199	211	223	235	247	258	270	282	294	305	318	330	342	354	365	377	389	401	-
	75%	3375	11	23	35	48	61	73	85	98	110	123	135	147	161	173	186	198	211	223	236	248	261	273	286	298	311	324	336	349	361	374	386	399	411	424	-
	70%	3150	12	25	38	51	65	78	91	104	117	130	143	157	171	184	197	211	224	237	250	264	277	290	303	317	331	344	357	370	384	397	410	423	436	450	-
	60%	2700	14	29	44	59	75	90	105	120	136	151	167	182	197	213	228	244	259	274	289	305	321	336	352	367	382	397	413	428	443	459	474	489	-	-	-
	50%	2250	16	34	52	70	88	106	124	142	161	179	197	215	233	251	269	287	305	324	342	360	378	396	414	432	450	468	487	-	-	-	-	-	-	-	-
	40%	1800	20	42	64	85	106	129	150	173	194	217	238	260	282	303	326	348	370	391	413	435	457	478	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	26	53	81	108	136	164	192	220	248	275	303	331	359	387	414	442	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	30	61	92	124	156	188	220	251	283	315	347	378	410	441	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	35	73	110	147	185	223	260	298	336	373	411	448	485	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	69	139	211	281	352	423	493	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147	152	158	163	-
	90%	8100	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	126	132	137	142	148	154	159	165	170	175	180	-
	80%	7200	-	11	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	112	118	124	130	136	142	148	155	161	167	173	179	185	191	197	203	-
	75%	6750	-	11	18	24	30	36	43	49	55	62	69	75	81	87	94	100	106	112	119	126	132	138	145	151	158	165	171	177	184	190	196	203	210	216	-
	70%	6300	-	12	19	25	32	38	45	52	59	66	73	79	86	93	99	106	113	119	127	134	140	147	155	161	168	175	182	188	195	202	209	216	223	229	-
	60%	5400	-	14	22	29	37	45	52	61	69	76	84	92	99	107	115	123	131	138	146	155	163	170	178	186	194	201	210	218	225	233	241	249	257	264	-
	50%	4500	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	165	175	184	193	202	212	221	231	240	249	258	268	277	286	295	304	315	-
	40%	3600	-	21	32	43	54	66	77	89	100	111	123	134	145	157	169	180	191	202	214	226	237	248	260	271	282	294	305	317	328	340	351	363	374	385	-
	30%	2700	-	27	42	56	71	86	100	114	130	144	159	174	188	203	218	233	247	262	276	291	306	321	336	350	365	380	394	409	424	438	453	467	-	-	-
	25%	2250	-	32	48	65	82	98	115	132	149	167	183	200	217	234	251	268	284	301	319	336	352	369	386	403	420	436	453	470	-	-	-	-	-	-	-
	20%	1800	-	37	57	77	96	116	136	156	176	195	216	235	255	275	294	315	335	354	374	394	414	433	453	473	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	71	106	143	179	216	252	288	325	361	398	434	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	8	12	15	18	21	24	27	30	34	37	40	43	46	49	53	56	59	63	66	69	72	76	79	82	85	88	91	95	98	101	104	-	-	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	112	115	-	-	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	66	70	74	78	82	86	90	94	98	102	106	110	114	118	122	126	130	-	-	-
	75%	10125	-	-	11	15	20	24	28	32	36	41	45	49	53	57	62	66	71	75	79	83	87	92	96	100	104	108	113	117	121	126	130	134	138	-	-	-
	70%	9450	-	-	12	17	21	25	30	34	39	43	48	52	57	62	66	71	75	80	84	89	93	98	102	107	111	116	120	125	130	134	139	143	148	-	-	-
	60%	8100	-	-	14	19	25	30	35	40	45	51	56	62	67	72	77	82	88	93	98	103	108	113	119	125	130	135	140	145	151	157	162	167	173	-	-	-
	50%	6750	-	-	17	23	30	36	42	48	54	61	67	73	80	86	92	98	104	110	117	124	130	136	142	148	155	162	168	174	180	187	193	199	206	-	-	-
	40%	5400	-	-	21	29	36	44	52	59	67	75	83	90	98	105	113	120	129	136	144	151	160	168	175	183	191	198	206	214	222	229	237	245	252	-	-	-
	30%	4050	-	-	28	38	48	57	68	78	88	97	107	117	127	137	147	158	168	178	188	198	208	218	228	238	248	258	268	278	288	298	307	318	328	-	-	-
	25%	3375	-	-	33	44	55	67	79	90	101	113	125	136	147	160	171	183	194	206	218	229	241	252	263	275	286	298	310	322	333	345	356	368	379	-	-	-
	20%	2700	-	-	38	52	66	79	93	106	119	133	147	161	175	188	202	216	229	243	256	270	283	297	311	325	338	352	366	379	393	406	420	433	447	-	-	-
	10%	1350	-	-	74	98	124	149	175	200	225	250	276	301	327	352	377	402	427	453	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	8	11	13	15	18	20	22	25	27	30	32	34	36	39	41	44	46	48	51	53	55	58	61	63	66	68	71	73	75	78	-	-
	90%	16200	-	-	-	9	12	15	17	20	22	25	28	30	33	35	38	41	43	46	49	51	54	56	59	63	65	68	70	73	76	78	81	84	86	-	-
	80%	14400	-	-	-	11	14	16	19	22	25	28	31	34	37	40	43	46	49	52	55	58	61	64	67	70	73	76	79	82	85	88	91	94	97	-	-
	75%	13500	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	103	-	-
	70%	12600	-	-	-	12	15	19	22	25	29	32	35	39	42	46	49	52	55	59	63	66	70	73	76	80	83	86	90	93	96	100	103	106	110	-	-
	60%	10800	-	-	-	14	18	22	26	30	33	37	41	45	49	53	57	61	65	69	73	77	81	85	89	92	96	100	104	108	112	116	120	124	128	-	-
	50%	9000	-	-	-	17	22	26	31	35	40	45	49	54	59	64	69	73	78	82	87	92	96	101	106	110	115	119	125	129	134	139	143	148	153	-	-
	40%	7200	-	-	-	21	27	33	38	44	50	55	62	67	73	79	84	90	96	101	107	113	118	125	131	136	142	148	154	160	166	171	177	183	189	-	-
	30%	5400	-	-	-	28	35	43	50	57	66	73	80	88	95	102	110	117	125	133	140	148	156	163	171	178	186	193	201	209	216	224	231	238	246	-	-
	25%	4500	-	-	-	33	42	50	58	68	76	85	94	102	111	119	129	137	146	155	164	173	181	190	199	208	217	225	234	243	251	260	269	277	286	-	-
	20%	3600	-	-	-	39	49	59	70	81	91	101	111	121	132	142	152	164	174	184	194	205	216	226	236	246	257	267	277	288	298	308	319	330	340	-	-
	10%	1800	-	-	-	75	94	113	133	152	172	191	211	230	249	268	287	307	327	346	365	385	404	423	442	462	481	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.

Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.31 16-Bay, Single-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AL2

Unit Type B (Lithium Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	18	27	37	46	56	66	76	85	95	104	114	124	134	143	154	164	173	183	192	202	212	222	232	241	251	261	271	280	290	300	310	320	330
	90%	4050	-	10	20	30	41	52	63	74	84	95	105	116	127	138	149	160	171	182	192	203	214	225	236	247	257	268	279	290	300	312	323	333	344	355	366
	80%	3600	-	11	22	34	46	58	71	83	94	106	118	131	143	156	168	180	192	204	217	229	241	253	265	277	289	301	314	326	338	350	362	374	386	399	411
	75%	3375	-	11	24	36	49	63	75	88	100	113	126	139	152	166	178	191	204	217	230	243	256	269	281	294	307	321	334	347	359	372	385	398	411	424	436
	70%	3150	-	12	26	39	52	67	80	94	107	120	135	148	163	176	190	204	218	232	245	259	272	286	300	314	328	342	355	369	383	397	410	424	438	451	465
	60%	2700	-	14	30	45	62	77	93	108	125	140	157	173	188	204	221	236	252	268	284	300	316	332	348	364	380	396	411	427	443	459	475	-	-	-	-
	50%	2250	-	17	35	54	73	92	110	129	148	168	186	205	224	243	262	281	299	319	338	357	375	394	413	432	451	469	-	-	-	-	-	-	-	-	-
	40%	1800	-	21	44	67	90	113	136	160	183	206	229	252	275	298	322	345	369	392	415	438	461	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	28	57	88	117	148	178	209	238	268	298	329	359	389	419	449	479	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	33	68	102	137	172	208	242	277	313	347	382	417	452	487	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	40	82	124	167	209	251	293	336	378	420	462	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	79	161	243	325	406	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	9	13	18	23	27	32	37	42	47	51	56	62	66	71	76	81	86	90	95	100	105	110	114	119	125	129	134	139	144	149	154	159	-
	90%	8100	-	-	10	15	20	25	31	36	41	47	52	57	63	68	74	79	84	90	95	100	106	111	116	122	128	133	138	144	149	155	161	166	171	177	-
	80%	7200	-	-	11	17	22	28	34	41	46	52	58	65	71	77	83	89	95	101	107	113	119	125	131	137	143	149	156	162	168	174	181	187	193	199	-
	75%	6750	-	-	12	18	24	30	37	43	49	56	63	69	76	82	88	95	101	108	115	122	129	136	143	150	157	164	171	178	185	192	199	206	213	220	-
	70%	6300	-	-	12	19	26	33	40	46	53	61	67	74	81	88	94	101	108	115	122	129	136	143	150	157	164	171	178	185	192	199	206	213	220	227	-
	60%	5400	-	-	15	22	30	38	46	54	63	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	256	264	-
	50%	4500	-	-	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	228	238	247	257	267	276	286	295	305	315	-
	40%	3600	-	-	22	33	45	56	69	80	92	104	115	128	139	151	163	175	187	199	211	223	234	246	258	270	281	293	305	318	329	341	353	365	377	388	-
	30%	2700	-	-	29	44	59	75	90	105	120	136	151	167	182	198	214	229	244	260	275	290	305	322	337	352	368	383	398	414	429	444	460	475	-	-	-
	25%	2250	-	-	34	51	70	87	105	123	141	160	177	195	214	231	249	267	285	303	322	339	357	375	393	411	429	447	465	-	-	-	-	-	-	-	-
	20%	1800	-	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	82	124	166	208	250	292	334	376	418	460	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	12	15	18	21	24	27	31	34	37	40	43	47	50	53	56	59	63	66	70	73	76	79	82	86	89	92	95	98	101	105	-
	90%	12150	-	-	-	10	13	16	20	23	27	31	34	37	41	45	48	52	55	59	63	67	70	74	77	81	84	88	91	95	98	102	106	109	113	116	-
	80%	10800	-	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	91	95	99	103	107	111	115	119	123	127	131	-
	75%	10125	-	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	93	97	101	105	109	114	118	123	127	131	136	140	-
	70%	9450	-	-	-	12	17	21	26	30	35	40	44	48	53	57	63	67	72	76	81	85	90	94	99	103	108	113	117	122	127	131	136	141	145	150	-
	60%	8100	-	-	-	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	127	132	137	142	148	154	159	165	170	175	-
	50%	6750	-	-	-	18	24	30	36	43	49	55	62	69	75	81	87	94	100	106	112	119	126	132	138	145	151	158	165	171	177	184	190	196	203	210	-
	40%	5400	-	-	-	22	30	37	45	53	61	69	77	85	92	100	108	116	124	132	140	148	156	164	172	180	188	195	203	212	220	228	235	243	251	259	-
	30%	4050	-	-	-	29	39	49	59	70	80	91	101	111	121	132	142	152	163	174	184	194	204	215	225	236	246	256	266	277	287	297	308	319	329	339	-
	25%	3375	-	-	-	34	46	57	70	82	94	105	117	130	142	154	166	178	190	202	215	227	239	250	262	274	286	298	311	323	335	347	359	371	383	395	-
	20%	2700	-	-	-	42	56	71	85	99	113	128	143	158	172	187	201	216	231	245	260	274	289	303	318	333	347	362	376	391	405	420	434	449	463	478	-
	10%	1350	-	-	-	82	110	138	167	195	223	251	279	307	336	364	392	420	448	476	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	11	13	15	18	20	22	25	27	30	32	34	37	39	42	44	46	49	51	53	56	58	61	64	66	68	71	73	75	-	-
	90%	16200	-	-	-	-	9	12	15	17	20	22	25	28	30	33	35	38	41	44	46	49	51	54	57	59	63	65	68	71	73	76	79	81	84	-	-
	80%	14400	-	-	-	-	11	14	17	19	22	25	28	31	34	37	40	43	46	49	52	55	58	62	65	68	71	74	77	80	83	85	88	91	94	-	-
	75%	13500	-	-	-	-	12	15	18	21	24	27	30	33	37	40	43	46	49	52	56	59	63	66	69	72	75	79	82	85	88	91	94	98	101	-	-
	70%	12600	-	-	-	-	12	16	19	22	26	29	33	36	40	43	46	50	53	56	60	64	67	71	74	77	81	84	88	91	94	98	101	104	108	-	-
	60%	10800	-	-	-	-	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	74	78	82	86	90	94	98	102	106	110	114	118	123	127	-	-
	50%	9000	-	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	84	89	94	99	103	108	113	117	123	128	132	137	142	147	151	-	-
	40%	7200	-	-	-	-	22	28	34	40	45	51	57	64	69	75	81	87	93	98	104	110	116	122	128	134	140	146	152	159	164	170	176	182	188	-	-
	30%	5400	-	-	-	-	29	37	44	52	59	68	75	83	91	98	106	113	121	129	137	145	152	161	169	176	184	192	199	208	215	223	231	239	246	-	-
	25%	4500	-	-	-	-	34	43	52	62	70	79	88	97	106	115	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	287	-	-
	20%	3600	-	-	-	-	42	52	64	74	85	96	107	117	129	139	150	162	173	184	194	206	217	228	239	249	260	271	282	293	304	316	326	337	348	-	-
	10%	1800	-	-	-	-	82	103	124	145	167	188	209	230	251	272	293	315	336	357	378	399	420	441	462	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.32 16-Bay, Single-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AL2

Unit type F (Lithium Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	17	27	36	46	55	65	75	84	93	103	112	122	132	141	151	161	171	180	190	199	209	219	229	238	248	257	267	276	286	295	305	315	-
	90%	4050	-	9	20	30	40	51	62	72	83	93	103	114	125	135	146	157	168	178	189	199	210	221	231	242	253	263	274	284	295	305	317	327	338	349	-
	80%	3600	-	10	22	33	45	57	69	81	92	104	115	128	139	151	164	175	187	199	211	223	235	247	258	270	282	294	305	318	330	342	354	365	377	389	-
	75%	3375	-	11	23	35	48	61	73	85	98	110	123	135	147	161	173	186	198	211	223	236	248	261	273	286	298	311	324	336	349	361	374	386	399	411	-
	70%	3150	-	12	25	38	51	65	78	91	104	117	130	143	157	171	184	197	211	224	237	250	264	277	290	303	317	331	344	357	370	384	397	410	423	436	-
	60%	2700	-	14	29	44	59	75	90	105	120	136	151	167	182	197	213	228	244	259	274	289	305	321	336	352	367	382	397	413	428	443	459	474	489	-	-
	50%	2250	-	16	34	52	70	88	106	124	142	161	179	197	215	233	251	269	287	305	324	342	360	378	396	414	432	450	468	487	-	-	-	-	-	-	-
	40%	1800	-	20	42	64	85	106	129	150	173	194	217	238	260	282	303	326	348	370	391	413	435	457	478	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	26	53	81	108	136	164	192	220	248	275	303	331	359	387	414	442	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	30	61	92	124	156	188	220	251	283	315	347	378	410	441	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	35	73	110	147	185	223	260	298	336	373	411	448	485	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	69	139	211	281	352	423	493	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147	152	158	-
	90%	8100	-	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	120	126	132	137	142	148	154	159	165	170	175	-
	80%	7200	-	-	11	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	112	118	124	130	136	142	148	155	161	167	173	179	185	191	197	-
	75%	6750	-	-	11	18	24	30	36	43	49	55	62	69	75	81	87	94	100	106	112	119	126	132	138	145	151	158	165	171	177	184	190	196	203	210	-
	70%	6300	-	-	12	19	25	32	38	45	52	59	66	73	79	86	93	99	106	113	119	127	134	140	147	155	161	168	175	182	188	195	202	209	216	223	-
	60%	5400	-	-	14	22	29	37	45	52	61	69	76	84	92	99	107	115	123	131	138	146	155	163	170	178	186	194	201	210	218	225	233	241	249	257	-
	50%	4500	-	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	165	175	184	193	202	212	221	231	240	249	258	268	277	286	295	304	-
	40%	3600	-	-	21	32	43	54	66	77	89	100	111	123	134	145	157	169	180	191	202	214	226	237	248	260	271	282	294	305	317	328	340	351	363	374	-
	30%	2700	-	-	27	42	56	71	86	100	114	130	144	159	174	188	203	218	233	247	262	276	291	306	321	336	350	365	380	394	409	424	438	453	467	-	-
	25%	2250	-	-	32	48	65	82	98	115	132	149	167	183	200	217	234	251	268	284	301	319	336	352	369	386	403	420	436	453	470	-	-	-	-	-	-
	20%	1800	-	-	37	57	77	96	116	136	156	176	195	216	235	255	275	294	315	335	354	374	394	414	433	453	473	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	71	106	143	179	216	252	288	325	361	398	434	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	12	15	18	21	24	27	30	34	37	40	43	46	49	53	56	59	63	66	69	72	76	79	82	85	88	91	95	98	101	-	-
	90%	12150	-	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	112	-	-
	80%	10800	-	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	66	70	74	78	82	86	90	94	98	102	106	110	114	118	122	126	-	-
	75%	10125	-	-	-	11	15	20	24	28	32	36	41	45	49	53	57	62	66	71	75	79	83	87	92	96	100	104	108	113	117	121	126	130	134	-	-
	70%	9450	-	-	-	12	17	21	25	30	34	39	43	48	52	57	62	66	71	75	80	84	89	93	98	102	107	111	116	120	125	130	134	139	143	-	-
	60%	8100	-	-	-	14	19	25	30	35	40	45	51	56	62	67	72	77	82	88	93	98	103	108	113	119	125	130	135	140	145	151	157	162	167	-	-
	50%	6750	-	-	-	17	23	30	36	42	48	54	61	67	73	80	86	92	98	104	110	117	124	130	136	142	148	155	162	168	174	180	187	193	199	-	-
	40%	5400	-	-	-	21	29	36	44	52	59	67	75	83	90	98	105	113	120	129	136	144	151	160	168	175	183	191	198	206	214	222	229	237	245	-	-
	30%	4050	-	-	-	28	38	48	57	68	78	88	97	107	117	127	137	147	158	168	178	188	198	208	218	228	238	248	258	268	278	288	298	307	318	-	-
	25%	3375	-	-	-	33	44	55	67	79	90	101	113	125	136	147	160	171	183	194	206	218	229	241	252	263	275	286	298	310	322	333	345	356	368	-	-
	20%	2700	-	-	-	38	52	66	79	93	106	119	133	147	161	175	188	202	216	229	243	256	270	283	297	311	325	338	352	366	379	393	406	420	433	-	-
	10%	1350	-	-	-	74	98	124	149	175	200	225	250	276	301	327	352	377	402	427	453	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	11	13	15	18	20	22	25	27	30	32	34	36	39	41	44	46	48	51	53	55	58	61	63	66	68	71	73	75	-	-
	90%	16200	-	-	-	-	9	12	15	17	20	22	25	28	30	33	35	38	41	43	46	49	51	54	56	59	63	65	68	70	73	76	78	81	84	-	-
	80%	14400	-	-	-	-	11	14	16	19	22	25	28	31	34	37	40	43	46	49	52	55	58	61	64	67	70	73	76	79	82	85	88	91	94	-	-
	75%	13500	-	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	-	-
	70%	12600	-	-	-	-	12	15	19	22	25	29	32	35	39	42	46	49	52	55	59	63	66	70	73	76	80	83	86	90	93	96	100	103	106	-	-
	60%	10800	-	-	-	-	14	18	22	26	30	33	37	41	45	49	53	57	61	65	69	73	77	81	85	89	92	96	100	104	108	112	116	120	124	-	-
	50%	9000	-	-	-	-	17	22	26	31	35	40	45	49	54	59	64	69	73	78	82	87	92	96	101	106	110	115	119	125	129	134	139	143	148	-	-
	40%	7200	-	-	-	-	21	27	33	38	44	50	55	62	67	73	79	84	90	96	101	107	113	118	125	131	136	142	148	154	160	166	171	177	183	-	-
	30%	5400	-	-	-	-	28	35	43	50	57	66	73	80	88	95	102	110	117	125	133	140	148	156	163	171	178	186	193	201	209	216	224	231	238	-	-
	25%	4500	-	-	-	-	33	42	50	58	68	76	85	94	102	111	119	129	137	146	155	164	173	181	190	199	208	217	225	234	243	251	260	269	277	-	-
	20%	3600	-	-	-	-	39	49	59	70	81	91	101	111	121	132	142	152	164	174	184	194	205	216	226	236	246	257	267	277	288	298	308	319	330	-	-
	10%	1800	-	-	-	-	75	94	113	133	152	172	191	211	230	249	268	287	307	327	346	365	385	404	423	442	462	481	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.

Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.9 Estimated Battery Run Times: Model-number Digits 1-3 = AL3

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.33 12-Bay, Single-Phase, Transformer-Based Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL3


Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	8	17	26	36	45	54	64	74	83	92	101	111	120	130	139	149	159	168	178	187	197	207	216	225	235	244	254	263	272	282	291	301	311
	90%	4050	9	19	30	40	50	61	71	82	92	102	113	124	134	144	156	166	176	187	197	208	219	229	240	250	260	271	281	292	302	314	324	334	345
	80%	3600	10	22	33	45	56	69	80	92	103	115	127	138	150	163	174	186	198	210	222	233	245	257	268	280	292	303	316	328	339	351	363	375	386
	75%	3375	11	23	35	48	61	73	85	97	109	122	135	147	160	173	185	197	210	223	235	248	260	272	285	297	310	323	335	348	360	373	385	398	410
	70%	3150	12	25	38	51	64	77	90	103	116	130	143	157	170	184	197	210	224	237	250	263	276	290	303	317	330	343	357	370	383	396	410	423	436
	60%	2700	14	28	44	58	74	89	104	119	135	150	166	181	196	212	227	242	258	273	288	303	319	335	350	365	380	396	411	426	441	457	472	-	-
	50%	2250	16	34	52	70	88	106	124	142	161	179	196	215	233	251	269	287	305	324	342	360	378	396	414	432	450	468	486	-	-	-	-	-	-
	40%	1800	20	42	64	86	107	130	151	174	196	218	240	262	284	306	329	351	373	395	417	439	461	483	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	27	54	83	111	140	169	197	226	254	282	312	340	368	397	425	454	482	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	31	64	96	129	162	195	228	261	294	327	360	393	426	459	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	37	77	116	156	195	235	275	315	354	394	433	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	74	149	226	301	378	453	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	17	22	27	31	36	41	45	50	55	59	65	69	74	79	83	88	93	97	102	107	111	116	121	126	131	136	140	145	150	-
	90%	8100	-	9	14	19	25	30	35	40	45	50	56	62	67	72	77	82	87	93	98	103	108	113	119	124	130	135	140	145	150	157	162	167	-
	80%	7200	-	11	16	22	28	33	40	45	51	57	63	69	75	81	87	92	98	104	110	116	122	128	134	140	146	151	158	164	170	176	182	188	-
	75%	6750	-	11	17	23	30	36	42	48	54	61	68	74	80	86	92	98	105	111	117	124	130	136	143	149	156	162	168	175	181	187	194	200	-
	70%	6300	-	12	18	25	32	38	45	51	58	65	72	79	85	92	98	105	112	118	126	132	139	146	152	160	167	173	180	187	193	200	207	214	-
	60%	5400	-	14	22	29	37	45	52	61	68	76	84	91	99	107	114	123	131	138	146	155	162	170	178	186	193	201	210	217	225	233	241	249	-
	50%	4500	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	166	175	184	193	202	212	222	231	240	249	259	268	277	286	296	-
	40%	3600	-	21	32	43	54	66	77	89	100	111	123	134	145	157	168	180	191	202	214	225	237	248	259	271	282	293	304	317	328	339	351	362	-
	30%	2700	-	27	42	56	71	86	100	114	130	144	160	174	189	203	218	233	248	262	277	291	306	322	336	351	365	380	395	409	424	439	453	468	-
	25%	2250	-	32	49	66	83	99	116	133	150	168	185	201	219	236	253	270	286	303	321	338	355	372	389	406	423	440	457	473	-	-	-	-	-
	20%	1800	-	39	59	79	99	119	140	161	182	202	223	243	263	284	304	325	346	366	386	407	427	448	468	-	-	-	-	-	-	-	-	-	-
	10%	900	-	77	115	155	194	234	273	313	352	392	431	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	11	14	17	20	24	27	30	33	36	39	42	45	48	51	54	57	62	65	68	71	74	77	80	83	86	89	93	96	99	-
	90%	12150	-	-	9	13	16	19	23	26	30	33	36	40	44	47	50	54	57	61	65	68	72	75	79	82	86	89	92	96	99	103	106	110	-
	80%	10800	-	-	10	14	18	22	26	30	33	37	41	45	49	53	57	61	65	69	73	77	81	85	88	92	96	100	104	108	112	116	119	124	-
	75%	10125	-	-	11	15	19	23	27	32	36	40	44	48	52	56	61	65	69	74	78	82	86	90	94	98	102	107	111	115	119	124	128	132	-
	70%	9450	-	-	12	16	21	25	30	34	38	43	47	51	56	61	65	70	74	79	83	87	92	96	101	105	109	114	118	123	128	132	137	141	-
	60%	8100	-	-	14	19	24	29	34	40	45	50	55	61	66	71	76	81	86	91	97	102	107	112	117	123	128	133	138	143	149	155	160	165	-
	50%	6750	-	-	17	23	29	35	41	47	53	59	66	72	78	84	91	97	103	109	115	121	128	134	140	146	152	159	165	171	178	184	190	196	-
	40%	5400	-	-	21	28	36	44	51	58	67	74	82	89	97	104	112	119	127	135	142	150	158	166	174	181	189	196	204	212	220	227	235	242	-
	30%	4050	-	-	28	37	47	57	68	77	87	97	107	116	127	137	146	157	167	177	187	197	207	217	227	237	247	257	266	276	286	296	306	317	-
	25%	3375	-	-	33	44	56	68	79	91	102	113	125	137	148	161	172	184	195	208	219	231	242	254	265	277	288	300	312	324	336	347	359	370	-
	20%	2700	-	-	40	53	68	81	95	109	123	137	151	166	179	193	208	222	235	249	263	277	291	305	320	334	347	361	375	389	403	417	431	445	-
	10%	1350	-	-	78	104	131	159	185	213	239	266	293	320	347	374	400	427	454	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.34 12-Bay, Single-Phase, Transformer-Based Unit Type R (UPS Model-Number Digit 6 = R)

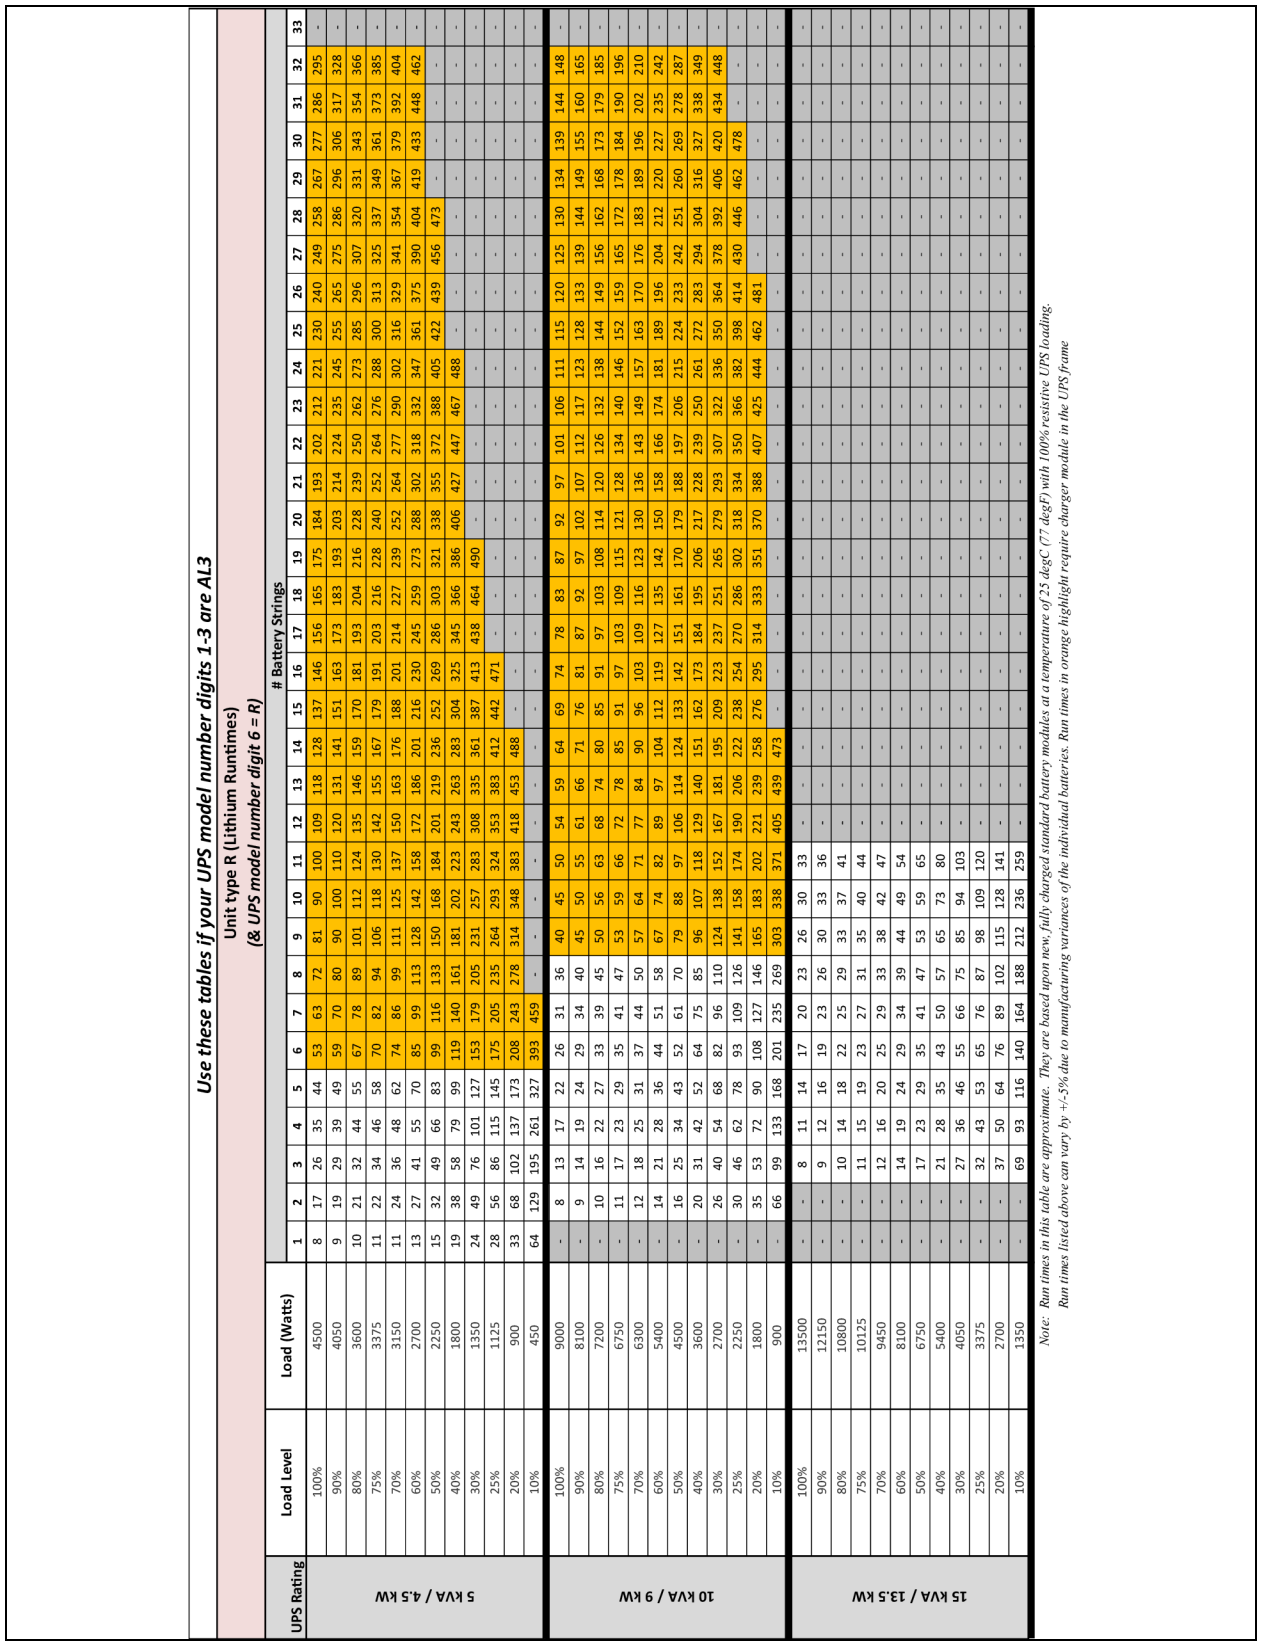

Use these tables if your UPS model number digits 1-3 are AL3

Unit type R (Lithium Runtimes)
(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	8	17	26	35	44	53	63	72	81	90	100	109	118	128	137	146	156	165	175	184	193	202	212	221	230	240	249	258	267	277	286	295	-
	90%	4050	9	19	29	39	49	59	70	80	90	100	110	120	131	141	151	163	173	183	193	203	214	224	235	245	255	265	275	286	296	306	317	328	-
	80%	3600	10	21	32	44	55	67	78	89	101	112	124	135	146	159	170	181	193	204	216	228	239	250	262	273	285	296	307	320	331	343	354	366	-
	75%	3375	11	22	34	46	58	70	82	94	106	118	130	142	155	167	179	191	203	216	228	240	252	264	276	288	300	313	325	337	349	361	373	385	-
	70%	3150	11	24	36	48	62	74	86	99	111	125	137	150	163	176	188	201	214	227	239	252	264	277	290	302	316	329	341	354	367	379	392	404	-
	60%	2700	13	27	41	55	70	85	99	113	128	142	158	172	186	201	216	230	245	259	273	288	302	318	332	347	361	375	390	404	419	433	448	462	-
	50%	2250	15	32	49	66	83	99	116	133	150	168	184	201	219	236	252	269	286	303	321	338	355	372	388	405	422	439	456	473	-	-	-	-	-
	40%	1800	19	38	58	79	99	119	140	161	181	202	223	243	263	283	304	325	345	366	386	406	427	447	467	488	-	-	-	-	-	-	-	-	-
	30%	1350	24	49	76	101	127	153	179	205	231	257	283	308	335	361	387	413	438	464	490	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	28	56	86	115	145	175	205	235	264	293	324	353	383	412	442	471	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	33	68	102	137	173	208	243	278	314	348	383	418	453	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	64	129	195	261	327	393	459	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	17	22	26	31	36	40	45	50	54	59	64	69	74	78	83	87	92	97	101	106	111	115	120	125	130	134	139	144	148	-
	90%	8100	-	9	14	19	24	29	34	40	45	50	55	61	66	71	76	81	87	92	97	102	107	112	117	123	128	133	139	144	149	155	160	165	-
	80%	7200	-	10	16	22	27	33	39	45	50	56	63	68	74	80	85	91	97	103	108	114	120	126	132	138	144	149	156	162	168	173	179	185	-
	75%	6750	-	11	17	23	29	35	41	47	53	59	66	72	78	85	91	97	103	109	115	121	128	134	140	146	152	159	165	172	178	184	190	196	-
	70%	6300	-	12	18	25	31	37	44	50	57	64	71	77	84	90	96	103	109	116	123	130	136	143	149	157	163	170	176	183	189	196	202	210	-
	60%	5400	-	14	21	28	36	44	51	58	67	74	82	89	97	104	112	119	127	135	142	150	158	166	174	181	189	196	204	212	220	227	235	242	-
	50%	4500	-	16	25	34	43	52	61	70	79	88	97	106	114	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	287	-
	40%	3600	-	20	31	42	52	64	75	85	96	107	118	129	140	151	162	173	184	195	206	217	228	239	250	261	272	283	294	304	316	327	338	349	-
	30%	2700	-	26	40	54	68	82	96	110	124	138	152	167	181	195	209	223	237	251	265	279	293	307	322	336	350	364	378	392	406	420	434	448	-
	25%	2250	-	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	318	334	350	366	382	398	414	430	446	462	478	-	-	-
	20%	1800	-	35	53	72	90	108	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-
	10%	900	-	66	99	133	168	201	235	269	303	338	371	405	439	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	11	14	17	20	23	26	30	33	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	9	12	16	19	23	26	30	33	36	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	10	14	18	22	25	29	33	37	41	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	11	15	19	23	27	31	35	40	44	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	12	16	20	25	29	33	38	42	47	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	14	19	24	29	34	39	44	49	54	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	17	23	29	35	41	47	53	59	65	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	21	28	35	43	50	57	65	73	80	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	27	36	46	55	66	75	85	94	103	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	32	43	53	65	76	87	98	109	120	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	37	50	64	76	89	102	115	128	141	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	69	93	116	140	164	188	212	236	259	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.35 12-Bay, Single-Phase, Transformer-Based Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AL3


Unit Type B (Lithium Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	-	8	17	26	36	45	54	64	74	83	92	101	111	120	130	139	149	159	168	178	187	197	207	216	225	235	244	254	263	272	282	291	301
	90%	4050	-	9	19	30	40	50	61	71	82	92	102	113	124	134	144	156	166	176	187	197	208	219	229	240	250	260	271	281	292	302	314	324	334
	80%	3600	-	10	22	33	45	56	69	80	92	103	115	127	138	150	163	174	186	198	210	222	233	245	257	268	280	292	303	316	328	339	351	363	375
	75%	3375	-	11	23	35	48	61	73	85	97	109	122	135	147	160	173	185	197	210	223	235	248	260	272	285	297	310	323	335	348	360	373	385	398
	70%	3150	-	12	25	38	51	64	77	90	103	116	130	143	157	170	184	197	210	224	237	250	263	276	290	303	317	330	343	357	370	383	396	410	423
	60%	2700	-	14	28	44	58	74	89	104	119	135	150	166	181	196	212	227	242	258	273	288	303	319	335	350	365	380	396	411	426	441	457	472	-
	50%	2250	-	16	34	52	70	88	106	124	142	161	179	196	215	233	251	269	287	305	324	342	360	378	396	414	432	450	468	486	-	-	-	-	-
	40%	1800	-	20	42	64	86	107	130	151	174	196	218	240	262	284	306	329	351	373	395	417	439	461	483	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	27	54	83	111	140	169	197	226	254	282	312	340	368	397	425	454	482	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	31	64	96	129	162	195	228	261	294	327	360	393	426	459	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	37	77	116	156	195	235	275	315	354	394	433	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	74	149	226	301	378	453	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	17	22	27	31	36	41	45	50	55	59	65	69	74	79	83	88	93	97	102	107	111	116	121	126	131	136	140	145	-
	90%	8100	-	-	9	14	19	25	30	35	40	45	50	56	62	67	72	77	82	87	93	98	103	108	113	119	124	130	135	140	145	150	157	162	-
	80%	7200	-	-	11	16	22	28	33	40	45	51	57	63	69	75	81	87	92	98	104	110	116	122	128	134	140	146	151	158	164	170	176	182	-
	75%	6750	-	-	11	17	23	30	36	42	48	54	61	68	74	80	86	92	98	105	111	117	124	130	136	143	149	156	162	168	175	181	187	194	-
	70%	6300	-	-	12	18	25	32	38	45	51	58	65	72	79	85	92	98	105	112	118	126	132	139	146	152	160	167	173	180	187	193	200	207	-
	60%	5400	-	-	14	22	29	37	45	52	61	68	76	84	91	99	107	114	123	131	138	146	155	162	170	178	186	193	201	210	217	225	233	241	-
	50%	4500	-	-	17	26	35	44	53	63	72	81	91	100	109	118	128	137	146	156	166	175	184	193	202	212	222	231	240	249	259	268	277	286	-
	40%	3600	-	-	21	32	43	54	66	77	89	100	111	123	134	145	157	168	180	191	202	214	225	237	248	259	271	282	293	304	317	328	339	351	-
	30%	2700	-	-	27	42	56	71	86	100	114	130	144	160	174	189	203	218	233	248	262	277	291	306	322	336	351	365	380	395	409	424	439	453	-
	25%	2250	-	-	32	49	66	83	99	116	133	150	168	185	201	219	236	253	270	286	303	321	338	355	372	389	406	423	440	457	473	-	-	-	-
	20%	1800	-	-	39	59	79	99	119	140	161	182	202	223	243	263	284	304	325	346	366	386	407	427	448	468	-	-	-	-	-	-	-	-	-
	10%	900	-	-	77	115	155	194	234	273	313	352	392	431	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	11	14	17	20	24	27	30	33	36	39	42	45	48	51	54	57	62	65	68	71	74	77	80	83	86	89	93	96	-
	90%	12150	-	-	-	9	13	16	19	23	26	30	33	36	40	44	47	50	54	57	61	65	68	72	75	79	82	86	89	92	96	99	103	106	-
	80%	10800	-	-	-	10	14	18	22	26	30	33	37	41	45	49	53	57	61	65	69	73	77	81	85	88	92	96	100	104	108	112	116	119	-
	75%	10125	-	-	-	11	15	19	23	27	32	36	40	44	48	52	56	61	65	69	74	78	82	86	90	94	98	102	107	111	115	119	124	128	-
	70%	9450	-	-	-	12	16	21	25	30	34	38	43	47	51	56	61	65	70	74	79	83	87	92	96	101	105	109	114	118	123	128	132	137	-
	60%	8100	-	-	-	14	19	24	29	34	40	45	50	55	61	66	71	76	81	86	91	97	102	107	112	117	123	128	133	138	143	149	155	160	-
	50%	6750	-	-	-	17	23	29	35	41	47	53	59	66	72	78	84	91	97	103	109	115	121	128	134	140	146	152	159	165	171	178	184	190	-
	40%	5400	-	-	-	21	28	36	44	51	58	67	74	82	89	97	104	112	119	127	135	142	150	158	166	174	181	189	196	204	212	220	227	235	-
	30%	4050	-	-	-	28	37	47	57	68	77	87	97	107	116	127	137	146	157	167	177	187	197	207	217	227	237	247	257	266	276	286	296	306	-
	25%	3375	-	-	-	33	44	56	68	79	91	102	113	125	137	148	161	172	184	195	208	219	231	242	254	265	277	288	300	312	324	336	347	359	-
	20%	2700	-	-	-	40	53	68	81	95	109	123	137	151	166	179	193	208	222	235	249	263	277	291	305	320	334	347	361	375	389	403	417	431	-
	10%	1350	-	-	-	78	104	131	159	185	213	239	266	293	320	347	374	400	427	454	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.36 12-Bay, Single-Phase, Transformer-Based Unit Type F (UPS Model-Number Digit 6 = F)

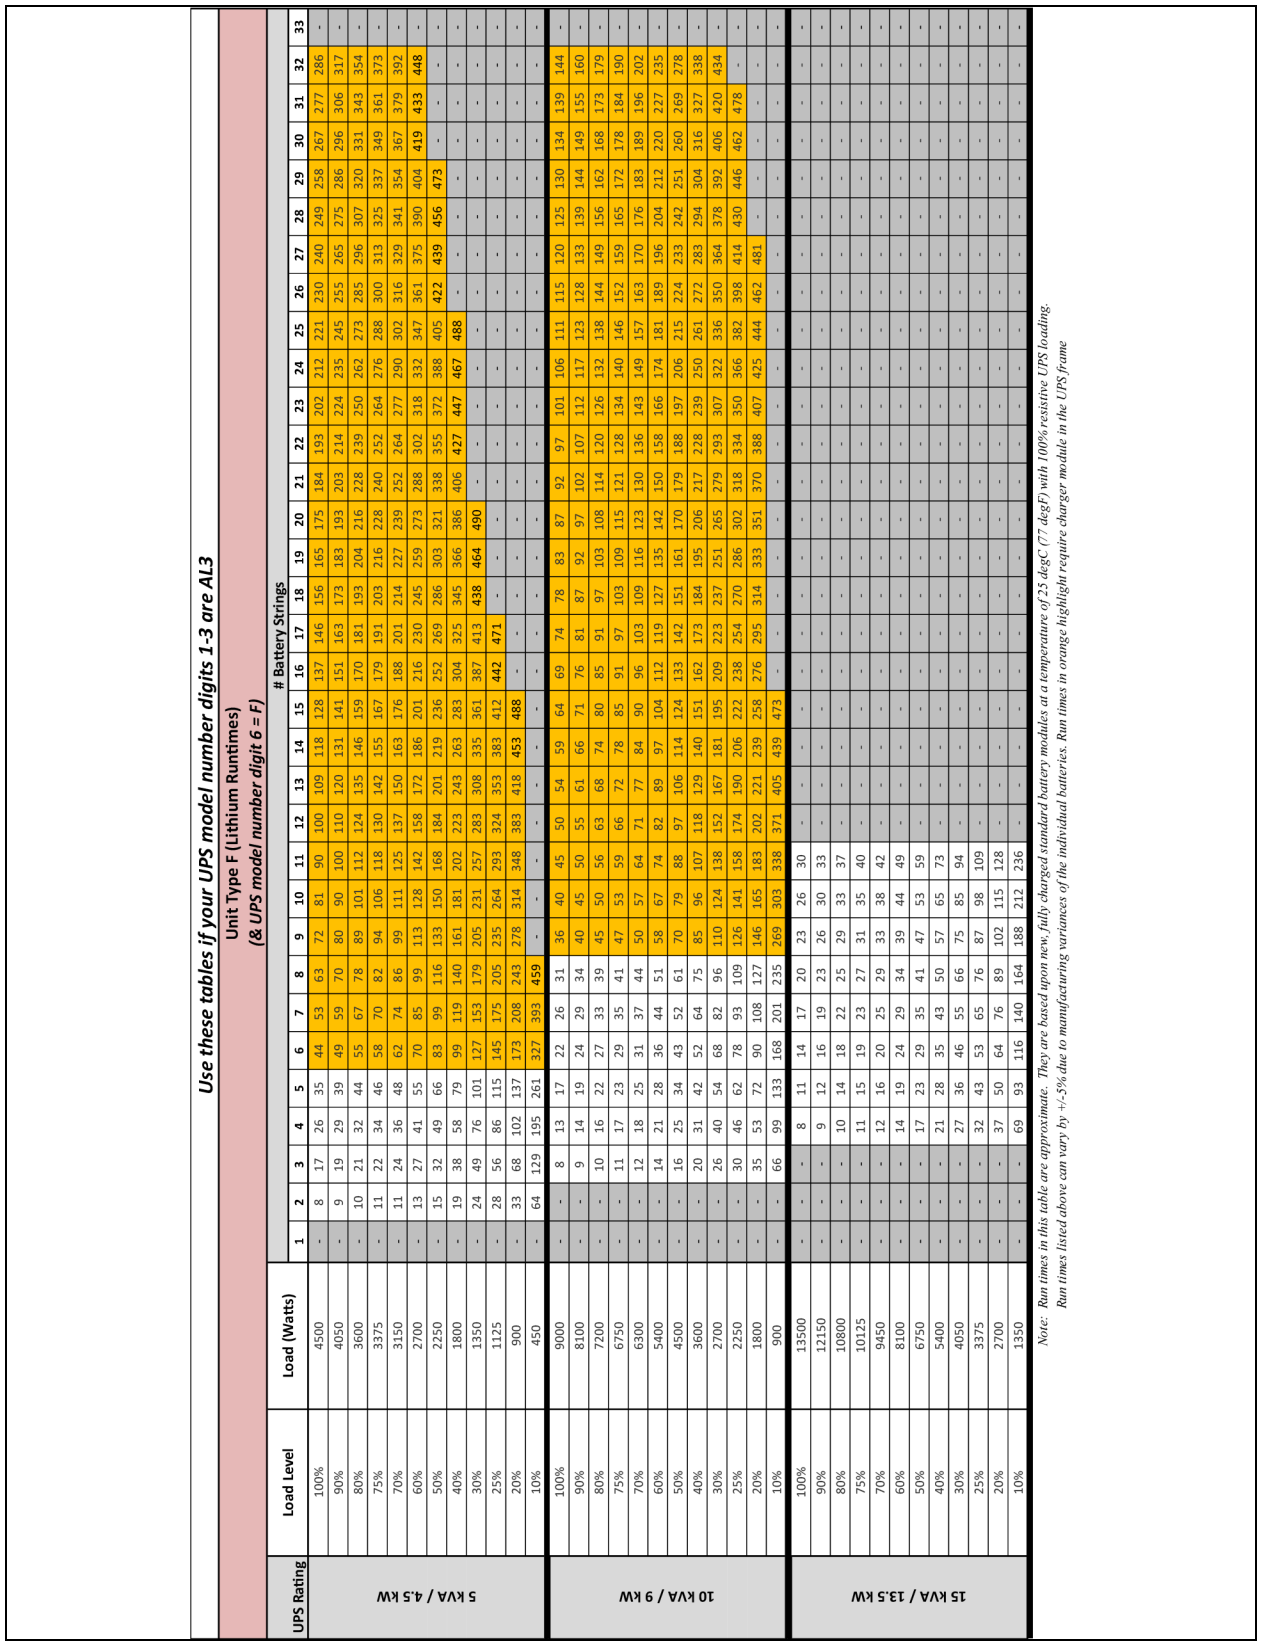

Use these tables if your UPS model number digits 1-3 are AL3

Unit Type F (Lithium Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
5 kVA / 4.5 kW	100%	4500	-	8	17	26	35	44	53	63	72	81	90	100	109	118	128	137	146	156	165	175	184	193	202	212	221	230	240	249	258	267	277	286	-
	90%	4050	-	9	19	29	39	49	59	70	80	90	100	110	120	131	141	151	163	173	183	193	203	214	224	235	245	255	265	275	286	296	306	317	-
	80%	3600	-	10	21	32	44	55	67	78	89	101	112	124	135	146	159	170	181	193	204	216	228	239	250	262	273	285	296	307	320	331	343	354	-
	75%	3375	-	11	22	34	46	58	70	82	94	106	118	130	142	155	167	179	191	203	216	228	240	252	264	276	288	300	313	325	337	349	361	373	-
	70%	3150	-	11	24	36	48	62	74	86	99	111	125	137	150	163	176	188	201	214	227	239	252	264	277	290	302	316	329	341	354	367	379	392	-
	60%	2700	-	13	27	41	55	70	85	99	113	128	142	158	172	186	201	216	230	245	259	273	288	302	318	332	347	361	375	390	404	419	433	448	-
	50%	2250	-	15	32	49	66	83	99	116	133	150	168	184	201	219	236	252	269	286	303	321	338	355	372	388	405	422	439	456	473	-	-	-	-
	40%	1800	-	19	38	58	79	99	119	140	161	181	202	223	243	263	283	304	325	345	366	386	406	427	447	467	488	-	-	-	-	-	-	-	-
	30%	1350	-	24	49	76	101	127	153	179	205	231	257	283	308	335	361	387	413	438	464	490	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	28	56	86	115	145	175	205	235	264	293	324	353	383	412	442	471	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	33	68	102	137	173	208	243	278	314	348	383	418	453	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	64	129	195	261	327	393	459	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	17	22	26	31	36	40	45	50	54	59	64	69	74	78	83	87	92	97	101	106	111	115	120	125	130	134	139	144	-
	90%	8100	-	-	9	14	19	24	29	34	40	45	50	55	61	66	71	76	81	87	92	97	102	107	112	117	123	128	133	139	144	149	155	160	-
	80%	7200	-	-	10	16	22	27	33	39	45	50	56	63	68	74	80	85	91	97	103	108	114	120	126	132	138	144	149	156	162	168	173	179	-
	75%	6750	-	-	11	17	23	29	35	41	47	53	59	66	72	78	85	91	97	103	109	115	121	128	134	140	146	152	159	165	172	178	184	190	-
	70%	6300	-	-	12	18	25	31	37	44	50	57	64	71	77	84	90	96	103	109	116	123	130	136	143	149	157	163	170	176	183	189	196	202	-
	60%	5400	-	-	14	21	28	36	44	51	58	67	74	82	89	97	104	112	119	127	135	142	150	158	166	174	181	189	196	204	212	220	227	235	-
	50%	4500	-	-	16	25	34	43	52	61	70	79	88	97	106	114	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	-
	40%	3600	-	-	20	31	42	52	64	75	85	96	107	118	129	140	151	162	173	184	195	206	217	228	239	250	261	272	283	294	304	316	327	338	-
	30%	2700	-	-	26	40	54	68	82	96	110	124	138	152	167	181	195	209	223	237	251	265	279	293	307	322	336	350	364	378	392	406	420	434	-
	25%	2250	-	-	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	318	334	350	366	382	398	414	430	446	462	478	-	-
	20%	1800	-	-	35	53	72	90	108	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-
	10%	900	-	-	66	99	133	168	201	235	269	303	338	371	405	439	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	11	14	17	20	23	26	30	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	-	9	12	16	19	23	26	30	33	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	-	10	14	18	22	25	29	33	37	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	-	11	15	19	23	27	31	35	40	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	-	12	16	20	25	29	33	38	42	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	-	14	19	24	29	34	39	44	49	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	-	17	23	29	35	41	47	53	59	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	-	21	28	35	43	50	57	65	73	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	-	27	36	46	55	66	75	85	94	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	-	32	43	53	65	76	87	98	109	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	-	37	50	64	76	89	102	115	128	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	-	69	93	116	140	164	188	212	236	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.10 Estimated Battery Run Times: Model-number Digits 1-3 = AL4

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.37 16-Bay, Single-Phase, Transformer-Based Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL4

Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

| UPS Rating | Load Level | Load (Watts) | # Battery Strings | | |

Figure 8.38 16-Bay, Single-Phase, Transformer-Based Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AL4

Unit type R (Lithium Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																					
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	8	17	26	35	44	53	63	72	81	90	99	109	118	128	137	146	156	165	174	184	193	202	212	221	230	239	249	258	267	276	286	295	304	314	-
	90%	4050	9	19	29	39	49	59	70	80	90	100	110	120	131	141	151	162	173	183	193	203	214	224	234	245	255	265	275	285	296	306	317	327	337	348	-
	80%	3600	10	21	32	44	55	67	78	89	100	112	124	135	146	158	170	181	193	204	216	227	239	250	261	273	284	296	307	319	331	342	354	365	377	388	-
	75%	3375	11	22	34	46	58	70	82	94	106	118	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372	384	396	408	-
	70%	3150	11	24	36	48	62	74	86	99	111	125	137	150	163	176	188	201	214	227	239	252	264	277	290	302	316	329	341	354	367	379	392	404	417	430	-
	60%	2700	13	27	41	55	71	85	99	113	128	143	158	172	187	201	216	230	245	259	274	288	303	318	332	347	361	376	390	405	419	434	448	463	477	-	-
	50%	2250	15	32	48	66	82	99	116	133	150	167	184	201	218	235	252	269	286	302	320	337	354	371	388	405	422	438	455	472	489	-	-	-	-	-	-
	40%	1800	19	38	58	79	99	119	140	161	181	201	222	242	262	283	303	324	344	365	385	405	425	446	466	486	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	24	49	76	101	127	153	179	205	231	257	283	308	335	361	387	413	438	464	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	27	56	86	115	144	174	204	233	263	292	322	351	381	410	439	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	33	67	101	136	171	206	241	275	311	345	380	414	449	484	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	63	126	191	255	320	385	449	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	17	22	26	31	36	40	45	50	54	59	64	69	74	78	83	87	92	97	101	106	111	115	120	125	130	134	139	144	148	154	159	-
	90%	8100	-	9	14	19	24	29	34	40	45	50	55	61	66	71	76	81	87	92	97	102	107	112	117	123	128	133	139	144	149	155	160	165	171	176	-
	80%	7200	-	10	16	22	27	33	39	45	50	56	63	68	74	80	85	91	97	103	108	114	120	126	132	138	144	149	156	162	168	173	179	185	191	197	-
	75%	6750	-	11	17	23	29	35	41	47	53	59	66	72	78	84	91	97	103	109	115	121	128	134	140	146	152	159	165	172	178	184	190	196	202	209	-
	70%	6300	-	12	18	25	31	37	44	50	57	64	71	77	84	90	97	103	110	116	123	130	136	143	149	157	163	170	176	183	189	196	203	210	216	223	-
	60%	5400	-	14	21	29	36	44	51	58	67	74	82	89	97	104	112	119	128	135	143	150	159	166	174	181	189	197	204	212	220	228	235	243	250	258	-
	50%	4500	-	16	25	34	43	52	61	70	79	88	97	106	115	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	287	296	305	-
	40%	3600	-	20	31	42	52	64	75	85	96	107	118	129	140	151	162	173	184	195	206	217	228	239	250	261	272	283	294	304	316	327	338	349	360	371	-
	30%	2700	-	26	40	54	68	82	96	110	124	138	152	167	181	194	209	223	237	251	265	279	293	307	322	336	350	364	378	392	406	420	434	448	462	476	-
	25%	2250	-	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	318	334	350	366	382	398	414	430	446	462	478	-	-	-	-	-
	20%	1800	-	35	53	72	90	108	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-	-
	10%	900	-	66	99	133	168	201	235	269	303	338	371	405	439	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	11	14	17	20	23	26	30	33	36	39	42	45	48	51	54	57	61	64	67	70	74	77	80	83	86	89	92	95	98	101	-	-
	90%	12150	-	-	9	12	16	19	23	26	30	33	36	40	43	47	50	53	57	61	64	68	71	75	78	82	85	88	92	95	99	102	105	109	112	-	-
	80%	10800	-	-	10	14	18	22	25	29	33	37	41	45	49	52	56	61	65	68	72	76	80	84	88	91	95	99	103	107	111	114	118	123	127	-	-
	75%	10125	-	-	11	15	19	23	27	31	35	40	44	48	52	56	61	65	69	73	77	81	85	89	93	97	101	105	110	114	118	122	127	131	135	-	-
	70%	9450	-	-	12	16	20	25	29	33	38	42	47	51	55	59	65	69	73	78	82	86	91	95	99	104	108	112	117	121	126	131	135	139	144	-	-
	60%	8100	-	-	14	19	24	29	34	39	44	49	54	59	65	70	75	80	85	90	95	100	105	110	115	120	126	131	136	141	147	152	158	163	168	-	-
	50%	6750	-	-	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107	113	119	126	132	138	144	150	157	163	169	175	182	188	194	200	-	-
	40%	5400	-	-	21	28	35	43	50	57	65	73	80	87	95	102	109	117	125	132	140	147	155	163	170	178	185	192	200	208	215	223	230	238	245	-	-
	30%	4050	-	-	27	36	46	55	66	75	85	94	103	113	123	133	142	152	162	172	181	191	200	211	220	230	239	249	259	268	278	287	297	307	317	-	-
	25%	3375	-	-	31	43	53	65	76	87	98	109	120	131	142	154	165	176	188	199	210	221	232	244	255	266	277	288	299	311	322	333	344	356	367	-	-
	20%	2700	-	-	37	50	63	76	89	101	114	128	140	154	167	180	193	206	219	232	245	258	271	284	297	311	324	337	350	363	375	388	401	414	427	-	-
	10%	1350	-	-	69	92	116	140	164	188	212	235	259	283	306	331	354	378	402	425	449	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	8	10	13	15	17	19	22	24	26	29	31	33	36	38	40	43	45	47	49	52	54	56	59	62	64	66	69	71	73	76	-	-
	90%	16200	-	-	-	9	12	14	17	19	22	24	27	29	32	34	37	40	42	45	47	50	52	55	57	61	64	66	69	71	74	76	79	81	84	-	-
	80%	14400	-	-	-	10	13	16	19	22	25	27	30	33	36	39	42	45	48	50	53	56	59	63	66	68	71	74	77	80	83	86	89	91	94	-	-
	75%	13500	-	-	-	11	14	17	20	23	26	29	32	35	38	42	45	48	51	54	57	61	64	67	70	73	76	79	82	85	88	91	94	97	101	-	-
	70%	12600	-	-	-	12	15	18	22	25	28	31	35	38	41	45	48	51	54	57	62	65	68	71	75	78	81	85	88	91	94	98	101	104	107	-	-
	60%	10800	-	-	-	14	18	21	25	29	33	37	41	44	48	52	56	59	64	68	72	76	79	83	87	91	95	98	102	106	110	114	117	121	126	-	-
	50%	9000	-	-	-	17	21	26	30	35	40	44	49	53	57	63	67	72	76	81	86	90	95	99	104	108	113	117	122	127	132	136	141	145	150	-	-
	40%	7200	-	-	-	21	26	32	37	43	49	54	61	66	72	77	83	88	94	99	105	110	116	122	128	134	139	145	150	157	162	168	174	179	185	-	-
	30%	5400	-	-	-	27	35	42	49	56	64	71	78	86	93	100	107	114	122	130	137	144	151	159	167	174	181	188	196	203	211	218	225	233	240	-	-
	25%	4500	-	-	-	32	40	49	57	66	74	83	91	99	108	116	125	133	142	150	160	168	176	185	193	202	211	219	228	236	244	253	261	270	278	-	-
	20%	3600	-	-	-	37	47	56	67	77	86	96	105	115	125	135	145	155	165	175	185	194	204	215	224	234	244	254	263	273	283	293	303	313	323	-	-
	10%	1800	-	-	-	69	87	104	122	140	158	176	194	212	230	248	265	283	301	319	337	355	373	390	408	426	444	462	479	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.39 16-Bay, Single-Phase, Transformer-Based Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AL4

Unit Type B (Lithium Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																	
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	17	26	36	45	54	64	73	83	92	101	110	120	130	139	148	158	168	177	187	196	206	215	225	234	243	253	262	272	281	290	300	310	319
	90%	4050	-	9	19	29	40	50	61	71	81	92	102	112	123	133	144	155	165	176	186	197	208	218	228	239	249	260	270	280	291	301	312	323	333	344	354
	80%	3600	-	10	22	33	45	56	68	80	91	103	114	126	138	149	162	173	185	197	209	221	232	244	255	267	279	290	302	315	326	338	350	361	373	385	396
	75%	3375	-	11	23	35	47	59	72	85	97	109	121	134	146	159	172	184	196	209	222	234	246	259	271	283	296	308	321	334	346	358	371	383	395	408	420
	70%	3150	-	12	25	37	50	64	77	90	103	116	129	142	156	169	182	196	209	222	235	249	262	275	288	301	315	328	341	355	368	381	394	407	420	433	447
	60%	2700	-	14	28	43	58	74	89	104	119	134	149	165	180	195	211	226	241	256	272	287	302	318	333	348	363	379	394	409	424	439	454	470	485	-	-
	50%	2250	-	16	34	51	70	87	105	123	141	160	177	195	214	231	249	267	285	303	322	339	357	375	393	411	429	447	465	483	-	-	-	-	-	-	-
	40%	1800	-	20	42	64	85	106	129	150	173	194	217	238	260	282	303	326	348	370	391	413	435	457	478	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	26	54	82	110	138	167	194	223	251	279	307	336	364	392	420	448	476	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	31	63	95	128	161	193	226	258	290	324	356	389	421	453	486	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	37	76	115	155	194	233	272	312	351	390	429	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	73	148	224	299	375	450	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	17	22	27	31	36	41	45	50	55	59	65	69	74	79	83	88	93	97	102	107	111	116	121	126	131	136	140	145	150	155	-
	90%	8100	-	-	9	14	19	25	30	35	40	45	50	56	62	67	72	77	82	87	93	98	103	108	113	119	124	130	135	140	145	150	157	162	167	172	-
	80%	7200	-	-	11	16	22	28	33	40	45	51	57	63	69	75	81	87	92	98	104	110	116	122	128	134	140	146	151	158	164	170	176	182	188	194	-
	75%	6750	-	-	11	17	23	30	36	42	48	54	61	67	74	80	86	92	98	105	111	117	124	130	136	143	149	156	162	168	175	181	187	193	200	207	-
	70%	6300	-	-	12	18	25	32	38	45	51	58	65	72	79	85	92	98	105	112	118	126	132	139	146	152	160	167	173	180	187	193	200	207	214	221	-
	60%	5400	-	-	14	22	29	37	45	52	61	68	76	84	91	99	107	114	123	131	138	146	155	162	170	178	186	193	201	210	217	225	233	241	249	256	-
	50%	4500	-	-	17	26	35	44	53	63	72	81	90	100	109	118	128	137	146	156	165	175	184	193	202	212	221	230	240	249	258	267	277	286	295	304	-
	40%	3600	-	-	21	32	43	54	66	77	88	100	111	122	134	145	157	168	179	191	202	214	225	236	248	259	270	282	293	304	316	328	339	350	362	373	-
	30%	2700	-	-	27	42	56	71	86	100	114	130	144	159	174	188	203	218	233	247	262	276	291	306	321	336	350	365	380	394	409	424	438	453	467	-	-
	25%	2250	-	-	32	49	66	83	99	116	133	150	168	184	201	219	236	252	269	286	303	321	338	355	372	388	405	422	439	456	473	-	-	-	-	-	-
	20%	1800	-	-	38	58	79	99	119	140	161	181	202	223	243	263	283	304	325	345	366	386	406	427	447	467	488	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	76	115	155	194	233	272	312	351	390	429	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	11	14	17	20	24	27	30	33	36	39	42	45	48	51	54	58	62	65	68	71	74	77	80	83	86	89	93	96	99	102	-
	90%	12150	-	-	-	9	13	16	19	23	26	30	33	36	40	44	47	50	54	57	61	65	68	72	75	79	82	86	89	92	96	99	103	106	110	113	-
	80%	10800	-	-	-	11	14	18	22	26	30	33	37	41	45	49	53	57	61	65	69	73	77	81	85	89	92	96	100	104	108	112	116	119	124	128	-
	75%	10125	-	-	-	11	15	19	23	27	32	36	40	44	48	52	56	61	65	70	74	78	82	86	90	94	98	103	107	111	115	119	124	128	132	136	-
	70%	9450	-	-	-	12	16	21	25	30	34	38	43	47	52	56	61	66	70	74	79	83	88	92	96	101	105	110	114	118	124	128	132	137	141	146	-
	60%	8100	-	-	-	14	19	24	29	34	40	45	50	55	61	66	71	76	81	86	92	97	102	107	112	117	123	128	133	138	144	149	155	160	165	170	-
	50%	6750	-	-	-	17	23	29	35	41	47	53	59	66	72	78	84	91	97	103	109	115	121	128	134	140	146	152	159	165	172	178	184	190	196	202	-
	40%	5400	-	-	-	21	28	36	44	51	58	67	74	82	89	97	104	112	119	127	135	142	150	158	166	173	181	189	196	204	212	219	227	235	242	250	-
	30%	4050	-	-	-	28	38	48	57	68	78	87	97	107	117	127	137	147	158	168	178	187	197	208	218	228	238	248	257	267	277	287	297	307	318	328	-
	25%	3375	-	-	-	33	44	55	68	79	90	102	113	125	137	148	161	172	184	195	207	219	230	242	253	265	277	288	300	312	324	335	347	358	370	382	-
	20%	2700	-	-	-	40	53	68	82	95	109	124	137	151	166	180	194	208	222	236	250	264	278	292	306	320	334	348	362	376	390	404	418	432	446	460	-
	10%	1350	-	-	-	78	105	132	159	186	213	240	267	293	321	348	375	401	428	455	482	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	10	13	15	17	20	22	24	26	29	31	33	36	38	40	43	45	47	50	53	54	56	59	62	64	66	69	71	73	-	-
	90%	16200	-	-	-	-	9	12	14	17	19	22	24	27	30	32	35	37	40	42	45	48	50	53	55	58	61	64	66	69	71	74	77	79	82	-	-
	80%	14400	-	-	-	-	10	13	16	19	22	25	28	31	33	36	39	42	45	48	51	54	56	59	63	66	69	72	75	78	80	83	86	89	92	-	-
	75%	13500	-	-	-	-	11	14	17	20	23	26	30	33	36	39	42	45	48	51	54	57	61	64	67	70	74	77	80	83	86	89	92	95	98	-	-
	70%	12600	-	-	-	-	12	15	18	22	25	28	32	35	38	42	45	48	52	55	58	62	66	69	72	75	79	82	85	89	92	95	99	102	105	-	-
	60%	10800	-	-	-	-	14	18	22	26	30	33	37	41	45	49	53	56	61	65	69	73	76	80	84	88	92	96	99	103	107	111	115	119	123	-	-
	50%	9000	-	-	-	-	17	22	26	31	35	40	45	49	54	58	64	68	73	77	82	87	91	96	100	105	110	114	119	124	129	133	138	143	147	-	-
	40%	7200	-	-	-	-	21	27	32	38	44	49	55	61	67	73	78	84	90	95	101	106	112	118	124	130	135	141	147	152	159	165	170	176	182	-	-
	30%	5400	-	-	-	-	28	35	43	50	57	66	73	80	88	95	102	110	117	125	132	140	147	155	163	170	178	185	193	200	208	216	223	230	238	-	-
	25%	4500	-	-	-	-	33	42	50	59	68	77	85	94	102	111	120	129	138	146	156	164	173	182	191	199	209	217	226	235	243	252	261	269	278	-	-
	20%	3600	-	-	-	-	40	50	62	72	82	93	103	113	124	135	145	157	167	177	188	198	210	220	231	241	252	262	273	283	294	304	316	326	337	-	-
	10%	1800	-	-	-	-	79	99	118	139	160	180	200	221	241	261	281	301	322	342	363	383	403	423	443	464	484	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.40 16-Bay, Single-Phase, Transformer-Based Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AL4

Unit type F (Lithium Runtimes)
(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	17	26	35	44	53	63	72	81	90	99	109	118	128	137	146	156	165	174	184	193	202	212	221	230	239	249	258	267	276	286	295	304	-
	90%	4050	-	9	19	29	39	49	59	70	80	90	100	110	120	131	141	151	162	173	183	193	203	214	224	234	245	255	265	275	285	296	306	317	327	337	-
	80%	3600	-	10	21	32	44	55	67	78	89	100	112	124	135	146	158	170	181	193	204	216	227	239	250	261	273	284	296	307	319	331	342	354	365	377	-
	75%	3375	-	11	22	34	46	58	70	82	94	106	118	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372	384	396	-
	70%	3150	-	11	24	36	48	62	74	86	99	111	125	137	150	163	176	188	201	214	227	239	252	264	277	290	302	316	329	341	354	367	379	392	404	417	-
	60%	2700	-	13	27	41	55	71	85	99	113	128	143	158	172	187	201	216	230	245	259	274	288	303	318	332	347	361	376	390	405	419	434	448	463	477	-
	50%	2250	-	15	32	48	66	82	99	116	133	150	167	184	201	218	235	252	269	286	302	320	337	354	371	388	405	422	438	455	472	489	-	-	-	-	-
	40%	1800	-	19	38	58	79	99	119	140	161	181	201	222	242	262	283	303	324	344	365	385	405	425	446	466	486	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	24	49	76	101	127	153	179	205	231	257	283	308	335	361	387	413	438	464	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	27	56	86	115	144	174	204	233	263	292	322	351	381	410	439	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	33	67	101	136	171	206	241	275	311	345	380	414	449	484	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	63	126	191	255	320	385	449	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	17	22	26	31	36	40	45	50	54	59	64	69	74	78	83	87	92	97	101	106	111	115	120	125	130	134	139	144	148	154	-
	90%	8100	-	-	9	14	19	24	29	34	40	45	50	55	61	66	71	76	81	87	92	97	102	107	112	117	123	128	133	139	144	149	155	160	165	171	-
	80%	7200	-	-	10	16	22	27	33	39	45	50	56	63	68	74	80	85	91	97	103	108	114	120	126	132	138	144	149	156	162	168	173	179	185	191	-
	75%	6750	-	-	11	17	23	29	35	41	47	53	59	66	72	78	84	91	97	103	109	115	121	128	134	140	146	152	159	165	172	178	184	190	196	202	-
	70%	6300	-	-	12	18	25	31	37	44	50	57	64	71	77	84	90	97	103	110	116	123	130	136	143	149	157	163	170	176	183	189	196	203	210	216	-
	60%	5400	-	-	14	21	29	36	44	51	58	67	74	82	89	97	104	112	119	128	135	143	150	159	166	174	181	189	197	204	212	220	228	235	243	250	-
	50%	4500	-	-	16	25	34	43	52	61	70	79	88	97	106	115	124	133	142	151	161	170	179	188	197	206	215	224	233	242	251	260	269	278	287	296	-
	40%	3600	-	-	20	31	42	52	64	75	85	96	107	118	129	140	151	162	173	184	195	206	217	228	239	250	261	272	283	294	304	316	327	338	349	360	-
	30%	2700	-	-	26	40	54	68	82	96	110	124	138	152	167	181	194	209	223	237	251	265	279	293	307	322	336	350	364	378	392	406	420	434	448	462	-
	25%	2250	-	-	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	318	334	350	366	382	398	414	430	446	462	478	-	-	-	-
	20%	1800	-	-	35	53	72	90	108	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-
	10%	900	-	-	66	99	133	168	201	235	269	303	338	371	405	439	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	11	14	17	20	23	26	30	33	36	39	42	45	48	51	54	57	61	64	67	70	74	77	80	83	86	89	92	95	98	-	-
	90%	12150	-	-	-	9	12	16	19	23	26	30	33	36	40	43	47	50	53	57	61	64	68	71	75	78	82	85	88	92	95	99	102	105	109	-	-
	80%	10800	-	-	-	10	14	18	22	25	29	33	37	41	45	49	52	56	61	65	68	72	76	80	84	88	91	95	99	103	107	111	114	118	123	-	-
	75%	10125	-	-	-	11	15	19	23	27	31	35	40	44	48	52	56	61	65	69	73	77	81	85	89	93	97	101	105	110	114	118	122	127	131	-	-
	70%	9450	-	-	-	12	16	20	25	29	33	38	42	47	51	55	59	65	69	73	78	82	86	91	95	99	104	108	112	117	121	126	131	135	139	-	-
	60%	8100	-	-	-	14	19	24	29	34	39	44	49	54	59	65	70	75	80	85	90	95	100	105	110	115	120	126	131	136	141	147	152	158	163	-	-
	50%	6750	-	-	-	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107	113	119	126	132	138	144	150	157	163	169	175	182	188	194	-	-
	40%	5400	-	-	-	21	28	35	43	50	57	65	73	80	87	95	102	109	117	125	132	140	147	155	163	170	178	185	192	200	208	215	223	230	238	-	-
	30%	4050	-	-	-	27	36	46	55	66	75	85	94	103	113	123	133	142	152	162	172	181	191	200	211	220	230	239	249	259	268	278	287	297	307	-	-
	25%	3375	-	-	-	31	43	53	65	76	87	98	109	120	131	142	154	165	176	188	199	210	221	232	244	255	266	277	288	299	311	322	333	344	356	-	-
	20%	2700	-	-	-	37	50	63	76	89	101	114	128	140	154	167	180	193	206	219	232	245	258	271	284	297	311	324	337	350	363	375	388	401	414	-	-
	10%	1350	-	-	-	69	92	116	140	164	188	212	235	259	283	306	331	354	378	402	425	449	473	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	10	13	15	17	19	22	24	26	29	31	33	36	38	40	43	45	47	49	52	54	56	59	62	64	66	69	71	73	-	-
	90%	16200	-	-	-	-	9	12	14	17	19	22	24	27	29	32	34	37	40	42	45	47	50	52	55	57	61	64	66	69	71	74	76	79	81	-	-
	80%	14400	-	-	-	-	10	13	16	19	22	25	27	30	33	36	39	42	45	48	50	53	56	59	63	66	68	71	74	77	80	83	86	89	91	-	-
	75%	13500	-	-	-	-	11	14	17	20	23	26	29	32	35	38	42	45	48	51	54	57	61	64	67	70	73	76	79	82	85	88	91	94	97	-	-
	70%	12600	-	-	-	-	12	15	18	22	25	28	31	35	38	41	45	48	51	54	57	62	65	68	71	75	78	81	85	88	91	94	98	101	104	-	-
	60%	10800	-	-	-	-	14	18	21	25	29	33	37	41	44	48	52	56	59	64	68	72	76	79	83	87	91	95	98	102	106	110	114	117	121	-	-
	50%	9000	-	-	-	-	17	21	26	30	35	40	44	49	53	57	63	67	72	76	81	86	90	95	99	104	108	113	117	122	127	132	136	141	145	-	-
	40%	7200	-	-	-	-	21	26	32	37	43	49	54	61	66	72	77	83	88	94	99	105	110	116	122	128	134	139	145	150	157	162	168	174	179	-	-
	30%	5400	-	-	-	-	27	35	42	49	56	64	71	78	86	93	100	107	114	122	130	137	144	151	159	167	174	181	188	196	203	211	218	225	233	-	-
	25%	4500	-	-	-	-	32	40	49	57	66	74	83	91	99	108	116	125	133	142	150	160	168	176	185	193	202	211	219	228	236	244	253	261	270	-	-
	20%	3600	-	-	-	-	37	47	56	67	77	86	96	105	115	125	135	145	155	165	175	185	194	204	215	224	234	244	254	263	273	283	293	303	313	-	-
	10%	1800	-	-	-	-	69	87	104	122	140	158	176	194	212	230	248	265	283	301	319	337	355	373	390	408	426	444	462	479	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.11 Estimated Battery Run Times: Model-number Digits 1-3 = AL5

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.41 10-Bay, 2-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL5

Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	8	18	27	36	46	55	66	75	84	94	103	113	123	133	142	152	162	172	181	191	200	210	220	230	239	249	258	268	278	287	297	306
	90%	4050	9	20	30	41	51	62	73	83	94	104	115	126	137	147	159	169	180	191	201	213	223	234	244	255	266	276	287	298	308	320	331	341
	80%	3600	11	22	34	46	58	70	82	94	106	117	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372	384
	75%	3375	11	24	36	49	62	75	88	100	113	126	139	151	165	178	191	203	217	229	242	255	268	281	293	306	320	333	345	358	371	384	397	410
	70%	3150	12	26	39	52	67	80	94	107	121	135	148	163	177	190	204	218	232	245	259	273	286	300	315	328	342	356	370	383	397	411	424	438
	60%	2700	14	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	350	366	382	398	414	430	446	462	478	-	-
	50%	2250	17	36	55	74	93	112	131	150	170	189	208	227	246	265	284	303	323	342	362	381	400	419	438	457	476	-	-	-	-	-	-	-
	40%	1800	22	45	69	92	115	139	164	187	211	235	258	282	305	330	353	377	400	424	448	471	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	29	59	91	121	152	184	215	246	277	308	339	370	401	432	463	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	34	70	106	142	179	215	251	287	324	360	396	432	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	42	85	129	173	218	261	305	350	393	437	481	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	83	168	253	339	424	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147	-
	90%	8100	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165	-
	80%	7200	-	11	16	22	28	34	40	46	52	58	65	71	76	82	88	94	100	106	112	118	125	130	136	142	148	155	161	167	173	179	185	-
	75%	6750	-	11	18	24	30	36	43	49	55	63	69	75	81	88	94	100	107	113	119	126	133	139	145	152	159	166	172	178	185	191	197	-
	70%	6300	-	12	19	26	32	39	46	53	59	67	74	81	87	94	101	108	114	121	129	136	142	149	157	164	171	177	184	191	198	205	212	-
	60%	5400	-	15	22	30	38	46	54	63	71	78	86	94	102	110	118	127	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	-
	50%	4500	-	18	27	36	46	55	66	75	85	94	104	113	123	133	142	152	162	172	182	191	201	211	221	230	240	250	259	269	278	288	298	-
	40%	3600	-	22	34	46	57	70	82	93	105	117	129	141	154	166	178	190	201	214	226	238	250	262	274	285	297	310	322	334	346	358	370	-
	30%	2700	-	30	45	61	77	92	107	124	139	156	171	187	202	219	234	250	266	281	297	314	329	345	361	376	392	408	423	439	455	471	486	-
	25%	2250	-	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-
	20%	1800	-	43	66	88	110	133	156	178	201	224	246	268	291	314	337	359	382	404	426	449	471	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	85	128	172	216	260	303	347	391	434	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	12	15	18	21	24	27	30	33	36	40	43	46	49	52	55	59	63	66	69	72	75	78	82	85	88	91	94	97	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	90	94	98	102	106	110	114	118	123	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	92	97	101	105	109	114	118	123	127	131	-
	70%	9450	-	-	12	17	21	26	30	35	40	44	49	53	57	63	67	72	76	81	86	90	95	99	104	108	113	117	122	127	132	136	141	-
	60%	8100	-	-	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	-
	50%	6750	-	-	18	24	30	37	43	49	56	63	69	76	82	88	95	101	107	114	120	127	133	140	146	153	160	166	173	179	186	192	198	-
	40%	5400	-	-	22	30	38	46	54	62	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	207	215	223	231	239	247	-
	30%	4050	-	-	30	40	51	62	72	82	93	103	113	125	135	145	157	167	178	188	199	210	220	231	241	252	262	273	284	294	305	316	327	-
	25%	3375	-	-	35	48	61	73	85	97	109	122	135	147	160	173	185	197	210	223	235	248	260	272	285	297	310	323	335	348	360	373	385	-
	20%	2700	-	-	43	58	74	89	103	118	134	149	165	180	195	211	226	241	256	271	286	301	317	332	347	363	378	393	408	423	438	453	468	-
	10%	1350	-	-	86	115	145	175	204	234	263	292	323	352	382	411	440	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.42 10-Bay, 2-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AL5

Unit type R (Lithium Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																												
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	8	18	27	36	46	55	66	75	85	94	104	113	123	133	143	152	163	172	182	191	201	211	221	230	240	250	259	269	279	288	298	-
	90%	4050	9	20	30	41	51	63	73	84	94	105	115	126	137	147	159	170	180	191	201	213	223	234	245	255	266	277	287	298	309	320	331	-
	80%	3600	11	22	34	46	57	70	82	93	105	117	130	141	154	166	178	190	202	214	226	238	250	262	274	286	298	311	323	335	346	358	370	-
	75%	3375	11	24	36	49	62	74	87	99	112	125	137	150	164	176	189	201	215	227	240	253	265	278	291	303	317	330	342	355	368	380	393	-
	70%	3150	12	25	38	52	66	79	92	105	119	133	146	160	174	187	201	215	228	242	255	268	282	295	309	323	337	350	364	377	391	404	418	-
	60%	2700	14	29	45	61	76	92	107	123	138	155	170	186	201	218	233	249	264	280	296	312	328	343	359	375	390	406	421	437	453	468	484	-
	50%	2250	17	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-
	40%	1800	21	43	66	88	110	134	157	179	202	225	247	270	293	316	339	361	384	406	429	452	474	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	27	56	86	114	144	174	203	233	262	291	322	351	380	409	439	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	32	66	99	133	168	202	236	270	304	338	372	406	440	474	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	38	79	119	161	202	243	283	325	366	406	447	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	76	155	233	312	390	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	37	42	46	51	56	61	66	71	76	80	85	90	95	99	104	109	114	118	124	129	133	138	143	148	-
	90%	8100	-	10	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	-
	80%	7200	-	11	17	22	28	34	40	46	52	58	65	71	77	83	89	94	100	106	112	118	125	131	137	143	149	156	162	168	174	180	186	-
	75%	6750	-	12	18	24	30	37	43	49	56	63	69	75	82	88	94	101	107	113	120	127	133	139	146	152	160	166	172	179	185	192	198	-
	70%	6300	-	12	19	26	32	39	46	53	59	67	74	80	87	94	101	107	114	121	128	135	142	149	157	163	170	177	184	191	197	204	212	-
	60%	5400	-	14	22	30	38	46	53	62	70	78	86	93	101	109	117	126	133	141	149	158	166	174	182	190	198	206	214	222	230	238	246	-
	50%	4500	-	17	27	36	45	55	65	74	83	93	102	111	121	131	140	150	160	169	179	188	198	208	217	227	236	246	255	265	274	284	293	-
	40%	3600	-	22	33	45	56	69	80	92	103	115	127	139	150	163	174	186	198	210	222	234	245	257	269	280	292	304	316	328	340	352	363	-
	30%	2700	-	29	44	59	75	90	105	120	136	151	167	182	198	213	229	244	259	274	290	305	321	337	352	367	383	398	413	429	444	459	475	-
	25%	2250	-	34	51	70	87	105	123	141	160	178	195	214	232	249	267	285	303	322	340	358	376	393	411	429	447	465	483	-	-	-	-	-
	20%	1800	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-	-
	10%	900	-	81	123	165	207	248	290	332	374	415	457	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	11	15	18	21	24	27	30	33	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	70%	9450	-	-	12	17	21	26	30	35	40	44	48	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	60%	8100	-	-	15	20	25	30	35	41	46	51	56	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	50%	6750	-	-	18	24	30	36	43	49	55	62	69	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	40%	5400	-	-	22	30	37	45	53	61	69	77	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	4050	-	-	29	39	49	59	70	81	91	101	111	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	3375	-	-	34	46	58	71	83	95	107	119	131	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	2700	-	-	42	56	72	86	101	115	130	145	160	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	1350	-	-	83	111	139	168	196	225	253	281	310	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.43 10-Bay, 2-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)


Use these tables if your UPS model number digits 1-3 are AL5

Unit Type B (Lithium Runtimes)
(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																													
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	8	18	27	36	46	55	66	75	84	94	103	113	123	133	142	152	162	172	181	191	200	210	220	230	239	249	258	268	278	287	297
	90%	4050	-	9	20	30	41	51	62	73	83	94	104	115	126	137	147	159	169	180	191	201	213	223	234	244	255	266	276	287	298	308	320	331
	80%	3600	-	11	22	34	46	58	70	82	94	106	117	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372
	75%	3375	-	11	24	36	49	62	75	88	100	113	126	139	151	165	178	191	203	217	229	242	255	268	281	293	306	320	333	345	358	371	384	397
	70%	3150	-	12	26	39	52	67	80	94	107	121	135	148	163	177	190	204	218	232	245	259	273	286	300	315	328	342	356	370	383	397	411	424
	60%	2700	-	14	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	350	366	382	398	414	430	446	462	478	-
	50%	2250	-	17	36	55	74	93	112	131	150	170	189	208	227	246	265	284	303	323	342	362	381	400	419	438	457	476	-	-	-	-	-	-
	40%	1800	-	22	45	69	92	115	139	164	187	211	235	258	282	305	330	353	377	400	424	448	471	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	29	59	91	121	152	184	215	246	277	308	339	370	401	432	463	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	34	70	106	142	179	215	251	287	324	360	396	432	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	42	85	129	173	218	261	305	350	393	437	481	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	83	168	253	339	424	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147
	90%	8100	-	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165
	80%	7200	-	-	11	16	22	28	34	40	46	52	58	65	71	76	82	88	94	100	106	112	118	125	130	136	142	148	155	161	167	173	179	185
	75%	6750	-	-	11	18	24	30	36	43	49	55	63	69	75	81	88	94	100	107	113	119	126	133	139	145	152	159	166	172	178	185	191	197
	70%	6300	-	-	12	19	26	32	39	46	53	59	67	74	81	87	94	101	108	114	121	129	136	142	149	157	164	171	177	184	191	198	205	212
	60%	5400	-	-	15	22	30	38	46	54	63	71	78	86	94	102	110	118	127	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248
	50%	4500	-	-	18	27	36	46	55	66	75	85	94	104	113	123	133	142	152	162	172	182	191	201	211	221	230	240	250	259	269	278	288	298
	40%	3600	-	-	22	34	46	57	70	82	93	105	117	129	141	154	166	178	190	201	214	226	238	250	262	274	285	297	310	322	334	346	358	370
	30%	2700	-	-	30	45	61	77	92	107	124	139	156	171	187	202	219	234	250	266	281	297	314	329	345	361	376	392	408	423	439	455	471	486
	25%	2250	-	-	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-
	20%	1800	-	-	43	66	88	110	133	156	178	201	224	246	268	291	314	337	359	382	404	426	449	471	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	85	128	172	216	260	303	347	391	434	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading.
Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.44 10-Bay, 2-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

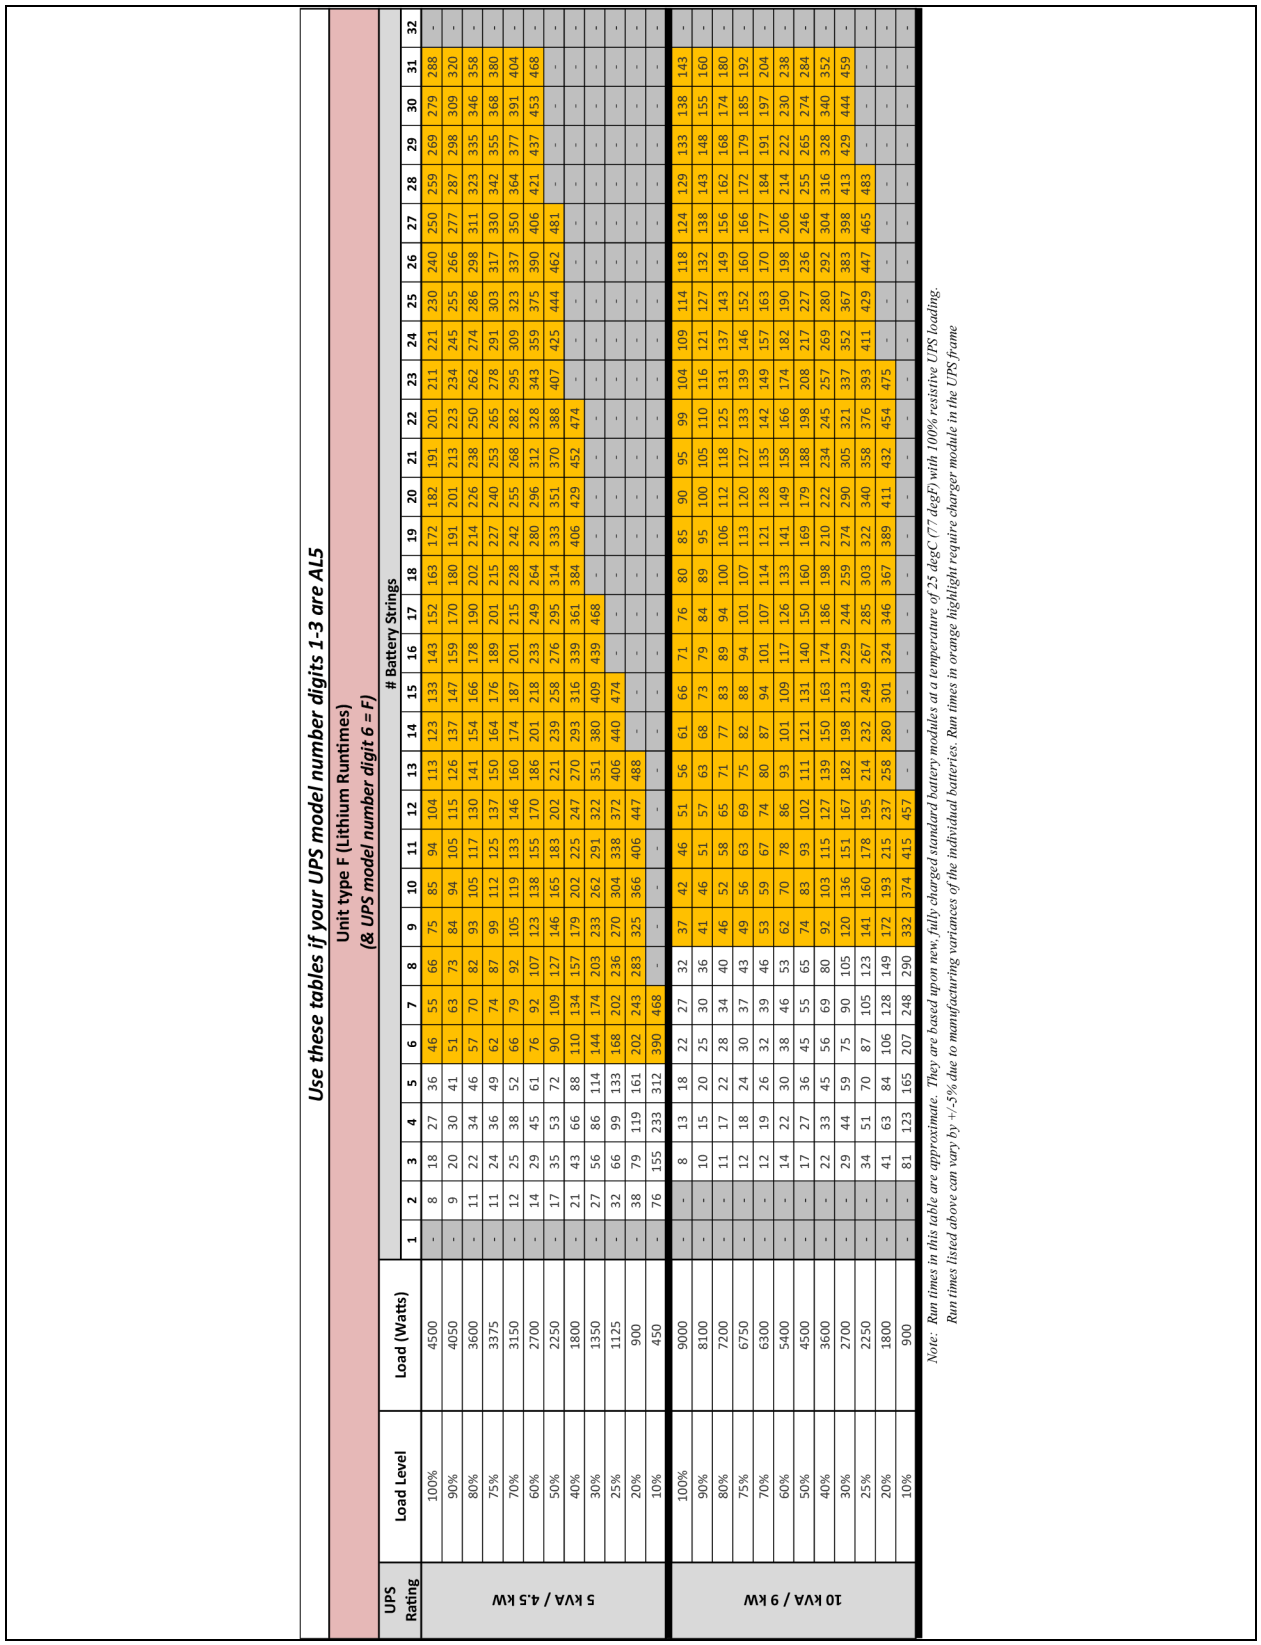

Use these tables if your UPS model number digits 1-3 are AL5

Unit type F (Lithium Runtimes)
(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																												
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
5 kVA / 4.5 kW	100%	4500	-	8	18	27	36	46	55	66	75	85	94	104	113	123	133	143	152	163	172	182	191	201	211	221	230	240	250	259	269	279	288	-
	90%	4050	-	9	20	30	41	51	63	73	84	94	105	115	126	137	147	159	170	180	191	201	213	223	234	245	255	266	277	287	298	309	320	-
	80%	3600	-	11	22	34	46	57	70	82	93	105	117	130	141	154	166	178	190	202	214	226	238	250	262	274	286	298	311	323	335	346	358	-
	75%	3375	-	11	24	36	49	62	74	87	99	112	125	137	150	164	176	189	201	215	227	240	253	265	278	291	303	317	330	342	355	368	380	-
	70%	3150	-	12	25	38	52	66	79	92	105	119	133	146	160	174	187	201	215	228	242	255	268	282	295	309	323	337	350	364	377	391	404	-
	60%	2700	-	14	29	45	61	76	92	107	123	138	155	170	186	201	218	233	249	264	280	296	312	328	343	359	375	390	406	421	437	453	468	-
	50%	2250	-	17	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-
	40%	1800	-	21	43	66	88	110	134	157	179	202	225	247	270	293	316	339	361	384	406	429	452	474	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	27	56	86	114	144	174	203	233	262	291	322	351	380	409	439	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	32	66	99	133	168	202	236	270	304	338	372	406	440	474	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	38	79	119	161	202	243	283	325	366	406	447	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	76	155	233	312	390	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	37	42	46	51	56	61	66	71	76	80	85	90	95	99	104	109	114	118	124	129	133	138	143	-
	90%	8100	-	-	10	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	-
	80%	7200	-	-	11	17	22	28	34	40	46	52	58	65	71	77	83	89	94	100	106	112	118	125	131	137	143	149	156	162	168	174	180	-
	75%	6750	-	-	12	18	24	30	37	43	49	56	63	69	75	82	88	94	101	107	113	120	127	133	139	146	152	160	166	172	179	185	192	-
	70%	6300	-	-	12	19	26	32	39	46	53	59	67	74	80	87	94	101	107	114	121	128	135	142	149	157	163	170	177	184	191	197	204	-
	60%	5400	-	-	14	22	30	38	46	53	62	70	78	86	93	101	109	117	126	133	141	149	158	166	174	182	190	198	206	214	222	230	238	-
	50%	4500	-	-	17	27	36	45	55	65	74	83	93	102	111	121	131	140	150	160	169	179	188	198	208	217	227	236	246	255	265	274	284	-
	40%	3600	-	-	22	33	45	56	69	80	92	103	115	127	139	150	163	174	186	198	210	222	234	245	257	269	280	292	304	316	328	340	352	-
	30%	2700	-	-	29	44	59	75	90	105	120	136	151	167	182	198	213	229	244	259	274	290	305	321	337	352	367	383	398	413	429	444	459	-
	25%	2250	-	-	34	51	70	87	105	123	141	160	178	195	214	232	249	267	285	303	322	340	358	376	393	411	429	447	465	483	-	-	-	-
	20%	1800	-	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-
	10%	900	-	-	81	123	165	207	248	290	332	374	415	457	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

8.12 Estimated Battery Run Times: Model-number Digits 1-3 = AL6

NOTE: Run times for frames beginning with AL_ indicate run times with Lithium-ion batteries.

Figure 8.45 16-Bay, 2-Phase, No Transformer Unit Type N (UPS Model-Number Digit 6 = N)

Use these tables if your UPS model number digits 1-3 are AL6

Unit type N (Lithium Runtimes)

(& UPS model number digit 6 = N)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	8	18	27	36	46	55	66	75	84	94	103	113	123	133	142	152	162	172	181	191	200	210	220	230	239	249	258	268	278	287	297	306	317	326	336
	90%	4050	9	20	30	41	51	62	73	83	94	104	115	126	137	147	159	169	180	191	201	213	223	234	244	255	266	276	287	298	308	320	331	341	352	363	373
	80%	3600	11	22	34	46	58	70	82	94	106	117	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372	384	396	408	420
	75%	3375	11	24	36	49	62	75	88	100	113	126	139	151	165	178	191	203	217	229	242	255	268	281	293	306	320	333	345	358	371	384	397	410	422	435	448
	70%	3150	12	26	39	52	67	80	94	107	121	135	148	163	177	190	204	218	232	245	259	273	286	300	315	328	342	356	370	383	397	411	424	438	452	465	479
	60%	2700	14	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	350	366	382	398	414	430	446	462	478	-	-	-	-	-
	50%	2250	17	36	55	74	93	112	131	150	170	189	208	227	246	265	284	303	323	342	362	381	400	419	438	457	476	-	-	-	-	-	-	-	-	-	-
	40%	1800	22	45	69	92	115	139	164	187	211	235	258	282	305	330	353	377	400	424	448	471	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	29	59	91	121	152	184	215	246	277	308	339	370	401	432	463	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	34	70	106	142	179	215	251	287	324	360	396	432	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	42	85	129	173	218	261	305	350	393	437	481	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	83	168	253	339	424	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147	152	158	163	-
	90%	8100	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165	170	175	181	-
	80%	7200	-	11	16	22	28	34	40	46	52	58	65	71	76	82	88	94	100	106	112	118	125	130	136	142	148	155	161	167	173	179	185	191	197	203	-
	75%	6750	-	11	18	24	30	36	43	49	55	63	69	75	81	88	94	100	107	113	119	126	133	139	145	152	159	166	172	178	185	191	197	204	211	217	-
	70%	6300	-	12	19	26	32	39	46	53	59	67	74	81	87	94	101	108	114	121	129	136	142	149	157	164	171	177	184	191	198	205	212	219	226	233	-
	60%	5400	-	15	22	30	38	46	54	63	71	78	86	94	102	110	118	127	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	256	264	272	-
	50%	4500	-	18	27	36	46	55	66	75	85	94	104	113	123	133	142	152	162	172	182	191	201	211	221	230	240	250	259	269	278	288	298	307	318	327	-
	40%	3600	-	22	34	46	57	70	82	93	105	117	129	141	154	166	178	190	201	214	226	238	250	262	274	285	297	310	322	334	346	358	370	382	394	406	-
	30%	2700	-	30	45	61	77	92	107	124	139	156	171	187	202	219	234	250	266	281	297	314	329	345	361	376	392	408	423	439	455	471	-	-	-	-	-
	25%	2250	-	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-	-
	20%	1800	-	43	66	88	110	133	156	178	201	224	246	268	291	314	337	359	382	404	426	449	471	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	85	128	172	216	260	303	347	391	434	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	12	15	18	21	24	27	30	33	36	40	43	46	49	52	55	59	63	66	69	72	75	78	82	85	88	91	94	97	100	104	107	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	90	94	98	101	105	108	112	115	119	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	90	94	98	102	106	110	114	118	123	127	131	135	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	92	97	101	105	109	114	118	123	127	131	136	140	144	-
	70%	9450	-	-	12	17	21	26	30	35	40	44	49	53	58	63	67	72	76	81	86	90	95	99	104	108	113	117	122	127	132	136	141	145	150	155	-
	60%	8100	-	-	15	20	25	30	36	41	46	51	57	62	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	171	176	181	-
	50%	6750	-	-	18	24	30	37	43	49	56	62	68	75	82	88	95	101	107	114	120	127	133	140	146	153	160	166	173	179	186	192	198	205	212	218	-
	40%	5400	-	-	22	30	38	46	54	62	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	207	215	223	231	239	247	255	263	271	-
	30%	4050	-	-	30	40	51	62	72	82	93	103	113	125	135	145	157	167	178	188	199	210	220	231	241	252	262	273	284	294	305	316	327	337	348	358	-
	25%	3375	-	-	35	48	61	73	85	97	109	122	135	147	160	173	185	197	210	223	235	248	260	272	285	297	310	323	335	348	360	373	385	398	410	422	-
	20%	2700	-	-	43	58	74	89	103	118	134	149	165	180	195	211	226	241	256	271	286	301	317	332	347	363	378	393	408	423	438	453	468	484	-	-	-
	10%	1350	-	-	86	115	145	175	204	234	263	292	323	352	382	411	440	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	8	11	13	15	17	20	22	25	27	29	32	34	36	38	41	43	46	48	50	53	55	57	61	63	65	68	70	72	75	77	-	-
	90%	16200	-	-	-	9	12	14	17	20	22	25	27	30	33	35	38	41	43	46	48	51	53	56	59	62	65	67	70	73	75	78	80	83	86	-	-
	80%	14400	-	-	-	11	13	16	19	22	25	28	31	34	37	40	43	46	49	52	54	57	61	64	67	70	73	76	79	82	85	88	91	93	96	-	-
	75%	13500	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	103	-	-
	70%	12600	-	-	-	12	16	19	22	26	29	32	36	39	43	46	49	52	56	59	63	67	70	73	77	80	84	87	90	94	97	100	104	107	110	-	-
	60%	10800	-	-	-	15	18	22	26	30	34	38	42	46	50	54	58	63	66	70	74	78	82	86	90	94	98	102	106	110	114	118	122	126	130	-	-
	50%	9000	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	85	89	94	99	104	108	113	118	123	128	133	138	143	147	152	158	-	-
	40%	7200	-	-	-	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	111	117	124	130	136	142	148	155	161	167	173	178	184	190	196	-	-
	30%	5400	-	-	-	30	37	45	53	62	70	77	85	93	101	108	116	125	133	140	148	157	165	173	181	188	196	204	213	221	229	236	244	252	260	-	-
	25%	4500	-	-	-	35	45	54	64	73	82	92	101	110	119	129	139	148	158	167	177	186	195	205	215	224	233	243	252	261	271	280	289	299	308	-	-
	20%	3600	-	-	-	44	55	67	78	89	100	112	124	135	146	158	170	181	193	204	216	227	239	250	261	273	284	296	307	319	331	342	354	365	377	-	-
	10%	1800	-	-	-	86	108	131	153	176	198	220	242	264	287	309	332	354	376	398	420	442	465	487	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.46 16-Bay, 2-Phase, No Transformer Unit Type R (UPS Model-Number Digit 6 = R)

Use these tables if your UPS model number digits 1-3 are AL6

Unit type R (Lithium Runtimes)

(& UPS model number digit 6 = R)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	8	18	27	36	46	55	66	75	85	94	104	113	123	133	143	152	163	172	182	191	201	211	221	230	240	250	259	269	279	288	298	307	318	328	-
	90%	4050	9	20	30	41	51	63	73	84	94	105	115	126	137	147	159	170	180	191	201	213	223	234	245	255	266	277	287	298	309	320	331	342	352	363	-
	80%	3600	11	22	34	46	57	70	82	93	105	117	130	141	154	166	178	190	202	214	226	238	250	262	274	286	298	311	323	335	346	358	370	382	394	406	-
	75%	3375	11	24	36	49	62	74	87	99	112	125	137	150	164	176	189	201	215	227	240	253	265	278	291	303	317	330	342	355	368	380	393	406	418	431	-
	70%	3150	12	25	38	52	66	79	92	105	119	133	146	160	174	187	201	215	228	242	255	268	282	295	309	323	337	350	364	377	391	404	418	431	445	458	-
	60%	2700	14	29	45	61	76	92	107	123	138	155	170	186	201	218	233	249	264	280	296	312	328	343	359	375	390	406	421	437	453	468	484	-	-	-	-
	50%	2250	17	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-	-
	40%	1800	21	43	66	88	110	134	157	179	202	225	247	270	293	316	339	361	384	406	429	452	474	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	27	56	86	114	144	174	203	233	262	291	322	351	380	409	439	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	32	66	99	133	168	202	236	270	304	338	372	406	440	474	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	38	79	119	161	202	243	283	325	366	406	447	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	76	155	233	312	390	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	8	13	18	22	27	32	37	42	46	51	56	61	66	71	76	80	85	90	95	99	104	109	114	118	124	129	133	138	143	148	153	158	163	-
	90%	8100	-	10	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	171	176	181	-
	80%	7200	-	11	17	22	28	34	40	46	52	58	65	71	77	83	89	94	100	106	112	118	125	131	137	143	149	156	162	168	174	180	186	192	198	204	-
	75%	6750	-	12	18	24	30	37	43	49	56	63	69	75	82	88	94	101	107	113	120	127	133	139	146	152	160	166	172	179	185	192	198	204	211	218	-
	70%	6300	-	12	19	26	32	39	46	53	59	67	74	80	87	94	101	107	114	121	128	135	142	149	157	163	170	177	184	191	197	204	212	219	225	232	-
	60%	5400	-	14	22	30	38	46	53	62	70	78	86	93	101	109	117	126	133	141	149	158	166	174	182	190	198	206	214	222	230	238	246	254	262	270	-
	50%	4500	-	17	27	36	45	55	65	74	83	93	102	111	121	131	140	150	160	169	179	188	198	208	217	227	236	246	255	265	274	284	293	303	313	322	-
	40%	3600	-	22	33	45	56	69	80	92	103	115	127	139	150	163	174	186	198	210	222	234	245	257	269	280	292	304	316	328	340	352	363	375	387	399	-
	30%	2700	-	29	44	59	75	90	105	120	136	151	167	182	198	213	229	244	259	274	290	305	321	337	352	367	383	398	413	429	444	459	475	-	-	-	-
	25%	2250	-	34	51	70	87	105	123	141	160	178	195	214	232	249	267	285	303	322	340	358	376	393	411	429	447	465	-	-	-	-	-	-	-	-	-
	20%	1800	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	81	123	165	207	248	290	332	374	415	457	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	8	11	15	18	21	24	27	30	33	36	40	43	46	49	52	55	59	63	66	69	72	75	78	82	85	88	91	94	97	100	104	-	-
	90%	12150	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	112	115	-	-
	80%	10800	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	91	94	98	102	106	110	114	118	123	127	131	-	-
	75%	10125	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	92	97	101	105	109	114	118	123	127	131	136	140	-	-
	70%	9450	-	-	12	17	21	26	30	35	40	44	48	53	57	63	67	72	76	81	85	90	94	99	103	108	113	117	122	127	131	136	141	145	150	-	-
	60%	8100	-	-	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165	170	175	-	-
	50%	6750	-	-	18	24	30	36	43	49	55	62	69	75	81	88	94	100	106	113	119	126	132	139	145	151	159	165	171	178	184	190	197	203	210	-	-
	40%	5400	-	-	22	30	37	45	53	61	69	77	85	92	100	108	116	124	132	140	148	156	164	172	180	188	195	203	212	220	228	235	243	251	259	-	-
	30%	4050	-	-	29	39	49	59	70	81	91	101	111	121	132	142	152	164	174	184	194	205	216	226	236	247	257	267	277	288	298	308	320	330	340	-	-
	25%	3375	-	-	34	46	58	71	83	95	107	119	131	143	156	168	180	192	204	217	229	241	253	266	278	290	302	315	327	339	351	363	375	388	400	-	-
	20%	2700	-	-	42	56	72	86	101	115	130	145	160	175	190	204	220	234	249	264	278	293	308	323	338	353	367	382	397	411	426	441	456	470	485	-	-
	10%	1350	-	-	83	111	139	168	196	225	253	281	310	339	367	395	424	452	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	8	11	13	15	17	20	22	25	27	29	32	34	36	38	41	43	46	48	50	53	55	57	61	63	65	68	70	72	75	77	-	-
	90%	16200	-	-	-	9	12	14	17	20	22	25	27	30	33	35	38	41	43	46	48	51	53	56	59	62	65	67	70	73	75	78	80	83	86	-	-
	80%	14400	-	-	-	11	13	16	19	22	25	28	31	34	37	40	43	46	49	52	54	57	61	64	67	70	73	76	79	82	85	88	91	93	96	-	-
	75%	13500	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	103	-	-
	70%	12600	-	-	-	12	16	19	22	26	29	32	36	39	43	46	49	52	56	59	63	67	70	73	77	80	84	87	90	94	97	100	104	107	110	-	-
	60%	10800	-	-	-	14	18	22	26	30	34	38	42	46	50	54	58	62	66	70	74	78	82	86	90	94	98	102	106	110	113	117	121	126	130	-	-
	50%	9000	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	85	89	94	99	104	108	113	118	123	128	133	138	142	147	152	158	-	-
	40%	7200	-	-	-	22	28	34	40	46	51	57	64	70	76	81	87	93	99	105	111	117	123	129	135	141	147	153	160	165	171	177	183	189	195	-	-
	30%	5400	-	-	-	30	37	45	53	61	69	76	84	92	99	107	115	123	131	139	147	155	163	171	179	186	194	202	210	218	226	234	242	249	257	-	-
	25%	4500	-	-	-	35	44	53	63	72	81	90	99	108	117	127	136	145	155	164	173	183	192	201	211	220	229	238	247	257	266	275	284	293	302	-	-
	20%	3600	-	-	-	43	54	65	76	87	98	109	120	132	143	155	166	177	188	199	211	222	233	245	256	267	278	289	300	312	324	335	346	357	368	-	-
	10%	1800	-	-	-	84	105	127	148	171	192	214	236	257	279	300	322	344	365	387	409	430	452	473	-	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

Figure 8.47 16-Bay, 2-Phase, No Transformer Unit Type B (UPS Model-Number Digit 6 = B)

Use these tables if your UPS model number digits 1-3 are AL6

Unit Type B (Lithium Runtimes)

(& UPS model number digit 6 = B)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																	
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	18	27	36	46	55	66	75	84	94	103	113	123	133	142	152	162	172	181	191	200	210	220	230	239	249	258	268	278	287	297	306	317	326
	90%	4050	-	9	20	30	41	51	62	73	83	94	104	115	126	137	147	159	169	180	191	201	213	223	234	244	255	266	276	287	298	308	320	331	341	352	363
	80%	3600	-	11	22	34	46	58	70	82	94	106	117	130	142	155	167	179	191	203	215	227	239	251	263	275	287	299	312	324	336	348	360	372	384	396	408
	75%	3375	-	11	24	36	49	62	75	88	100	113	126	139	151	165	178	191	203	217	229	242	255	268	281	293	306	320	333	345	358	371	384	397	410	422	435
	70%	3150	-	12	26	39	52	67	80	94	107	121	135	148	163	177	190	204	218	232	245	259	273	286	300	315	328	342	356	370	383	397	411	424	438	452	465
	60%	2700	-	14	30	46	62	78	93	109	126	141	158	174	190	206	222	238	254	270	286	302	319	335	350	366	382	398	414	430	446	462	478	-	-	-	-
	50%	2250	-	17	36	55	74	93	112	131	150	170	189	208	227	246	265	284	303	323	342	362	381	400	419	438	457	476	-	-	-	-	-	-	-	-	-
	40%	1800	-	22	45	69	92	115	139	164	187	211	235	258	282	305	330	353	377	400	424	448	471	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	29	59	91	121	152	184	215	246	277	308	339	370	401	432	463	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	34	70	106	142	179	215	251	287	324	360	396	432	469	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	42	85	129	173	218	261	305	350	393	437	481	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	83	168	253	339	424	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	36	41	46	51	55	61	66	71	75	80	85	90	94	99	104	108	113	118	123	128	133	138	143	147	152	158	-
	90%	8100	-	-	9	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165	170	175	-
	80%	7200	-	-	11	16	22	28	34	40	46	52	58	65	71	76	82	88	94	100	106	112	118	125	130	136	142	148	155	161	167	173	179	185	191	197	-
	75%	6750	-	-	11	18	24	30	36	43	49	55	63	69	75	81	88	94	100	107	113	119	126	133	139	145	152	159	166	172	178	185	191	197	204	211	-
	70%	6300	-	-	12	19	26	32	39	46	53	59	67	74	81	87	94	101	108	114	121	129	136	142	149	157	164	171	177	184	191	198	205	212	219	226	-
	60%	5400	-	-	15	22	30	38	46	54	63	71	78	86	94	102	110	118	127	134	142	150	159	167	175	183	191	199	208	216	224	232	240	248	256	264	-
	50%	4500	-	-	18	27	36	46	55	66	75	85	94	104	113	123	133	142	152	162	172	182	191	201	211	221	230	240	250	259	269	278	288	298	307	318	-
	40%	3600	-	-	22	34	46	57	70	82	93	105	117	129	141	154	166	178	190	201	214	226	238	250	262	274	285	297	310	322	334	346	358	370	382	394	-
	30%	2700	-	-	30	45	61	77	92	107	124	139	156	171	187	202	219	234	250	266	281	297	314	329	345	361	376	392	408	423	439	455	471	-	-	-	-
	25%	2250	-	-	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-
	20%	1800	-	-	43	66	88	110	133	156	178	201	224	246	268	291	314	337	359	382	404	426	449	471	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	85	128	172	216	260	303	347	391	434	478	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	12	15	18	21	24	27	30	33	36	40	43	46	49	52	55	59	63	66	69	72	75	78	82	85	88	91	94	97	100	104	-
	90%	12150	-	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	112	115	-
	80%	10800	-	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	90	94	98	102	106	110	114	118	123	127	131	-
	75%	10125	-	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	92	97	101	105	109	114	118	123	127	131	136	140	-
	70%	9450	-	-	-	12	17	21	26	30	35	40	44	49	53	57	63	67	72	76	81	86	90	95	99	104	108	113	117	122	127	132	136	141	145	150	-
	60%	8100	-	-	-	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	171	176	-
	50%	6750	-	-	-	18	24	30	37	43	49	56	63	69	76	82	88	95	101	107	114	120	127	133	140	146	153	160	166	173	179	186	192	198	205	212	-
	40%	5400	-	-	-	22	30	38	46	54	62	70	78	86	94	102	110	118	126	134	142	150	159	167	175	183	191	199	207	215	223	231	239	247	255	263	-
	30%	4050	-	-	-	30	40	51	62	72	82	93	103	113	125	135	145	157	167	178	188	199	210	220	231	241	252	262	273	284	294	305	316	327	337	348	-
	25%	3375	-	-	-	35	48	61	73	85	97	109	122	135	147	160	173	185	197	210	223	235	248	260	272	285	297	310	323	335	348	360	373	385	398	410	-
	20%	2700	-	-	-	43	58	74	89	103	118	134	149	165	180	195	211	226	241	256	271	286	301	317	332	347	363	378	393	408	423	438	453	468	484	-	-
	10%	1350	-	-	-	86	115	145	175	204	234	263	292	323	352	382	411	440	470	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	11	13	15	17	20	22	25	27	29	32	34	36	38	41	43	46	48	50	53	55	57	61	63	65	68	70	72	75	-	-
	90%	16200	-	-	-	-	9	12	14	17	20	22	25	27	30	33	35	38	41	43	46	48	51	53	56	59	62	65	67	70	73	75	78	80	83	-	-
	80%	14400	-	-	-	-	11	13	16	19	22	25	28	31	34	37	40	43	46	49	52	54	57	61	64	67	70	73	76	79	82	85	88	91	93	-	-
	75%	13500	-	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	-	-
	70%	12600	-	-	-	-	12	16	19	22	26	29	32	36	39	43	46	49	52	56	59	63	67	70	73	77	80	84	87	90	94	97	100	104	107	-	-
	60%	10800	-	-	-	-	15	18	22	26	30	34	38	42	46	50	54	58	63	66	70	74	78	82	86	90	94	98	102	106	110	114	118	122	126	-	-
	50%	9000	-	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	85	89	94	99	104	108	113	118	123	128	133	138	142	147	152	-	-
	40%	7200	-	-	-	-	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	111	117	124	130	136	142	148	155	161	167	173	178	184	190	-	-
	30%	5400	-	-	-	-	30	37	45	53	62	70	77	85	93	101	108	116	125	133	140	148	157	165	173	181	188	196	204	213	221	229	236	244	252	-	-
	25%	4500	-	-	-	-	35	45	54	64	73	82	92	101	110	119	129	139	148	158	167	177	186	195	205	215	224	233	243	252	261	271	280	289	299	-	-
	20%	3600	-	-	-	-	44	55	67	78	89	100	112	124	135	146	158	170	181	193	204	216	227	239	250	261	273	284	296	307	319	331	342	354	365	-	-
	10%	1800	-	-	-	-	86	108	131	153	176	198	220	242	264	287	309	332	354	376	398	420	442	465	487	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Figure 8.48 16-Bay, 2-Phase, No Transformer Unit Type F (UPS Model-Number Digit 6 = F)

Use these tables if your UPS model number digits 1-3 are AL6

Unit type F (Lithium Runtimes)

(& UPS model number digit 6 = F)

UPS Rating	Load Level	Load (Watts)	# Battery Strings																																		
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
5 kVA / 4.5 kW	100%	4500	-	8	18	27	36	46	55	66	75	85	94	104	113	123	133	143	152	163	172	182	191	201	211	221	230	240	250	259	269	279	288	298	307	318	-
	90%	4050	-	9	20	30	41	51	63	73	84	94	105	115	126	137	147	159	170	180	191	201	213	223	234	245	255	266	277	287	298	309	320	331	342	352	-
	80%	3600	-	11	22	34	46	57	70	82	93	105	117	130	141	154	166	178	190	202	214	226	238	250	262	274	286	298	311	323	335	346	358	370	382	394	-
	75%	3375	-	11	24	36	49	62	74	87	99	112	125	137	150	164	176	189	201	215	227	240	253	265	278	291	303	317	330	342	355	368	380	393	406	418	-
	70%	3150	-	12	25	38	52	66	79	92	105	119	133	146	160	174	187	201	215	228	242	255	268	282	295	309	323	337	350	364	377	391	404	418	431	445	-
	60%	2700	-	14	29	45	61	76	92	107	123	138	155	170	186	201	218	233	249	264	280	296	312	328	343	359	375	390	406	421	437	453	468	484	-	-	-
	50%	2250	-	17	35	53	72	90	109	127	146	165	183	202	221	239	258	276	295	314	333	351	370	388	407	425	444	462	481	-	-	-	-	-	-	-	-
	40%	1800	-	21	43	66	88	110	134	157	179	202	225	247	270	293	316	339	361	384	406	429	452	474	-	-	-	-	-	-	-	-	-	-	-	-	-
	30%	1350	-	27	56	86	114	144	174	203	233	262	291	322	351	380	409	439	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	25%	1125	-	32	66	99	133	168	202	236	270	304	338	372	406	440	474	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	20%	900	-	38	79	119	161	202	243	283	325	366	406	447	488	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
	10%	450	-	76	155	233	312	390	468	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10 kVA / 9 kW	100%	9000	-	-	8	13	18	22	27	32	37	42	46	51	56	61	66	71	76	80	85	90	95	99	104	109	114	118	124	129	133	138	143	148	153	158	-
	90%	8100	-	-	10	15	20	25	30	36	41	46	51	57	63	68	73	79	84	89	95	100	105	110	116	121	127	132	138	143	148	155	160	165	171	176	-
	80%	7200	-	-	11	17	22	28	34	40	46	52	58	65	71	77	83	89	94	100	106	112	118	125	131	137	143	149	156	162	168	174	180	186	192	198	-
	75%	6750	-	-	12	18	24	30	37	43	49	56	63	69	75	82	88	94	101	107	113	120	127	133	139	146	152	160	166	172	179	185	192	198	204	211	-
	70%	6300	-	-	12	19	26	32	39	46	53	59	67	74	80	87	94	101	107	114	121	128	135	142	149	157	163	170	177	184	191	197	204	212	219	225	-
	60%	5400	-	-	14	22	30	38	46	53	62	70	78	86	93	101	109	117	126	133	141	149	158	166	174	182	190	198	206	214	222	230	238	246	254	262	-
	50%	4500	-	-	17	27	36	45	55	65	74	83	93	102	111	121	131	140	150	160	169	179	188	198	208	217	227	236	246	255	265	274	284	293	303	313	-
	40%	3600	-	-	22	33	45	56	69	80	92	103	115	127	139	150	163	174	186	198	210	222	234	245	257	269	280	292	304	316	328	340	352	363	375	387	-
	30%	2700	-	-	29	44	59	75	90	105	120	136	151	167	182	198	213	229	244	259	274	290	305	321	337	352	367	383	398	413	429	444	459	475	-	-	-
	25%	2250	-	-	34	51	70	87	105	123	141	160	178	195	214	232	249	267	285	303	322	340	358	376	393	411	429	447	465	-	-	-	-	-	-	-	-
	20%	1800	-	-	41	63	84	106	128	149	172	193	215	237	258	280	301	324	346	367	389	411	432	454	475	-	-	-	-	-	-	-	-	-	-	-	-
	10%	900	-	-	81	123	165	207	248	290	332	374	415	457	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
15 kVA / 13.5 kW	100%	13500	-	-	-	8	11	15	18	21	24	27	30	33	36	40	43	46	49	52	55	59	63	66	69	72	75	78	82	85	88	91	94	97	100	-	-
	90%	12150	-	-	-	9	13	16	20	23	27	30	34	37	41	44	48	51	55	58	63	66	70	73	77	80	84	87	91	94	98	101	105	108	112	-	-
	80%	10800	-	-	-	11	15	18	22	26	30	34	38	42	46	50	54	58	63	67	71	75	79	83	87	91	94	98	102	106	110	114	118	123	127	-	-
	75%	10125	-	-	-	12	16	20	24	28	32	37	41	45	49	54	58	63	67	71	76	80	84	88	92	97	101	105	109	114	118	123	127	131	136	-	-
	70%	9450	-	-	-	12	17	21	26	30	35	40	44	48	53	57	63	67	72	76	81	85	90	94	99	103	108	113	117	122	127	131	136	141	145	-	-
	60%	8100	-	-	-	15	20	25	30	35	41	46	51	56	63	68	73	78	84	89	94	99	105	110	115	121	127	132	137	142	148	154	159	165	170	-	-
	50%	6750	-	-	-	18	24	30	36	43	49	55	62	69	75	81	88	94	100	106	113	119	126	132	139	145	151	159	165	171	178	184	190	197	203	-	-
	40%	5400	-	-	-	22	30	37	45	53	61	69	77	85	92	100	108	116	124	132	140	148	156	164	172	180	188	195	203	212	220	228	235	243	251	-	-
	30%	4050	-	-	-	29	39	49	59	70	81	91	101	111	121	132	142	152	164	174	184	194	205	216	226	236	247	257	267	277	288	298	308	320	330	-	-
	25%	3375	-	-	-	34	46	58	71	83	95	107	119	131	143	156	168	180	192	204	217	229	241	253	266	278	290	302	315	327	339	351	363	375	388	-	-
	20%	2700	-	-	-	42	56	72	86	101	115	130	145	160	175	190	204	220	234	249	264	278	293	308	323	338	353	367	382	397	411	426	441	456	470	-	-
	10%	1350	-	-	-	83	111	139	168	196	225	253	281	310	339	367	395	424	452	480	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
20 kVA / 18 kW	100%	18000	-	-	-	-	8	11	13	15	17	20	22	25	27	29	32	34	36	38	41	43	46	48	50	53	55	57	61	63	65	68	70	72	75	-	-
	90%	16200	-	-	-	-	9	12	14	17	20	22	25	27	30	33	35	38	41	43	46	48	51	53	56	59	62	65	67	70	73	75	78	80	83	-	-
	80%	14400	-	-	-	-	11	13	16	19	22	25	28	31	34	37	40	43	46	49	52	54	57	61	64	67	70	73	76	79	82	85	88	91	93	-	-
	75%	13500	-	-	-	-	11	14	17	21	24	27	30	33	36	40	43	46	49	52	55	58	62	65	68	72	75	78	81	84	87	90	93	97	100	-	-
	70%	12600	-	-	-	-	12	16	19	22	26	29	32	36	39	43	46	49	52	56	59	63	67	70	73	77	80	84	87	90	94	97	100	104	107	-	-
	60%	10800	-	-	-	-	14	18	22	26	30	34	38	42	46	50	54	58	62	66	70	74	78	82	86	90	94	98	102	106	110	113	117	121	126	-	-
	50%	9000	-	-	-	-	18	22	27	32	36	41	46	51	55	61	66	70	75	80	85	89	94	99	104	108	113	118	123	128	133	138	142	147	152	-	-
	40%	7200	-	-	-	-	22	28	34	40	46	51	57	64	70	76	81	87	93	99	105	111	117	123	129	135	141	147	153	160	165	171	177	183	189	-	-
	30%	5400	-	-	-	-	30	37	45	53	61	69	76	84	92	99	107	115	123	131	139	147	155	163	171	179	186	194	202	210	218	226	234	242	249	-	-
	25%	4500	-	-	-	-	35	44	53	63	72	81	90	99	108	117	127	136	145	155	164	173	183	192	201	211	220	229	238	247	257	266	275	284	293	-	-
	20%	3600	-	-	-	-	43	54	65	76	87	98	109	120	132	143	155	166	177	188	199	211	222	233	245	256	267	278	289	300	312	324	335	346	357	-	-
	10%	1800	-	-	-	-	84	105	127	148	171	192	214	236	257	279	300	322	344	365	387	409	430	452	473	-	-	-	-	-	-	-	-	-	-	-	-

Note: Run times in this table are approximate. They are based upon new, fully charged standard battery modules at a temperature of 25 degC (77 degF) with 100% resistive UPS loading. Run times listed above can vary by +/-5% due to manufacturing variances of the individual batteries. Run times in orange highlight require charger module in the UPS frame

Proprietary and Confidential ©2026 Vertiv Group Corp.

This page intentionally left blank

Appendices

Appendix A: Technical Support and Contacts

A.1 Technical Support/Service in the United States

Vertiv Group Corporation

24x7 dispatch of technicians for all products.

1-800-543-2378

Liebert® Thermal Management Products

1-800-543-2778

Liebert® Channel Products

1-800-222-5877

Liebert® AC and DC Power Products

1-800-543-2378

A.2 Locations

United States

Vertiv Headquarters

505 N Cleveland Ave

Westerville, OH, 43082, USA

Europe

Victor-von-Bruns Strasse 21,

8212 Neuhausen am Rheinfall, Switzerland

Asia

7/F, Dah Sing Financial Centre

3108 Gloucester Road, Wanchai

Hong Kong

Proprietary and Confidential ©2026 Vertiv Group Corp.

This page intentionally left blank

Connect with Vertiv on Social Media

 https://www.facebook.com/vertiv/

 https://www.instagram.com/vertiv/

 https://www.linkedin.com/company/vertiv/

 https://www.x.com/Vertiv/



Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082 USA

©2026 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

SL-55010_REV10_04-26