

Solution: SR2N05020PAA2



1. Change Log	3
2. Site Planning Datasheet	4
3. Interconnection Guide (ICG)	5
4. Field Supplied Cable & Part List	22
5. Vertiv MSR2 600mm IT Rack	23
6. Vertiv MSR2 Power Management Cabinet (PMC)	24
7. Vertiv Liebert CR019 with Plenums	25
8. Vertiv MSR2 Fire Suppression System (FSS)	26
9. Power Management Unit - 20kW (PMU20)	27
10. PMU20 Terminal Blocks Size	28
11. Vertiv MSR2 – CT300 Cable Tray 300mm	29
12. Vertiv MSR2 - CT600 Cable Tray 600mm	30
13. Scope of Work	31




1. Change Log

Rev	Date	Author	Description	Number of Change
А	1/29/2024	TK	Initial Release	CO-1104874
В	4/7/2025	TK	ICGs Update	CO-1112923



2. Site Planning Datasheet

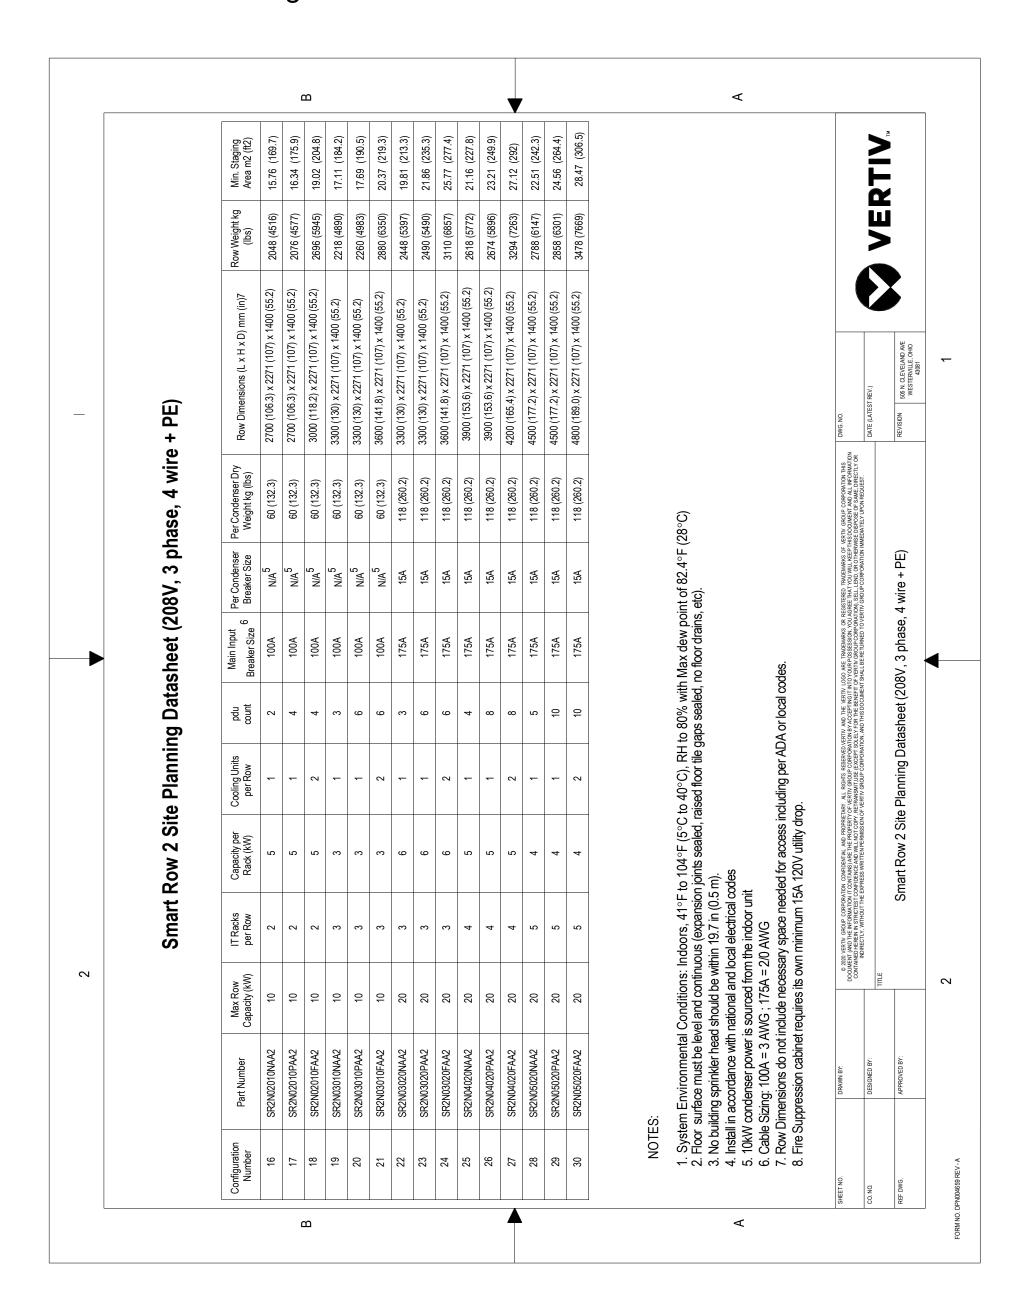





Interconnection Guide (ICG)





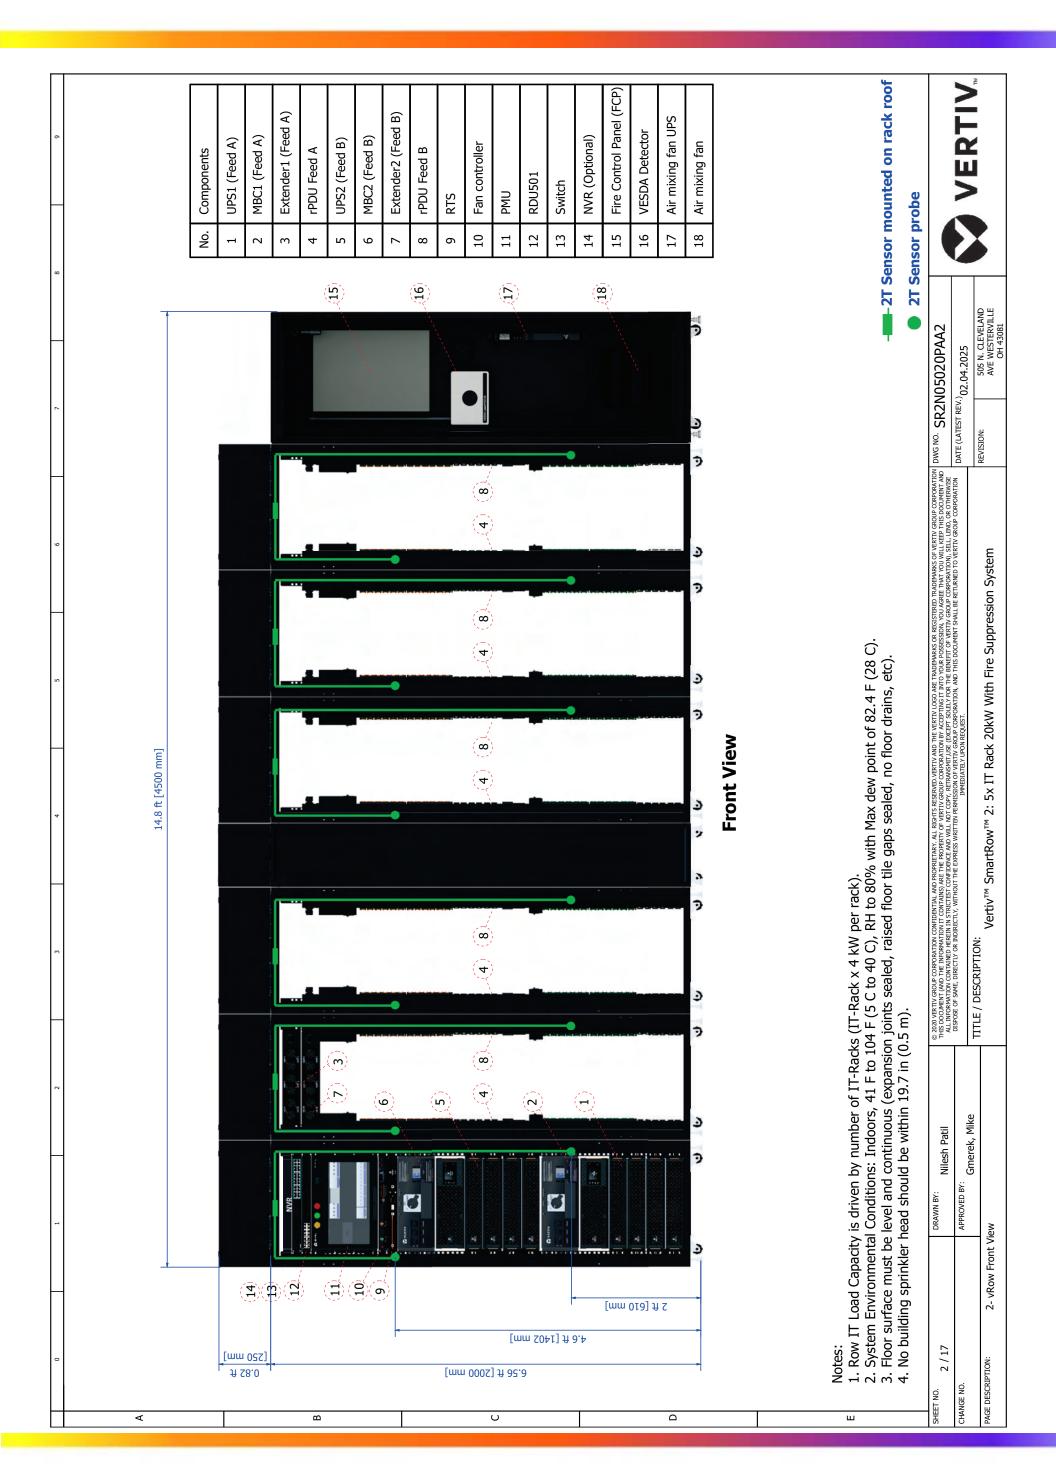



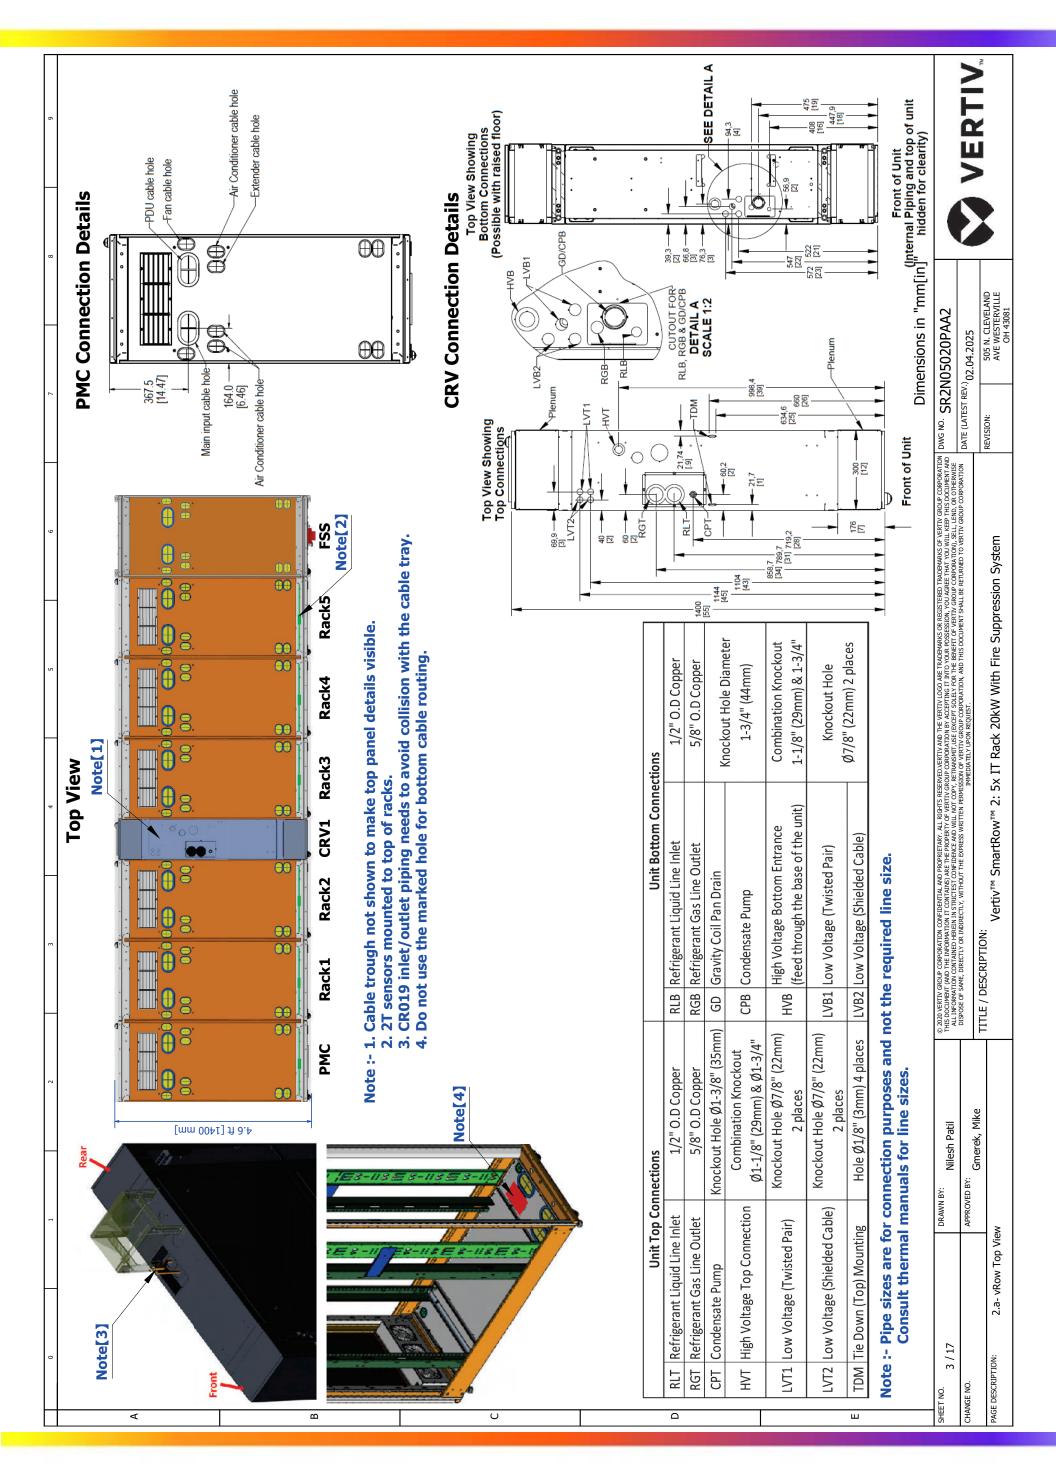



		-1		~	4	L.	٠	٥
		_				_		
					Cable overview	erview		
4	Packaging No.	Cable Category		Cable No.	Tag1	Tag2	Length (inch/mm)	Description
	0411A817	Rear door microswitch cascade		W218	PMC_R-SW	RACK_R-SW	25.6/650	PMC to RACK1 cascade cables for rear door microswitches
		Rear door light cascade cable		W220	PMC_RLIGHT	RACK_RLIGHT	25.6/650	PMC to RACK1 rear door LED light cascade cable
ı		Water immersion to RDU501		W120	Water Leak1	RDU501_DI1	137.8/3500	Water immersion 1 to RDU501 communication cable
		Smart door lock cascade cable		W201	PMC-LOCK	RACK-LOCK	25.6/650	PMC to RACK1 power cascade cable
		Smart door lock cascade cable		W203	FLOCK7	8COM-COM3	149.6/3800	No.7 Lock front door to RDU501_ COM3 communication cable
<u> </u>		Smart door lock cascade cable		W204	RLOCK7	8COM-COM4	212.6/5400	No.7 Lock rear door to RDU501_ COM4 communication cable
		Smart door lock cascade cable		W221	PMC-RLOCK	RACK-RLOCK	25.6/650	PMC to RACK1 R-Door communication cascade cable.
		Smart door lock cascade cable		W209	RACK-FLOCK	AC-FLOCK	13.8/350	RACK1 to CRV1 F-Door communication cascade cable
		Smart door lock cascade cable		W202	RACK-LOCK	AC-LOCK	13.77/350	CRV1 to RACK2 power cascade cable
		Smart door lock cascade cable		W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in CRV1
		Smart door lock cascade cable		W210	AC-RLOCK	RACK-RLOCK	13.8/350	CRV1 to RACK2 R-Door communication cascade cable
		Front door light cascade cable		W215	RACK_FLIGHT	RACK_FLIGHT	13.78/350	RACK2 to RACK3 (across air conditioner) front door LED light cascade cable
U		Front door microswitch cascade cable	ole .	W216	RACK_F-SW	RACK_F-SW	13.78/350	RACK2 to RACK3 (across air conditioner) cascade cables for front door microswitches
		Rear door microswitch cascade cable	le	W217	RACK_R-SW	RACK_R-SW	13.78/350	RACK2 to RACK3 (across air conditioner) cascade cables for rear door microswitches
		Rear door light cascade cable		W219	RACK_RLIGHT	RACK_RLIGHT	13.78/350	RACK2 to RACK3 (across air conditioner) rear door LED light cascade cable
		CRV's microswitch and Smart door lock cascade	lock cascade	W401-S	RDU:Smoke1	W401-S 385	118.11/3000	Microswitch communication cable from PMC to CRV1
		Emergency fan to FC		W229	FC Port1	PMC-FAN	59.1/1500	PMC Emergency fan to FC controller cable
		Emergency fan to FC		W213	FC Port2/3	RACK1/2-FAN	122/3100	Rack1 Emergency fan to FC controller cable (shorter)
		Emergency fan to FC		W213	FC Port2/3	RACK1/2-FAN	122/3100	Rack2 Emergency fan to FC controller cable (shorter)
Δ		THD cascading		W212	RACK-THD-RJ2	RACK-THD-RJ1	13.78/350	RACK2 to RACK3 Cascade Cable
		Emergency fan to FC		W214	FC Port4/5/6	RACK3/4/5-FAN	177.2/4500	Rack3 Emergency fan to FC controller cable (longer)
		Emergency fan to FC		W214	FC Port4/5/6	RACK3/4/5-FAN	177.2/4500	Rack4 Emergency fan to FC controller cable (longer)
,		Emergency fan to FC		W214	FC Port4/5/6	RACK3/4/5-FAN	177.2/4500	Rack5 Emergency fan to FC controller cable (longer)
	0411A860	Communication cable		W114	FC	Switcher(From FC)	70.9/1800	FC to Switch communication cable
		Communication cable		W115	PDU	Switcher(From PDU)	137.8/3500	PDU to Switch communication cable
		Communication cable		W119	RDU501	Switcher(From RDU501)	47.2/1200	RDU501 to Switch Communication Cable
ш		Communication cable		W116	PDU	PDU	157.5/4000	PDU1A to PDU1B communication cable
SHEET NO. 4	4 / 17	DRAWN BY: Nilesh Patil	© 2020 VERTIV GROUP CC THIS DOCUMENT (AND TH	RPORATION CONFIDENTIAL AN E INFORMATION IT CONTAINS) TAINED HEREIN IN STRICTEST (© 2020 VERTIV GROUP CORPORATION CONFIDENTIAL AND PROPRIETARY. ALL RIGHTS RESERVED.VERTIV AND THE VERTIV LOGG ARE TRADEMARKS OR THIS DOCUMENT (AND THE INFORMATION IT CONTAINS) ARE THE PROPRIY OF VERTIV GROUP CORPORATION BY ACCEPTING IT INTO YOUR POSSESS ALL INFORMATION CONTAINED HEREIN IN STREATEST CONFIDENCE AND WILL INFORMATION CONTAINED HEREIN IN STREATEST CONFIDENCE AND WILL IN OT COPY, RETRANSMIT, JUSE (EXCEPT SOLIEL FROR THE BENEFIT OF WILLIAM OF CONTAINED HEREIN IN STREATEST CONFIDENCE AND WILL IN OT COPY, RETRANSMIT, JUSE (EXCEPT SOLIEL FROR THE BENEFIT OF WILLIAM OF CONTAINED HEREIN IN STREATEST CONFIDENCE AND WILL IN OT COPY, RETRANSMIT, JUSE (EXCEPT SOLIEL FROR THE BENEFIT OF WILLIAM OF CONTAINED HEREIN FOR THE WILLIAM OF CONTAINED HEREIN FOR THE WILLIAM OF THE WILLIAM OF CONTAINED HEREIN FOR THE WILLIAM OF CONTAINED HEREIN FOR THE WILLIAM OF THE WILLIAM	HE VERTIV LOGO ARE TRADEMARKS OR REGISTERED TRADEMY 3Y ACCEPTING IT INTO YOUR POSSESSION, YOU AGREE THAT KCEPT SOLELY FOR THE BENEFIT OF VERTIV GROUP CORPORA	REGISTERED TRADEMARKS OF VERTY GROUP CORPORATION SIGN, YOU AGREE THAT YOU WILL KEEP THIS DOCUMENT AND FERTY GROUP CORPORATION), SELL, LEND, OR OTHERWISE	
CHANGE NO.		APPROVED BY: Gmerek, Mike	TITIE / DESCRIPTION:	ECILY OR INDIRECTLY, WITHO	UI THE EXPRESS WRITTEN PERMISSION OF VERTIV GROT	JUP CUKPUKATIJUN, AND IHIS DOCUMENI SHALL BE KETUNKE REQUEST.	ED TO VER IIV GROUP CORPOR	DATE (LATEST REV.) 02.04.2025
PAGE DESCRIPTION:	۲,	Cable overview : =vRow+RACK1-W218 - =vRow+8Rark1-W116	7		Vertiv™ SmartRow™ 2: 5x IT Rack 20kW With Fire Sup	20kW With Fire Suppression System	stem	REVISION: 505 N. CLEVELAND AVE WESTERNILLE OH 43081
		- N-1-W						



	0	1 2	(E)		4	5	9	8 2
					Cable overview	ırview		
⋖	Packaging No.	Cable Category		Cable No.	Tag1	Tag2	Length (inch/mm)	Description
	0411A860	Communication cable		W117	PDU	PDU	118.1/3000	PDU1B to PDU2A communication cable
		Communication cable		W116	PDU	PDU	157.5/4000	PDU2A to PDU2B communication cable
		Communication cable		W117	PDU	PDU	118.1/3000	PDU2B to PDU3A communication cable
		Communication cable		W116	PDU	PDU	157.5/4000	PDU3A to PDU3B communication cable
		Communication cable		W117	PDU	PDU	118.1/3000	PDU3B to PDU4A communication cable
8		Communication cable		W116	PDU	PDU	157.5/4000	PDU4A to PDU4B communication cable
		Communication cable		W117	PDU	PDU	118.1/3000	PDU4B to PDU5A communication cable
		Communication cable		W116	PDU	PDU	157.5/4000	PDU5A to PDU5B communication cable
		Power cable		W11	PMU TO CRV1 L1 L2 N G		72/1830	PMU to CRV1 power cable
		Communication cable		W110	CRV1	Switcher(From CRV1)	137.8/3500	CRV1 to Switch communication cable
		Power cable		W01	PMU_TO MBC1 INPUT L1 L2 N G	MBC1 MAIN INPUT L1 L2 N G	51.2/1300	PMU to MBC1 power cable (MBC1 input)
		Power cable		W02	PMU_TO MBC2 INPUT L1 L2 N G	MBC2 MAIN INPUT L1 L2 N G	27.6/700	PMU to MBC2 power cable (MBC2 input)
U		Power cable		W03	PMU_TO MBC1 OUTPUT L1 L2 N	MBC1 MAIN OUTPUT L1 L2 N	76.8/1950	MBC1 to PMU power cable (MBC1 output)
		Power cable		W04	PMU_TO MBC2 OUTPUT L1 L2 N	MBC2 MAIN OUTPUT L1 L2 N	45.3/1150	MBC2 to PMU power cable (MBC2 output)
		Power cable		W05	MBC1_TO UPS1 INPUT L1 L2 N G	UPS1 INPUT L1 L2 N G	39.4/1000	MBC1 to UPS1 power cable (UPS1 input)
		Power cable		90M	MBC2_TO UPS2 INPUT L1 L2 N G	UPS2 INPUT L1 L2 N G	39.4/1000	MBC2 to UPS2 power cable (UPS2 input)
		Power cable		W07	UPS1 OUTPUT L1 L2 N G	MBC1_FROM UPS1 O/P L1 L2 N G	39.4/1000	UPS1 to MBC1 power cable (UPS1 output)
		Power cable		W08	UPS2 OUTPUT L1 L2 N G	MBC2_FROM UPS2 O/P L1 L2 N G	39.4/1000	UPS2 to MBC2 power cable (UPS2 output)
		Power cable		60W	PMU TO Extender1 L1 L2 N G	•	102.4/2600	PMU to Extender1 power cable
۵		Power cable		W10	PMU TO Extender2 L1 L2 N G		102.4/2600	PMU to Extender2 power cable
		Communication cable		W112	UPS1	Switcher(From UPS1)	177.2/4500	UPS 1 to Switch communication cable
		Communication cable		W113	UPS2	Switcher(From UPS2)	165.4/4200	UPS 2 to Switch communication cable
		Communication cable		W118	NVR	Switcher(From NVR)	47.2/1200	NVR to Switch Communication Cable
	FSS Cabinet-Factory Assembled	ed Preinstalled cables for cascading FSS cabinets		W402	RACK_F-SW	FSS_F-SW	26.77/680	FSS cabinet front door preinstalled cascading wiring harness-for Door Swich
		Preinstalled cables for cascading FSS cabinets		W402	RACK_FLIGHT	FSS_FLIGHT	27.56/700	FSS cabinet front door preinstalled cascading wiring harness-for Door Light
		Preinstalled cables for cascading FSS cabinets		W403	RACK_R-SW	FSS_R-SW	14.96/380	FSS cabinet rear door preinstalled cascading wiring harness-for Door Swich
ш		Door switch communication cable		W407	208-NO;208-COM	201-Smoke/DI4	76.77/1950	FSS Rear door switch to 4DIF Smoke/DI4
SHEET NO.	5 / 17	DRAWN BY: Nilesh Patil	© 2020 VERTIV GROUP CORPORA' THIS DOCUMENT (AND THE INFOI ALL INFORMATION CONTAINED	ATION CONFIDENTIAL A. DRMATION IT CONTAINS DHEREIN IN STRICTEST	© 323 VERTV GROUP CORPORATION CONFIDENTIAL AND PROPRIETARY, ALL RIGHTS RESERVED.VERTU AND THE VICTOR THE INFORMATION IT CONTAINS) ARE THE PROPERTY OF VERTUT GROUP CORPORATION BY A ALLINFORMATION CONTAINED HEREIN IN STRICTEST CONFIDENCE AND WILL INFORMATION CONTAINED HEREIN IN STRICTEST CONFIDENCE AND WILL INFORMATION CONTAINED HEREIN IN STRICTEST CONFIDENCE AND WILL INFORMATION CONTAINED HEREIN IN STRICTEST CONFIDENCE AND WILL INFORMATION.	VERTIV LOGO ARE TRADEMARKS OR REGISTERED TRADEMAR ACCEPTING IT INTO YOUR POSSESSION, YOU AGREE THAT Y EPT SOLELY FOR THE BENEFIT OF VERTIV GROUP CORPORA'	TRADEMARKS OF VERTTV GROUP CORPORATION REE THAT YOU WILL KEEP THIS DOCUMENT AND CORPORATION), SELL, LEND, OR OTHERWISE	
CHANGE NO.		APPROVED BY: Gmerek, Mike	TITI F / DESCRIPTION:	OK INDIKECILY, WITH	LY UPON REC	NI SHALL BE	ED 10 VEK IIV GROUP CORPORAL	DATE (LATEST REV.) 02.04.2025
PAGE DESCRIPTION:	3.a- Cable overview :	w:=vRow+8Rack1-W117 -	1114 / 252521 - 3		Vertiv™ SmartRow™ 2: 5x IT Rack 20kW With Fire Sup	JkW With Fire Suppression System	stem	REVISION: 505 W.CIEVELAND AVE WESTERVILLE OH 43081
	* 100 11 ******************************	V-107	_					



	0	1	2	8	4	2	9	6 8 7
					Cable overview	rview		
4	Packaging No.	Cable (Cable Category	Cable No.	Tag1	Tag2	Length (inch/mm)	Description
	FSS Cabinet-Factory Assembled	d Door switch communication cable	ation cable	W408	208-NO;208-COM	201-Door1/DI1	17.71/450 F	FSS Front door switch to 4DIF Smoke/DI4
		Communication cable(factory assembled)	factory assembled)	W409	RACK_THD-RJ2	FSS_4DIF_1-RJ1	47.24/1200 F	FSS cabinet the first 4DIF to the previous RACKS THD communication cable
		Communication cable(factory assembled)	factory assembled)	W410	FSS_4DIF_1-RJ2	FSS_4DIF_2-RJ1	15.75/400 F	FSS cabinet the first 4DIF to the second 4DIF communication cable
		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W413	4DIF_1_Door1/DI1	TB3-5/6	78.74/2000	FSS_4DIF_1 to FSS Terminal Blocks(RELEASE ALARM Signal)
		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W414	4DIF_1_Door2/DI2	TB3-3/4	78.74/2000 F	FSS_4DIF_1 to FSS Terminal Blocks(SUPERVISORY ALARM Signal))
В		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W415	4DIF_1_Water/DI3	TB3-7/8	78.74/2000 F	FSS_4DIF_1 to FSS Terminal Blocks(ALARM Signal))
		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W416	4DIF_1_Smoke/DI4	TB3-1/2	78.74/2000 F	FSS_4DIF_1 to FSS Terminal Blocks(TROUBLE ALARM Signal))
		Preinstalled cables for o	Preinstalled cables for cascading FSS cabinets	W403	I-LOCK	I-LOCK	16.54/420 F	FSS cabinet rear door preinstalled cascading wiring harness-for Door Lock
	FSS Cabinet-Packaged Separately	tely Intelligent door lock Communication Cables	ommunication Cables	W404-L	FSS-FLOCK	8COM-COM7	244.09/6200 F	FSS to RDU501_ COM7 intelligent door lock front door communication cable
		Intelligent door lock Communication Cables	ommunication Cables	W405-L	FSS-RLOCK	8СОМ-СОМ8	322.83/8200 F	FSS to RDU501_ COM8 intelligent door lock Rear door communication cable
		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W417	CRV L_37/38	TB8-1 NC/COM	295.28/7500	CRV1 to FSS Terminal Blocks/Relays - Long
		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W420	UPS1_7/8	TB9-1 NC/COM	295.28/7500	UPS 1 EPO to FSS Terminal Blocks/Relays
U		FSS cabinet fire comm	FSS cabinet fire communication & control cables	W421	UPS2_7/8	TB9-2 NC/COM	295.28/7500	UPS 2 EPO to FSS Terminal Blocks/Relays
		FSS cabinet fire commu	cabinet fire communication & control cables	W423	L TB10-2/N TB10-3/PE TB10-4	FAN 1 L/N/PE	118.11/3000 F	Fan 1 to FSS Terminal Blocks/Relays
		Rear door light cascade cable	e cable	W406	RACK_RLIGHT	FSS_RLIGHT	2.36/60	RACK5 TO FSS Rear door light power cascade cable
		FSS cabinet fire commu	cabinet fire communication and control cables	W426	L TB5-7 COM/N TB10-9/PE TB10-10	PSI5	100.4/2550 F	PSI5 output to FSS Terminal Blocks/Relays
		FSS cabinet fire comm	FSS cabinet fire communication and control cables	W427	PSI5 FSS	PSI5 FSS	314.96/8000 E	Extension Line Cord for PSI5 Input
	IT Rack-Factory Assembled	Smart door lock cascac	Smart door lock cascade (Factory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in RACK1
		Smart door lock cascac	Smart door lock cascade (Factory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in RACK2
Ω		Smart door lock cascac	Smart door lock cascade (Factory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in RACK3
		Smart door lock cascac	Smart door lock cascade (Factory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in RACK4
		Smart door lock cascac	Smart door lock cascade (Factory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in RACK5
		Door switch communication cable	ation cable	W201	204-NO;204-COM	201-AI/DI_L	17.71/450 F	PMC Front door switch to THD AI/DI_L
		Door switch communication cable	ation cable	W202	204-NO;204-COM	201-AI/DI_R	76.77/1950 F	PMC Rear door switch to THD AI/DI_R
		THD cascading pre-inst	THD cascading pre-installed on the front door	W208	PMC/RACK-THD-RJ2	RACK-THD-RJ1	25.59/650 F	PMC to RACK1 Cascade Cable
		Door switch communication cable	ation cable	W201	204-NO;204-COM	201-AI/DI_L	17.71/450 F	Rack1 Front door switch to THD AI/DI_L
ш		Door switch communication cable	ation cable	W202	204-NO;204-COM	201-AI/DI_R	76.77/1950 F	Rack1 Rear door switch to THD AI/DI_R
SHEET NO.	6 / 17	DRAWN BY: Nilesh Patil	© 2020 VERTIV GROUP C THIS DOCUMENT (AND T ALL INFORMATION COI	CORPORATION CONFIDENTIAL THE INFORMATION IT CONTAIN NATAINED HEREIN IN STRICTES	TITON CONFIDENTIAL AND PROPRIETARY. AL RIGHTS RESERVED/VERTIY AND THE VE BRAATTON IT CONTAINS) ARE THE PROPERTY OF VERTIX GROUP CORPOGATION BY A D HEREIN IN STRCTEST CONFIDENCE AND WILL NOT COPY, RETRANSMIT, LISE (EXCEP	VERTIV LOGO ARE TRADEMARKS OR REGISTERED TRADEMY Y ACCEPTING IT INTO YOUR POSSESSION, YOU AGREE THAT CEPT SOLELY FOR THE BENEFIT OF VERTIV GROUP CORPORA	TRADEMARKS OF VERTIV GROUP CORPORATION REE THAT YOU WILL KEEP THIS DOCUMENT AND CORPORATION), SELL, LEND, OR OTHERWISE	DWG NO. SR2N05020PAA2
CHANGE NO.	-	APPROVED BY: Gmerek, Mike	DISPOSE OF SAME, DIRECLEY OR IN	IRECILY OR INDIRECILY, WILL IDTION	JF VEKLIV GROU IATELY UPON RE	SHALL BE	ED 10 VEK 11V GROUP CORPORATI	DATE (LATEST REV.) 02.
PAGE DESCRIPTION:	3.b- Cable overview	=vRow+F	1-		Vertiv™ SmartRow™ 2: 5x IT Rack 20kW With Fire Sup	kW With Fire Suppression System	/stem	REVISION: SOS N. CLEVELAND AVE WESTERVILLE OH 43081
		KI-vvzuz						



	0	1 2		3	4	5	9	6
					Cable overview	rview		
4	Packaging No.	Cable Category		Cable No.	Tag1	Tag2	Length (inch/mm)	Description
	IT Rack-Factory Assembled	THD cascading pre-installed on the front door	ront door	W208	PMC/RACK-THD-RJ2	RACK-THD-RJ1	25.59/650	RACK1 to RACK2 Cascade Cable
		Door switch communication cable		W201	204-NO;204-COM	201-AI/DI_L	17.71/450	Rack2 Front door switch to THD AI/DI_L
		Door switch communication cable		W202	204-NO;204-COM	201-AI/DI_R	76.77/1950	Rack2 Rear door switch to THD AI/DI_R
		THD cascading pre-installed on the front door	ront door	W208	PMC/RACK-THD-RJ2	RACK-THD-RJ1	25.59/650	CRV1 to RACK3 Cascade Cable
		Door switch communication cable		W201	204-NO;204-COM	201-AI/DI_L	17.71/450	Rack3 Front door switch to THD AI/DI_L
<u>B</u>		THD cascading pre-installed on the front door	ront door	W208	PMC/RACK-THD-RJ2	RACK-THD-RJ1	25.59/650	RACK3 to RACK4 Cascade Cable
		Door switch communication cable		W201	204-NO;204-COM	201-AI/DI_L	17.71/450	Rack4 Front door switch to THD AI/DI_L
		Door switch communication cable		W202	204-NO;204-COM	201-AI/DI_R	76.77/1950	Rack4 Rear door switch to THD AI/DI_R
		THD cascading pre-installed on the front door	ront door	W208	PMC/RACK-THD-RJ2	RACK-THD-RJ1	25.59/650	RACK4 to RACK5 Cascade Cable
		Door switch communication cable		W201	204-NO;204-COM	201-AI/DI_L	17.71/450	Rack5 Front door switch to THD AI/DI_L
		Door switch communication cable		W202	204-NO;204-COM	201-AI/DI_R	76.77/1950	Rack5 Rear door switch to THD AI/DI_R
		RACK1 Integrated front doors cable		W300	RACK_LOCK	RACK_LOCK	25.6/650	RACK1 F-Door communication cascade cable
O		RACK1 Integrated front doors cable		W300	RACK_FLIGHT	RACK_FLIGHT	25.6/650	RACK1 front door LED light cascade cable
		RACK1 Integrated front doors cable		W300	RACK_F-SW	RACK_F-SW	25.6/650	RACK1 cascade cables for front door microswitches
		RACK1 Integrated rear doors cable		W301	I-LOCK	I-LOCK	25.6/650	RACK1 R-Door power cascade cable
		RACK1 Integrated rear doors cable		W301	RACK_LOCK	RACK_LOCK	25.6/650	RACK1 R-Door communication cascade cable
		RACK1 Integrated rear doors cable		W301	RACK_RLIGHT	RACK_RLIGHT	25.6/650	RACK1 rear door LED light cascade cable
		RACK1 Integrated rear doors cable		W301	RACK_R-SW	RACK_R-SW	25.6/650	RACK1 Cascade cables for rear door microswitches
		RACK2 Integrated front doors cable		W300	RACK_LOCK	RACK_LOCK	25.6/650	RACK2 F-Door communication cascade cable
Δ		RACK2 Integrated front doors cable		W300	RACK_FLIGHT	RACK_FLIGHT	25.6/650	RACK2 front door LED light cascade cable
		RACK2 Integrated front doors cable		W300	RACK_F-SW	RACK_F-SW	25.6/650	RACK2 cascade cables for front door microswitches
		RACK2 Integrated rear doors cable		W301	I-LOCK	I-LOCK	25.6/650	RACK2 R-Door power cascade cable
		RACK2 Integrated rear doors cable		W301	RACK_LOCK	RACK_LOCK	25.6/650	RACK2 R-Door communication cascade cable
		RACK2 Integrated rear doors cable		W301	RACK_RLIGHT	RACK_RLIGHT	25.6/650	RACK2 rear door LED light cascade cable
		RACK2 Integrated rear doors cable		W301	RACK_R-SW	RACK_R-SW	25.6/650	RACK2 Cascade cables for rear door microswitches
		RACK3 Integrated front doors cable		W300	RACK_LOCK	RACK_LOCK	25.6/650	RACK3 F-Door communication cascade cable
ш		RACK3 Integrated front doors cable		W300	RACK_FLIGHT	RACK_FLIGHT	25.6/650	RACK3 front door LED light cascade cable
SHEET NO.	7 / 17	DRAWN BY: Nilesh Patil	© 2020 VERTIV GROUP CO THIS DOCUMENT (AND TH ALL INFORMATION CON	RPORATION CONFIDENTIAL AND INFORMATION IT CONTAINS). TAINED HEREIN IN STRUCTEST C	RITV GROUP CORPORATION CONFIDENTIAL AND PROPRIETARY. ALL RIGHTS RESERVED VERTIV AND THE VERTIVAND THE INFORMATION IT CONTAINS) ARE THE RROPENTY OF VERTIV GROUP CORPORATION BY ACCIDEMENT OF VERTIV GROUP CORPORATION BY ACCIDEMENT OF VERTIVANIENTLY, USE (EXCEPT).	TV LOGO ARE TRADEMARKS OF PITING IT INTO YOUR POSSESS SOLELY FOR THE BENEFIT OF V	REGISTERED TRADEMARKS OF VERTIV GROUP CORPORATION SIGN, YOU AGREE THAT YOU WILL KEEP THIS DOCUMENT AND LEFTIV GROUP CORPORATION), SELL, LEND, OR OTHERWISE	
CHANGE NO.		APPROVED BY: Gmerek, Mike	Q III	ECITY OR INDIRECITY, WITHOUT DETION.	I THE EXPRESS WRITTEN PERMISSION OF VERTIT GROUP CO	FORALION, AND THIS DOCUME.	KNED 10 VEK 11V GROOP CORPO	DATE (LATEST REV.) 02.04.2025
PAGE DESCRIPTION:			11-1-1		Vertiv™ SmartRow™ 2: 5x IT Rack 20kW With Fire Sup	kW With Fire Suppression System	System	REVISION: 505 N. CIEVELAND AVE WESTERVILLE OH 43081
	**************************************							-




	0	1 2	_	m	4	5	9	9 8 9
					Cable overview	rview		
۷					F		Length	
	Packaging No.		gory	Cable No.	Гадт	lag.	(inch/mm)	Description
	IT Rack-Factory Assembled	RACK3 Integrated front doors cable	s cable	W300	RACK_F-SW	RACK_F-SW	25.6/650	RACK3 cascade cables for front door microswitches
		RACK3 Integrated rear doors cable	; cable	W301	I-LOCK	I-LOCK	25.6/650	RACK3 R-Door power cascade cable
		RACK3 Integrated rear doors cable	; cable	W301	RACK_LOCK	RACK_LOCK	25.6/650	RACK3 R-Door communication cascade cable
		RACK3 Integrated rear doors cable	; cable	W301	RACK_RLIGHT	RACK_RLIGHT	25.6/650	RACK3 rear door LED light cascade cable
		RACK3 Integrated rear doors cable	; cable	W301	RACK_R-SW	RACK_R-SW	25.6/650	RACK3 cascade cables for rear door microswitches
<u>B</u>		RACK4 Integrated front doors cable	s cable	W300	RACK_LOCK	RACK_LOCK	25.6/650	RACK4 F-Door communication cascade cable
		RACK4 Integrated front doors cable	s cable	W300	RACK_FLIGHT	RACK_FLIGHT	25.6/650	RACK4 front door LED light cascade cable
		RACK4 Integrated front doors cable	s cable	W300	RACK_F-SW	RACK_F-SW	25.6/650	RACK4 cascade cables for front door microswitches
		RACK4 Integrated rear doors cable	; cable	W301	I-LOCK	I-LOCK	25.6/650	RACK4 R-Door power cascade cable
		RACK4 Integrated rear doors cable	; cable	W301	RACK_RLIGHT	RACK_RLIGHT	25.6/650	RACK4 rear door LED light cascade cable
		RACK4 Integrated rear doors cable	; cable	W301	RACK_R-SW	RACK_R-SW	25.6/650	RACK4 Cascade cables for rear door microswitches
		RACK5 Integrated front doors cable	s cable	W300	RACK_LOCK	RACK_LOCK	25.6/650	RACK5 F-Door communication cascade cable
U		RACKS Integrated front doors cable	s cable	W300	RACK_FLIGHT	RACK_FLIGHT	25.6/650	RACK5 front door LED light cascade cable
		RACK5 Integrated front doors cable	s cable	W300	RACK_F-SW	RACK_F-SW	25.6/650	RACK5 cascade cables for front door microswitches
		RACK5 Integrated rear doors cable	; cable	W301	RACK_RLIGHT	RACK_RLIGHT	25.6/650	RACK5 rear door LED light cascade cable
		RACK5 Integrated rear doors cable	; cable	W301	RACK_R-SW	RACK_R-SW	25.6/650	RACK5 cascade cables for rear door microswitches
		Smart door lock cascade (Factory assembled)	ctory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in FSS
		FSS Integrated rear doors cable	aldi	W301	I-LOCK	I-LOCK	25.6/650	FSS R-Door power cascade cable
	PMC-Factory Assembled	Power cable (Factory assembled)	oled)	W14	PMU-RLIGHT DC+ DC-	PMC-RLIGHT DC+ DC-	47.2/1200	PMU to PMC rear door LED light power cable
Ω		Power cable (Factory assembled)	oled)	W16	PMU-FLIGHT FWH FRE FBK FBL	PMC-FLIGHT	68.9/1750	PMU to PMC front door LED light power cable
		Power cable (Factory assembled)	oled)	W18	PMU-F-SW FCOM FNC	MC-F-SW	49.2/1250	PMU to PMC front door microswitch power cable
		Power cable (Factory assembled)	oled)	W19	PMU-R-SW RCOM RNC	MC-R-SW	49.2/1250	PMU to PMC rear door microswitch power cable
		Power cable (Factory assembled)	oled)	W13	PMU-LOCK DC+ DC-	DMC-LOCK	53.1/1350	PMU to PMC/CRV1/RACK1 intelligent door lock power cable
		Communication cable (factory assembled)	y assembled)	W101	PMC-FLOCK	8COM-COM1	35.4/900	PMC to RDU501_ COM1 intelligent door lock front door communication cable
		Communication cable (factory assembled)	y assembled)	W107	PMU-RLOCK	8COM-COM2	70.9/1800	PMC to RDU501_ COM2 intelligent door lock rear door communication cable
		Smart door lock cascade (Factory assembled)	ctory assembled)	W206/W207	I-LOCK	F-R/BK W206, R-R/BK W207	82.7/2100	Smart door lock cable from rear door to front door in PMC
ш		Communication cable (factory assembled)	y assembled)	W109	RDU501-Sensor1	THD-RJ1	27.6/700	RDU501 to PMC cabinet THD communication cable
SHEET NO.	8 / 17	DRAWN BY: Nilesh Patil	© 2020 VERTIV GROUP THIS DOCUMENT (AND ALL INFORMATION OF	CORPORATION CONFIDENTIAL THE INFORMATION IT CONTAIL ONTAINED HEREIN IN STRICTEE	© 3020 VERTIV GROUP CORPORATION CONFIDENTIAL AND PROPRIETARY. ALL RIGHTS RESERVED.WERTIV AND THE VERY THIS DOCUMENT (AND THE INFORMATION IT CONTAINS) ARE THE RROPERTY OF VERTIV GROUP CORPORATION BY ACCURACY LIFE ON THE CONTENENT OF CONTAINED HEREIN IN STREAMSHITT, LISE (EXCEPT.	TV LOGO ARE TRADEMARKS OF EPTING IT INTO YOUR POSSESS SOLELY FOR THE BENEFIT OF V	REGISTERED TRADEMARKS OF VERTY GROUP CORPORATION SIGN, YOU AGREE THAT YOU WILL KEEP THIS DOCUMENT AND RETY GROUP CORPORATION), SELL, LEND, OR OTHERWISE	
CHANGE NO.		APPROVED BY: Gmerek, Mike	DISCOSE OF SAME, DIRECTLY OR IM	DIRECTLY OR INDIRECTLY, WITE	HOUT THE EXPRESS WALLIEN PERMISSION OF VERLIV GROUP IMMEDIATELY UPON REQ	CHOKALION, AND THIS DOCUME T.	VED TO VERTIV GROUP CORPO	DATE (LATEST REV.) 02.04.2025
PAGE DESCRIPTION:		3.d- Cable overview : =vRow+RACKF3.3-W300 -			Vertiv™ SmartRow™ 2: 5x IT Rack 20kW With Fire Sup	0kW With Fire Suppression System	/stem	REVISION: 505 N. CLEVELAND ANG WESTERVILLE OH 43381
	=VK0W+12FI9	C-W103						




Percentary sources Cabbit Catogary Cabbit		0	1 2	3	4	5	9	9 8 9
Proceeding No. Cable Category Cable No. Trigit Trigit Trigit Cable No. Trigit Trigit Trigit Cable No. Trigit Trigit Trigit Trigit Cable No. Trigit					Cable ov	erview		
	⋖	Packaging No.	Cable Category	Cable No.	Tag1	Tag2	Length (inch/mm)	Description
Currunticator calle		PMC-Factory Assembled	Power cable (Factory assembled)	W15	HMI-P	PMU-HMI DC+ DC-	59.1/1500	PMU to HMI power cable
Communication called (Castroy secretorist) Willis President Castro (Castro) (C			Communication cable (factory assemble:		PMU-DO2	RDU501-DO2	70.9/1800	PMU to RDU501 D02 Control Red Light Cable
			Communication cable (factory assemble:		PMU-DI	4DI-RJ451	66.9/1700	PMU to 4DI SPD communication network cable
Contractation cités (Catata sourcités) Wind Catata			Communication cable (factory assembled		PMU-RS485	RDU501-COM3	70.9/1800	PMU to RDU501 COM3 meter communication network cable
Corresponded (1982) Corresponded (1982) Will 2 MALIOZ (1984) MALIOZ			Communication cable (factory assembled		4DI-DI1	RDU501-Sensor2	11.8/300	4DI to RDU501 Smoke 2 SPD Communication Network Cable
	В		Communication cable (factory assembleα		RDU501-COM2	HMI-C	29.5/750	RDU501 COM2 to HMI communication cable
9 (7.7			Communication cable (factory assembled		PMU-DO2	RDU501-DO2	70.9/1800	PMU to RDU501 D02 Control Red Light Cable
9 / 17 DRAWN BY: Nilesh Patil THE DOCUMENT (AND THE INFORMATION TO COMPENDENTIAL AND PROPRETING ON VERTIVICACION CONFIDENTIAL AND PROPRETING ON VERTIVICACION CONFIDENTIAL AND PROPRETING CONFIDENTIAL AND PROPRETING CONFIDENTIAL AND PROPRETING CONFIDENTIAL AND PROPRETING CONFIDENTIAL APPROACH OF VERTIVICACION CONFIDENTIAL AND THE BREET TO VERTIVICACION CONFIDENTIAL AND THE BREET OF VERTIVICACION CONFIDENTIAL AND THE	О Д Ш							
9 / 17 DRAWN BY: Nilesh Patil © 2020 Vertro Concentration Processes and Patil Comment (AND THE INFORMATION OF CORP.) ALL INFORMATION COMMENT								
APPROVED BY: Gmerek, Mike TITLE / DESCRIPTION: 3.e- Cable overview : = vRow+13PMU-W15 - = vRow+Red Light-W102 APPROVED BY: DATE (VALIES) PRODOX 02.04, 2025 REVISION: AVE WESTERVILLE OH 43081	SHEET NO.	9 / 17	Nilesh Patil	020 VERTIV GROUP CORPORATION CONFIDENTIAL. I'S DOCUMENT (AND THE INFORMATION IT CONTAIN LINFORMATION CONTAINED HEREIN IN STRUCTES 1SPOSE OF SAME. DIRECTLY OR JNDIRECTLY, WITH	AND PROPRIETARY. ALL RIGHTS RESERVED.VERTIV AND TH S.) ARE THE PROPRETY OF VERTIV GROUP CORPORATION B TCONFIDENCE AND WILL NOT COPY, RETRANSMIT, JUSE (EX OUT THE EXPRESS WRITTEN PERMISSION OF VERTIV GROU.	HE VERTIV LOGO ARE TRADEMARKS OR REGISTERED TRAD. BY ACCEPTING IT INTO YOUR POSSESSION, YOU AGREE TI XCEPT SOLEY FOR THE BENEFIT OF VERTIV GROUP CORP. UP CORPORATION, AND THIS DOCUMENT SHALL BE RETLIF.	DEMARKS OF VERTIV GROUP CORPY THAT YOU WILL KEEP THIS DOCUME PORATION), SELL, LEND, OR OTHER JRNED TO VERTIV GROUP CORPORA	DWG NO. SR2N05020PAA2
3.e- Cable overview : =vRow+13PMU-W15 - =vRow+Red Vertiv [™] SmartRow [™] 2: 5x IT Rack 20kW With Fire Suppression System AVE AVE WHO OH 43081	CHANGE NO.			TLE / DESCRIPTION:	IMMEDIATELY UPON R	REQUEST.		DATE (LATES) REV.) 02.04.2025 PENTETON: SOS N CLEVELAND
	PAGE DESCRI			- 1	™ SmartRow™ 2: 5x IT Rack 2	20kW With Fire Suppression \$	System	AVE WESTERVILLE OH 43081




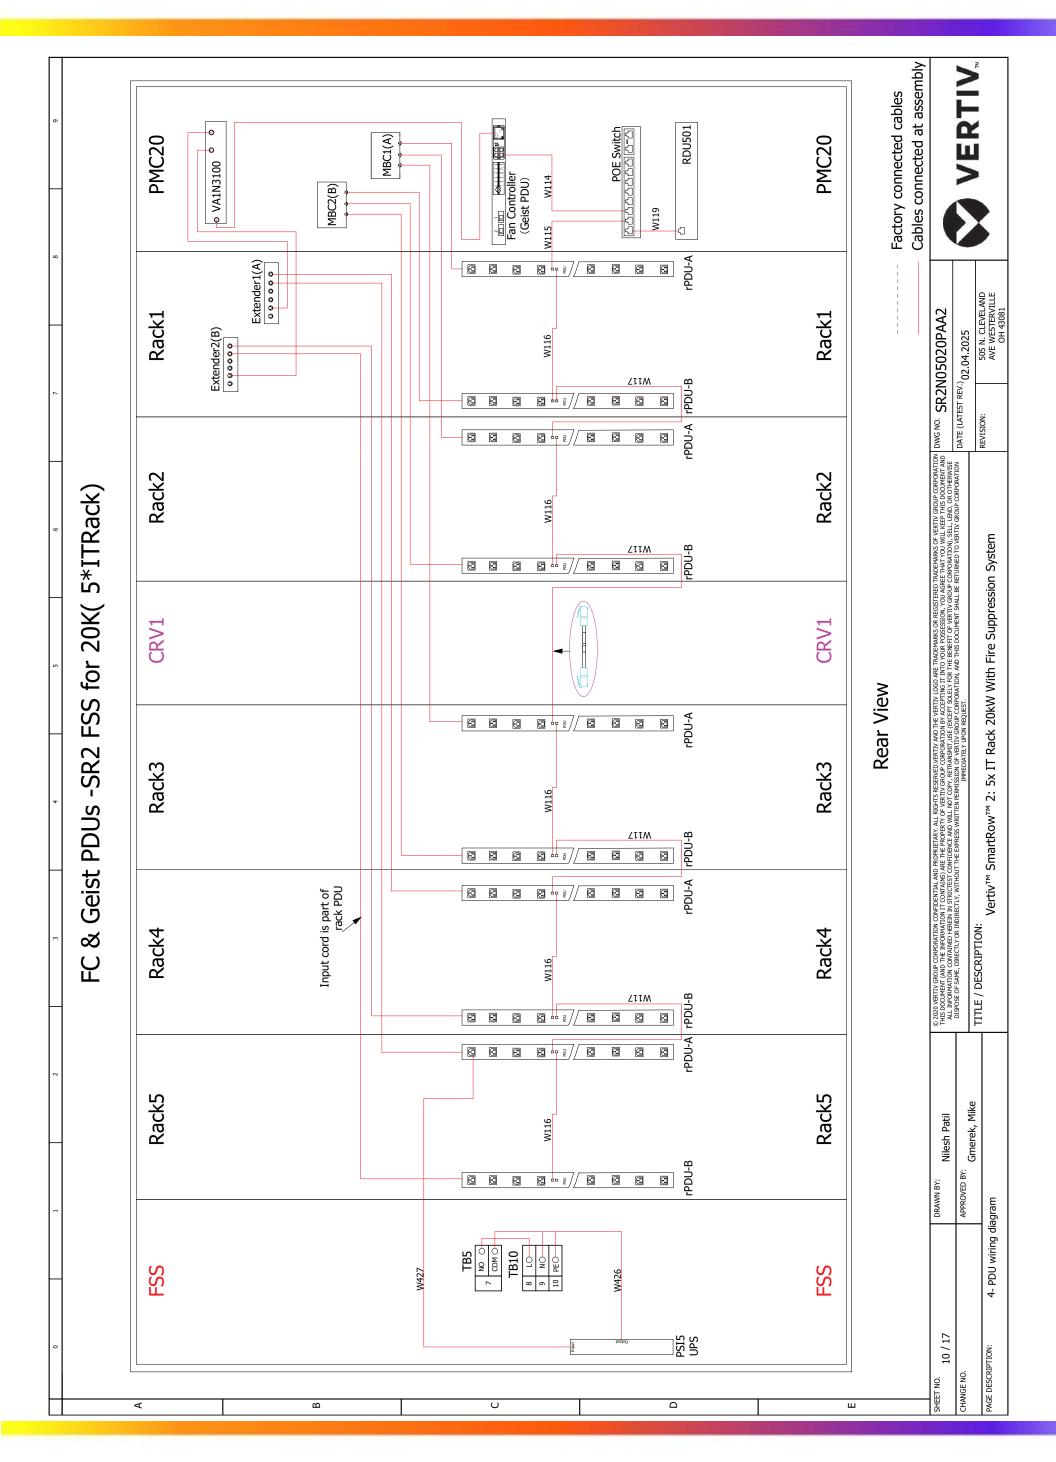




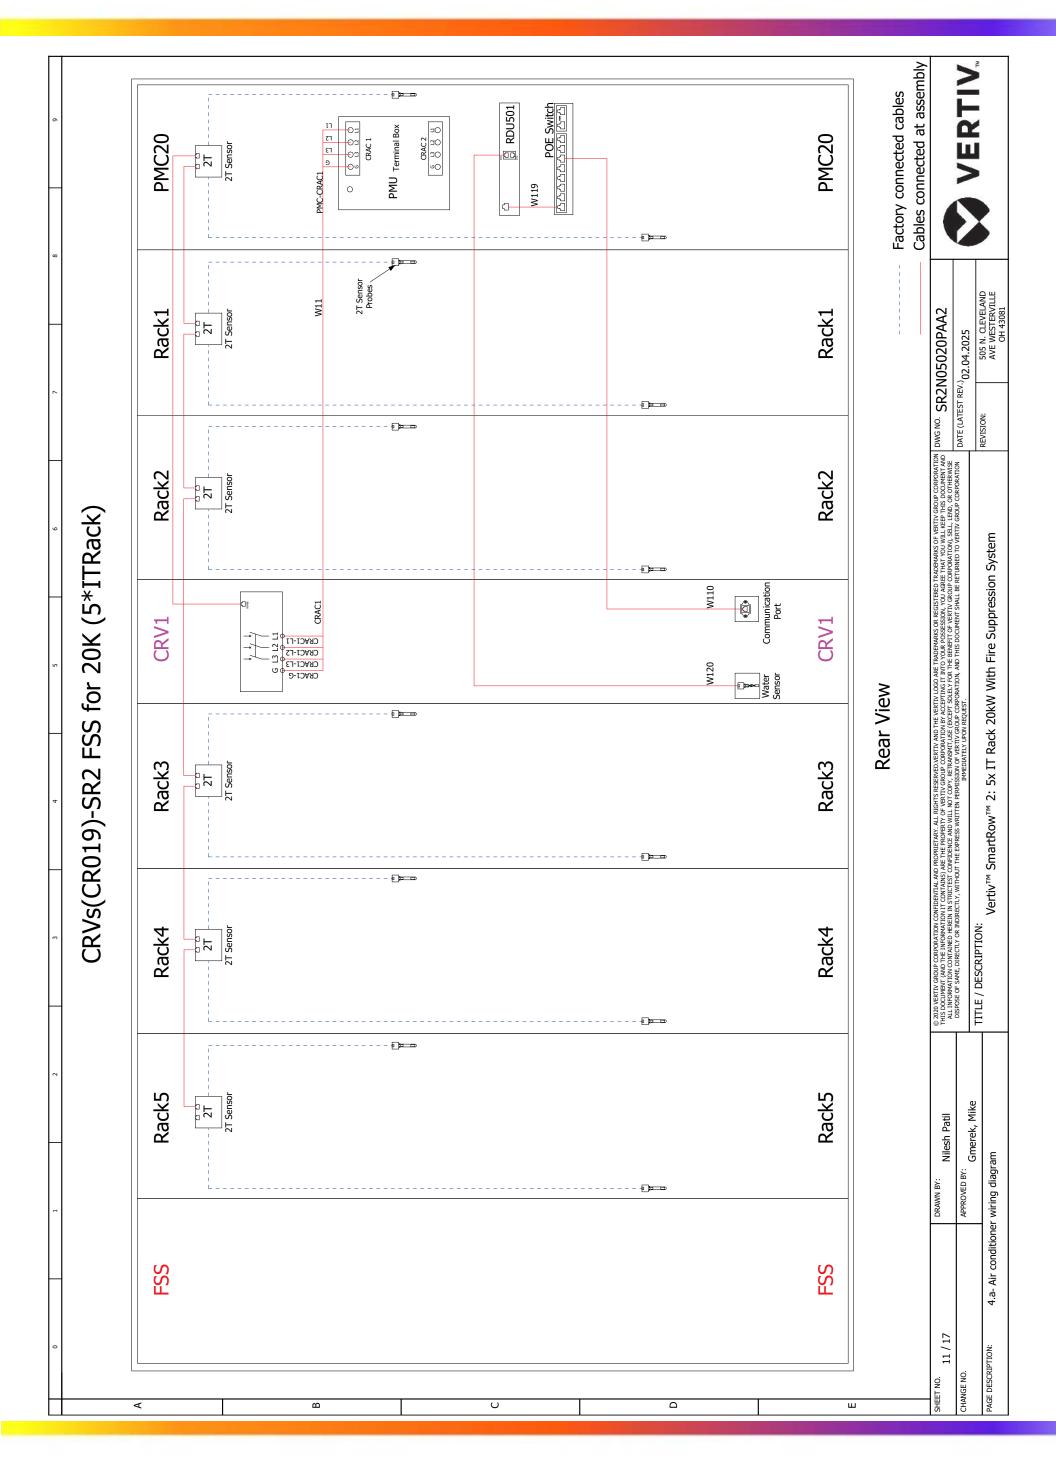




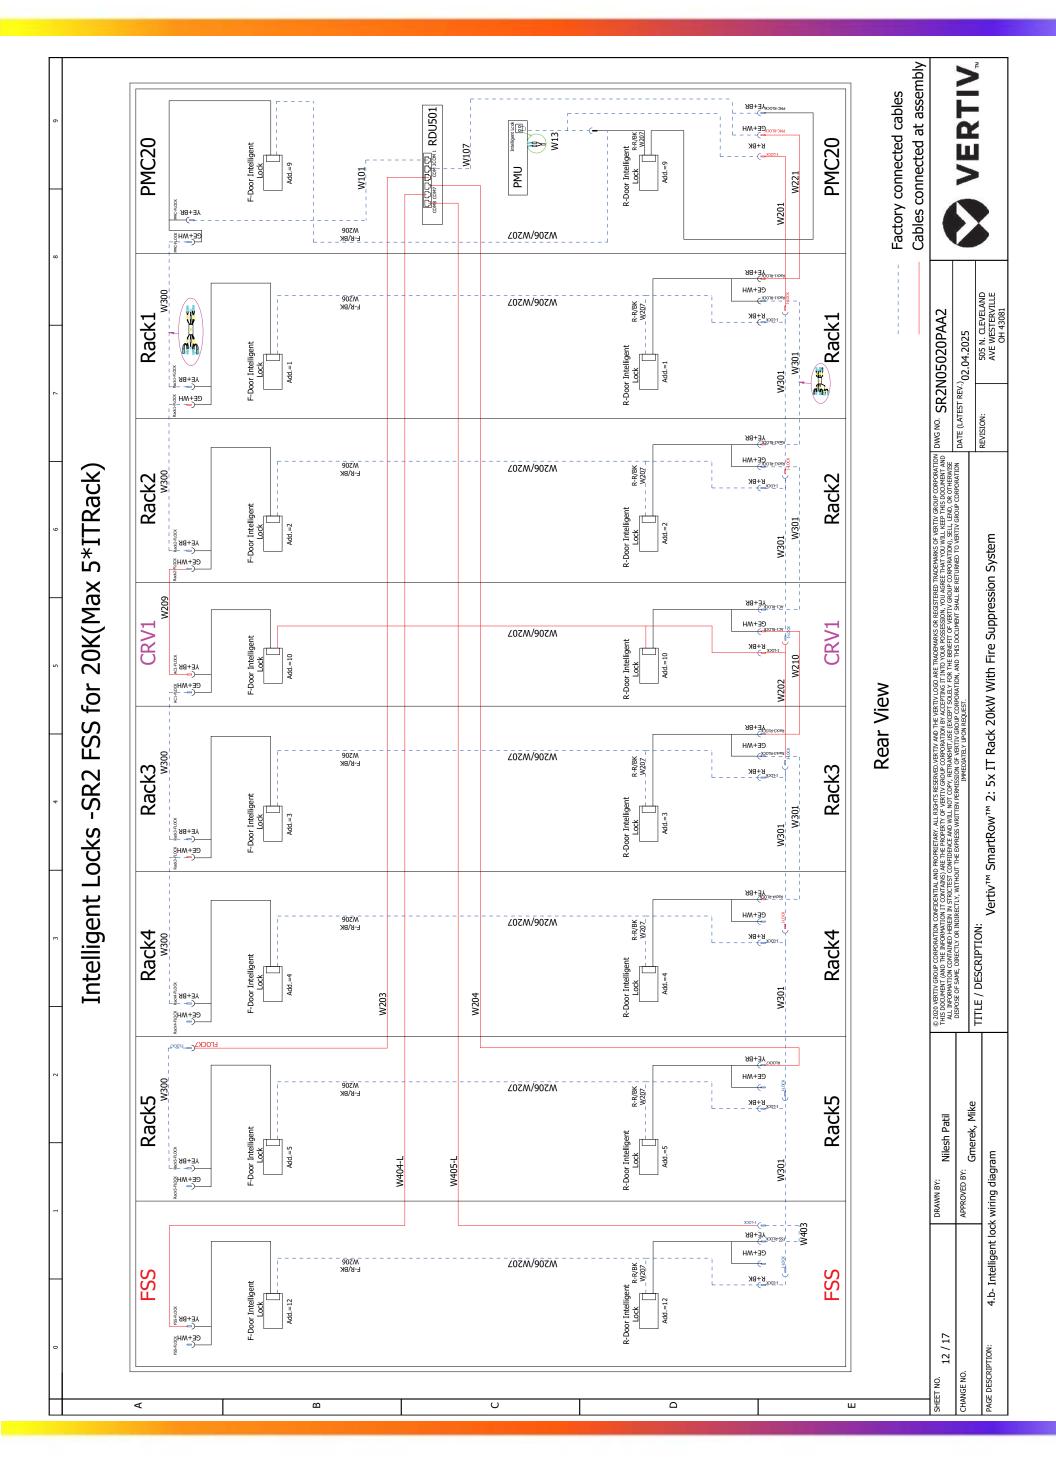




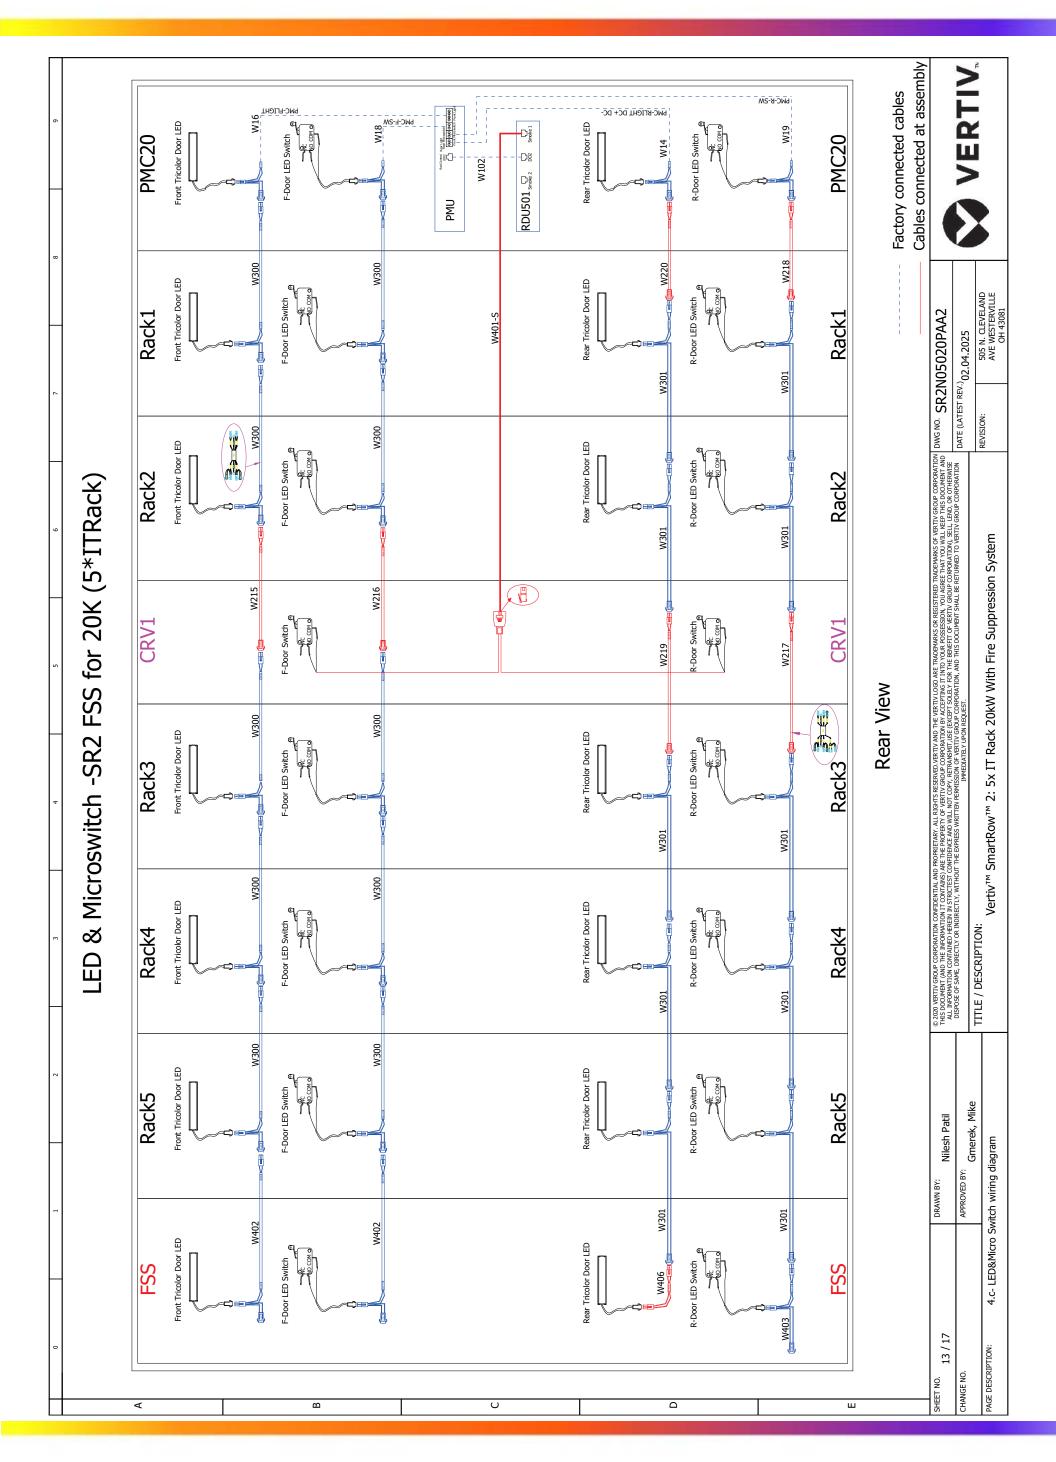




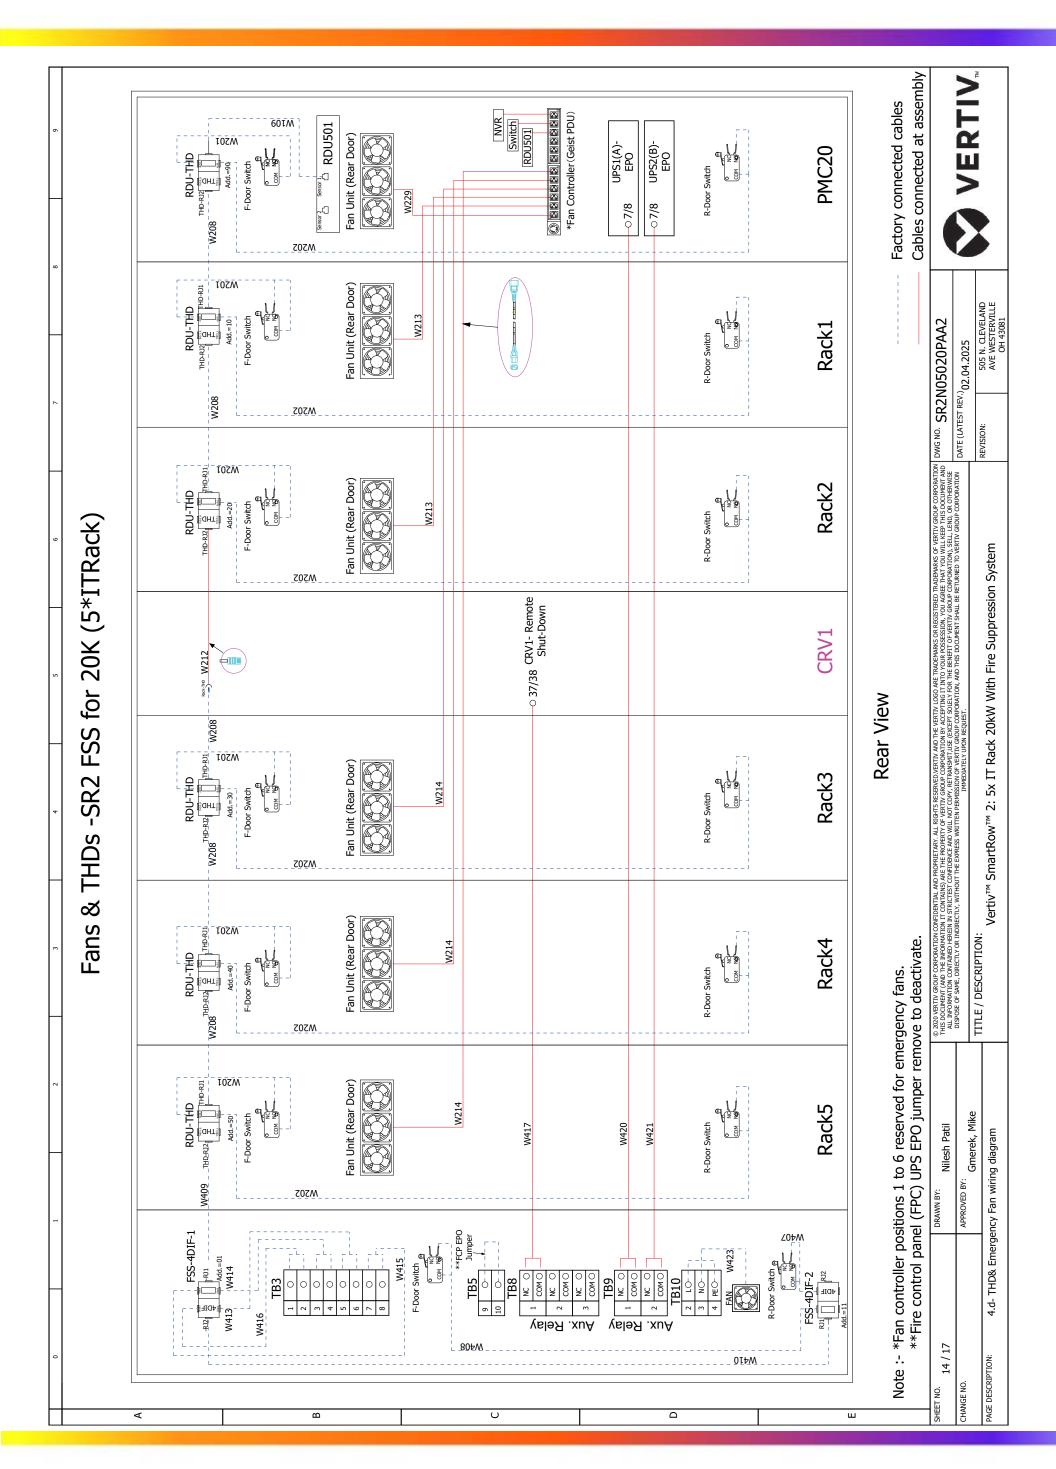




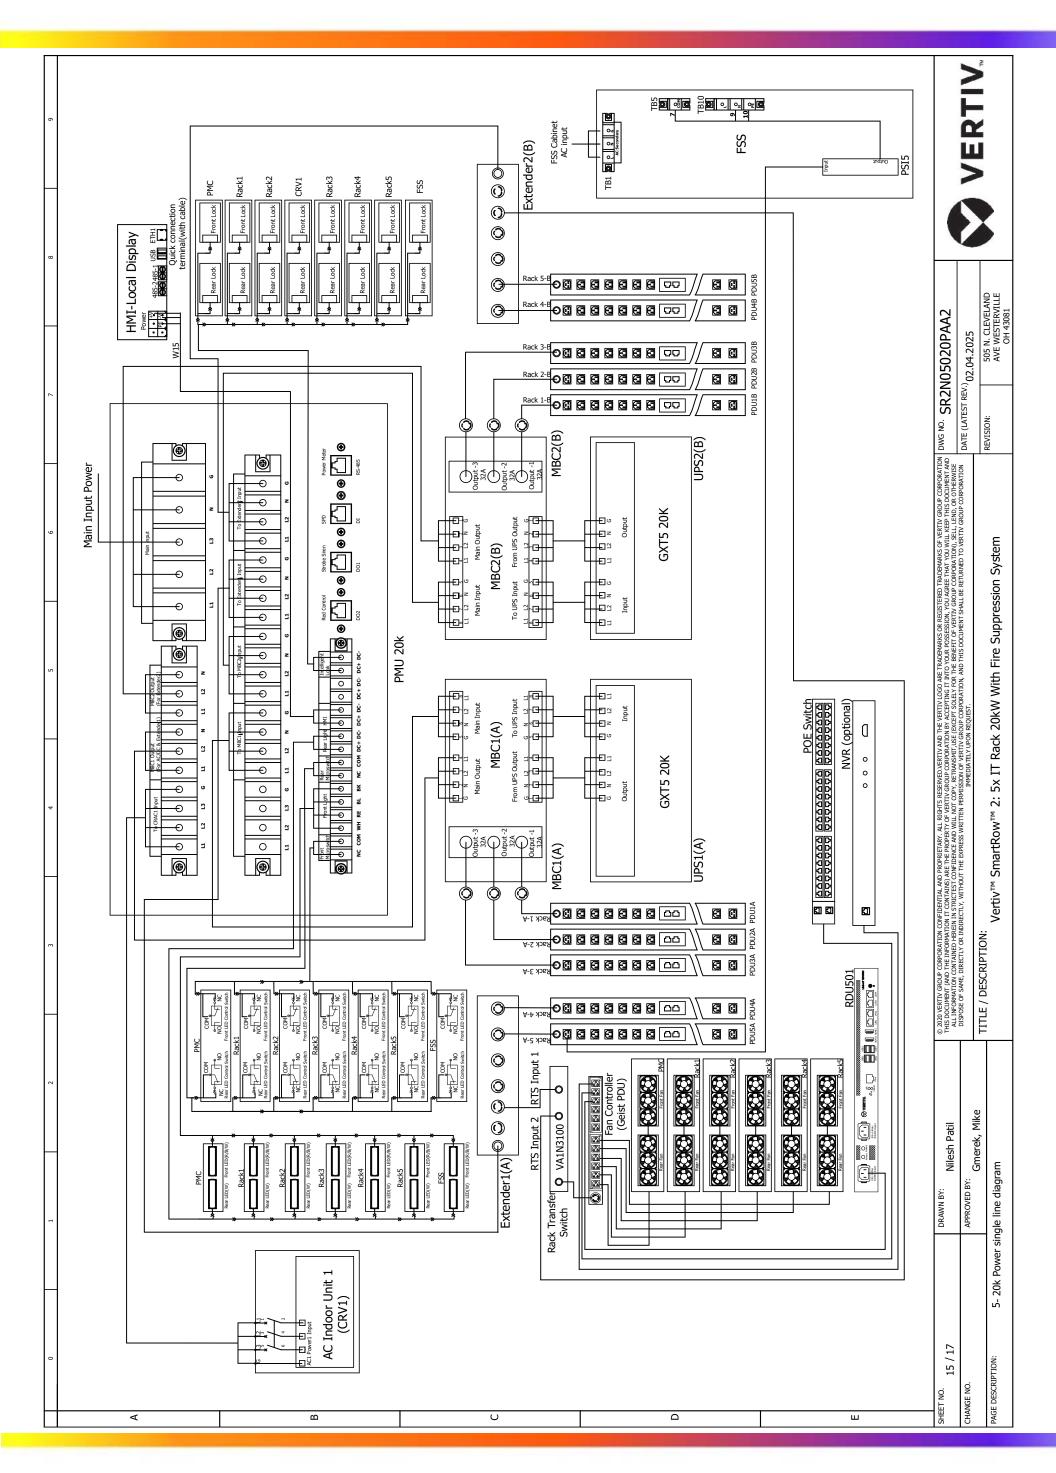



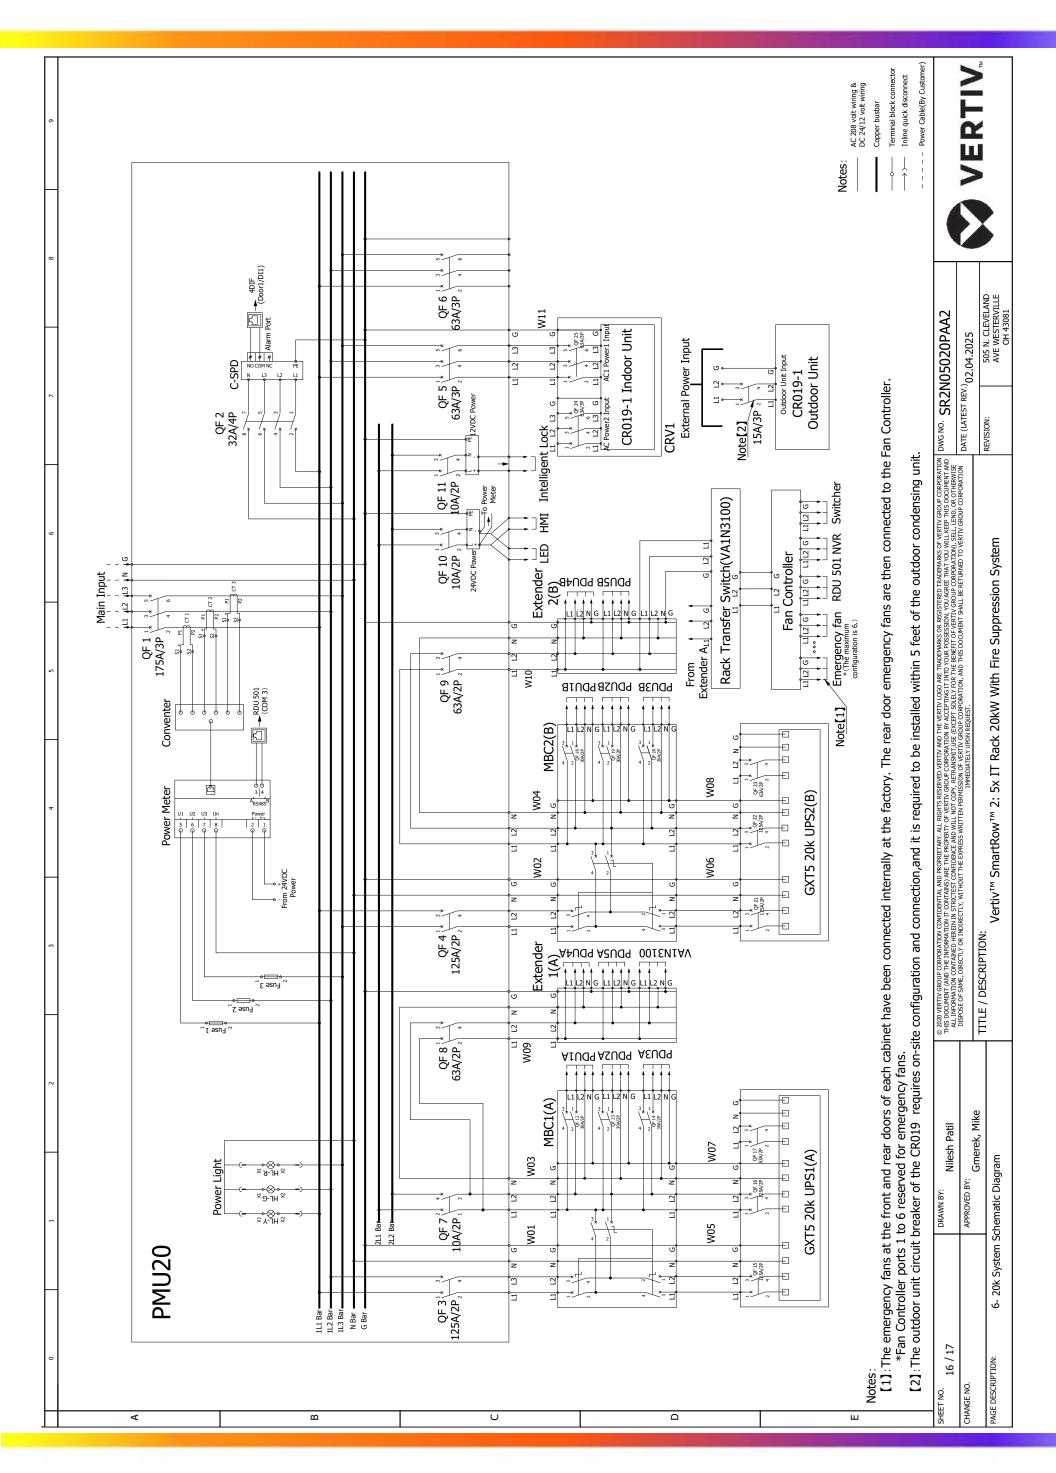




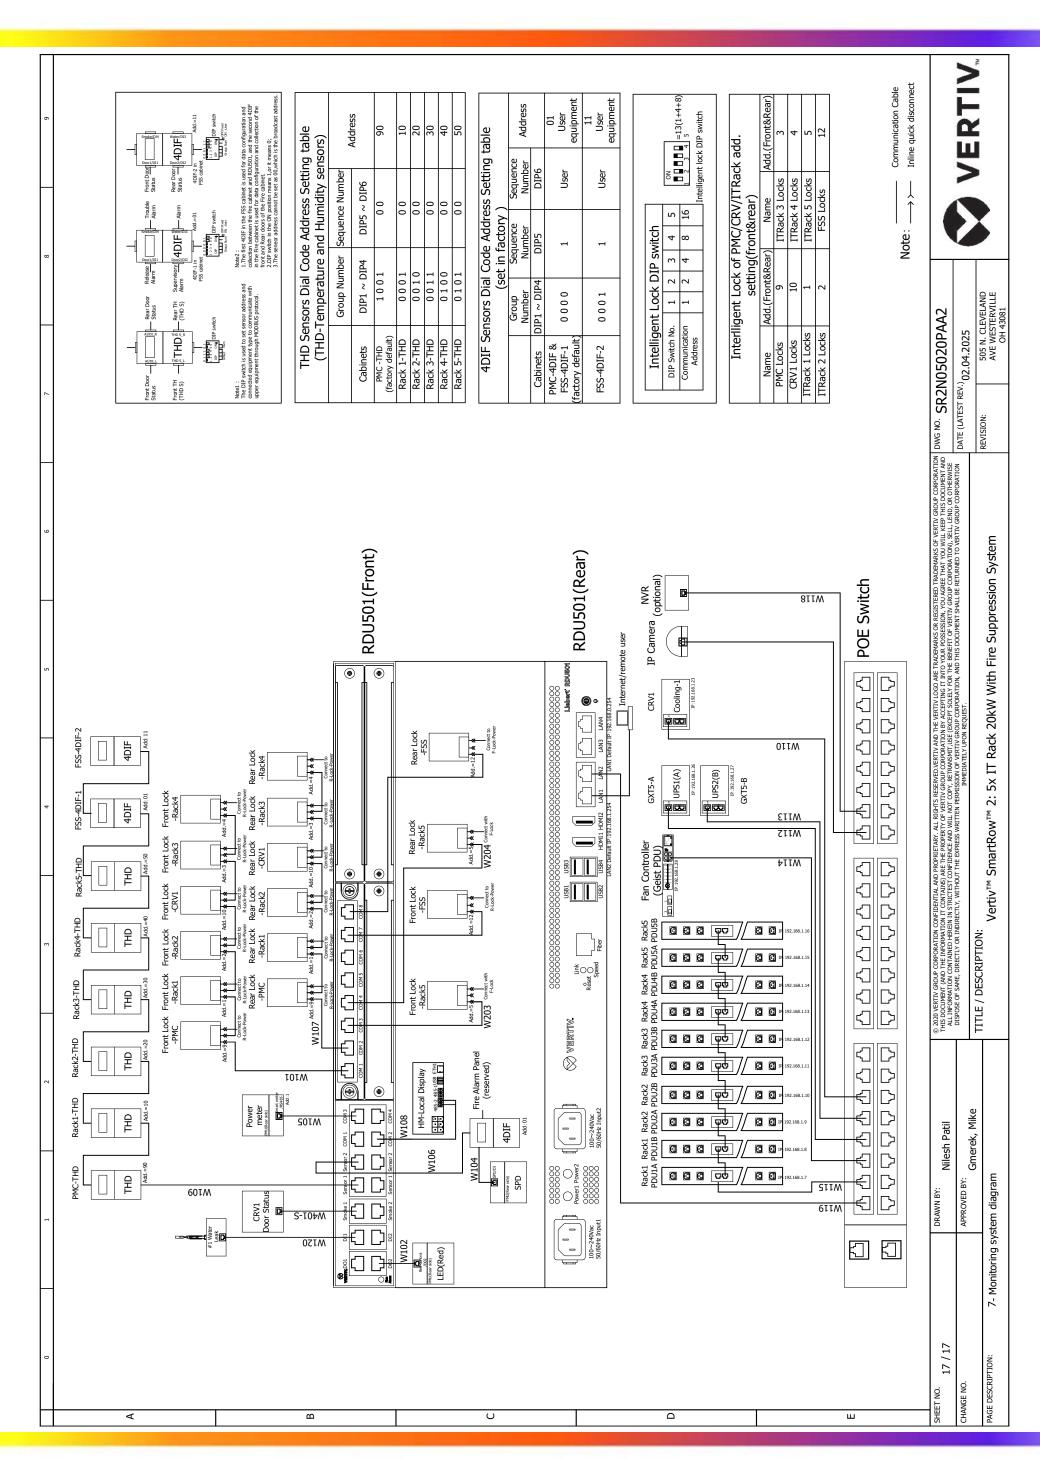




4. Field Supplied Cable & Part List

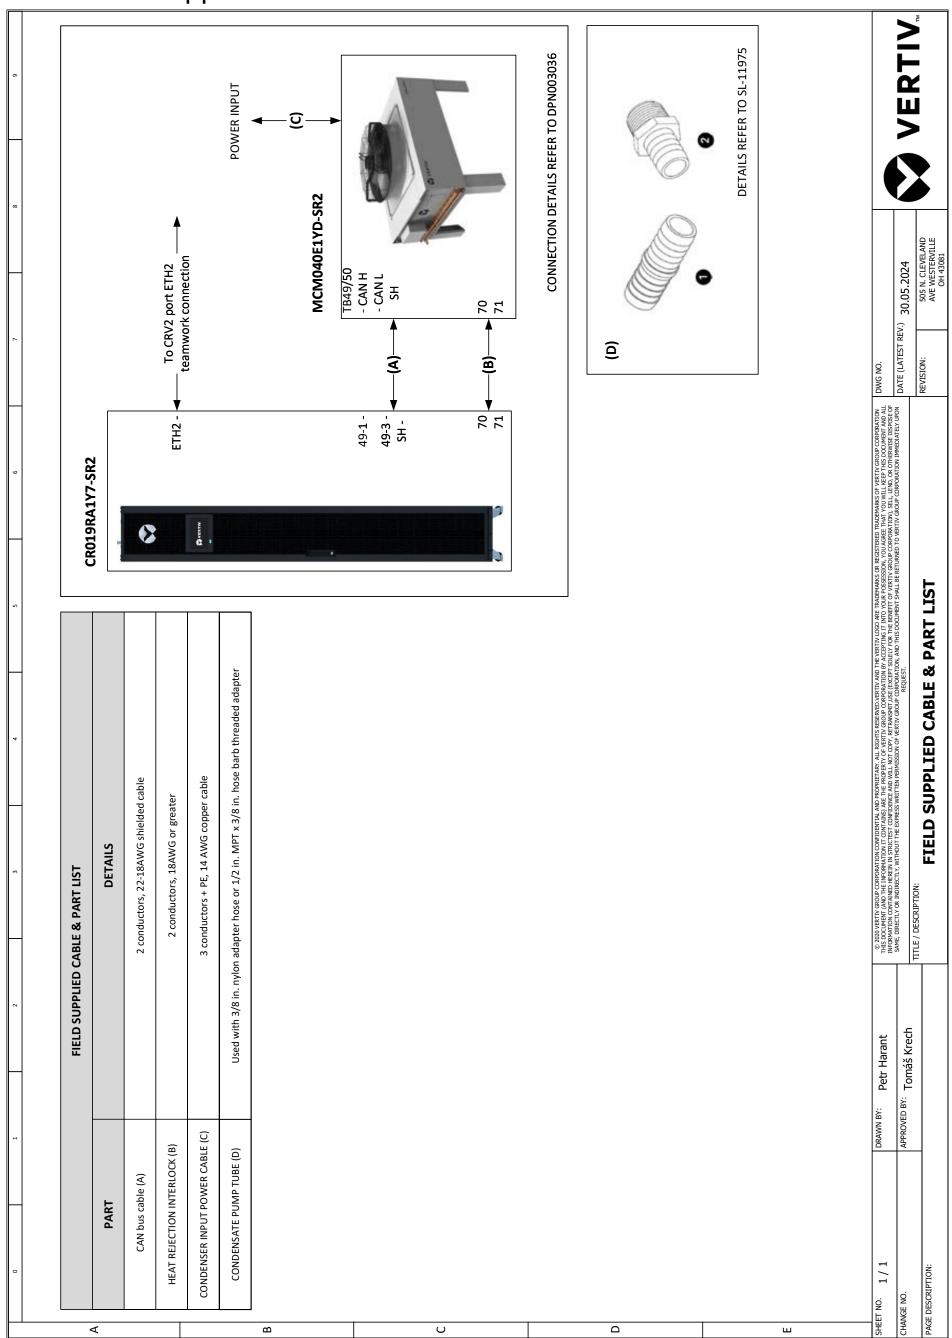




5. Vertiv MSR2 600mm IT Rack

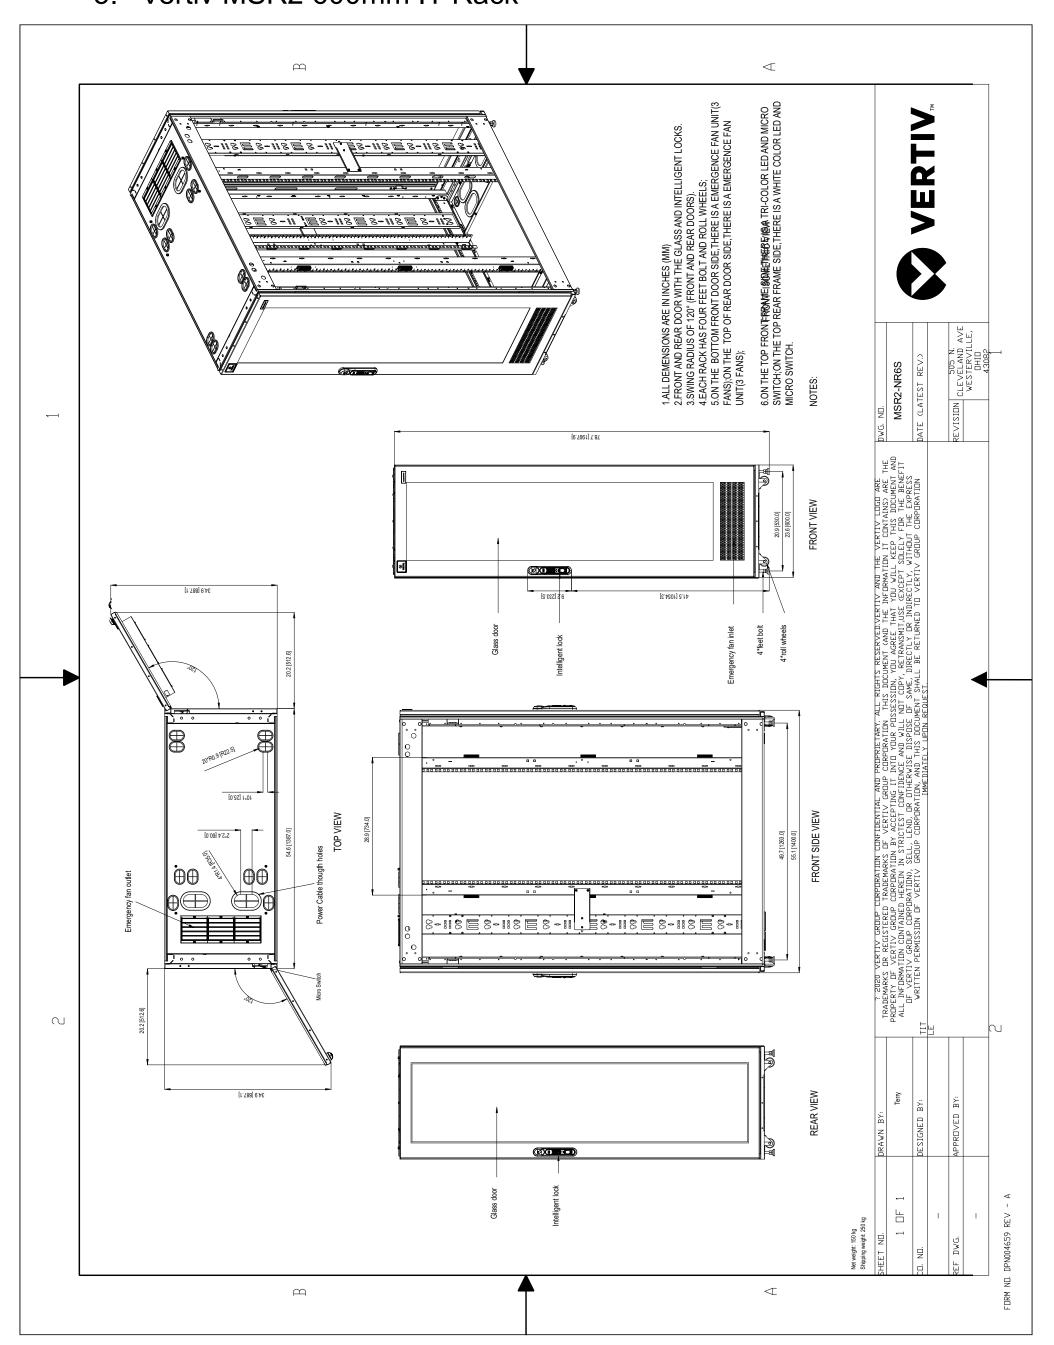




6. Vertiv MSR2 Power Management Cabinet (PMC)

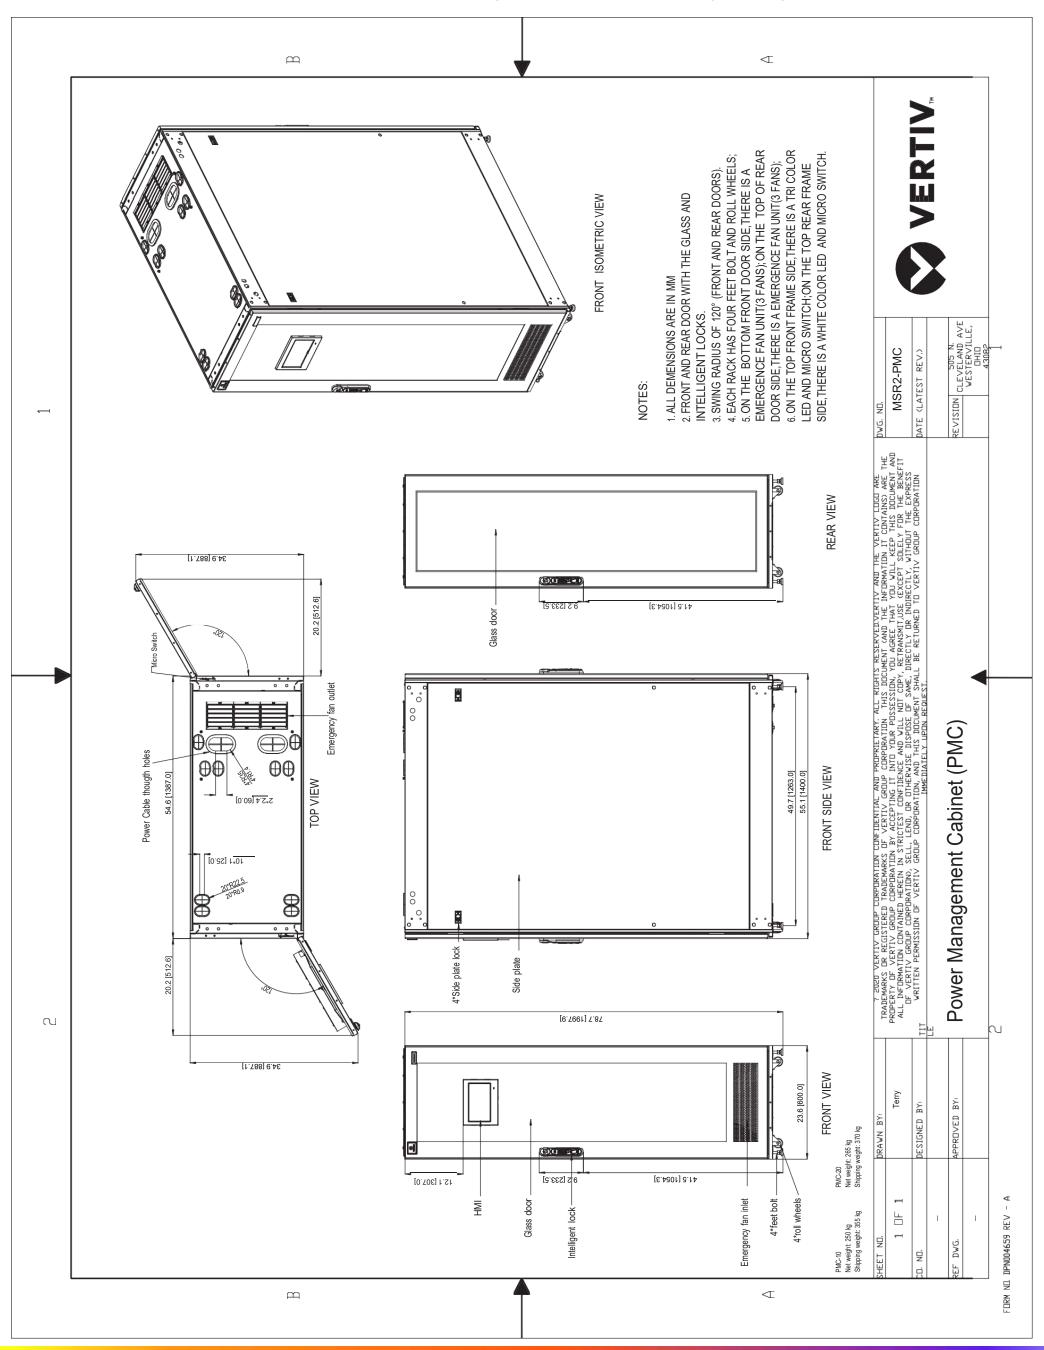




7. Vertiv Liebert CR019 with Plenums

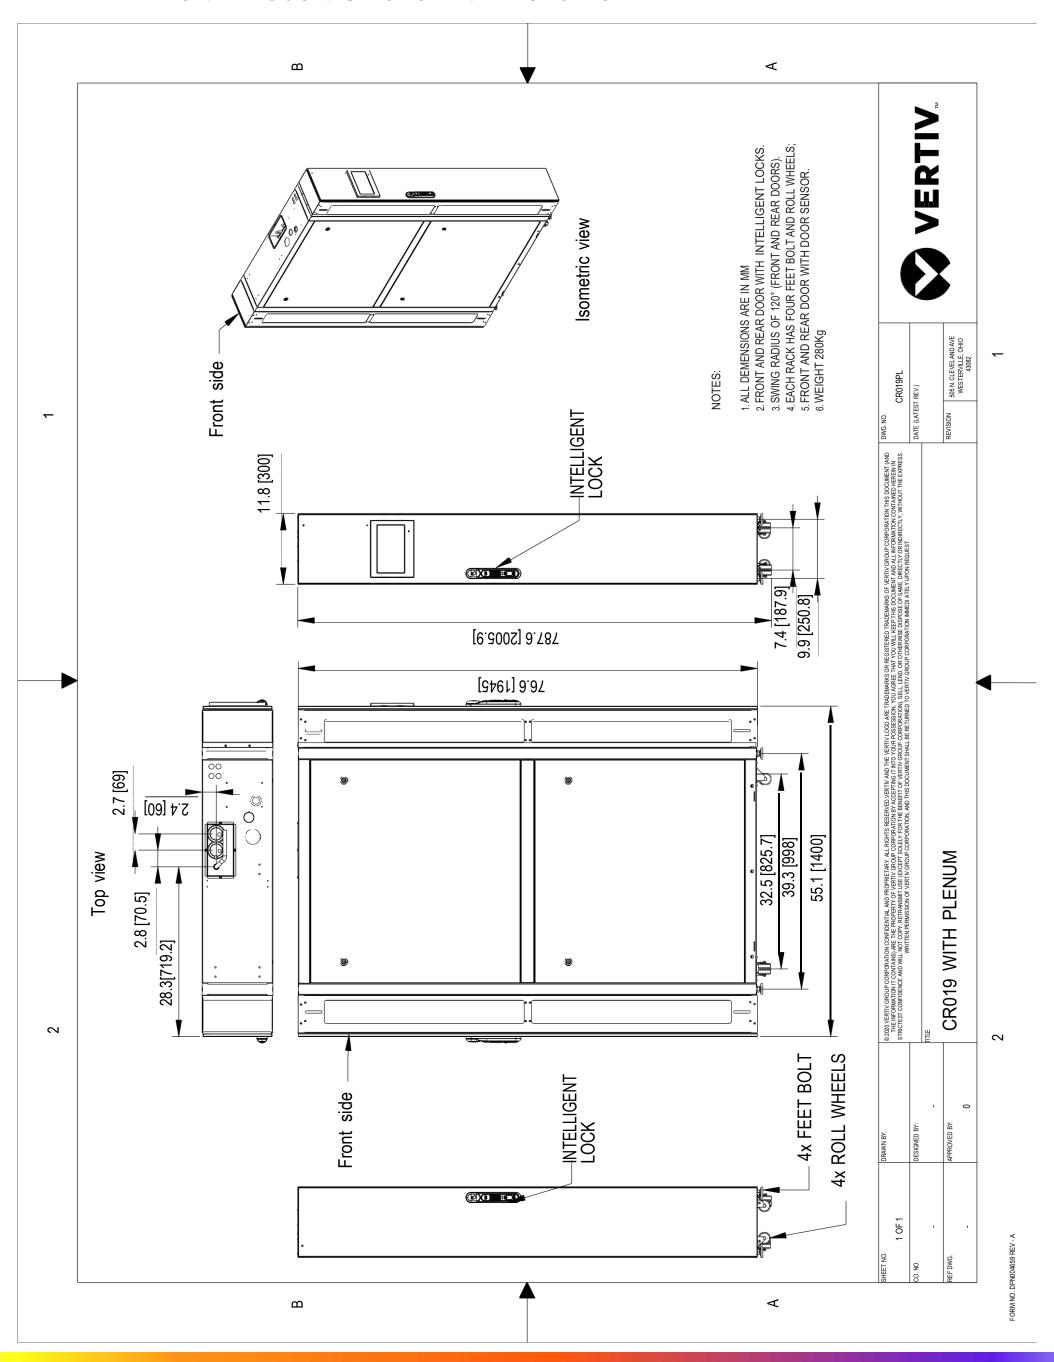




8. Vertiv MSR2 Fire Suppression System (FSS)

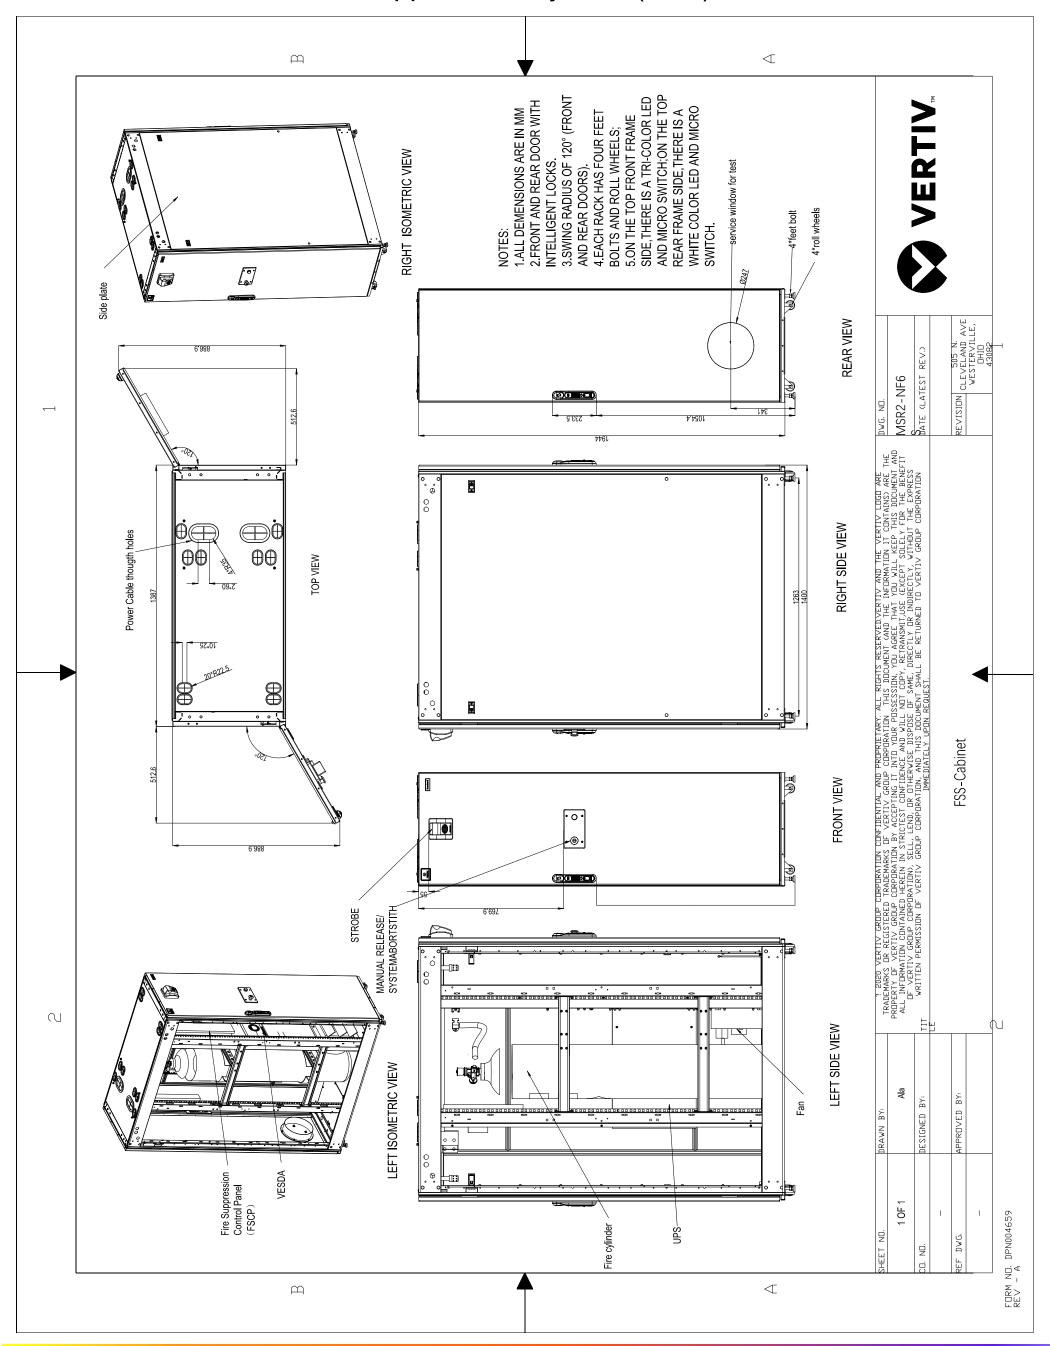




9. Power Management Unit - 20kW (PMU20)

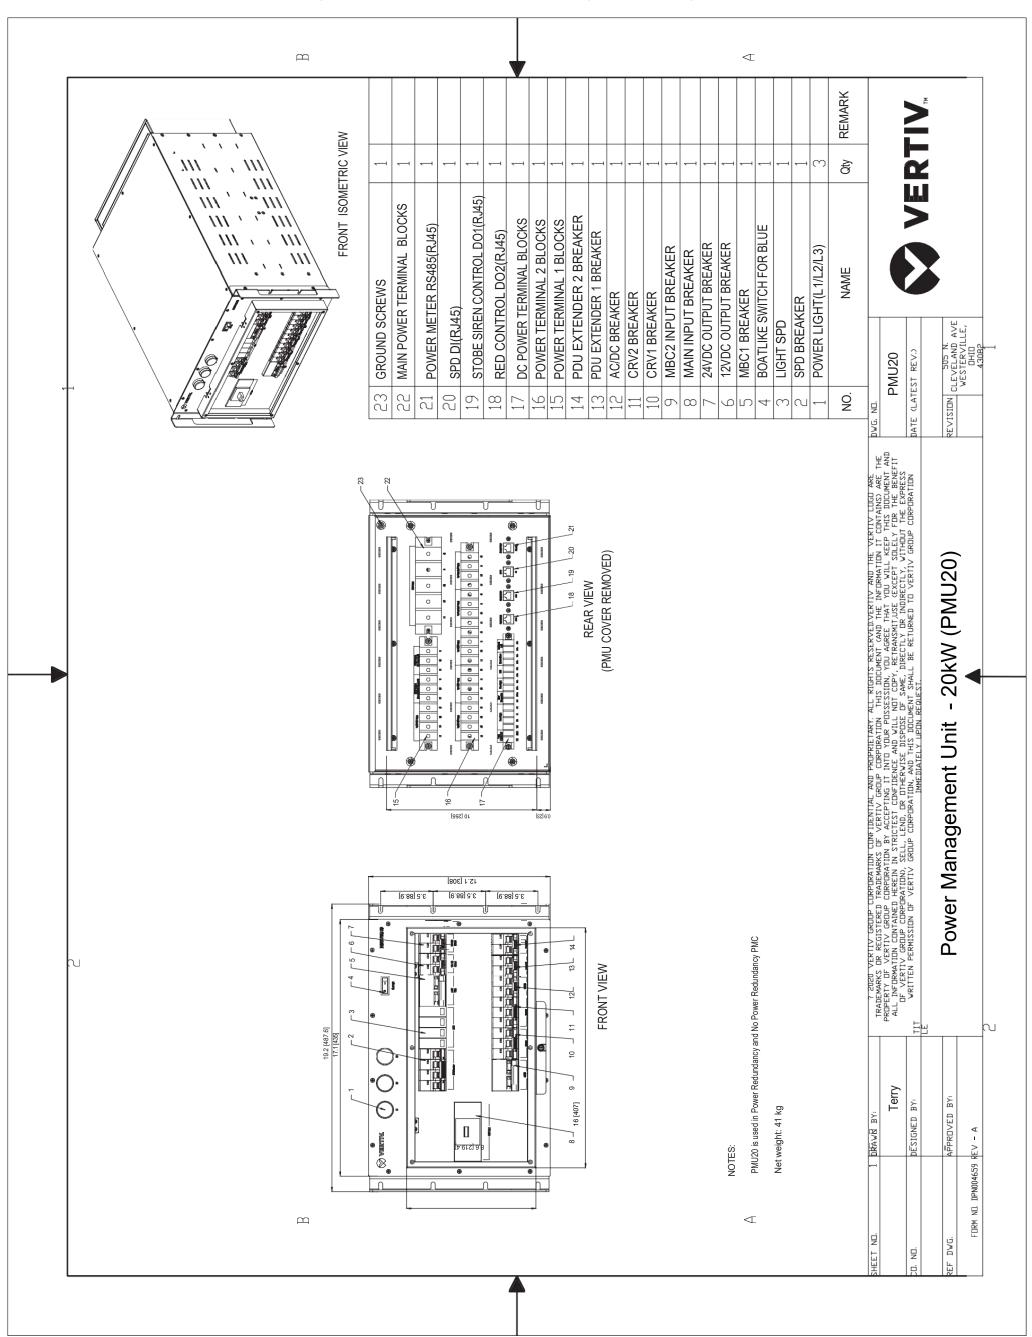




10. PMU20 Terminal Blocks Size

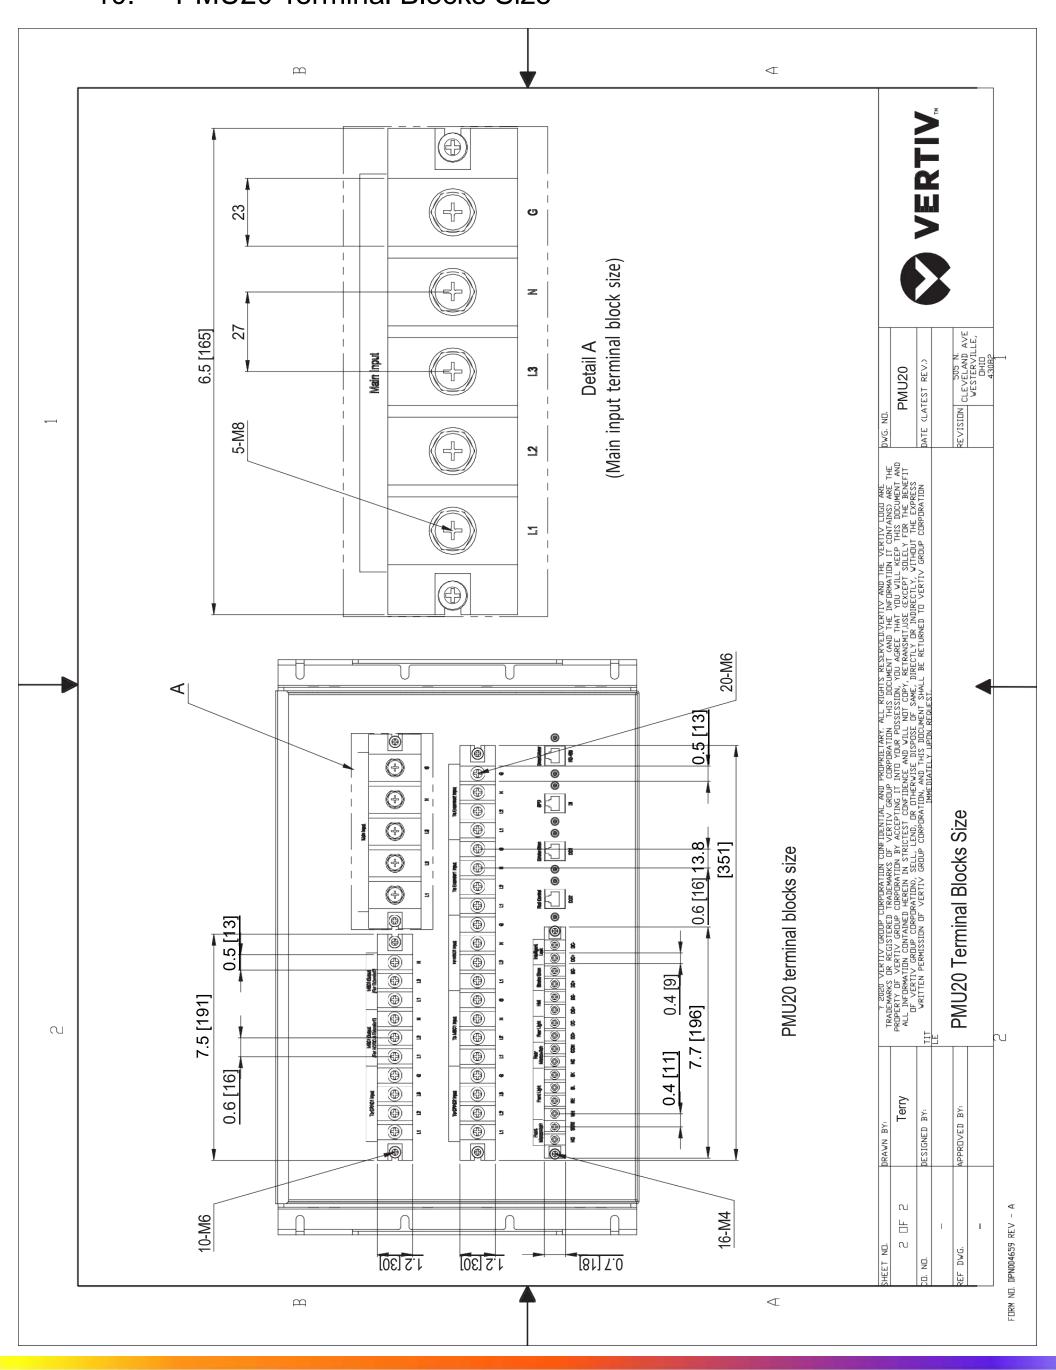




11. Vertiv MSR2 – CT300 Cable Tray 300mm

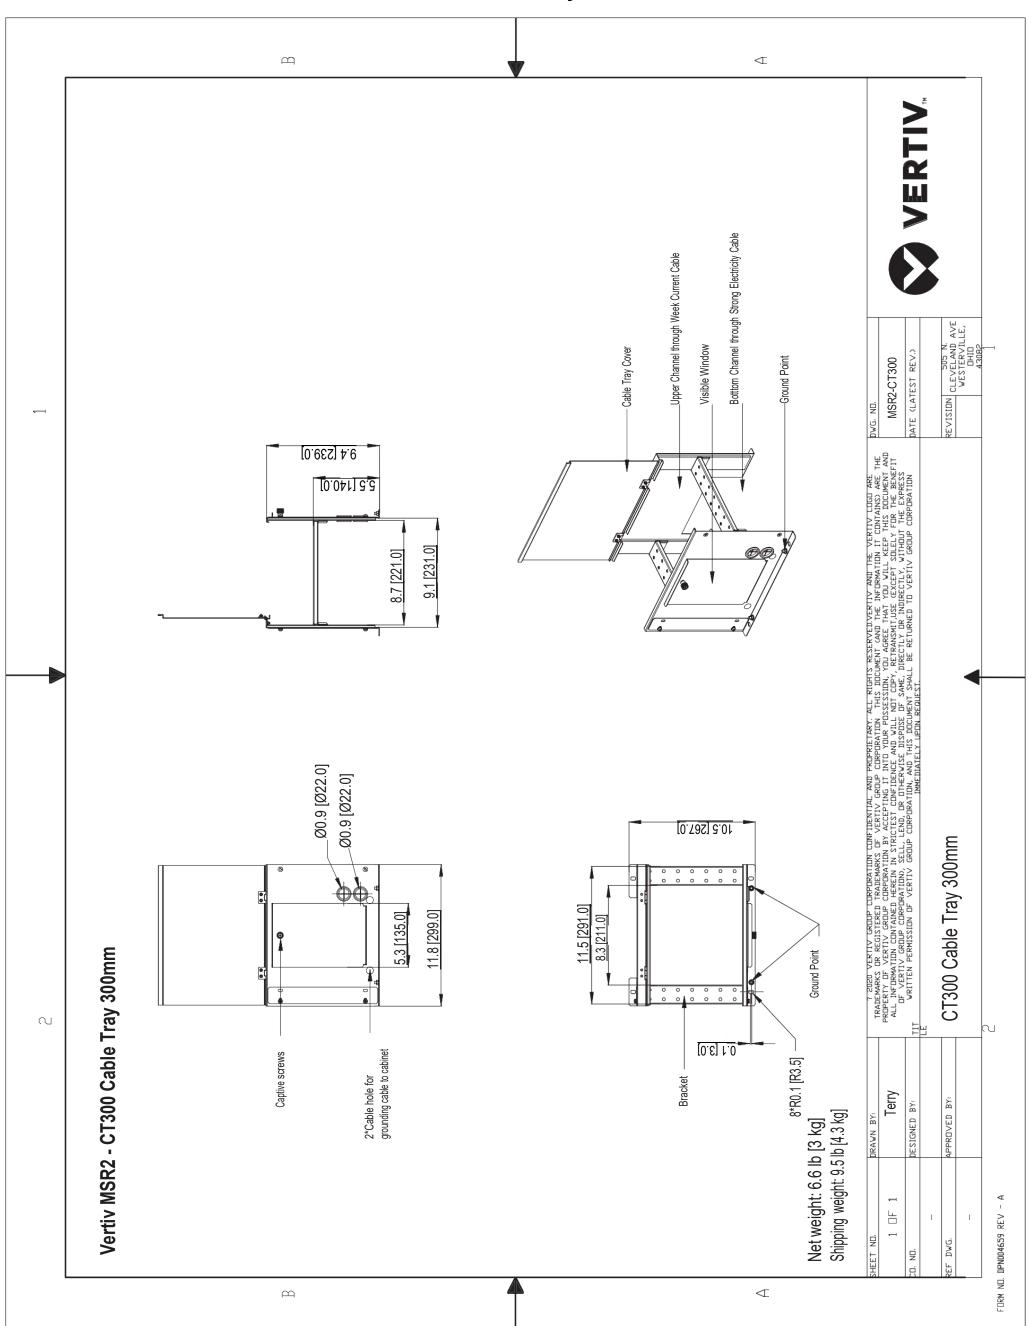



12. Vertiv MSR2 - CT600 Cable Tray 600mm

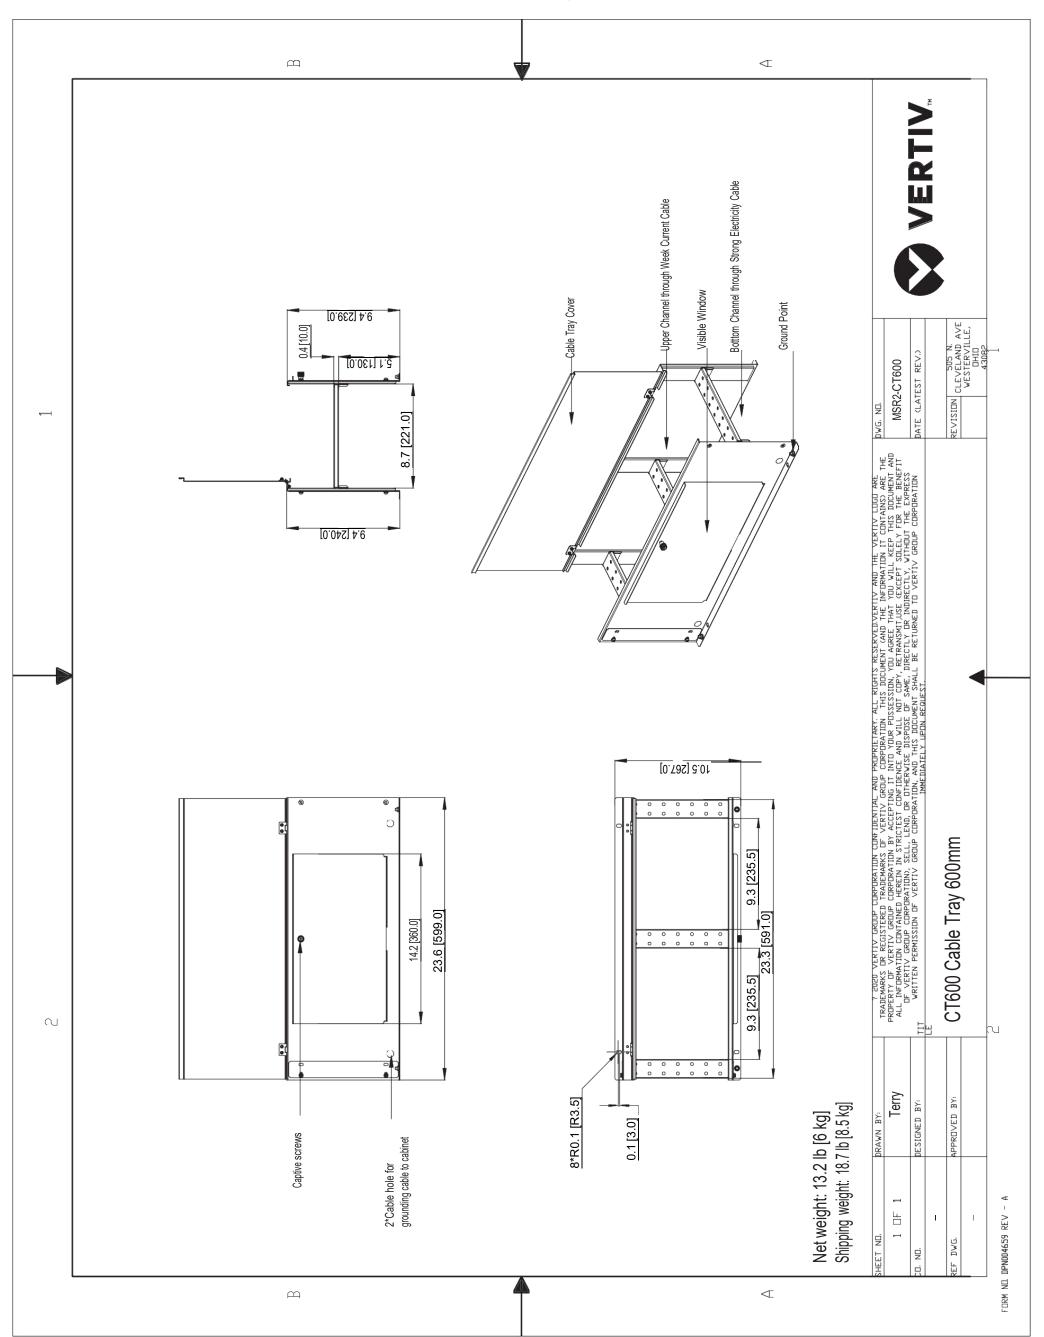



13. SCOPE OF WORK SMART ROW 2 – ASSEMBLY & START-UP SERVICE SUMMARY

Feature	Detail
On-site Service	One site trip within the 48 contiguous states to start-up the system. Visit to be scheduled by the customer between 8am-5pm, Monday-Friday (excluding national holidays).
Customer Support	Includes access to the Customer Resolution Center (1-800-543-2378) and the Vertiv Customer Services Network Online Internet portal for extent of product warranty.
Consolidation	The SmartRow2 includes numerous shippable units (typically pallets or boxes) that originate from multiple factories and suppliers. Vertiv consolidates these items into a single customer shipment and reduces the likelihood of shippable units being lost at the customer site. This benefits the customer by relieving the burden of keeping track of multiple partial shipments.
Inside Delivery	Vertiv Service will move the shippable units from the delivery truck to the Staging Area. Vertiv Services will unpackage the shippable units and remove/dispose of the packaging material so that it is ready for assembly. Vertiv will verify that all material on the sales order has been received.
Project Management	Included with Consolidation and Inside Delivery. Vertiv will assign a project manager for the project. The Project Manager will supervise the Consolidation and Inside Delivery Process and communicate hardware shipment schedules with the customer.
Assembly	SmartRow2 is assembled onsite by Vertiv factory-trained and authorized technicians equipped with Vertiv. Proprietary tools and software. Vertiv CEs and Vertiv Partners are the only approved OEM service providers for Vertiv products. These technicians are supervised by a Site Manager who also gathers site- specific requirements like safety and work procedures.
Factory Startup	Warranty inspection and startup validates the warranty and initializes the warranty coverage period.

SERVICE PERFORMED

Consolidated Shipment

Shippable units may be available at time of order or built-to-order with a lead time. Vertiv safely stores these items inwarehouse until the customer is ready to receive the SmartRow2 in a single shipment. Other limits may apply; see Assumption and Clarifications as applicable for more details.

Inside Delivery

Vertiv Services will deliver the shippable units from the delivery truck to the Staging Area. Vertiv Services will unpackage the shippable units and remove/dispose of the packaging material so that it is ready for assembly. Vertiv will verify that all material has been received.

Change order option:

There must be an appropriate loading dock with continuous, level floor from the dock to the staging area. If
the shippable units must be moved up/downstairs, the customer must provide a suitable elevator, or charges for
special rigging will be incurred. If the customer does not have an appropriate loading dock, nominal charges may/
may-not apply for a lift-truck delivery.

Project Management

Vertiv will assign a project manager and a site manager for the project.

The Project Manager will supervise the Consolidation and Inside Delivery Process and communicate schedules with the customer.

The Site Manager will supervise the assembly, startup, warranty inspection and turn over the SmartRow2 to the customer.

Site-Specific Requirements

All personnel will be available for up to two hours per week for Site Access, Safety Training, and other site-specific requirements.

Change Order Option:

• Vertiv can quote a price for additional man-hours if 2 hours per week is insufficient.

Assembly

There shall be continuous, level floor between the Staging Area and the Installation Location so that heavy items can be moved via casters/pallet jacks.

Change Order Option:

• If there is not continuous level floor, the customer must provide or pay for any necessary lift/rigging equipment.



Vertiv PMC, including RDU501 SmartRow2 Controller/Display

Vertiv will position, level, and bay together the PMC as described in the submittal documents. The customer is responsible for providing primary electrical power to the PMC.

Vertiv will program and configure the SmartRow2 RDU501 controller/display. This includes setting IP addresses so that the customer can monitor the system status remotely.

Change Order Option:

• Vertiv will quote IP addressing of equipment on the customer network, but this would be done by other personnel and scheduled separately. This is outside the scope of SmartRow2 assembly.

Vertiv IT Rack(s)

Vertiv will position, level, and bay together the Vertiv IT Racks as described in the submittal documents. Vertiv will not populate racks with customer IT gear, including blanking panels, servers, shelves, etc.

The customer must define addressing conventions (1,2,3,4, right-to-left or left-to-right) prior to start of work.

Cable Trays

Vertiv will install the SmartRow2 cable trays that are included with the SmartRow2 solution as described in the submittal documents.

Liebert® CRV's, Temperature Sensors, Modbus cables, and associated Plenums

Vertiv will position and level the Liebert® CRV and attach the associated plenums to provide cooling to the SmartRow2.

Vertiv will connect the necessary temperature sensors.

The customer is responsible for piping and primary power to the CRV along with connecting CANBus cable between the CRV and heat rejection. All specific requirements (such as piping traps and proper electrical grounding) for correct product installation are detailed in the product installation manual.

After the SmartRow2 is assembled and the Liebert® CRV is piped and powered by the customer in accordance with the product installation manual, Vertiv will perform a factory warranty inspection along with the rest of the SmartRow2.

Liebert® MC / CCD Condensers for Liebert® CRVs

The customer is responsible for installing the associated heat rejection. This includes primary power, CANBus communication wire, piping, refrigerant charging, and all other tasks in the Installation Manual. Any/all penetration points in the walls/ceilings/floors for any wiring or piping are also the customer's responsibility.

Rack PDUs

Vertiv will install and connect all rack PDUs (if applicable) including GXT5 power extensions (if applicable) as described in the submittal documents.

Liebert® GXT5 Single Phase UPS

Vertiv will install and connect all Liebert® GXT5 UPS's and connect power within the PMC cabinet and output to the PDUs as described in the submittal documents.

Additionally, Vertiv will install ancillary equipment such as Maintenance bypass and PD2-103 cabling and connectors if not already preinstalled.

After the SmartRow2 is assembled and Primary Power to the SmartRow2 is provided by the customer, Vertiv will perform factory startup of all GXT5 equipment along with the rest of the SmartRow2.

Switch

Vertiv will install and connect the switch within the PMC cabinet. as described in the submittal documents.

Firmware Updates

Vertiv will update firmware of any/all units to the current revision level. Shippable units are sourced globally, and firmware evolves as products may be in stock with prior revisions.

Wiring

Vertiv will run all necessary wiring for power and communication between cabinets as part of assembly. This includes setting IP/DIP switch settings for proper communication between the device and the PMC.

Accessories

The SmartRow2 is available with lights, door locks/sensors, temperature sensors that Vertiv will connect and install. Services associated with cameras are sold separately and out-of-scope for the SmartRow2 Assembly

RDU Monitor SmartRow2 mobile application.

Services associated with the RDU Monitor SmartRow2 mobile applications are quoted separately and out-of-scope for SmartRow2 assembly.

Fire Suppression Cabinet Assembly (if Applicable)

Vertiv will unpackage the Fire Suppression cabinet so that it is ready for installation.

Position level and bolt together the Fire Suppression cabinet to the adjoining cabinets.

Ensure all the wirings are connected, according to the information available in the submittal documents.

Install the piping in all the other cabinets in accordance with system drawings.



CUSTOMER RESPONSIBILITIES

In order to provide timely, accurate and thorough execution of the services described herein, Vertiv requests the following:

- Point of Contact: Provide an authorized point of contact(s), specific for the scope of work, for scheduling and coordination purposes.
- Scheduling: Make dates available for scheduling service. All visits must be requested 4 weeks in advance for assembly and 10 days for startup/warranty-inspection of need by contacting the Vertiv Project Manager. Site must be available for 5 consecutive business days. Customer may choose to pay for premium time if weekend work is necessary.
- Site Access: Prior to time of scheduled work, provide site access including any customer required escort, security clearance, safety training and badging for Vertiv personnel.
- Equipment Access: Convenient access to the equipment covered by the Scope of Work. Prior to scheduled time of work, notify Vertiv personnel of any special requirements for equipment access including lifts, ladders, etc.
- Shutdown: Service may require shutdown of load to ensure electrical connection integrity.
- Notification: If for any reason the work cannot be performed during scheduled time, notify Vertiv personnel 24-hours prior to scheduled event.
- Provide Method of Procedure (MOP) requirements/ templates, and required review period(s)

ASSUMPTIONS AND CLARIFICATIONS

- Vertiv will cover one month of storage costs as part of the consolidation service. If the original ship date is changed due to non-Vertiv delays, the customer is liable for any costs associated with the extended storage time.
- Vertiv start-up validates product warranty.
- Defects or damage resulting from installation not performed by Vertiv are not covered.
- Parts and Labor coverage is in accordance with Product Warranty. If a modified warranty is purchased, terms default to that specific package.
- Any customer site visit is limited to eight (8) hours per visit. Any time beyond forty (40) hours/wk or eight (8) hrs/day or additional Startup visits will be billed separately.
- Expenses incurred due to delays that are beyond the control of Vertiv may be billed at cost.
- Startup visit must be scheduled confirmation of proper installation (if Vertiv not involved with installation).
- This pricing excludes any load bank testing. This can also be quoted separately if required.
- Pricing excludes activities associated with 3rd party commissioning.
- Pricing excludes any type of circuit breaker NEMA testing. This can also be quoted separately if required.
- Customer/Installing contractor is responsible for providing elevated access as necessary.
- Any additional requests beyond the scope of this document will be billed separately by Vertiv.
- Vertiv will not perform physical changes to the site building (such as drilling holes, etc.)

TERMS AND CONDITIONS

Subject to all Terms & Conditions as noted in the Vertiv Terms & Conditions or the terms of a Master Agreement between the parties, if any, shall apply.



SCOPE OF WORK

SMART ROW 2 – FIRE SUPPRESSION START-UP & OPTIONAL SERVICES

SERVICE SUMMARY

Feature	Detail
On-site Service	One site trip within the 48 contiguous states to start-up the system. Visit to be scheduled by the customer between 8am-5pm, Monday-Friday (excluding national holidays).
Service Professional	Performed by Vertiv factory-trained and authorized technician equipped with Vertiv Proprietary tools and software. Vertiv CEs and Vertiv Partners are the only approved OEM service providers for Vertiv products.
Permitting	Permits are the responsibility of the customer to see if one is required. Additional fees may apply and can vary based on the customer's location. (see Assumptions and Clarifications).
Optional services	Optional system integrity services can be requested by the customer as part of the startup and installation.

SERVICE PERFORMED

Fire Suppression Start-up:

- 1. Verify that 120V AC circuit has been ran to the fire suppression panel.
- 2. Verify all the items on the Fire Suppression readiness punch list have been completed and acknowledged.
- 3. Functionality test all input and output circuits for proper operation.
- 4. Complete the warranty inspection of the system.
- 5. Provide training to the customer on the operation of the Fire Suppression system.

Door Fan Test (if applicable):

- Conduct a door fan test with the standardized Fan test system.
- 2. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan.
- 3. Determine the total size of the air leaks (if any).
- 4. Provide the customer with the pressure test report.

Discharge Test (if applicable):

- 1. Replace the system cylinder with the Proinert test cylinder provided by the manufacturer.
- 2. Conduct a discharge test on the system.
- 3. Ensure that the oxygen level falls below 15% and maintains that level for a minimum of 10 minutes.
- 4. Place the system cylinder back into place and arm the system.
- 5. Provide the customer with a discharge test report.

CUSTOMER RESPONSIBILITIES

In order to provide timely, accurate and thorough execution of the services described herein, Vertiv requests the following:

- Point of Contact: Provide an authorized point of contact(s), specific for the scope of work, for scheduling and coordination purposes.
- Scheduling: Make dates available for scheduling service. All visits must be requested 10 business days in advance of need by contacting the Vertiv Customer Resolution Center at 1-800-543-2378.
- Site Access: Prior to time of scheduled work, provide site access including any customer required escort, security clearance, safety training and badging for Vertiv service personnel.
- Equipment Access: Convenient access to the equipment covered by the Scope of Work. Prior to scheduled time of work, notify Vertiv service personnel of any special requirements for equipment access including lifts, ladders, etc.
- Shutdown: Service may require shutdown of load to ensure electrical connection integrity.
- Notification: If for any reason the work cannot be performed during scheduled time, notify Vertiv service personnel 24hours prior to scheduled event.



ASSUMPTIONS AND CLARIFICATIONS

- Assembly: The assembly of the Fire Suppression cabinet is included in the SmartRow2.
- Punch list: This document confirms system readiness and must be completed before startup. It is included in the submittal package.
- Permitting: The customer is responsible for any permits (if required), as it falls outside the original scope. While the process can be facilitated, the customer will be responsible for all permitting costs, including any optional services listed above.
- Maintenance: Per NFPA 2001, the FIKE Proinert IG-55 SHP Pro suppression system protecting the SmartRow2 shall
 be inspected on a semi-annual basis. These inspections are not only important in ensuring the included clean agent
 system is functionally operational but are necessary to qualify for any manufacturer warranties. Per the manufacturer's
 warranty guidelines, the equipment must be maintained on a semi-annual frequency by an authorized FIKE distributor
 commencing with the date of Startup.
- Optional Integrity testing: Manufacturer intends to provide both the integrity test services (Door fan test and Discharge test) at the customer's facility either directly or through a local Fike distributor. This pricing includes the necessary labor, equipment, and materials to complete this testing.
- Manufacturer does not guarantee a passing test after the system has been handed over to the customer and is not responsible for the patching and sealing of the enclosure if the cable and CRV penetrations have not been sealed.

TERMS AND CONDITIONS

Subject to all Terms & Conditions as noted in the Vertiv Terms & Conditions or the terms of a Master Agreement between the parties, if any, shall apply.





SmartRow 2 Scope of Work Checklist

Customer Name:
Project Name:
Project Number:
This document is to serve as a checklist to help identify and budget the various work activities involved with assembling and installing a SmartRow 2. It is the customers responsibility to ensure all tasks are assigned to partners which will result in a successful SmartRow 2 project.
Contact Vertiv for available local support resources to provide technical guidance as needed. Call 800 543-2378
The X indicates the responsible party for that task. Multiple X 's indicate shared responsibility.
This document is provided as a reference document and does not replace any product manuals or supporting documentation. Always read all product documentation before performing any work.
Customer (Name) includes responsibility for Mechanical, Electrical, and/or General Contractors as needed :
Project Management:
Assembly Team Lead:
Consolidator:
Vertiv Warranty Inspection Tech:

Vertiv Sales Rep (LVO):

	Customer	Local Vertiv Sales Rep	Project Management	Assembly Team	Consolidator / Inside Delivery	Flagship/FIKE Rep	Vertiv Warranty Inspection Tech	Tasks
1						l		Pre-Sale Activities
1,01	X	X						Perform / arrange Site Visit to qualify deployment. Add any incremental site-specific Tasks in Section 6 of this checklist.
1,02 1,03		X						Assess whether the building has enough power available to support the SmartRow 2 and heat rejection. Advise if a floor loading analysis should be conducted.
1,04		X						Ensure the customer understands and adheres to the minimum and maximum SmartRow 2 heat load and rack density limits.
1,05	Х	Х						Assess if a crane will be required to locate the heat rejection on a roof and plan accordingly.
1,06	X	x						If a freight elevator will be used, confirm adequate lifting capacity and dimensional clearances (PMC cabinet is typically the heaviest piece of equipment at 1998mm height, 1400mm depth, 600mm width and up to 1,600 lb weight.)
2								Post Sale, Equipment Pre-Delivery Activities
2,01		х						Ensure every task in this Trade SOW Guide is assigned to at least one responsible party (Marked by X). This guide is specific to the SmartRow 2.
2,02		X						Send a completed copy of this document to all involved parties.
2,03		X	X					Ensure all trades receive a current and accurate manual and set of submittals.
2,04		X						Acknowledge all tasks listed in the Trade SOW Checklist are completed by all the resposibile parties.
2,05	X	X						Verify whether permits are necessary for the installation of the Fire Suppression System.
2,06	X	X	X					Asses whether the customer requires any onsite system integrity tests as part of the Fire suppression System Startup activity.
2,07	Х	Х						Complete SmartRow 2 Delivery Service (Inside Delivery) checklist and return to factory within 10 days of PO receipt (Document MBFM 7160-10 in submittal packet).
2,08	x	x						Ensure indoor space meets all SmartRow 2 requirements (see SmartRow 2 manual); identify any issues and resolve: [1] Floor surface must be level and continuous (expansion joints sealed, raised floor tile gaps sealed, no floor drains, etc). [2] Mezzanine/roof can support outdoor heat rejection (if applicable) [3] Adequate service, egress and electrical clearances (see submittal packet) [4] Room containing SmartRow 2 maintained year-round within 0°C – 40°C. [5] The room and floor must be clean and free of debris. [6] Ensure there is at least 24 inches clearance above the rack top plates [7] Ensure no part of the SmartRow 2 will be closer than 18 inches to a sprinkler head (per NFPA 13)
2,09	x	x						Make sure condenser is within 300 equivalent feet (see cooling equipment manuals for calculation guidance). Outdoor Condenser Installation. Follow Installer/User Guide. Condenser is bolted, mounted and leveled Provide and install (2) low voltage twisted pair wires between each indoor cooling unit and outdoor heat rejection (condenser / drycooler) for CANbus communication and dry contact closure. This includes qty (3) vacuum pulls of the refrigerant lines (oil must be changed in the vacuum pump between each pull, and readings should be 250 microns or less. Provide picture with date/time to confirm) Refrigerant lines charged with freon The outdoor piping are wrapped in aluminum and braced
2,10	X	X				x	X	Confirm that the nearest drain for condensate is within the cooling unit's pump head limitations (see cooling equipment manuals).
2,11	X	X						Provide and install utility over-current protection and circuit for each outdoor condenser/drycooler when applicable.
2,12	X	X						Provide and install utility over-current protection and circuit for main input row connection in PMC.
2,13	X	X	X					Schedule delivery. If new construction, installation is recommended before office furniture is installed but after building construction is completed. Permanent, continuous power must be available.
2,14		X	X					Schedule Vertiv Cooling System Warranty Inspection.
2,15		X	X					Schedule Vertiv UPS System Warranty Inspection.

3								SmartRow 2 Assembly
3,01					X			Receive shipment(s).
3,02					X			Bring equipment from truck into room, unpackage and remove debris (included with SmartRow 2 Delivery Service).
3,03					X			Review equipment for shipping damage (recommended the same party who receives the equipment).
3,04				X				Assemble, gasket and level PMC unit per submittal package.
3,05				X				Assemble, gasket and level indoor cooling unit(s) per submittal package.
3,06				X				Assemble, gasket and level racks per submittal package.
3,07				X				Assemble and attach rubber cable grommets.
3,08				X				Connect door switch wire and rack lighting wire harnesses.
3,09				X				Install cable troughs on top of equipment.
3,10				X				Neatly connect and route CANbus communication cables and address rack temperature 2T-sensors (set dip switches).
3,11				X				Neatly route the rack temperature 2T temperature probes into position in front of EIA rails.
3,12				X				Neatly route and connect all Ethernet cables between SmartRow 2 Network vNSA switch, and all UPS and cooling unit Unity monitoring cards, primary rack-PDU RPC2 monitoring cards, and cooling unit teamwork connections.
3,13				Х				Neatly route and connect all rack-PDU array Ethernet cables.
4								SmartRow 2 Installation including the Fire Suppression System
4,01				Х				Install PMC to MBC (20KVA) or PMC to UPS (10KVA) interconnect cabling (cables provided with SmartRow 2)
4,02				х				Install UPS to MBC (20KVA) interconnect cabling (cables provided with SmartRow 2) or Mount POD (Included in SmartRow 2) on UPS (10KVA).
4,03	П		П	П	П	П	Х	Connect low voltage wires to indoor cooling unit and outdoor heat rejection.
4,04								Provide and connect condensate drain line to each indoor cooling unit.
4,05								Connect utility high voltage building feed to main input in PMC.
4,06			х					Ensure the handover document is completed and acknowledged by all responsible parties if startup activities are scheduled at different times.
5								SmartRow 2 Startup
								·
5.01				Х	П	П	П	Ensure all rubber cable grommets are installed
5,01 5,02				X			X	Ensure all rubber cable grommets are installed Cooling system Warranty Inspection.
5,02				X			X X	Cooling system Warranty Inspection.
5,02 5,03				X			X	
5,02 5,03 5,04				x			X	Cooling system Warranty Inspection. UPS system Warranty Inspection.
5,02 5,03 5,04 5,05							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller
5,02 5,03 5,04							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs.
5,02 5,03 5,04 5,05 5,06							x x x	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow
5,02 5,03 5,04 5,05 5,06							x x x	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching.
5,02 5,03 5,04 5,05 5,06 5,07							x x x	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed.
5,02 5,03 5,04 5,05 5,06 5,07 5,08							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,02 6,03 6,04	x 						X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,02 6,03 6,04 6,05							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,02 6,03 6,04 6,05 6,06							X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,02 6,03 6,04 6,05 6,06 6,07	x x x						X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system.
5,02 5,03 5,04 5,05 5,06 5,07 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08	x x x						X X X 	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended.
5,02 5,03 5,04 5,05 5,06 5,07 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09	x x x						X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system.
5,02 5,03 5,04 5,05 5,06 5,07 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09	x x x						X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request)
5,02 5,03 5,04 5,05 5,06 5,07 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09 7	x x x	x x x					X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system.
5,02 5,03 5,04 5,05 5,06 5,07 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09		x x x					X X X 	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system.
5,02 5,03 5,04 5,05 5,06 5,07 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09 7		x x x					X X X 	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,09 7	x x x x x x x x x x x x x x x x x x x	x x x					X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan. Determine the total size of the air leaks.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,03 6,04 6,05 6,06 6,05 6,06 6,07 6,08 6,09 7 7,01 7,01 7,02 7,03 7,04 7,05 7,06	x x x x x x x x x x x x x x x x x x x	x x x					X X X	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan. Determine the total size of the air leaks. Provide the customer with the pressure test report. Replace the system cylinder with the Proinert test cylinder provided by the manufacturer. Conduct a discharge test on the system.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6,01 6,02 6,03 6,04 6,05 6,06 6,07 6,08 6,07 7,01 7,01 7,02 7,03 7,04 7,05 7,06 7,07	x x x x	x x x					X X X 	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan. Determine the total size of the air leaks. Provide the customer with the pressure test report. Replace the system cylinder with the Proinert test cylinder provided by the manufacturer. Conduct a discharge test on the system. Ensure that the oxygen level falls below 15% and maintains that level for a minimum of 10 minutes.
5,02 5,03 5,04 5,05 5,06 5,07 5,08 6 6,01 6,03 6,04 6,05 6,06 6,05 6,06 6,07 6,08 6,09 7 7,01 7,01 7,02 7,03 7,04 7,05 7,06	x x x x x x x x x x x x x x x x x x x	x x x					X X X 	Cooling system Warranty Inspection. UPS system Warranty Inspection. Configure RDU501 Controller Close breakers on rack-PDUs. Perform final SmartRow 2 functional test (Door switches, backup fans, HMI). Clean entire SmartRow 2, inside and outside. When cleaning see-through Plexiglas doors follow instructions in manual to avoid scratching. Ensure the SmartRow 2 Startup Form has been completed. Fire Suppression System Start up Ensure all the required parties are present on site for the installation of the Fire Suppression System. Position, level and bolt together the Fire suppression cabinet to the rest of the row. Ensure all the wiring is connected, according to the information available in the submittals. Install the piping in all the other cabinets. Ensure the Punch list items are completed and signed by the responsible parties. Review the closeout document with the information about the pre-test conducted at Flagship. Validate the warranty of the Fire supression system. Verify that all components are functioning as intended. Provide training to the customer on the system. Optional - Fire Suppression System Integrity Test (upon customer request) Conduct a door fan test with the standardized Fan test system. Measure the pressure retention rate and calculate the amount of air flowing through the Door fan. Determine the total size of the air leaks. Provide the customer with the pressure test report. Replace the system cylinder with the Proinert test cylinder provided by the manufacturer. Conduct a discharge test on the system.