



CoolPhase Ceiling

System Design Catalog

Cooling System - 1, 2, 3, 4, 5, and 8 Ton (12, 24, 36, 48, 60, and 96 kW)
Capacity, Ceiling Mounted, 60 Hz

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages result from use of this information or for any errors or omissions.

Refer to local regulations and building codes relating to the application, installation, and operation of this product. The consulting engineer, installer, and/or end user is responsible for compliance with all applicable laws and regulations relation to the application, installation, and operation of this product.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use, or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

Technical Support Site

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit <https://www.vertiv.com/en-us/support/> for additional assistance.

TABLE OF CONTENTS

1 Nomenclature and Components	3
1.1 Vertiv™ CoolPhase Ceiling Model Nomenclature and Digit Description	3
1.2 Vertiv™ CoolPhase Condensing Unit Model Number Nomenclature	4
1.3 Component Location	5
1.3.1 Vertiv™ CoolPhase Ceiling Unit Components	5
1.3.2 Components of the Vertiv™ CoolPhase Condensing Unit	5
1.4 Product Overview	6
1.4.1 Vertiv™ CoolPhase Ceiling Cooling Configurations and Overview	6
1.4.2 Vertiv™ CoolPhase Condensing Unit Cooling Configurations and Overview	6
1.4.3 Standard and Optional Features	6
1.4.4 System Controls	7
2 System Data	9
2.1 Air Cooled System Performance and Physical Data	9
2.1.1 Operating Limits for Air Cooled Systems	14
2.1.2 Sound Data for Air Cooled Systems	15
2.2 Operating Conditions	22
2.2.1 Cooling, Humidification, and Dehumidification	22
2.2.2 Heating	22
3 Dimensions and Weights	23
3.1 Unit Weights	23
3.2 Units Planning Dimensions	24
4 Power Requirements	25
4.1 Air Cooled Systems Electrical Data	27
4.2 Electrical Field Connections & Terminal Blocks	30
5 Piping Connections	33
5.1 Refrigerant Line Sizes and Equivalent Lengths	35
6 Optional Accessories	37
6.1 Accessories for Vertiv™ CoolPhase Ceiling Units	37
6.1.1 Filter Box with Duct Flanges	37
6.1.2 Condensate Pump Kit	38
6.1.3 Duct Flanges	39
6.1.4 Downflow Grille	41
6.1.5 Air Distribution Plenum	42
6.2 Leak Detection Accessories	43
Appendices	45
Appendix A: Technical Support and Contacts	45
Appendix B: Guide Specifications	46

Appendix C: Submittal Drawings	47
--------------------------------------	----

1 Nomenclature and Components

This section describes the model number for Vertiv™ CoolPhase Ceiling units and components.

1.1 Vertiv™ CoolPhase Ceiling Model Nomenclature and Digit Description

The tables below describe each digit of the 25-digit configuration number. The 14-digit model/number consists of the first 10 digits and last 4 digits of the configuration number. Table 2.2 below describes each digit of the model number.

Table 1.1 Model number nomenclature

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
M	M	I	1	2	E	0	0	R	0	0	N	0	A	0	N	0	0

Table 1.2 Digit and description nomenclature

Digit	Description	
Digits 1 and 2	Unit Family	MM = Vertiv™ CoolPhase Ceiling
Digits 3	Inverter	I
Digits 4 and 5	Nominal Cooling Capacity (Sizes)	12 - 1 Ton (12 kBtuh) 24 - 2 Tons (24 kBtuh) 36 - 3 Tons (36 kBtuh) 48 - 4 Ton (48 kBtuh) 60 - 5 Ton (60 kBtuh) 96 - 8 Ton (96 kBtuh)
Digit 6	Unit type	E - Air Cooled K - Air Cooled w/Free Cooling
Digit 7	Free	
Digit 8	Supply Power	0 = 208/230 V, 1-Ph, 50/60 Hz 1 = 208/230 V, 3-Ph, 60 Hz 4 = 460 V, 3-Ph, 60 Hz [MA1]
Digit 9	Humidifier	R = Remote Contact J = Steam Humidifier
Digit 10	Reheat	0 = No reheat S = Modulating Reheat
Digit 11	Disconnect (High-voltage options)	0 = Non-locking 1 = Locking, 5k SCCR 2 = Locking, 65k SCCR
Digit 12	Sensors	N = Base Package (with Filter Clog, High Temp Sensor, and Unity Card)

Table 1.2 Digit and description nomenclature (continued)

Digit	Description	
		2 = Base Package and Smoke Sensor
Digit 13	Free	
Digit 14	Version	A - Standard S - ETO
Digits 15 to 18	Factory Configuration Number	0000 = Standard 4 digits other than 0 = Engineering To Order designated number

1.2 Vertiv™ CoolPhase Condensing Unit Model Number Nomenclature

Table 1.3 Model number nomenclature

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
C	U	D	0	3	0	-	E	0	0	0	A	0	0	0

Table 1.4 Digit and description nomenclature

Digit	Description	
Digits 1 and 2	Unit Family	CU = Vertiv™ CoolPhase Condensing Unit
Digits 3	Version	D = Outdoor Air-Cooled Standard Ambient L = Outdoor Air-Cooled Low Ambient
Digits 4 and 5	Sizes	03 = 3.5 kW 07 = 7 kW 11 = 11 kW 15 = 15 kW 21 = 21 kW 28 = 28 kW
Digit 6	Voltage	0 = 208/230 V, 1-Ph, 50/60 Hz 1 = 208/230 V, 3-Ph, 60 Hz 4 = 460 V, 3-Ph, 60 Hz
Digit 7	Protection	0- No coating E - E-coating (Aggressive environments)
Digit 8	Power Supply feature	0 = Single Power supply configuration
Digit 9	Free	

Table 1.4 Digit and description nomenclature (continued)

Digit	Description	
Digit 10	Free	
Digit 11	Revision	A - Revision A
Digits 12 to 15	Factory Configuration Number	0000 = Standard 4 digits other than 0= Engineering To Order designated number

1.3 Component Location

1.3.1 Vertiv™ CoolPhase Ceiling Unit Components

Unit component locations are described in the submittal documents included in the Submittal Drawings. The following table lists the relevant documents by number and title.

Table 1.5 CoolPhase Ceiling Component Location Drawings

Document Number	Title
20000077	Component Location, Evaporator Unit, 1 Ton
20000078	Component Location, Evaporator Unit, 2 & 3 Ton
20000079	Component Location, Evaporator Unit, 4 & 5 Ton
20000080	Component Location, Evaporator Unit, 8 Ton

1.3.2 Components of the Vertiv™CoolPhase Condensing Unit

The unit component locations are described in the submittal documents included in Appendix C. The following table lists the relevant documents by number and title.

Table 1.6 CoolPhase Ceiling Component Location Drawings

Document Number	Title
20000915	CoolPhase Condensing Unit Component Location 3.5, 7 & 11 kW
20000710	CoolPhase Condensing Unit Component Location 15 kW
20000128	CoolPhase Condensing Unit Component Location 21 & 28 kW

1.4 Product Overview

1.4.1 Vertiv™ CoolPhase Ceiling Cooling Configurations and Overview

The Vertiv™ CoolPhase Ceiling is a ceiling mounted, fully featured cooling system for Small IT rooms that occupy zero floor space. Other of its features are:

It comes in 6 different capacities, 1, 2, 3, 4, 5 and 8 ton. The CoolPhase Ceiling offers multiple heat rejection and power supply options.

- It comes in 6 different capacities: 1, 2, 3, 4, 5, and 8 Tons.
- Also, it offers multiple heat-rejection and power-supply options.
- Standard features include:
 - EC fan, inverter compressor,
 - Microchannel HEX to minimize refrigerant charge
 - Wall-mounted display
 - Remote monitoring via SNMP, HTTP, and Modbus.
 - More than 10,000 possible configurations
 - Digital scroll compressors
 - Humidity control
 - Three reheat types
 - Free-cooling option to save operating costs
 - Remote monitoring.

1.4.2 Vertiv™ CoolPhase Condensing Unit Cooling Configurations and Overview

The Vertiv™ CoolPhase Condensing Unit is an air-cooled condenser with a compressor that rejects the heat removed from the IT space into ambient air and uses low-GWP R-32 refrigerant. This unit is always used with an evaporator unit and is controlled and operated from it.

CoolPhase Condensing Units are classified by kilowatts. Some of these units are compatible for plenum installation: 3.5, 7, and 11 kW. The non-plenum-compatible units are the larger-capacity units: 15, 21, and 28 kW.

NOTE: Overcurrent and overvoltage protection shall be provided in accordance with applicable local and national electrical codes.

1.4.3 Standard and Optional Features

The Vertiv™ CoolPhase Ceiling Evaporator unit and Vertiv™ CoolPhase Ceiling Condensing unit standard and optional features are described in the submittal documents included in the.

The following table lists the relevant documents by number and title.

Table 1.7 Standard and optional features submittals

Document Number	Title
Vertiv™ CoolPhase Ceiling Evaporator unit	
20000200	Standard and Optional Features Evaporator Unit, 1-8 Ton
Vertiv™ CoolPhase Ceiling Condensing Unit	
20000162	Standard and Optional Features Condenser Unit 3.5, 7, 11 kW
20000574	Standard and Optional Features Condenser Unit 15, 21 & 28 kW

1.4.4 System Controls

The Vertiv™ CoolPhase Ceiling and the Vertiv™ CoolPhase Condensing unit are controlled by the Vertiv™ iCOM™ Control System.

The LCD is field-wired to the iCOM™ Controller. The length of the factory-provided display cable is 50 ft (15 m).

For detailed information about two units networked and the general arrangement, dimensional data & field connections of the wall-mounted display, refer to the following submittal drawings.

Table 1.8 Controls submittal drawings

Document Number	Title
20000914	HMI Display Field Connection
20000913	Vertiv™ iCOM™ Unit-to-Unit Network Connection

This page intentionally left blank

2 System Data

2.1 Air Cooled System Performance and Physical Data

Table 2.1 Vertiv™ CoolPhase Ceiling technical specifications

Models		1 Ton	2 Ton	3 Ton	4 Ton	5 Ton	8 Ton
		MMI12	MMI24	MMI36	MMI48	MMI60	MMI96
Region		NAM					
Certification marks		cCSAus					
Piping Connections		Flare Connection					
Condenser Fan		EC Motor					
External Static Pressure		0.20 inH2O (50 Pa)					
Sensible Cooling Capacity (kW) @26.7 °C (80 °F) RAT, 38% Rh, 35 °C (95 °F) outdoor temp		1 (3.5)	2 (7)	3 (11)	4 (15)	6 (21)	8 (28)
Power Supply Evaporator		208/230 V, 1-Ph, 50/60 Hz		208/230 V, 1-Ph, 50/60 Hz 208/230 V, 3-Ph, 60 Hz 460 V, 3-Ph, 60 Hz	208/230 V, 3-Ph, 60 Hz 460 V, 3-Ph, 60 Hz		
Controls		Vertiv™ iCOM™					
Refrigerant (Field supplied/field charged. Not factory charged)		R-32					
Max Equivalent Length of Pipe between Indoor Unit and Condensing Unit		196.85 ft (60 m)			295.27 ft (90 m)		
Height between Indoor and Condensing Unit	Condensing unit placed higher than indoor unit	98.43 ft (30 m)			60 ft (18.3 m)	98.43 ft (30 m)	
	Condensing unit placed lower than indoor unit	-26.25 ft (-8 m)			-15 ft (4.6 m)	-26.25 ft (-8 m)	

1. Certified in accordance with the AHRI Datacom Cooling Certification Program at AHRI Standard 1360 (I-P) Standard Rating Conditions. Certified units may be found in the AHRI Directory at www.ahridirectory.org.
2. Some options or combinations of options may result in reduced air flow. Consult factory for recommendations.
3. Data rated at 100% fan speed and with Standard Feature filter.
4. Net capacity data has fan motor heat factored in for all ratings.
5. Performance data generated in GRS (Global Rating System).

Table 2.2 Vertiv™ CoolPhase Condensing Unit technical specifications for small units (3.5, 7 and 11 kW)

Models		CUD030 CUL030	CUD070 CUL070	CUD111 CUL111	CUD114 CUL114
Region		Global			NAM
Certification marks		cETLus, CE & UKCA			cETLus
Piping Connections		Flare Connection			
Operating Temperature range		Low ambient Condensing Unit: -31 °F (-35 °C) ~118 °F (48 °C) Standard Ambient Condensing Unit with Wind Baffle Accessory: -4 °F (-20 °C) ~118 °F (48 °C) Standard Ambient Condensing Unit without Wind Baffle Accessory: 23 °F (-5 °C) ~118 °F (48 °C)			
Compressor		Variable speed rotary compressor			
Condenser Fan		EC Motor			
External Static Pressure		0.20 inH ₂ O (50 Pa)	0.12 inH ₂ O (30 Pa)		
Noise Data		68 dB		71 dB	
Noise Data of night mode		58 dB		56 dB	
Power Supply		208/230 V, 1-Ph, 50/60 Hz (-10%/+10%)		208/230 V, 3-Ph, 50/60 Hz (-10%/+10%)	460 V, 3-Ph, 60 Hz (±10%)
Refrigerant		R-32			
Max Equivalent Length of Pipe between Indoor Unit and Condensing Unit		196.85 ft (60 m)			
Height between Indoor and Condensing Unit	Condensing unit placed higher than indoor unit	98.4 ft (30 m)			
	Condensing unit placed lower than indoor unit	26.3 ft (8 m)			

NOTE: When the ambient temperature is below -4 °F (-20 °C) up to -31 °F (-35 °C), the low-ambient version must be used. Low Ambient versions of the units do not require a Wind Baffle accessory.

NOTE: The Low Ambient version of the Condensing Unit cannot be installed in plenum areas; only the standard version is plenum rated.

Table 2.3 CoolPhase Condensing Unit technical specifications for 15 kW units

Models		CUD151 / CUL151	CUD154 / CUL154
Certification marks		cCSAus (UL 60335-2-40 and CSA C22.2 No. 60335-2-40)	
Piping Connections		Flare Connection	
Operating Temperature range		Low ambient condensing unit: -31 °F (-35 °C) ~118 °F (48 °C) Standard ambient condensing Unit with wind baffle: -4 °F (-20 °C) ~118 °F (48 °C) Standard ambient condensing unit without wind baffle 23 °F (-5 °C) ~118 °F (48 °C)	

Table 2.3 CoolPhase Condensing Unit technical specifications for 15 kW units (continued)

Models		CUD151 / CUL151	CUD154 / CUL154
Compressor		Variable speed Inverter-driven	
Condenser Fan		EC Motor	
Noise Data		72 dB	
Noise Data of night mode		64 dB	
Power Supply		208/230 V, 3-Ph, 50/60 Hz (±10%)	460 V, 3-Ph, 50/60 Hz (±10%)
Refrigerant		R-32	
Max Equivalent Length of Pipe between Indoor Unit and Condensing Unit		295.27 ft (90 m)	
Height between Indoor and Condensing Unit	Condensing unit placed higher than indoor unit	98.4 ft (30 m)	
	Condensing unit placed lower than indoor unit	26.3 ft (8 m)	

NOTE: When the ambient temperature is below -4 °F (-20 °C) up to -31 °F (-35 °C), the low-ambient version must be used. Low Ambient versions of the units do not require a Wind Baffle accessory.

NOTE: All CUD15 and CUL15 Condensing Unit models on the table above are not plenum-rated.

Table 2.4 CoolPhase Condensing Unit Technical Specifications for 21-28 kW Units

Models		CUD211	CUD281	CUD214	CUD284
		CUL211	CUL281	CUL214	CUL284
Certification marks		cCSAus (UL 60335-2-40 and CSA C22.2 No. 60335-2-40)			
Piping Connections		Sweat Connection			
Operating Temperature range		Standard Ambient Condensing Unit: -4 °F (-20°C) ~118 °F (48°C) Low Ambient Condensing Unit: -31 °F (-35°C) ~118 °F (48°C)			
Compressor		Variable speed Inverter-driven			
Condenser Fan		EC Motor			
Noise Data		88 dB			
Noise Data of night mode		79 dB			
Power Supply		208/230 V, 3-Ph, 50-60 Hz (±10%)		460 V, 3-Ph, 50/60 Hz (±10%)	
Refrigerant		R-32			
Max Equivalent Length of Pipe between Indoor Unit and Condensing Unit		295.27 ft (90 m)			
Height between Indoor and Condensing Unit	Condensing unit placed lower than indoor unit	98.43 ft (30 m)			
	Condensing unit placed higher than indoor unit	26.2 ft (8 m)			

NOTE: All CUD21, CUL21, CUD28, and CUL28 Condensing Unit models on the table above are not plenum-rated.

Table 2.5 Air Cooled Data, 60 Hz

Evaporator Model		MMI12	MMI24	MMI36	MMI48	MMI60	MMI96
Condensing Unit Type		Outdoor	Outdoor	Outdoor	Outdoor	Outdoor	Outdoor
DX Evaporator- Net Capacity Data - kW (kBTU/h) @ High-Speed CFM							
80 °F DB, 62.8 °F WB (26.7 °C DB, 17.1 °C WB) 38% Rh	Total	3.4 (11.6)	6.7 (22.8)	9.2 (31.3)	14.7 (51.0)	19.1 (65.2)	26.7 (91.1)
	Sensible	3.4 (11.6)	6.7 (22.8)	9.2 (31.3)	14.7 (51.0)	19.0 (64.8)	24.2 (82.6)
75 °F DB, 61 °F WB (23.9 °C DB, 16.1 °C WB) 45% Rh	Total	3.1 (11.6)	6.2 (21.1)	8.6 (29.3)	13.5 (46.1)	18.2 (62.1)	25.5 (87.0)
	Sensible	3.1 (11.6)	6.2 (21.1)	8.5 (29.1)	13.5 (46.1)	17.1 (58.4)	20.5 (70.0)
72 °F DB, 60 °F WB (22.2 °C DB, 15.5 °C WB) 50% Rh	Total	3.0 (10.1)	5.9 (20.0)	8.3 (28.4)	12.9 (44.0)	17.8 (59.7)	24.9 (85.0)
	Sensible	2.9 (10.0)	5.5 (18.8)	7.9 (26.8)	12.8 (43.7)	15.7 (53.6)	18.7 (63.8)
Fan Data - Evaporator							
CFM (CMH)		816 (1,386)	1,451 (2,465)	1,533 (2,605)	2,710 (4,607)	2,746 (4,665)	3,759 (6,387)
Fan Motor, HP (W)		0.16 (0.12)	0.37 (0.28)	0.56 (0.42)	0.95 (0.71)	1.10 (0.82)	1.60 (1.19)
External Static Pressure, in (mm) water gauge		0.2 (5.1)					
Evaporator Coil - Copper Tube/Aluminum Fin							
Face Area, ft2 (m2)		2.5 (0.23)	3.0 (0.28)	3.0 (0.28)	5.56 (0.52)	5.56 (0.52)	7.64 (.71)
Coil Rows		3	5	5	6	6	6
Max Face Velocity, fpm (m/s)		500 (2.54)					
Unit Refrigerant Charge, lb (kg)		0.5 (0.2)	1.0 (0.5)	1.8 (0.8)	2.8 (1.3)	3.3 (1.5)	3.7 (1.7)
Unit Operating Weight DX, lb (kg)		269 (122.2)	295 (134.0)	299 (136.0)	416 (187.5)	484 (219.5)	673 (305.4)
Unit Operating Weight DX+FC, lb (kg)		292 (132.6)	325 (147.6)	329 (149.6)	484 (219.5)	504 (228.5)	752 (341.4)
Electric Reheat Capacity, kW (kBTU/h)		SSR (Solid State Relay)					
Input Voltage 230-1-60		4.5 (15.35)	4.7 (16.04)	4.0 (13.65)	—	—	—
Input Voltage 230-3-60		—	—	7.0 (23.89)	10.0 (34.12)	15.0 (51.18)	10.0 (34.12)
Input Voltage 460-3-60		—	—	4.0 (13.65)	10.0 (34.12)	10.0 (34.12)	10.0 (34.12)
Humidifier Data - Steam Generator Type							
Steam capacity, lb/h (kg/h)		5 (2.27)			12 (5.44)		
Electrical Input Power 230-1-60, kW		10.6	14.4	17.4	N/A	N/A	N/A
Electrical Input Power 230-3-60, kW		N/A	N/A	18.1	20.7	20.7	24.8
Electrical Input Power 460-3-60, kW		N/A	N/A	8.4	10.8	10.8	14.4
Evaporator Connection Sizes							
Liquid line Diameter, in O.D. Cu		3/8	3/8	3/8	5/8	5/8	5/8
Suction Line Diameter, in O.D. Cu		1/2	1/2	1/2	7/8	7/8	7/8

Table 2.5 Air Cooled Data, 60 Hz (continued)

Evaporator Model	MMI12	MMI24	MMI36	MMI48	MMI60	MMI96
Humidifier Supply	¾ in OD Copper Compression Fitting					
Evaporator/Condensate Drain	¾ in NPT-Female					
MERV 8 Filter						
External Filter Box, Nom. Size WxHxD, in (mm)	Qty. 1 20x16x4 (508x406x102)		Qty. 2 20x20x4 (508x508x102)		Qty. 2 25x20x4 (635x508x102)	
Air Distribution Plenum, Nom. Size WxHxD, in (mm)	Qty. 1 16x25x4 (406x635x102)			N/A		
Return Grille, Nom. Size WxHxD, in (mm)	Qty. 1 20x20x1 (508x508x25)			N/A		
Condensing Unit Model Number	CUD/L03	CUD/L07	CUD/L11	CUD/L15	CUD/L21	CUD/L28
Condensing Unit Rating Conditions	95 °F (35 °C) Ambient					
Coil Face Area ft2 (m2)	3.3 (0.31)	4.82 (0.45)	7.06 (0.66)	10.11 (0.94)	24.37 (2.3)	24.37 (2.3)
Type of Coil	Microchannel					
CFM (CMH)	2,222 (3,778)	2,714 (4,612)	3,892 (6,613)	5,113 (8,688)	8,839 (15,023)	8,447 (14,352)
Motor Hp (KW)	0.36 (0.27)	0.40 (0.3)	0.55 (0.41)	0.36 (0.27)	0.75 (0.57)	1.25 (0.93)
External Static Pressure, in (mm) water gauge	N/A					
STD Unit Refrigerant Charge, lb (kg)	1.3 (0.6)	1.5 (0.7)	1.8 (0.8)	2.9 (1.3)	3.0 (1.4)	5.0 (2.3)
LAK Unit Refrigerant Charge, lb (kg)	2.4 (1.1)	2.9 (1.3)	5.3 (2.4)	5.7 (2.6)	10.1 (4.6)	17.2 (7.8)
STD Unit Operating Weight, lb (kg)	110 (50)	118 (53.5)	175 (79.5)	268 (121.37)	425 (193)	425 (193)
LAK Unit Operating Weight, lb (kg)	117 (53)	130 (59)	184 (83.5)	277 (125.32)	458 (208)	458 (208)
Condensing Unit Connection Sizes						
Liquid line Diameter, in O.D. Cu	1/4	3/8	3/8	1/2	5/8	5/8
Suction Line Diameter, in O.D. Cu	1/2	1/2	5/8	3/4	7/8	7/8
Free Cooling Coil Option Net Capacity Data - kW (kBTU/h) using 45 °F (7.2 °C) EWT						
80 °F DB, 62.8 °F WB (26.7 °C DB, 17.1 °C WB) 38% Rh	Total	4.4 (15.01)	8.0 (27.30)	9.8 (33.44)	16.5 (56.30)	23.9 (81.54)
	Sensible	4.4 (15.01)	8.0 (27.30)	9.6 (32.76)	16.5 (56.30)	23.9 (81.54)
75 °F DB, 61 °F WB (23.9 °C DB, 16.1 °C WB) 45% Rh	Total	3.7 (12.63)	6.8 (23.20)	8.4 (28.66)	14.1 (48.11)	20.2 (68.93)
	Sensible	3.7 (12.63)	6.8 (23.20)	8.1 (27.64)	14.1 (48.11)	20.2 (68.93)
72 °F DB, 60 °F WB (22.2 °C DB, 15.5 °C WB) 50% Rh	Total	3.3 (11.26)	6.1 (20.41)	7.6 (25.93)	12.6 (42.99)	18.3 (62.45)
	Sensible	3.3 (11.26)	6.1 (20.41)	7.2 (24.57)	12.6 (42.99)	12.8 (43.68)
Flow Rate, GPM (l/m)	2.41 (9.12)	4.6 (17.41)	9.67 (36.61)	11.4 (43.15)	13.9 (52.62)	25.4 (96.86)
Pressure Drop, ft. water (kPa)	13.2 (39.5)	14.2 (42.24)	14.2 (42.24)	15 (44.83)	32.8 (98.13)	45.3 (135.4)

Table 2.5 Air Cooled Data, 60 Hz (continued)

Evaporator Model	MMI12	MMI24	MMI36	MMI48	MMI60	MMI96
Free Cooling Coil - Copper Tube/Aluminum Fin						
Face Area, ft ² (m ²)	2.5 (0.23)	3 (0.28)	3 (0.28)	5.56 (0.52)	5.56 (0.52)	7.64 (0.71)
Coil Rows	3	3	3	4	4	4
Max Face Velocity, fpm (m/s)	500 (2.54)					
Internal Fluid Volume, gal (l)	0.50 (1.9)	0.50 (1.9)	2.13 (8.0)	2.13 (8.0)	2.13 (8.0)	3.1 (11.7)
Free-cooling Coil supply/return connections, in. O.D. Cu	5/8	5/8	5/8	1-1/8	1-1/8	1-3/8

2.1.1 Operating Limits for Air Cooled Systems

The Vertiv™ CoolPhase Ceiling operates within the working ranges as shown in the table below. These limits refer to new units and those that have been correctly installed and serviced.

Table 2.6 Operating limits—Air Cooled Systems

Parameter		Design Condition	
		Minimum	Maximum
Unit Entering Air Conditions	Temperature	64.4 °F (18 °C)	113 °F (45 °C)
	Relative Humidity	17%	60%
Storage Conditions	Temperature	-4 °F (-20 °C)	118 °F (48 °C)
		NOTE: Unit remains operational up to 125.6 °F (52 °C) with reduced capacity.	
Power Supply Tolerances		Voltage ± 10%, Frequency ±2 Hz	

For working ranges of the Condensing units, refer to tables below.

Table 2.7 Operating limits—Condensing Units from 3 kW to 15 kW

Models	CUD030	CUD070	CUD111	CUD114	CUD151	CUD154
	CUL030	CUL070	CUL111	CUL114	CUL151	CUL154
Operating Temperature range	Low ambient Condensing Unit: -31 °F (-35 °C) ~118 °F (48 °C)					
	Standard Ambient Condensing Unit with Wind Baffle Accessory: -4 °F (-20 °C) ~118 °F (48 °C)					
	Standard Ambient Condensing Unit without Wind Baffle Accessory: 23 °F (-5 °C) ~118 °F (48 °C)					

NOTE: When the ambient temperature is between -4 °F (-20 °C) and -31 °F (-35 °C), the Low Ambient version must be used. Low Ambient versions of units do not require a Wind Baffle accessory.

NOTE: The Low Ambient version of the Condensing Unit cannot be installed in plenum areas; only the standard version is plenum rated.

NOTE: All CUD15 and CUL15 Condensing Unit models on the table above are not plenum-rated.

Table 2.8 Operating limits—Condensing Units of 21 kW and 28 kW

Models	CUD211	CUD281	CUD214	CUD284
	CUL211	CUL281	CUL214	CUL284
Operating Temperature range	Standard Ambient Condensing Unit: -4 °F (-20 °C) ~ 118 °F (48 °C)			
	Low Ambient Condensing Unit: -31 °F (-35 °C) ~ 118 °F (48 °C)			

NOTE: All CUD21, CUL21, CUD28, and CUL28 Condensing Unit models on the table above are not plenum-rated.

Table 2.9 Storage Environment

Item	Requirements
Storage environment	Store the unit in its original factory packaging in a clean indoor environment with good ventilation and no dust.
Ambient temperature	-40 °C ~ +70 °C (-40 °F ~ +158 °F)
Ambient humidity	Less than 95% Rh @30 °C (86 °F)

2.1.2 Sound Data for Air Cooled Systems

Tables in this section show the sound pressure level in free field at 5 ft (1.5 m) high and 6-1/2 ft (2 m) in front of the air conditioner, with compressor and fan in operation. The sound data is without the Low Sound Package compressor jacket and sound deadening panel insulation installed.

Sound power is an absolute measurement that can be used for comparisons when all sound measurement parameters match exactly.

NOTE: Sound levels are provided for the corresponding airflow values shown in each table, based on factory fan speed settings.

Table 2.10 Sound Data – MMI12 (1 Ton models)

Model Type			MMI12		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	816	579	426
		m3/h	1386	984	724
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	38	35	39
		125	52	52	41
		250	51	51	42
		500	55	54	45
		1000	55	53	44
		2000	54	52	44
		4000	53	52	42
		8000	47	47	30
	A-Scale Weighted, dB(A)		63	55	52
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		52	45	40

Table 2.11 Sound Data – MMI24 (2 Ton models)

Model Type			MMI24		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	1451	952	725
		m3/h	2465	1617	1232
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	34	29	34
		125	50	52	49
		250	52	47	45
		500	61	56	53
		1000	59	53	52
		2000	56	51	47
		4000	53	46	42
		8000	49	41	34
	A-Scale Weighted, dB(A)		63	61	56
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		52	50	46

Table 2.12 Sound Data – MMI36 (3 Ton models)

Model Type			MMI36		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	1533	1296	1130
		m ³ /h	2605	2202	1920
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	32	32	36
		125	51	49	45
		250	50	48	47
		500	56	54	51
		1000	55	53	51
		2000	53	50	48
		4000	49	46	44
		8000	45	41	36
	A-Scale Weighted, dB(A)		61	58	56
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		50	47	45

Table 2.13 Sound Data – MMI48 (4 Ton models)

Model Type			MMI48		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	2710	2097	1735
		m3/h	4604	3563	2948
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	49	44	39
		125	56	55	50
		250	63	58	52
		500	68	60	56
		1000	65	59	54
		2000	63	57	53
		4000	60	55	52
		8000	60	52	46
	A-Scale Weighted, dB(A)		73	66	61
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		61	55	50

Table 2.14 Sound Data – MMI60 (5 Ton models)

Model Type			MM60		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	2746	2279	1888
		m ³ /h	4665	3872	3208
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	48	45	42
		125	59	57	52
		250	64	59	53
		500	68	62	57
		1000	64	59	55
		2000	62	58	54
		4000	60	56	54
		8000	61	55	49
	A-Scale Weighted, dB(A)		72	67	62
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		60	56	51

Table 2.15 Sound Data – MMI96 (8 Ton models)

Model Type			MMI96		
Sound Power Level (PWL, dB(A))	Airflow	SCFM	3759	3061	2601
		m3/h	6387	5201	4419
	External Static Pressure, in w.g.		0.2	0.2	0.2
	Filter		MERV 8	MERV 8	MERV 8
	Free Cooling Coil		NO	NO	NO
	Octave Band Frequency (Hz)	63	52	48	45
		125	62	60	58
		250	68	63	60
		500	71	65	61
		1000	68	63	60
		2000	69	64	61
		4000	66	62	60
		8000	67	60	52
	A-Scale Weighted, dB(A)		77	72	69
	At Discharge Side, 2 m Distance, 1.5 m Above Ground, Free Field Conditions (2 m, f.f, dBA)		67	63	59

Table 2.16 Sound Data – CoolPhase Condensing Unit CU*03 (3.5 kW), Unit CU*07 (7 kW), and CU*11 (11 kW) models

Models		CUD030 / CUL030	CUD070 CUL070	CUD111 CUL111	CUD114 CUL114
Noise Data	1 m Distance, Free Field Conditions (f.f. dBA)	68 dB		71 dB	
Noise Data of night mode		58 dB		56 dB	

Table 2.17 CoolPhase Condensing Unit CU*15 (15 kW) models

Models		CUD151 / CUL151	CUD154 / CUL154
Noise Data	1 m Distance, Free Field Conditions (f.f. dBA)	72	
Noise Data of night mode		60	

Table 2.18 CoolPhase Condensing Unit CU*21 (21 kW) and CU*28 (28 kW) models

Models		CUD211 CUL211	CUD281 CUL281	CUD214 CUL214	CUD284 CUL284
Noise Data	1 m Distance, Free Field Conditions (f.f. dBA)	88 dB			
Noise Data of night mode		79 dB			

2.2 Operating Conditions

The Vertiv™ CoolPhase Ceiling must be operated in a conditioned space within the ASHRAE recommended operating envelope for data centers. Operating the CoolPhase Ceiling outside of this envelope can decrease equipment reliability. Refer to ASHRAE's publication, "Thermal Guidelines for Data Processing Environments."

2.2.1 Cooling, Humidification, and Dehumidification

For operation in the Cooling, Humidification, or Dehumidification modes, the CoolPhase Ceiling unit's return air requirements for proper unit operation are:

- Maximum dew point of 59° F (15° C)
- Minimum 65° F (20° C) DB
- Maximum 85° F (29.4° C) DB

2.2.2 Heating

For operation in the Heating mode, the CoolPhase Ceiling unit's return air requirements for proper unit operation are:

- Maximum humidity: less than 80% RH and less than 64° F (17.8° C) dew point.
- Maximum dry bulb of 80° F (27° C).

3 Dimensions and Weights

3.1 Unit Weights

Table 3.1 Vertiv™ CoolPhase Ceiling Unit Weights

Model		Net Weight lb (kg)	Shipping Weight with pallet lb (kg)
MMI12 (1 Ton)	Minimum (DX only)	232 (106)	387 (176)
	Maximum (DX + FC)	266 (121)	421 (191)
MMI48/60 (4 & 5 Ton)	Minimum (DX only)	267 (121)	422 (191)
	Maximum (DX + FC)	308 (140)	463 (210)
MMI12 (1 Ton)	Minimum (DX only)	411 (187)	618 (281)
	Maximum (DX + FC)	493 (224)	700 (318)
MMI48/60 (4 & 5 Ton)	Minimum (DX only)	611 (277)	836 (379)
	Maximum (DX + FC)	682 (309)	906 (411)

Table 3.2 Weights of Vertiv™ CoolPhase Ceiling Condensing Units

Model	Net Weight lb (kg)	Shipping Weight lb (kg)
CUD03	110 (50)	170 (77)
CUL03	117 (53)	176 (80)
CUD07	118 (54)	189 (86)
CUL07	130 (59)	201 (91)
CUD11	175 (80)	259 (118)
CUL11	184 (84)	272 (124)
CUD151	165 (75)	255 (116)
CUL151	176 (80)	263 (120)
CUD154	268 (121)	325 (147)
CUL154	277 (125)	334 (151)
CUD21	268 (121)	325 (147)
CUL21	277 (125)	334 (151)
CUD28	425 (193)	546 (248)
CUL28	458 (208)	579 (263)

3.2 Units Planning Dimensions

The unit, floor stand, and plenum dimensions are described in the submittal documents included in the Submittal Drawings.

The condenser dimensions are described in the submittal documents included in the Submittal Drawings. Condensers mounted above and below the relative elevation of the indoor unit must follow the guidelines found in the submittal drawings listed in the table.

The following table lists the relevant documents by number and title.

Table 3.3 Dimension planning drawings

Document Number	Title
20000081	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 1 Ton
20000082	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 2 & 3 Ton
20000083	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 4 & 5 Ton
20000084	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 8 Ton
20000159	Vertiv CoolPhase Condensing Unit Dimensional Data Condenser Unit 3.5, 7 & 11 kW
20000575	Vertiv CoolPhase Condensing Unit Dimensional Data Condenser Unit 15 kW
20000136	Vertiv CoolPhase Condensing Unit Cabinet Dimensions Condenser Unit 21 & 28 kW

4 Power Requirements


NOTICE

Risk of equipment damage.

Fans must be connected only to the specified supply voltage and phase for the applicable model, either 208–230 VAC 1-phase or 3-phase or 460 VAC 3-phase.

Connection to an incorrect voltage or phase may result in overheating, abnormal operation, or permanent damage to the fan motor and associated components.

Figure 4.1 Electrical connections - Interior

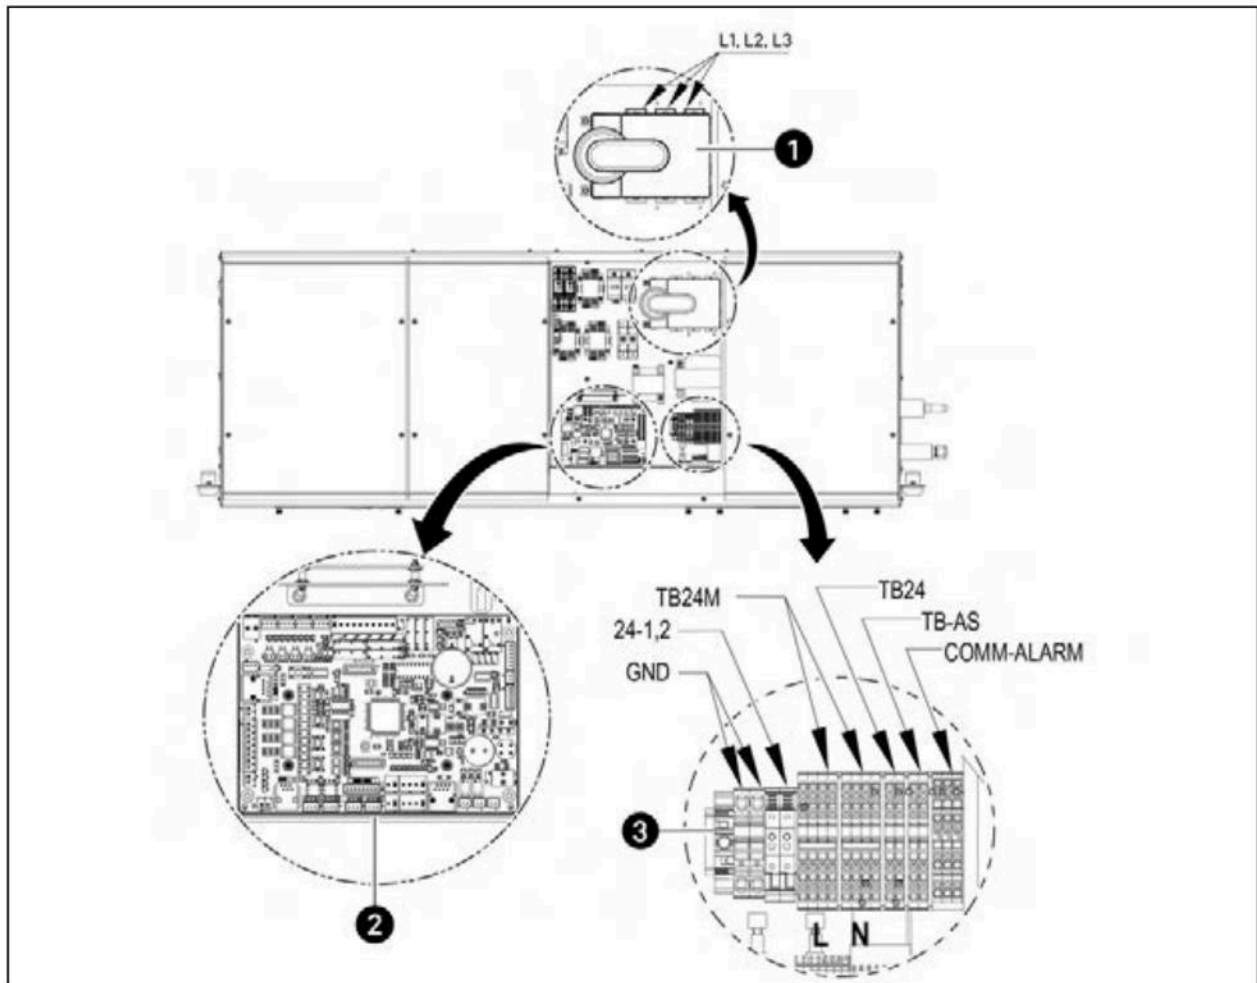

Item	Description	Item	Description
1	Input main power supply from customer site	2	Vertiv™ iCOM™
		3	Terminal blocks

HIGH VOLTAGE FEATURES:

- High Voltage Entrance: Located on top and left side of unit.
- Single and three-phase electric service and Earth Ground: Field-supplied power and service.
- Single and three-phase connection: Electric service connection terminals on disconnect.
- Disconnect Switch: Locking type standard.
- Earth ground connection: Connection terminals for field supplied earth grounding wire.

CONTROL FEATURES:

- 7" HMI Display communication: Vertiv Display connects with the DVI connector through DVI cable.

- Remote Temperature/Humidity Sensor: The Remote sensor connects with the Temperature and Humidity sensors that are installed in the unit.
- 7" HMI Display Power: Field connection between indoor display port and PWR connector on 7" display.
- Low Voltage and Control Wiring connections: Unit to unit, BMS and outdoor connections located on the front side of the unit.

COMMUNICATION CONNECTIONS:

- Customer supplies ethernet wire: connection to OHE thermal board and port ethernet port "VFD" on evaporator unit.

STANDARD LOW VOLTAGE FEATURES:

- Remote Alarm Device (RAD): Remote Alarm Device connect field connection wires on the 10DI board DI2 and GND see schematic for connections.

OPTIONAL LOW VOLTAGE TERMINAL PACKAGE:

- Optional Condensate pump switch: Customer must wire the condensate pump status wires between CP-WS-FBK1 and CP-WS-FBK2. Refer to schematic for connections.

4.1 Air Cooled Systems Electrical Data

Table below lists the power requirements for each Vertiv™ CoolPhase Ceiling model number.

Table 4.1 CoolPhase Ceiling Electrical Data

Model	Power Supply	Feature	FLA (A)	MCA (A)	MOP (A)
MMI12	230 V / 1-Ph	Reheat	28.0	35.0	35
		Reheat + Humidifier	28.0	35.0	45
		Humidifier	10.6	16.5	15
		Air Cooling	6.2	7.0	15
MMI24	230 V / 1-Ph	Reheat	41.0	51.3	60
		Reheat + Humidifier	41.0	51.3	60
		Humidifier	14.4	18.0	15
		Air Cooling	7.4	8.0	15

Table 4.1 CoolPhase Ceiling Electrical Data (continued)

Model	Power Supply	Feature	FLA (A)	MCA (A)	MOP (A)
MMI36	230 V / 1-Ph	Reheat	39.2	48.9	50
		Reheat + Humidifier	39.2	48.9	50
		Humidifier	17.4	22.0	25
		Air Cooling	10.3	12.0	15
	230 V / 3-Ph	Reheat	30.5	38.0	35
		Reheat + Humidifier	30.5	47.0	50
		Humidifier	18.1	23.0	25
		Air Cooling	11.0	13.0	20
	460 V / 3-Ph	Reheat	15.0	21.0	20
		Reheat + Humidifier	15.0	19.0	20
		Humidifier	8.4	10.0	15
		Air Cooling	6.2	7.0	15
MMI48	230 V / 3-Ph	Reheat	38.6	48.0	50
		Reheat + Humidifier	38.6	61.0	70
		Humidifier	20.7	26.0	25
		Air Cooling	10.9	13.0	15
	460 V / 3-Ph	Reheat	18.4	23.0	20
		Reheat + Humidifier	18.4	29.0	30
		Humidifier	10.8	13.0	15
		Air Cooling	5.8	7.0	15
MMI60	230 V / 3-Ph	Reheat	52.5	66.0	70
		Reheat + Humidifier	52.5	78.0	80
		Humidifier	20.7	26.0	25
		Air Cooling	10.9	13.0	15
	460 V / 3-Ph	Reheat	18.4	29.0	30
		Reheat + Humidifier	18.4	23.0	20
		Humidifier	10.8	13.0	15
		Air Cooling	5.8	7.0	15

Table 4.1 CoolPhase Ceiling Electrical Data (continued)

Model	Power Supply	Feature	FLA (A)	MCA (A)	MOP (A)
MMI96	230 V / 3-Ph	Reheat	40.0	50.0	50
		Reheat + Humidifier	40.0	50.0	70
		Humidifier	24.5	30.6	35
		Air Cooling	12.3	15.3	20
	460 V / 3-Ph	Reheat	20.8	26.0	25
		Reheat + Humidifier	20.8	34.0	35
		Humidifier	14.4	18.0	20
		Air Cooling	8.2	10.0	15

FLA = Full Load Amps; MCA = Minimum Circuit Ampacity; MOP = Maximum Overcurrent Protection Device.

Table 4.2 below lists the power requirements for each Vertiv™ CoolPhase Condensing Unit model.

Table 4.2 Vertiv™ CoolPhase Condensing unit electrical data

Models	Nom. Tons	Volts / Phases	Compressor Qty.	Compressor Inverter (A)	Crank Case + Heating belt (A)	FLA (A)	MCA (A)	MOP (A)
CUD03 / CUL03	1	208/230 1-Ph	1	14	0/0.4	17	21	35
CUD07 / CUL07	2	208/230 1-Ph	1	20	0/0.4	23	28	50
CUD111 / CUL111	3	208/230 3-Ph	1	17	0/0.4	21	25	40
CUD114 / CUL114	3	460 3-Ph	1	11	0/0.4	15	18	30
CUD151	4	208/230 3-Ph	1	14	0/32.2	20	23	35
CUL151	4	460 3-Ph	1	14	0.5/32.2	20	24	35
CUD154	4	208/230 3-Ph	1	9	0/21.9	11	13	20
CUL154	4	460 3-Ph	1	9	0.25/21.9	11	13	20
CUD211	6	208/230 3-Ph	1	22	0/41.3	31	36	50
CUL211	6	460 3-Ph	1	22	0.5/41.3	31	37	50
CUD214	6	208/230 3-Ph	1	19	0/32.9	22	27	45
CUL214	6	460 3-Ph	1	19	0.25/32.9	23	27	45
CUD281	8	208/230 3-Ph	1	40	0/51.3	49	58	90
CUL281	8	460 3-Ph	1	40	0.5/51.3	49	59	90
CUD284	8	208/230 3-Ph	1	30	0/39.7	33	40	70
CUL284	8	460 3-Ph	1	30	0.25/39.7	33	41	70

FLA = Full Load Amps; MCA = Minimum Circuit Ampacity; MOP = Maximum Overcurrent Protection Device.

4.2 Electrical Field Connections & Terminal Blocks

Electrical service must conform to national and local electrical codes.

Rated voltage of the condenser should be verified with available power supply before installation. Refer to the unit's electrical schematic and serial tag for specific electrical requirements. Line-voltage electrical service is required for all condensers at their locations.

The electrical connections are described in the submittal documents included in the . The following table lists the relevant documents by number and title.

Table 4.3 Electrical field connection drawings

Document Number	Title
20000193	CoolPhase Ceiling Electrical Field Connections 1 Ton DX & FC
20000194	CoolPhase Ceiling Electrical Field Connections 2 & 3 Ton DX & FC
20000195	CoolPhase Ceiling Electrical Field Connections 4 & 5 Ton DX & FC
20000196	CoolPhase Ceiling Electrical Field Connections 8 Ton DX & FC
20000161	CoolPhase Condensing Unit Electrical Field Connections 3.5, 7 & 11 kW
20000706	CoolPhase Condensing Unit Electrical Field Connections 15 kW
20000708	CoolPhase Condensing Unit Electrical Field Connections 21 kW
20000328	CoolPhase Condensing Unit Electrical Field Connections 28 kW

Table 4.4 Electrical schematics drawings

Document Number	Title
Vertiv™ CoolPhase Ceiling Electrical Schematics	
10092534P1DRW	CoolPhase Ceiling Electrical Schematics 1 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P2DRW	CoolPhase Ceiling Electrical Schematics 2 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P3DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P4DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P11DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 3-Ph 460 VAC 50/60 Hz
10092534P5DRW	CoolPhase Ceiling Electrical Schematics 4 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P8DRW	CoolPhase Ceiling Electrical Schematics 4 Ton 3-Ph 460 VAC 50/60 Hz
10092534P6DRW	CoolPhase Ceiling Electrical Schematics 5 Ton 3-Ph 203 230 VAC 50/60 Hz

Table 4.4 Electrical schematics drawings (continued)

Document Number	Title
10092534P9DRW	CoolPhase Ceiling Electrical Schematics 5 Ton 3-Ph 460 VAC 50/60 Hz
10092534P7DRW	CoolPhase Ceiling Electrical Schematics 8 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P10DRW	CoolPhase Ceiling Electrical Schematics 8 Ton 3-Ph 460 VAC 50/60 Hz
Vertiv™ CoolPhase Condenser Electrical Schematics	
29044991	CoolPhase Condensing Electrical Schematics 3.5 & 7 kW 230 V 1-Ph
29044993	CoolPhase Condensing Electrical Schematics 11 kW 230 V 3-Ph
29045791	CoolPhase Condensing Electrical Schematics 11 kW 460 V 3-Ph
10068508P9DRW	CoolPhase Condensing Electrical Schematics 15 kW 230 V 3-Ph
10068508P10DRW	CoolPhase Condensing Electrical Schematics 15 kW 460 V 3-Ph
10068508P11DRW	CoolPhase Condensing Electrical Schematics 21 kW 230 V 3-Ph
10068508P12DRW	CoolPhase Condensing Electrical Schematics 21 kW 460 V 3-Ph
10068508P1DRW	CoolPhase Condensing Electrical Schematics 28 kW 230 V 3-Ph
10068508P2DRW	CoolPhase Condensing Electrical Schematics 28 kW 460 V 3-Ph

This page intentionally left blank

5 Piping Connections

NOTE: Piping that is installed in the field should comply with local codes.

The pipe connection locations, piping general arrangement, and schematics are described in the documents included in the section [Submittal Drawings](#) on page 1.

The following tables list the relevant documents by number and title.

Table 5.1 Piping general arrangement drawings

Document Number	Title
20000567	CoolPhase Ceiling General Arrangement 1-2 Ton DX Air Cooled
20000568	CoolPhase Ceiling General Arrangement 3-8 Ton DX Air Cooled
20000569	CoolPhase Ceiling General Arrangement 1-8 Ton Free Cooling

Table 5.2 Piping schematics

Document Number	Title
20000167	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 1 Ton Piping Schematics
20000168	CoolPhase Ceiling Piping Schematics Free Cooling Option 1 Ton Piping Schematics
20000169	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 2 & 3 Ton Piping Schematics
20000170	CoolPhase Ceiling Piping Schematics Free Cooling Option 2 & 3 Ton Piping Schematics
20000171	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 4 & 5 Ton Piping Schematics
20000172	CoolPhase Ceiling Piping Schematics Free Cooling Option 4 & 5 Ton Piping Schematics
20000173	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 8 Ton Piping Schematics
20000174	CoolPhase Ceiling Piping Schematics Free Cooling Option 8 Ton Piping Schematics

Table 5.3 Primary connection locations drawings

Document Number	Title
20000175	CoolPhase Ceiling Primary Connection Locations 1 Ton Dx & Fc
20000176	CoolPhase Ceiling Primary Connection Locations 2 & 3 Ton Dx & Fc
20000177	CoolPhase Ceiling Primary Connection Locations 4 & 5 Ton Dx & Fc
20000178	CoolPhase Ceiling Primary Connection Locations 8 Ton Dx & Fc
20000160	CoolPhase Condensing Unit Primary Connection Locations 3.5, 7 & 11 kW
20000573	CoolPhase Condensing Unit Primary Connection Locations 15 & 21 kW
20000154	CoolPhase Condensing Unit Primary Connection Locations 28 kW

Table 5.4 Piping General Arrangement Drawings

Document Number	Title
20000916	CoolPhase Condensing Unit Above / Below Indoor Unit 3.5, 7 & 11 kW
20000572	CoolPhase Condensing Unit Above / Below Indoor Unit 15 & 21 kW
20000324	CoolPhase Condensing Unit Above / Below Indoor Unit 28 kW

Table 5.5 Pipe length and condensing unit elevation relative to evaporator

Model	Maximum Condensing Unit Level Above Evaporator, ft (m)	Maximum Condensing Unit Level Below Evaporator, ft (m)
MMI12	49.2 (15)	16.4 (5)
MMI24	49.2 (15)	16.4 (5)
MMI36	49.2 (15)	16.4 (5)
MMI48	49.2 (15)	16.4 (5)
MMI60	98.4 (30)	26.2 (8)
MMI96	98.4 (30)	26.2 (8)

5.1 Refrigerant Line Sizes and Equivalent Lengths

NOTE: Refrigerant is field-supplied and field-charged. The unit is not shipped with refrigerant, nor is it factory charged.

Table 5.6 Indoor evaporator approximate r-32 refrigerant charge

Model	Refrigerant charge lb (kg)
MMI12 (1 Ton)	0.50 (0.20)
MMI24 (2 Ton)	1.00 (0.50)
MMI36 (3 Ton)	1.80 (0.80)
MMI48 (4 Ton)	2.80 (1.30)
MMI60 (5 Ton)	3.30 (1.50)
MMI96 (8 Ton)	3.70 (1.70)

Table 5.7 DX products with R-32

Document Number	Title
20000457	A2L Refrigerant Dispersal Volume Calculation R32

Table 5.8 Outdoor condenser approximate R-32 refrigerant charge for standard units

Model	Refrigerant charge lb (kg)
CUD03	1.3 (0.6)
CUD07	1.5 (0.7)
CUD11	1.8 (0.8)
CUD15	2.9 (1.3)
CUD21	3.0 (1.4)
CUD28	5.0 (2.3)

Table 5.9 Outdoor condenser approximate R-32 refrigerant charge for units with Low Ambient Kit

Model	Refrigerant charge lb (kg)
CUL03	2.4 (1.1)
CUL07	2.9 (1.3)
CUL11	5.3 (2.4)

Table 5.9 Outdoor condenser approximate R-32 refrigerant charge for units with Low Ambient Kit (continued)

Model	Refrigerant charge lb (kg)
CUL15	5.7 (2.6)
CUL21	10.1 (4.6)
CUL28	17.2 (7.8)

Table 5.10 Outdoor condenser approximate R-32 refrigerant charge for units with Low Ambient Kit

Model	Refrigerant charge lb (kg)
CUL03	2.4 (1.1)
CUL07	2.9 (1.3)
CUL11	5.3 (2.4)
CUL15	5.7 (2.6)
CUL21	10.1 (4.6)
CUL28	17.2 (7.8)

Table 5.11 Interconnecting piping refrigerant charge for R-32 for type L Tube

Line Size O.D.	Liquid Line, lb/100 ft (kg/30 m)	Suction Line, lb/100 ft (kg/30 m)
3/8	2.9 (1.3)	0.15 (0.07)
1/2	5.5 (2.5)	0.2 (0.1)
5/8	9.0 (4.0)	0.4 (0.2)
3/4	13.5 (6.0)	0.7 (0.3)
7/8	18.5 (8.4)	1.1 (0.5)
1 1/8	31.7 (14.4)	1.8 (0.8)
1 3/8	48.3 (21.9)	2.6 (1.2)

NOTE: If the condensing unit is installed indoors, the total system refrigerant charge (Indoor unit+ Condensing unit + Piping) can't exceed 4 lb.

Table 5.12 Piping dimensional data

Document Number	Title
20000160	CoolPhase Condensing Unit Piping Dimensional Data Condenser Units 15 kW & 21 kW
20000573	CoolPhase Condensing Unit Piping Dimensional Data Condenser Units 15 kW & 21 kW
20000326	CoolPhase Condensing Unit Piping Dimensional Data Condenser Units 28 & 35 kW

6 Optional Accessories

6.1 Accessories for Vertiv™ CoolPhase Ceiling Units


6.1.1 Filter Box with Duct Flanges

NOTE: The kit includes a MERV 8 filter as well as duct flanges for air supply connection.

Table 6.1 Filter Box SKUs and application

SKU	Item Accessory	Description
CEILFILTB-XS	Filter box with duct flanges	Ceiling Filter Box, 1 Ton
CEILFILTB-S		Ceiling Filter Box, 2 and 3 Ton
CEILFILTB-M		Ceiling Filter Box, 4 and 6 Ton
CEILFILTB-L		Ceiling Filter Box, 8 Ton

Figure 6.1 Main components

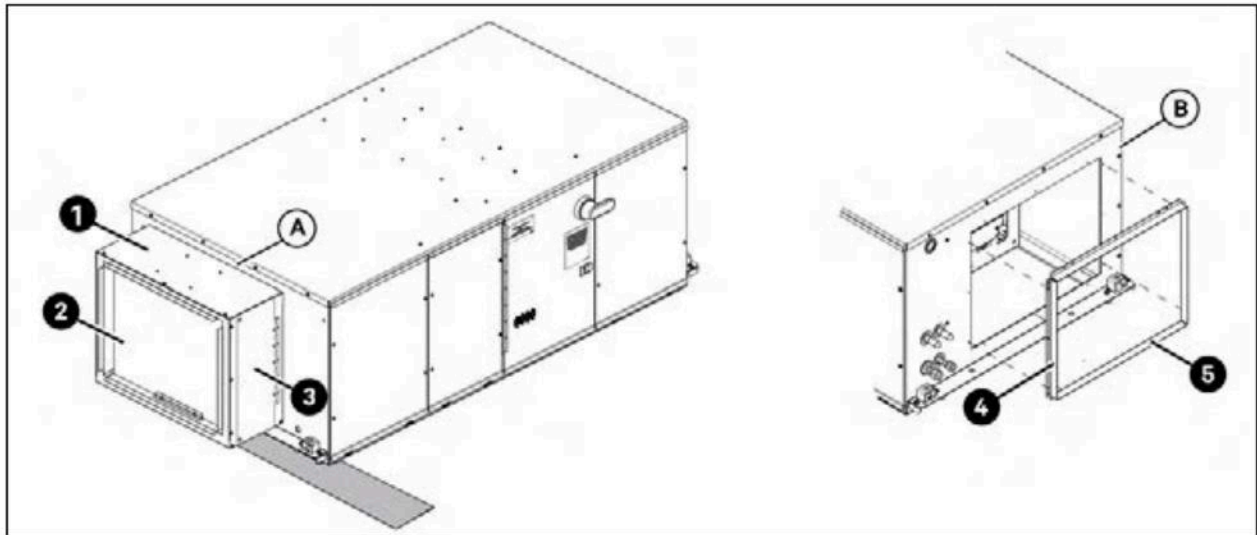

Item	Description	Item	Description
Return Side of Unit	3	Filter 16 x 20 x 4 in MERV 8	Return Side of Unit
Discharge End of Unit	4	Vertical Duct Flange for air supply	Discharge End of Unit
Filter access door	5	Horizontal Duct Flange for air supply	Filter access door
Filter box assembly (image example: MMI12)			Filter box assembly (image example: MMI12)

Table 6.2 Filter Box drawings

Document Number	Title
20000085	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 1 Ton
20000088	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 2 & 3 Ton
20000091	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 4 & 5 Ton
20000092	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 8 Ton


Refer to SL-80134 Vertiv™ CoolPhase Ceiling Filter Box Kit Quick Installation Guide for more details about installation instructions.

6.1.2 Condensate Pump Kit

Table 6.3 Condensate Pump kit SKUs and application

SKU	Item Accessory	Description
CEILPMPKIT-L	Condensate Pump Kit	Ceiling Condensate Pump Kit 230/1 & 230/3
CEILPMPKIT-H		Ceiling Condensate Pump Kit 460/3

Figure 6.2 Main components

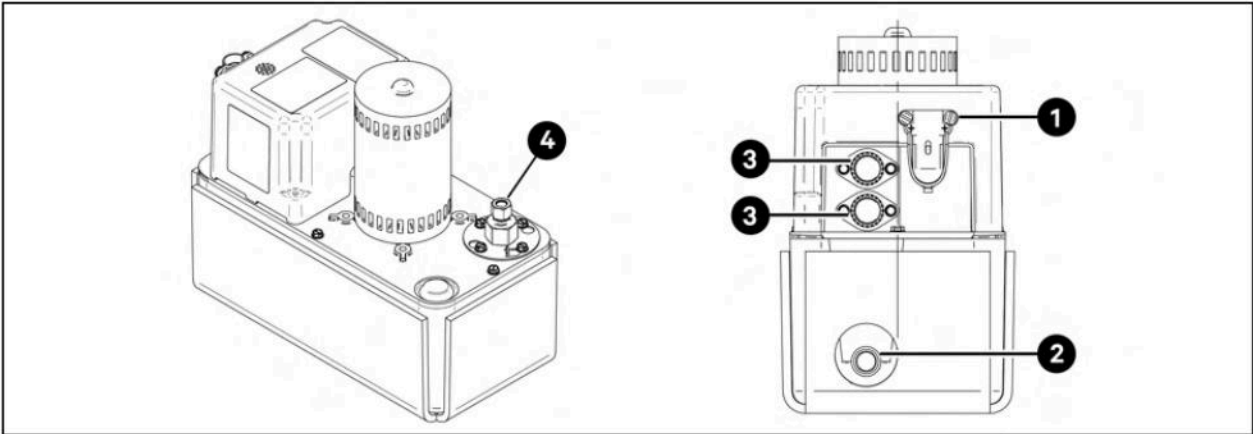

Item	Description	Item	Description
A	Condensate Pump - Isometric view	2	Hose barb – Water inlet
B	Condensate Pump - Rear view	3	Fuse holder
1	Flex electrical connection	4	Outlet

Table 6.4 Condensate Pump Kit drawings


Document Number	Title
20000104	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 1 Ton
20000105	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 2 & 3 Ton
20000106	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 4 & 5 Ton
20000107	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 8 Ton

Refer to SL-80133 Vertiv™ CoolPhase Ceiling Condensate Pump Kit Quick Installation Guide for more details about installation instructions.

6.1.3 Duct Flanges

Table 6.5 Duct Flanges SKUs and application

SKU	Item Accessory	Description
CEILDUCTKIT-XS	Duct Flange Kit	Indoor Duct Flange Kit, 1 Ton
CEILDUCTKIT-S		Indoor Duct Flange Kit, 2 and 3 Ton
CEILDUCTKIT-M		Indoor Duct Flange Kit, 4 and 6 Ton
CEILDUCTKIT-L		Indoor Duct Flange Kit, 8 ton

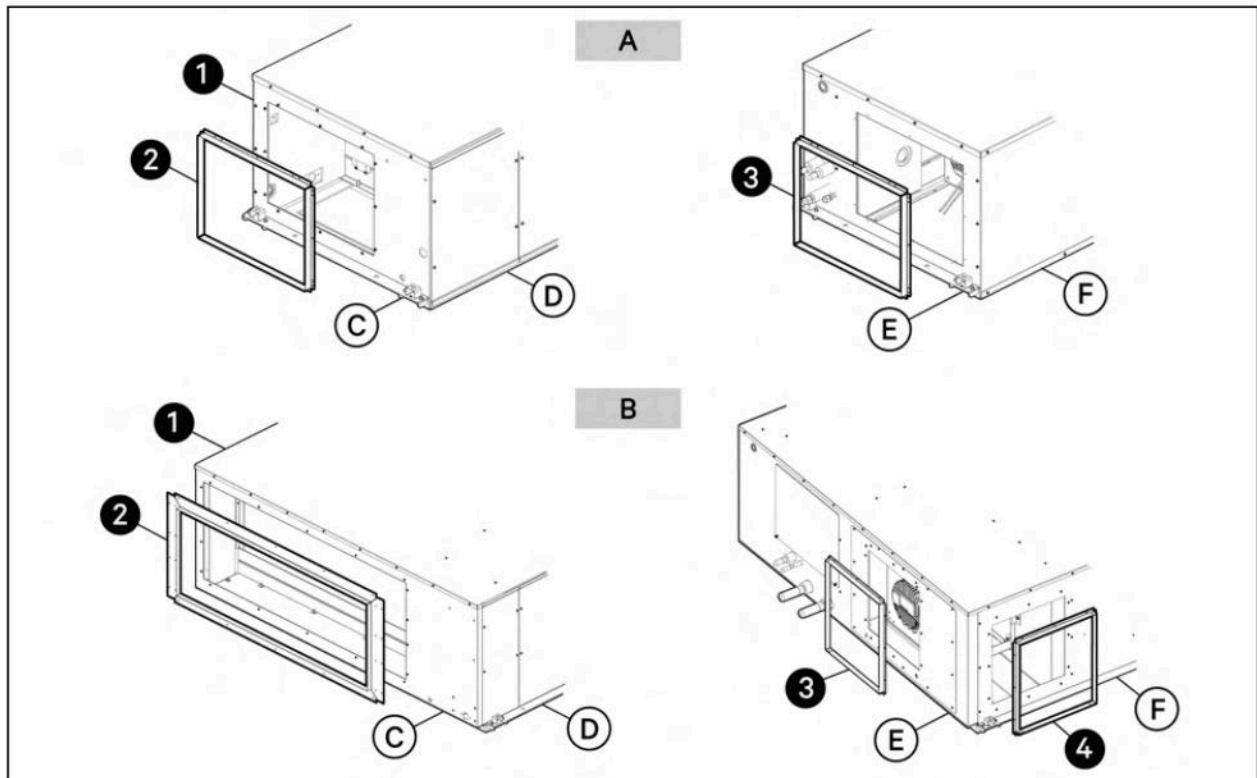Figure 6.3 Main components

Item	Description	Item	Description
A	1, 2 and 3 Tons models	F	Rear of Unit
B	4, 5 and 8 Tons models	1	Evaporator
C	Return side of the unit	2	Air Return Duct Flange
D	Front of unit	3	Air Supply Duct Flange 1 (for all models)
E	Discharge side of unit	4	Air Supply Duct Flange 2 (for 4, 5 and 8 Ton models only)

Table 6.6 Duct Flanges drawings

Document Number	Title
20000256	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 1 Ton
20000257	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 2 & 3 Ton
20000258	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 4 & 5 Ton
20000259	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 8 Ton


Refer to SL-80134 Vertiv™ CoolPhase Duct Flanges Quick Installation Guide for more details about installation instructions.

6.1.4 Downflow Grille

Table 6.7 Supply and Return grille SKUs and applications

SKU	Item Accessory	Description
CEILGRILLE-XS	Supply & Return Grille	Ceiling Supply & Return Grille, 1 Ton
CEILGRILLE-S		Ceiling Supply & Return Grille, 2 and 3 Ton

Figure 6.4 Main components

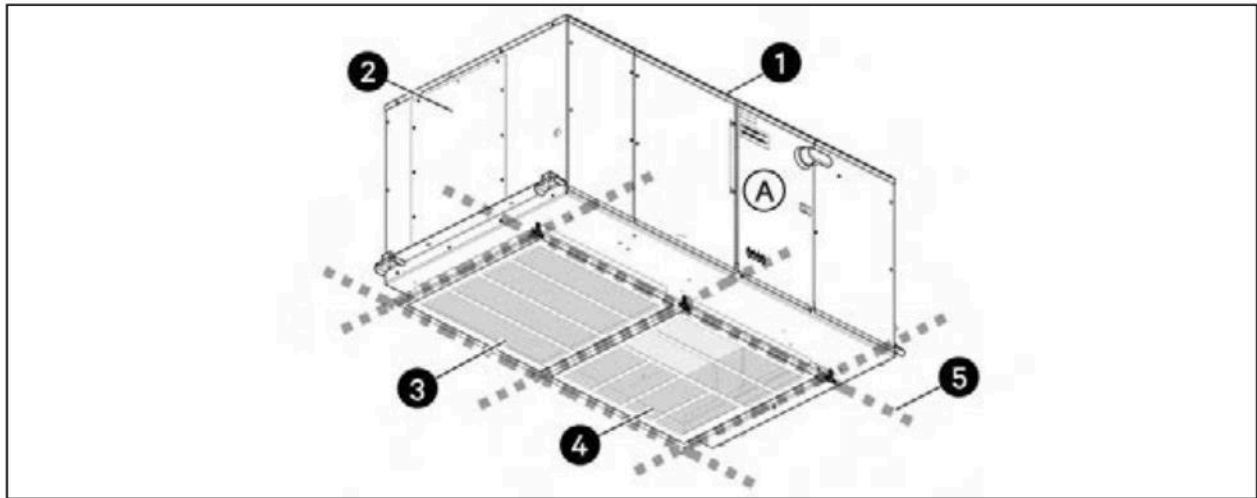

Item	Description	Item	Description
A	Front of indoor unit	3	One-way Return Grille
1	Evaporator	4	Three-way Supply Grille
2	Air return cover	5	24 in x 24 in Drop ceiling T-bars (Not included)

Table 6.8 Grille drawings

Document Number	Title
20000256	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 1 Ton
20000257	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 2 & 3 Ton


Refer to SL-80135 Vertiv™ CoolPhase Ceiling Supply and Return Grille Quick Installation Guide for more details about installation instructions.

6.1.5 Air Distribution Plenum

Table 6.9 Air Distribution Plenum SKUs and applications

SKU	Item Accessory	Description
CEILAIRPLEN-XS	Air Plenum	Ceiling Air Plenum, 1 Ton
CEILAIRPLEN-S		Ceiling Air Plenum, 2 and 3 Ton

Figure 6.5 Main components

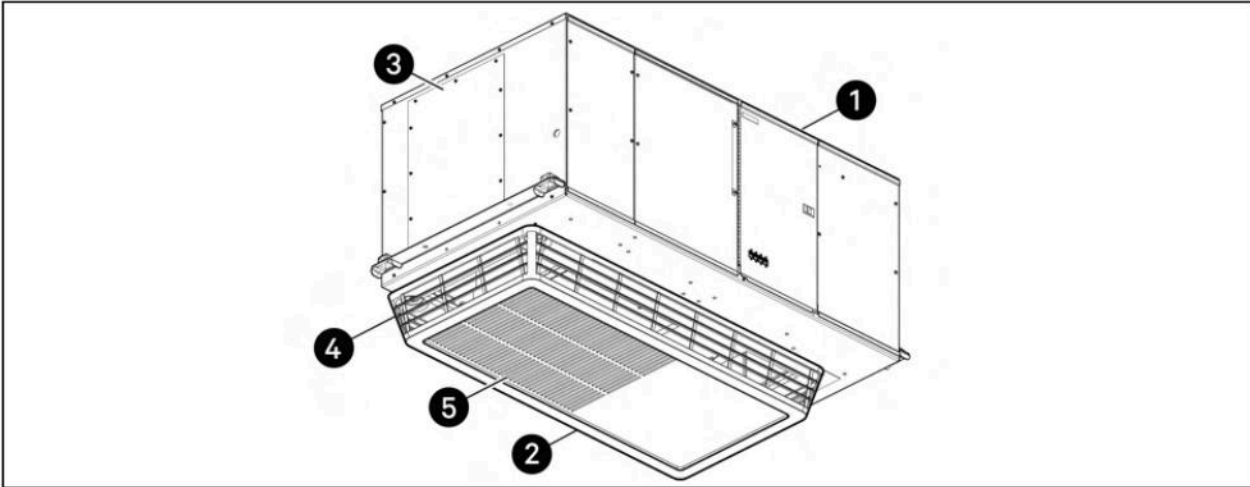

Item	Description	Item	Description
1	Evaporator	4	Air distribution return inlet
2	Air distribution plenum	5	Air distribution supply outlet
3	Air return cover		

Table 6.10 Air distribution plenum drawings

Document Number	Title
20000086	Vertiv™ CoolPhase Ceiling Dimensional Data Air Distribution Plenum 1 Ton
20000089	Vertiv™ CoolPhase Ceiling Dimensional Data Air Distribution Plenum 2 & 3 Ton

Refer to the SL-80137 Vertiv™ CoolPhase Ceiling Air Distribution Plenum Quick Installation Guide for more details on installation.

6.2 Leak Detection Accessories

The system supports compatibility with Liebert® Liqui-Tect™ LT410 point leak detection sensors and LT460 zone leak detection modules, providing leak detection monitoring when used as part of the overall system installation.

Liebert® Liqui Tect™ 410 (LT410) is a solid state point leak detection sensor for remote mounting that monitors a specific location for water leaks, internal faults, and power loss, and provides dual outputs for alarm and monitoring connections.

The Liebert® Liqui Tect™ 460 KIT provides reliable leak detection with up to 100 feet of cable, selectable alarm modes, LED status indicators, and dual outputs for integration with alarms or management systems. It continuously monitors leaks, faults, and power failures, making it ideal for protecting sensitive equipment in critical environments.

For more information about specifications and installation, refer to SL-31050 Liebert® Liqui-Tect™ 410 Point Leak Detection Sensor and SL-31052 Liebert® Liqui-Tect™ 460 Zone Leak Detection Sensor Product Specification and Installation Guides.

Table 6.11 Leak Detection Sensor SKUs and applications

SKU	Item Accessory	Description
LT410	Liqui-Tect™ 410 Point Leak Detection Sensor	Single-point detection for leaks
LT460	Liqui-Tect™ 460 Zone Leak Detection Sensor	Zone detection for leaks

This page intentionally left blank

Appendices

Appendix A: Technical Support and Contacts

A.1 Technical Support/Service in the United States

Vertiv Group Corporation

24x7 dispatch of technicians for all products.

1-800-543-2378

Liebert® Thermal Management Products

1-800-543-2778

Liebert® Channel Products

1-800-222-5877

Liebert® AC and DC Power Products

1-800-543-2378

A.2 Locations

United States

Vertiv Headquarters

505 N Cleveland Ave

Westerville, OH, 43082, USA

Europe

Via Leonardo Da Vinci 8 Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

Asia

7/F, Dah Sing Financial Centre

3108 Gloucester Road, Wanchai

Hong Kong

Appendix B: Guide Specifications

The following are the guide specifications for the Vertiv™ CoolPhase Ceiling and Vertiv™ CoolPhase Condensing Unit.

Vertiv™ CoolPhase Ceiling
Guide Specifications
Ceiling-Mounted Environmental Control System

1.0 GENERAL

1.1 Summary

These specifications describe requirements for a ceiling-mounted thermal management system. The system shall be designed to control the temperature conditions in rooms containing electronic equipment, with good insulation and vapor barrier. The system is also available with an optional humidity control package. The manufacturer shall design and furnish all equipment in the quantities and configurations shown on the project drawings.

1.2 Design Requirements

The Thermal Management system shall be CSA-Listed to the harmonized U.S. and Canadian product safety standards "CSA C22.2 No. 60335-1/UL60335-1 Household and similar electrical appliances - Safety - Part 1: General requirements & CSA C22.2 No. 60335-2-40/UL 60335-2-40 Household and similar electrical appliances - Safety - Part 2: Particular requirements for electrical heat pumps, air conditioners and dehumidifiers" and be marked with cCSAus logo.

The system shall be AHRI Listed, the trusted mark of performance assurance for heating, ventilation, air conditioning and commercial refrigeration equipment, using AHRI Standard 1360.

1.3 Submittals

Submittals shall be provided with the proposal and shall include: Single-Line Diagrams; Dimensional, Electrical, and Capacity Data; Piping and Electrical Connection Drawings.

2.0 PRODUCT

2.1 Cooling System

2.1.1 Air-Cooled Refrigeration System

Refrigeration System

The single refrigeration circuit shall include a hydrophilic-coated Evaporator coil, a liquid-line filter drier, an electronic expansion valve, and from the 3 Ton to 8 Ton units: a liquid-line solenoid valve. The indoor evaporator refrigerant piping shall be with a nitrogen holding charge. Field relief of the Schrader valve shall indicate a leak-free system.

Hydrophilic-Coated Evaporator Coil

- **Indoor Evaporator Unit 1 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve and filter drier. The evaporator coil shall have 2.45 sq ft (0.23 m²) face area, three rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 485.81 FPM (2.47 m/s) at 1186 CFM (2015 CMH). The fan motor shall be 0.60 hp (500 W), maximum rating.
- **Indoor Evaporator Unit 2 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve and filter drier. The evaporator coil shall have 3.1 sq ft (0.28 m²) face area, five rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 476 FPM (2.4 m/s) at 1451 CFM (2465 CMH). The fan motor shall be 1.00 hp (747 W), maximum rating.
- **Indoor Evaporator Unit 3 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve, shut-off valve and filter drier. The evaporator coil shall have 3.1 sq ft (0.28 m²) face area, five rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 500 FPM (2.5 m/s) at 1530 CFM (2599 CMH). The fan motor shall be 4.43 hp (3,300 W), maximum rating.
- **Indoor Evaporator Unit 4 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve, shut-off valve and filter drier. The evaporator coil shall have 5.6 sq ft (0.52 m²) face area, six rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 488 FPM (2.5 m/s) at 2706 CFM (4597 CMH). The fan motor shall be 4.43 hp (3,300 W), maximum rating.
- **Indoor Evaporator Unit 5 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve, shut-off valve and filter drier. The evaporator coil shall have 5.6 sq ft (0.52 m²) face area, four rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 494 FPM (2.5 m/s) at 2739 CFM (4654 CMH). The fan motor shall be 4.43 hp (3,300 W), maximum rating.
- **Indoor Evaporator Unit 8 Ton Models:** The evaporator section shall include evaporator coil, electronic expansion valve, shut-off valve and filter drier. The evaporator coil shall have 7.64 sq ft (0.71 m²) face area, six rows deep. It shall be constructed of internally rifled copper tubes and lanced-type aluminum fins and have a maximum face velocity of 489 FPM (2.5 m/s) at 3741 CFM (6356 CMH). The fan motor shall be 6.97 hp (5,200 W), maximum rating.

The evaporator coil shall be factory charged with nitrogen and sealed.

The system shall be field charged with field supplied R-32 refrigerant. The coil assembly shall be mounted in a condensate drain pan with internally trapped drain line. The evaporator drain pan shall include a factory installed float switch to shut down the evaporator upon high water condition.

2.1.2 Air-Cooled Free-Cooling System

Free-Cooling System

The single Free-Cooling circuit shall include a 3-Way Valve, Inlet Fluid Pipe and Outlet Fluid Pipe. The indoor coil Free-Cooling piping shall be with a nitrogen holding charge. Field relief of the Schrader valve shall indicate a leak-free system.

Hydrophilic-Coated Free-Cooling Coil

- **Indoor Free-Cooling Coil Unit 1 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 2.45 sq ft (0.23 m²) face area, three rows deep. It shall be constructed of internally soft copper tubes and lanced type aluminum fins and have a maximum face velocity of 485.81 FPM (2.47 m/s) at 1186 CFM (2015 CMH).
- **Indoor Free-Cooling Coil Unit 2 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 3.1 sq ft (0.28 m²) face area, three rows deep. It shall be constructed of internally soft copper tubes and lanced-type aluminum fins and shall have a maximum face velocity of 476 FPM (2.4 m/s) at 1451 CFM (2465 CMH).
- **Indoor Free-Cooling Coil Unit 3 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 3.1 sq ft (0.28 m²) face area, three rows deep. It shall be constructed of internally soft copper tubes and lanced-type aluminum fins and shall have a maximum face velocity of 500 FPM (2.5 m/s) at 1530 CFM (2599 CMH).
- **Indoor Free-Cooling Coil Unit 4 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 5.6 sq ft (0.52 m²) face area, four rows deep. It shall be constructed of internally soft-copper tubes and lanced-type aluminum fins and shall have a maximum face velocity of 488 FPM (2.5 m/s) at 2706 CFM (4597 CMH).
- **Indoor Free-Cooling Coil Unit 5 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 5.6 sq ft (0.52 m²) face area, four rows deep. It shall be constructed of internally soft-copper tubes and lanced-type aluminum fins and have a maximum face velocity of 494 FPM (2.5 m/s) at 2739 CFM (4654 CMH).
- **Indoor Free-Cooling Coil Unit 8 Ton Models:** The coil section shall include coil, 3-Way Valve and Fluid Inlet and Outlet Piping. The coil shall have 7.64 sq ft (0.71 m²) face area, four rows deep. It shall be constructed of internal soft-copper tubes and lanced-type aluminum fins and shall have a maximum face velocity of 489 FPM (2.5 m/s) at 3741 CFM (6356 CMH).

Fan Motors

Each unit will have 1 coaxial fan: direct-driven centrifugal fans with diagonal shape impeller and electronically commutated motors. The fan speed shall be variable and automatically regulated by the Vertiv™ iCOM™ through all modes of operation. Each fan should have a dedicated motor, fault monitoring circuitry and speed controller, which provides a level of redundancy. The EC centrifugal fans shall be mounted in front of the coil assembly and draw air through.

2.1.3 Cabinet Construction

The cabinet shall be constructed of heavy gauge galvanized steel and shall be serviceable from one side. Mounting brackets shall be integral to the cabinet design. Internal cabinet insulation shall meet ASHRAE 62.1 requirements for Mold Growth, Humidity & Erosion, tested per UL 181 and ASTM 1338 standards.

2.1.4 Serviceability

The cabinet and chassis shall be constructed of heavy gauge galvanized steel and shall be serviceable from one side. Mounting brackets shall be integral to the cabinet design and be designed for ceiling mounting.

2.2 Fan Section

The fan shall be plug/plenum type, with direct-drive variable-speed motorized impeller, single inlet and dynamically balanced. The fans shall be located to draw air over the coil to ensure even air distribution and maximum coil performance.

The evaporator system shall be capable of delivering the airflows at external static pressures shown in section 2.0.

System shall be suitable for ducted supply and return air distribution. Supply air location shall be field selectable, configured in one of three outlet locations: right side, back of cabinet (4, 5 and 8 Ton only), or right side, bottom of cabinet (1, 2 and 3 Ton only). The bottom supply configuration will require an additional kit (ordered and shipped separately).

2.3 Locking Disconnect Switch

A manual disconnect switch shall be mounted in the electrical panel and be capable of disrupting the flow of power to the unit. The electric panel compartment shall be accessible only with the switch in the Off position. It shall be located behind the main electrical panel box door for quick access.

2.4 Short-Circuit Current Rating (SCCR)

MMI12, 24, 36, 48, 60 and MMI96 Models: The electrical panel shall provide at least 65,000 A SCCR with disconnect switch (Option Disconnect – 2).

2.5 Electronic Expansion Valve

The electronic expansion valve (EEV) shall be selected for precise modulation of refrigerant mass flow in response to varying system loads. The EEV shall incorporate sensors for simultaneous collection of temperature and pressure signals to accurately regulate refrigerant flow. The valve shall operate within a wide envelope, enabling it to reduce condensing pressure when conditions allow, thereby optimizing energy consumption.

2.6 Steam Generating Canister Humidifier

The environmental control system shall be equipped with a steam generating humidifier that is controlled by the microprocessor control system. It shall be complete with disposable canister, all supply and drain valves, steam distributor and electronic controls. The need to change canister shall be announced on the microprocessor wall box control panel. The humidifier shall have a capacity for MMI12, MMI24 and MMI36 of 5 lb/h (2.27 kg/h) and 12 lb/h (5.44 kg/h) for MMI48, MMI60 and MMI96. A LED on the humidifier assembly shall indicate cylinder full, overcurrent detection, fill system fault and end-of-cylinder-life conditions. The canister flush water shall not drain into the coil drain pan, due to risk of aggressive corrosion of the evaporator coil.

2.7 Refrigerant Filter Drier

A factory installed filter drier shall be designed to remove moisture and contaminants from refrigeration system that may otherwise clog or damage the refrigeration system.

2.8 R-32 Refrigerant

The system shall use R-32 refrigerant with a GWP of 675. Refrigerant shall be field supplied and field charged.

2.9 Smoke detector

The smoke sensor shall immediately shut down the Thermal Management system and activate the alarm system when activated. The sensing element shall be located in the return air compartment. This smoke sensor shall not function or replace any room smoke detection system that may be required by local or national codes.

2.10 Filter clog

The filter clog switch senses pressure drops across the filters and shall annunciate the wall controller upon exceeding the adjustable setpoint.

2.11 Ship Loose Accessories

2.11.1 Air Filter Box/Duct Flange

The evaporator section shall be supplied with an optional air filter box for use with ducted installations.

Pleated filters shall be supplied depending on each capacity:

- **1 Ton (MMI12):** One (1) filter 4 in x 16 in x 20 in (102 mm x 406 mm x 508 mm)
- **2 and 3 Ton (MMI24 and MMI36):** One (1) filter 4 in x 16 in x 20 in (102 mm x 406 mm x 508 mm)
- **4 and 5 Ton (MMI48 and MMI60):** Two (2) filters 4 in x 20 in x 20 in (102 mm x 508 mm x 508 mm) each.
- **8 Ton (MMI96):** Two (2) filters 4 in x 20 in x 25 in (102 mm x 508 mm x 635 mm) each.

All pleated type, with a MERV 8 rating, based on ASHRAE 52.2-2007. A duct flange shall be supplied for use on the supply air opening of the unit.

2.11.2 Condensate Pump

The condensate pump shall have the capacity of:

- **1 Ton (MMI12):** ___ GPH (___ l/h) at ___ ft. head (___ kPa).
- **2 and 3 Ton (MMI24 and MMI36):** ___ GPH (___ l/h) at ___ ft. head (___ kPa).
- **4, 5 and 8 Ton (MMI48, MMI60 and MMI96):** ___ GPH (___ l/h) at ___ ft. head (___ kPa).

It shall be complete with integral float switch, pump, motor assembly, discharge check valve, duct/wall mountable bracket and reservoir. A secondary float switch shall be provided to permit field wiring to the unit control to shut down the evaporator upon a high-water level condition.

2.11.3 Condensate Pump Bracket

For the 4, 5 and 6 Ton (MMI48, MMI60, MMI96) models, a condensate pump bracket shall be provided to mount condensate pump directly to the end of the unit, allowing for easier installation and alignment of the condensate pump.

2.11.4 Duct Flanges

A pair of duct flanges shall be supplied for use on the supply and return air openings of the unit. Filters and box should be field-supplied.

2.11.5 Supply and Return Grille

For the 1, 2 and 3 Ton (MMI12, MMI24, MMI36) models, a factory-supplied supply and return grille kit shall be provided for supply and return air delivery through a 2 ft x 4 ft (0.6 m x 0.6 m) T-bar ceiling grid. Kit shall include an air baffle plate, supply grille, hinged return grille, 1 in x 20 in x 20 in (25.4 mm x 508 mm x 508 mm) MERV 8 (ASHRAE 52.2-2007) filter and mounting frame.

2.11.6 Air Distribution Plenum

For the 1, 2 and 3 Ton (MMI12, MMI24, MMI36) models, an air distribution plenum shall be supplied with an integral filter. The plenum shall be 24 in x 48 in (610 mm x 1219 mm) in size and shall provide 3-way air distribution for installation into a standard 24 in x 48 in (610 mm x 1219 mm) ceiling grid. Filter size shall be 4 in x 16 in x 25 in (102 mm x 406 mm x 535 mm), deep-pleated type with a MERV 8 rating, based on ASHRAE 52.2-2007.

3.0 CONTROLS

3.1 Vertiv™ iCOM™ Microprocessor Control with 7-inch color touchscreen

The Vertiv™ iCOM™ shall be microprocessor-based with a 7" color touchscreen display and shall be mounted in an ergonomic, aesthetically pleasing housing. The controls shall be menu-driven. The system shall display user menus for active alarms, event log, graphic data, unit view/status overview (including the monitoring of room conditions, operational status in percentage of each function, date, and time), total run hours, various sensors, display setup and service contacts. A password shall be required to make system changes. Service menus shall include setpoints, standby settings (lead/lag), timers/sleep mode, alarm setup, sensor calibration, maintenance/wellness settings, options setup, system/network setup, auxiliary boards, and diagnostics/service mode.

- **Password Protection** - The Vertiv™ iCOM™ shall contain two unique passwords to protect against unauthorized changes. An auto hide/show feature shall allow the user to see applicable information based on the login used.
- **Unit Backup and Restore** - The user shall be able to create safe copies of important control parameters. The ICOM™ shall have the capacity for the user to automatically backup unit configuration settings to internal memory or USB storage drive. Configuration settings may be transferred to another unit for a more streamlined unit startup.
- **Parameter Download** - The ICOM™ shall enable the user to download a report that lists parameter names, factory default settings, and user-programmed settings in .csv format for remote reference.
- **Parameter Search** - The ICOM™ shall have search fields for efficient navigation and parameter lookup.
- **Setup Wizards** - The ICOM™ shall contain step-by-step tutorials or wizards to provide easy setup of the control.
- **Context-Sensitive Help** - The ICOM™ shall have an on-board help database. The database shall provide context-sensitive help to assist with setup and navigation of the menus.
- **Display Setup** - The user shall be able to configure the display information based on the specific user's preference. Language, units of measure, screen contrast, home screen layout, back-light timer and the hide/show of certain readouts shall be configurable through the display.
- **Additional Readouts** - The display shall enable the user to configure custom widgets on the main screen. Widget options will include items such as fan speed, call for cooling, maintenance status, call for electric reheat, call for dehumidification, call for humidification, airflow, static pressure
- **Status LED's** - The ICOM™ shall show the unit's operating status using an integral LED. The LED shall indicate if the unit has an active alarm; if the unit has an active alarm that has been acknowledged; or if the unit is On, Off or in standby status.
- **Event Log** - The ICOM™ shall automatically store the last 400 unit-only events (messages, warnings, and alarms).
- **Service Contact Information** - The ICOM™ shall be able to store the local service or sales contact information.
- **Upgradeable** - ICOM™ upgrades shall be performed through a USB connection.
- **Timers/Sleep Mode** - The menus shall allow various customer settings for turning the unit On or Off.

- **Menu Layout** - The menus shall be divided into two main menus: User and Service. The User screen shall contain the menus to access parameters required for basic unit control and setup. The Service screen shall be designed for service personnel and shall provide access to advanced control setup features and diagnostic information.
- **Sensor Calibration** - The menus shall allow unit sensors to be calibrated with external sensors.
- **Maintenance/Wellness Settings** - The menus shall allow reporting of potential component problems before they occur.
- **Options Setup** - The menus shall provide operation settings for the installed components.
- **Auxiliary Boards** - The menus shall allow setup of optional expansion boards.
- **Diagnostics/Service Mode** - The ICOM™ control shall be provided with self-diagnostics to aid in troubleshooting. The microcontroller board shall be diagnosed and reported as pass/not pass. Control inputs shall be indicated as On or Off at the front display. Control outputs shall be able to be turned On or Off from the front display without using jumpers or a service terminal. Each control output shall be indicated by an LED on a circuit board.

3.2 Alarms

All unit alarms shall be annunciated through both audio and visual cues, clearly displayed on the screen, automatically recorded in the event log, and communicated to the customer's Building Management System/Building Automation System. The Vertiv™ iCOM™ shall activate an audible and visual alarm in event of any of the following conditions:

- High or Low Pressure
- Discharge High Temperature
- Low discharge superheat
- High- or Low-pressure lock
- Discharge high temperature lock alarm
- Discharge low super heat lock alarm
- Return air high or low temperature alarm
- Remote air high or low temperature alarm
- Filter clogged
- Remote powering off alarm
- Return air temperature sensor failure
- Return air humidity sensor failure
- High- or low-pressure sensor failure
- Suction temperature sensor failure
- Discharge temperature sensor failure
- EEV communication failure
- Compressor driver communication failure
- Water leakage alarm
- Return air high or low humidity alarm

- Air flow loss alarm
- Fan detection board communication failure
- Fan failure alarm
- High condensate water alarm
- Teamwork addresses duplicated
- Teamwork primary unit loss
- Teamwork secondary unit loss
- Smoke alarm
- Custom Alarms
- Humidifier failure alarm
- CP driver protect
- CP driver lock
- EEV driver abnormal
- Air pressure sensor failure
- Filter maintenance
- Refrigerant Leak
- Cooling Disabled
- Condensate Pump High Water
- FreeCooling Lockout
- Reduced ECO Airflow

3.3 Vertiv™ iCOM™ Control Methods and Options

The Vertiv™ iCOM™ shall be factory-set to allow precise monitoring and control of the condition of the air entering and leaving the unit. This control shall include predictive methods to control air flow and cooling capacity-based control sensors installed. Proportional and Tunable PID shall also be user-selectable options.

3.4 Controlling Sensor Options

The Vertiv™ iCOM™ shall be flexible in the sense that it shall allow for controlling the capacity and fan from multiple different sensor selections. The sensor selections shall be:

Cooling Capacity

- Remote
- Return

Fan Speed

- Remote
- Return
- Manual (for diagnostic or to receive a signal from the BMS through the Liebert remote monitoring devices or analog input)

3.4.1 Temperature Compensation

The Vertiv™ iCOM™ shall be able to adjust the capacity output based on Return or Remote temperature conditions to meet SLA guidelines while operating to highest efficiency.

3.4.2 Humidity Control

Dew point and relative humidity control methods shall be available (based on user preference) for humidity control within the conditioned space

3.5 Multi-Unit Coordination

Vertiv™ iCOM™ teamwork shall save energy by preventing multiple units in an area from operating in opposing modes. Teamwork allows the control to optimize a group of connected cooling units equipped with Vertiv™ iCOM™ using the U2U (Unit-to-Unit) network. There shall be three modes of teamwork operation:

- **Teamwork Mode 1:** Is best in small rooms with balanced heat loads. The controlling temperature and humidity sensor readings of all units in operation (fan on) are collected to be used for an average or worst-case sensor reading (user selectable). The master unit shall send the operating requirements to all operating units in the group. The control band (temperature, fan, and humidity) is divided and shared among the units in the group.
- **Teamwork Mode 2:** The iCOM™ calculates the worse-case demand for heating, cooling humidification and dehumidification. Based on the greatest demand within the group, each unit operates independently, meaning that the unit may respond to the thermal load and humidity conditions based on the unit's controlling sensors.

3.6 Standby/Lead Lag

The Vertiv™ iCOM™ shall allow scheduled rotation to keep equal run time on units and provide automated emergency rotation of operating and standby units.

3.7 Standby Unit Cascading

The Vertiv™ iCOM™ cascade option shall allow the units to turn On and Off based on heat load when utilizing Optimized Aisle, Teamwork Mode 3 and remote temperature sensors. Cascade mode dynamically coordinates the fan speed to save energy and to meet the cooling demands. For instance, with a Vertiv™ iCOM™ group of six units and only 50% of the heat load, the iCOM™ shall operate only four units at 80% fan speed and leave the other two units in standby. As the heat load increases, the iCOM™ shall automatically respond to the additional load and bring on another unit, increasing the units in operation to five. As the heat load shifts up or down, the control shall meet the needs by cascading units On or putting them into standby.

3.8 Virtual Primary

As part of the robust architecture of the Vertiv™ iCOM™ control, it shall allow for a virtual primary that coordinates operation. The Virtual Primary function shall provide smooth control operation if the group's communication is compromised. When the lead unit, which is in charge of component staging in teamwork, unit staging and standby rotation, becomes disconnected from the network, the iCOM™ shall automatically assign a virtual primary. The virtual primary shall assume the same responsibilities as the primary until communication is restored.

3.9 Compressor Short Cycle Control

To help maximize the life of the compressor, there shall be start-to-next start delay for the compressor. The control shall monitor the number of compressor starts in an hour. If the compressor starts more than 6 times in 60 minutes, the local display and remote monitoring shall notify the user through a Compressor 1 Short Cycle event. The Compressor 1 Short Cycle event will remain active for at least 1 hour after being enabled.

3.10 Vertiv™ CoolPhase Condensing Unit

Units may be matched to a premium efficiency condenser control with enhanced monitoring, alarming, and diagnostics. The condenser control shall have an automated, low-noise mode and fan reversal for cleaning mode.

3.11 System Auto Restart

The auto restart feature shall automatically restart the system after a power failure. Time delay shall be programmable.

3.11.1 Sequential Load Activation

On initial startup or restart after power failure, each operational load shall be sequenced with a minimum delay of one second to minimize total inrush current.

3.11.2 Low Pressure Monitoring

Units shall ship standard with low-pressure transducers for monitoring compressor suction pressure. If the pressure falls due to loss of charge or other mechanical cause, the corresponding circuit shall shut down to prevent equipment damage. The user shall be notified of the low-pressure condition through the local display and remote monitoring.

3.12 Winter Start Time Delay - Air - Cooled Models

An adjustable software timer shall be provided to assist with compressor starting during cold weather. When the compressor starts, the low-pressure input shall be ignored for the period set in the user-adjustable timer. Once the time period has elapsed after the compressor start, the low-pressure input should remain in the normal state. If the low-pressure input does not remain in the normal state when the time delay has elapsed, the circuit shall lock out on low pressure. The low-pressure alarm shall be announced on the local display and communicated to remote monitoring systems.

3.12.1 Advanced Freeze Protection

Units shall ship standard with advanced freeze protection enabled. The advanced freeze protection shall monitor the circuit pressure using a transducer. The control shall interact with the fan and compressor to prevent the unit coil from freezing if circuit suction pressure drops. If a freeze condition is detected, the user shall be notified through the local display and remote monitoring systems.

3.13 Refrigerant Pressure Transducer Failure

The control shall monitor the high-side and low-side refrigerant pressure transducers. If the control senses the transducer has failed, has been disconnected, has shorted or the reading has gone out of range, the user shall be notified through an event on the local display and remote monitoring. The corresponding circuit in which the failure has occurred shall be disabled to prevent unit damage.

3.14 Oil Return Protection

The control shall monitor compressor operation and staging to ensure that liquid and hot gas velocity are maintained for proper oil return to the compressor.

3.15 Digital Scroll High Temperature Protection

The control shall monitor digital scroll temperature during unit operation. A compressor temperature limit shall be imposed to help prevent damage to the compressor. If the temperature reaches the maximum temperature limit, the compressor shall be locked out and an alarm shall be annunciated on the local display and through monitoring. After the initial lockout, the control shall continue to monitor compressor temperature during the off-cycle and re-enable the circuit once a safe operating temperature is reached. The control shall store the number of high temperature trips. The number of trips shall be accessible through the local display.

3.16 Digital Scroll Sensor Failure

The control shall monitor the status of the digital scroll sensor. If the control senses that the thermistor is disconnected, shorted or the reading goes out of range, the user shall be notified through an event on the local display and remote monitoring.

3.17 Compressor High and Low Temperature Limit Protection

The control shall monitor the return air to ensure that the compressor(s) are operated within the manufacturer's defined window of operation. If the return air temperature deviates from the manufacturer's window of operation, the Vertiv™ iCOM™ shall automatically adjust to prevent damage to the cooling unit or reduction in its reliability.

3.18 Compressor Run Time Monitoring

- The control shall log these compressor statistics:
 - Number of compressor starts
 - Run hours
 - Average run time
 - Starts per day
 - Starts per day worst
 - Number of high-pressure alarms
 - Operating phase in which the high-pressure alarm occurred
 - Number of low-pressure alarms
 - Operating phase in which the low-pressure alarm occurred
 - Number of compressor overloads
 - Number of high-temperature alarms

The user shall have the ability to monitor compressor operating temperature and pressure from the local display to be used as a diagnostic tool.

3.19 Return Temperature/ Humidity Sensor

The Vertiv™ CoolPhase Ceiling shall be provided with the Vertiv™ Liebert® Return Temperature/Humidity sensor. The sensor shall provide real-time, direct feedback to the cooling unit to optimize the amount of cooling and airflow provided. The sensor data shall be available to remote BMS and monitoring systems. The sensor network shall consist of one CAN wire leaving the cooling unit and connecting to the Return Temperature/Humidity Sensor. Additional CAN based sensors (Remote) shall be connected to this sensor.

3.20 Communication Interface

3.20.1 Remote Shutdown Terminal

The remote shutdown terminal shall provide a location to remotely shut down the unit, complying with the National Fire Code.

3.20.2 Common Alarm Contact

The common alarm contact shall provide a set of normally open contacts for remote indication of unit alarms.

3.20.3 Vertiv™ CoolPhase Ceiling One Extra Common Alarm Contact

One additional contact (total of two sets) of normally open (n/o) contacts for remote indication of unit alarms shall be provided.

3.21 10DI Digital Input Expansion Module

The 10DI Digital Input Expansion Module is an optional accessory designed to extend the digital input capabilities of system's main controller. It features 10 digital input channels and communicates with the main controller via Modbus RTU protocol over RS-485. The module is primarily used to monitor external feedback signals from EC (Electronically Commutated) fans and customer-installed Water Underflow accessory.

Core Functions:

- Provides 10 additional digital inputs for system integration
- Supports two types of digital input signals:
 - Frequency-based feedback (tachometer) from EC fans for fan status monitoring
 - Dry contact input for user-defined alarms (e.g., Water Underflow)
- Real-time status update of all input signals via Modbus communication
- Facilitates system diagnostics and enhances fault detection capabilities

Communication and Integration:

- Protocol: Modbus RTU (RS-485)

3.22 Refrigerant Leak Detection (RLS) System

Due to the slightly flammable nature of Refrigerant R-32, a refrigerant leak detector is installed into the unit.

Operation

When the sensor is powered up, an LED will indicate the sensor status. The LED is located on the reverse side of the sensor near the sensor membrane. While the sensor is mounted, the LED will backlight the sensor and be visible by the reflection from the mounting surface.

Item	Description
Solid green	Sensor power-up and self-test
Blinking green	Normal operation (heartbeat)
Solid red	Alarm state – gas detected
Blinking red	Sensor fault

In case of leakage the following actions will be taken:

- The compressor will shut down
- The evaporator and condenser fans will operate at 100% of their allowable speed
- The EEV will be closed completely
- Safety Shut-off Valve deactivates and will close completely, preventing additional refrigerant flow

NOTE: In case of leakage the unit will start mitigation actions and will send an alarm:

- The mitigation actions will continue for 5 minutes after detected gas levels drop below the sensor's factory default threshold setting

- Once the detected gas levels are below threshold and the 5-minute delay expires, the sensor will reactivate its status relay.
- Once the sensor's status relay is reactivated, the refrigerant leak related alarms are automatically cleared, the Evaporator and Condenser fans will be deactivated and turned Off, and Cooling Lockout alarms are displayed on the HMI
- Authorized personnel will clear the Cooling Lockout by pushing the refrigerant leak clear push button for 10 seconds. The push button is located in the EBOX
- Once cleared, the Safety Shut Off Valve will reactivate and open completely, the Cooling Lockout alarms are cleared automatically and the system will return to normal cooling operation, if the unit was previously actively cooling prior to the refrigerant leak.

4.0 HEAT REJECTION

4.1 Vertiv™ CoolPhase Condensing Unit

4.1.1 Standard Features

The condenser shall consist of microchannel condenser coil(s), propeller fan(s) direct driven by individual fan motor(s), electrical controls, housing. Microchannel coils shall provide superior heat transfer, reduce air side pressure drop, increase energy efficiency, and shall significantly reduce the system refrigerant volume required. EC fans and fan operating techniques shall provide reduced maximum sound levels. Various methods shall be available to match indoor unit type, maximum outdoor design ambient and maximum sound requirements.

The unit includes service valves, low-pressure and high-pressure transducer, crankcase and heating belt for low/ambient application.

4.1.2 Compressor

The compressor shall be scroll-type with variable-capacity operation from 20% to 100%, commonly known as a variable-speed scroll compressor. The compressor shall include vibration isolators and shall operate at 100% speed at 60 Hz as follows: 1440 RPM for CU03, 1910 RPM for CU07, 2400 RPM for CU11, 2640 RPM for CU15, 3900 RPM for CU21, 5100 RPM for CU28, and 6000 RPM for CU35. The compressor shall be removable and serviceable from the front of the unit.

4.1.3 R-32 Refrigerant

The system shall be designed for use with R-32 refrigerant, which meets the U.S. Clean Air Act for phaseout of HCFC refrigerants.

4.1.4 Condenser Coil

Aluminum Microchannel Coil

Microchannel coils shall be constructed of aluminum microchannel tubes, fins, and manifolds. Tubes shall be flat and contain multiple, parallel flow microchannels and span between aluminum headers. Full-depth, louvered aluminum fins shall fill spaces between the tubes. Tubes, fins, and aluminum headers shall be oven-brazed to form a complete refrigerant-to-air heat exchanger coil. Copper stub pipes shall be electric resistance welded to aluminum coils and joints protected with polyolefin to seal joints from corrosive environmental elements. Complete coil/piping assembly shall be filled and sealed with an inert gas holding charge for shipment.

Aluminum Microchannel Coil with E-Coat

Aluminum microchannel coil with E-coat shall be epoxy-coated for extended coil life in corrosive environments, such as coastal areas. Factory-applied E-coat using immersion and baking process shall provide a flexible epoxy-coating to all coil surfaces. Coil color shall be black and shall be protected from solar UV ray degradation with a factory-applied UV topcoat. E-coat shall increase coil corrosion protection and shall reduce heat rejection capacity degradation to less than 10% after a severe 2000-hour 5% neutral salt spray test (ref. ASTM B117). The coating process shall ensure complete coil encapsulation.

4.1.5 Fan Motor/Blade Assembly

The fan motor/blade assembly shall have an external rotor motor, fan blades and fan/finger guard. Fan blades shall be constructed of cast aluminum or glass-reinforced polymeric material. Fan guards shall be heavy gauge, close-meshed steel wire, coated with a black, corrosion-resistant finish. Fan terminal blocks shall be enclosure located on the top of the fan motor. Fan assemblies shall be factory- balanced, tested before shipment and mounted securely to the condenser structure.

EC Fan Motor

The EC fan motors shall be electronically commutated for variable speed operation and shall have ball bearings. The EC fans shall provide internal overload protection through built-in electronics. Each EC fan motor shall have a built-in controller and communication module, linked via RS-485, allowing each fan to receive and respond to precise fan speed inputs from the controller.

4.1.6 Electrical Controls

Electrical controls and service connection terminals shall be provided and factory-wired inside the attached control panel section. A locking disconnect switch shall be factory-mounted and wired to the electrical panel and controlled via an externally mounted locking and lockable door handle. Only high-voltage supply wiring and low-voltage indoor unit communication/interlock wiring shall be required at condenser installation.

Premium Control

The EC fan/Premium Control System shall include an electronic control board, EC fan motor(s) with internal overload protection, refrigerant and ambient temperature thermistors, and refrigerant pressure transducers. The control board shall receive an indoor unit run signal via field-supplied low voltage interlock wires to the compressor side switch via field-supplied CANbus communication wires from the indoor unit's Vertiv™ iCOM™ or via both. The control board shall use sensor and communication inputs to maintain refrigerant pressure by controlling each EC fan on the same refrigerant circuit to the same speed.

Locking Disconnect

A locking-type disconnect switch shall be factory-mounted and wired to the electrical panel. The switch shall be accessible from the outside of the unit with the door closed and shall prevent access to the high-voltage electrical components until switched to the Off position. The locking disconnect shall be lockable in support of lockout/tag-out safety programs.

Short Circuit Current Rating

The electrical panel shall provide at least 65,000A SCCR.

4.1.7 Cabinet

The condenser cabinet shall be constructed of galvanized steel sheet with powder coating finish and shall have a fan. Internal structural support members including microchannel supports and wire grille to protect microchannel, shall be galvanized steel with powder coating finish for strength and corrosion resistance. A panel door shall be provided next to the electrical enclosure to permit microchannel cleaning. And an electrical panel shall be contained inside a factory mounted, IP54 weatherproof electrical enclosure.

5.0 EXECUTION

5.1 Installation of Vertiv™ Thermal Management Units

5.1.1 General

Install cooling units in accordance with manufacturer's installation instructions. Install units plumb and level, firmly anchored in locations indicated and maintain manufacturer's recommended clearances.

5.1.2 Electrical Wiring

Install and connect electrical devices furnished by manufacturer but not specified to be factory mounted. Furnish copy of manufacturer's electrical connection diagram submittal to electrical contractor.

5.1.3 Piping Connections

Install and connect devices furnished by manufacturer but not specified to be factory mounted. Furnish copy of manufacturer's piping connection diagram submittal to piping contractor.

5.1.4 Refrigerant Charging

Charge completed cooling system in accordance with manufacturer's refrigerant charging instructions.

5.1.5 Field Quality Control

Start-up cooling units in accordance with manufacturer's startup instructions. Test controls and demonstrate compliance with requirements. These specifications describe requirements for a computer room environmental control system. The system should be designed to maintain temperature and humidity conditions in the rooms containing electronic equipment.

The manufacturer shall design and furnish all equipment to be fully compatible with heat dissipation requirements.

5.1.6 Supply and Drain Water Piping

Connect water supply and drains to air conditioning unit. Provide pitch and trap as manufacturer's instructions and local codes require.

5.1.7 Vertiv™ CoolPhase Condensing Unit

Install condenser in accordance with manufacturer's installation instructions provided with seismic option. Firmly anchor, maintaining manufacturer's recommended clearances. Mounting requirement details such as anchor brand, type, embedment depth, edge spacing, anchor-to-anchor spacing, concrete strength, special inspection and attachment to non-building structures must be outlined and approved by the Engineer of Record for the projection or building. Wiring and piping connections must permit movement in three dimensions and isolate the unit from field connections. Electrical conduits shall be flexible, having at least one bend between the rigid connection at the unit cabinet and the connection to rigid conduit or foundation. The piping flexible connection or loop must be suitable for the operation pressure and temperature of the system. Furnish copy of manufacturer's piping connection diagram submittal to piping contractor.

Appendix C: Submittal Drawings

The following are the submittal drawings of the Vertiv™ CoolPhase Ceiling and Vertiv™ CoolPhase Condensing Unit.


Document Number	Title
Component Locations	
20000077	Component Location, Evaporator Unit, 1 Ton
20000078	Component Location, Evaporator Unit, 2 & 3 Ton
20000079	Component Location, Evaporator Unit, 4 & 5 Ton
20000080	Component Location, Evaporator Unit, 8 Ton
20000915	Component Location Condenser Unit 3.5, 7 & 11 kW
20000710	Component Location Condenser Unit 15 kW
20000128	Component Location Condenser Unit 21 & 28 kW
Standard and Optional Features	
20000200	Standard and Optional Features Evaporator Unit, 1-8 Ton
20000162	Standard and Optional Features Condensing Unit, 3.5, 7, 11 kW
20000574	Standard and Optional Features Condensing Unit, 15, 21, 28 kW
iCOM submittals	
20000914	HMI Display Field Connection
20000913	Vertiv™ iCOM Unit-to-Unit Network Connection
Planning Dimensions	
20000081	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 1 Ton
20000082	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 2 & 3 Ton
20000083	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 2 & 3 Ton
20000084	Vertiv CoolPhase Ceiling Dimensional Data Cabinet Dimensions, 8 Ton
20000159	Vertiv CoolPhase Condensing Unit Dimensional Data Condenser Unit 3.5, 7 & 11 kW
20000575	Vertiv CoolPhase Condensing Unit Dimensional Data Condenser Unit 3.5, 7 & 11 kW
20000136	Vertiv CoolPhase Condensing Unit Cabinet Dimensions Condenser Unit 21 & 28 kW
Electrical Field Connections & Terminal Blocks	
20000193	CoolPhase Ceiling Electrical Field Connections 1 Ton DX & FC
20000194	CoolPhase Ceiling Electrical Field Connections 2 & 3 Ton DX & FC
20000195	CoolPhase Ceiling Electrical Field Connections 2 & 3 Ton DX & FC
20000196	CoolPhase Ceiling Electrical Field Connections 8 Ton DX & FC
20000161	CoolPhase Condensing Unit Electrical Field Connections 3.5, 7 & 11 kW
20000706	CoolPhase Condensing Unit Electrical Field Connections 15 kW
20000708	CoolPhase Condensing Unit Electrical Field Connections 21 kW

Document Number	Title
20000328	CoolPhase Condensing Unit Electrical Field Connections 28 kW
CoolPhase Ceiling Electrical Schematics	
10092534P1DRW	CoolPhase Ceiling Electrical Schematics 1 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P2DRW	CoolPhase Ceiling Electrical Schematics 2 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P3DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 1-Ph 203 230 VAC 50/60 Hz
10092534P4DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P11DRW	CoolPhase Ceiling Electrical Schematics 3 Ton 3-Ph 460 VAC 50/60 Hz
10092534P5DRW	CoolPhase Ceiling Electrical Schematics 4 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P8DRW	CoolPhase Ceiling Electrical Schematics 4 Ton 3-Ph 460 VAC 50/60 Hz
10092534P6DRW	CoolPhase Ceiling Electrical Schematics 5 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P9DRW	CoolPhase Ceiling Electrical Schematics 5 Ton 3-Ph 460 VAC 50/60 Hz
10092534P7DRW	CoolPhase Ceiling Electrical Schematics 8 Ton 3-Ph 203 230 VAC 50/60 Hz
10092534P10DRW	CoolPhase Ceiling Electrical Schematics 8 Ton 3-Ph 460 VAC 50/60 Hz
CoolPhase Condensing Unit Electrical Schematics	
29044991	CoolPhase Condensing Unit Electrical Schematics 3.5 & 7 kW 230 V 1-Ph
29044993	CoolPhase Condensing Unit Electrical Schematics 11 kW 230 V 3-Ph
29045791	CoolPhase Condensing Unit Electrical Schematics 11 kW 460 V 3-Ph
10068508P9	CoolPhase Condensing Unit Electrical Schematics 15 kW 230 V 3-Ph
10068508P10	CoolPhase Condensing Unit Electrical Schematics 15 kW 460 V 3-Ph
10068508P11	CoolPhase Condensing Unit Electrical Schematics 21 kW 230 V 3-Ph
10068508P12	CoolPhase Condensing Unit Electrical Schematics 21 kW 460 V 3-Ph
10068508P1	CoolPhase Condensing Unit Electrical Schematics 28 kW 230 V 3-Ph
10068508P2	CoolPhase Condensing Unit Electrical Schematics 28 kW 460 V 3-Ph
Piping General Arrangement Drawings	
20000567	CoolPhase Ceiling General Arrangement 1-2 Ton Dx Air Cooled
20000568	CoolPhase Ceiling General Arrangement 3-8 Ton Dx Air Cooled
20000569	CoolPhase Ceiling General Arrangement 1-8 Ton Free Cooling
Piping Schematics Drawings	
20000167	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 1 Ton Piping Schematics
20000168	CoolPhase Ceiling Piping Schematics Free Cooling Option 1 Ton Piping Schematics
20000169	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 2 & 3 Ton Piping Schematics
20000170	CoolPhase Ceiling Piping Schematics Free Cooling Option 2 & 3 Ton Piping Schematics
20000171	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 4 & 5 Ton Piping Schematics

Document Number	Title
20000172	CoolPhase Ceiling Piping Schematics Free Cooling Option 4 & 5 Ton Piping Schematics
20000173	CoolPhase Ceiling Piping Schematic Direct Expansion Unit 8 Ton Piping Schematics
20000174	CoolPhase Ceiling Piping Schematics Free Cooling Option 8 Ton Piping Schematics
Primary Connection Locations	
20000175	CoolPhase Ceiling Primary Connection Locations 1 Ton Dx & Fc
20000176	CoolPhase Ceiling Primary Connection Locations 2 & 3 Ton Dx & Fc
20000177	CoolPhase Ceiling Primary Connection Locations 4 & 5 Ton Dx & Fc
20000178	CoolPhase Ceiling Primary Connection Locations 8 Ton Dx & Fc
20000160	CoolPhase Condensing Unit Primary Connection Locations 3.5, 7 & 11 kW
20000573	CoolPhase Condensing Unit Primary Connection Locations 3.5, 7 & 11 kW
20000154	CoolPhase Condensing Unit Primary Connection Locations 15, 21 & 28 kW
Piping Schematic Condensing Unit Above / Below Indoor Unit	
20000916	CoolPhase Condensing Unit Above / Below Indoor Unit 3.5, 7 & 11 kW
20000572	CoolPhase Condensing Unit Above / Below Indoor Unit 15 & 21 kW
20000324	CoolPhase Condensing Unit Above / Below Indoor Unit 28 kW
DX Products with R32	
20000457	A2L Refrigerant Dispersal Volume Calculation R32
Pipe Dimensional Data	
20000160	CoolPhase Condensing Unit Piping Dimensional Data 3.5, 7 & 11 kW
20000573	CoolPhase Condensing Unit Piping Dimensional Data 15 & 21 kW
20000326	CoolPhase Condensing Unit Piping Dimensional Data 28 kW
OPTIONAL ACCESSORIES	
Filter Box	
20000085	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 1 Ton
20000088	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 2 & 3 Ton
20000091	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 4 & 5 Ton
20000092	Vertiv™ CoolPhase Ceiling Dimensional Data Filter Box 8 Ton
Condensate Pump Kit	
20000104	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 1 Ton
20000105	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 2 & 3 Ton
20000106	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 4 & 5 Ton
20000107	Vertiv™ CoolPhase Ceiling Piping Connections Condensate Pump Connection Locations, 8 Ton
Duct Flanges	


Document Number	Title
20000256	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 1 Ton
20000257	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 2 & 3 Ton
20000258	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 4 & 5 Ton
20000259	Vertiv™ CoolPhase Ceiling Dimensional Data Duct Flanges, 8 Ton
Downflow Grille	
20000087	Vertiv™ CoolPhase Ceiling Dimensional Data Downflow Grille 1 Ton
20000090	Vertiv™ CoolPhase Ceiling Dimensional Data Downflow Grille 2 & 3 Ton
Air Distribution Plenum	
20000086	Vertiv™ CoolPhase Ceiling Dimensional Data Air Distribution Plenum 1 Ton
20000089	Vertiv™ CoolPhase Ceiling Dimensional Data Air Distribution Plenum 2 & 3 Ton
Hail Guard	
20000729	CoolPhase Condensing Unit Hail Guard 15 kW
20000183	CoolPhase Condensing Unit Hail Guard 21/28 kW
Wind Baffle Kit	
20000728	CoolPhase Condensing Unit Wind Baffle Kit 15 kW

COMPONENT LOCATION EVAPORATOR UNIT, 1 TON

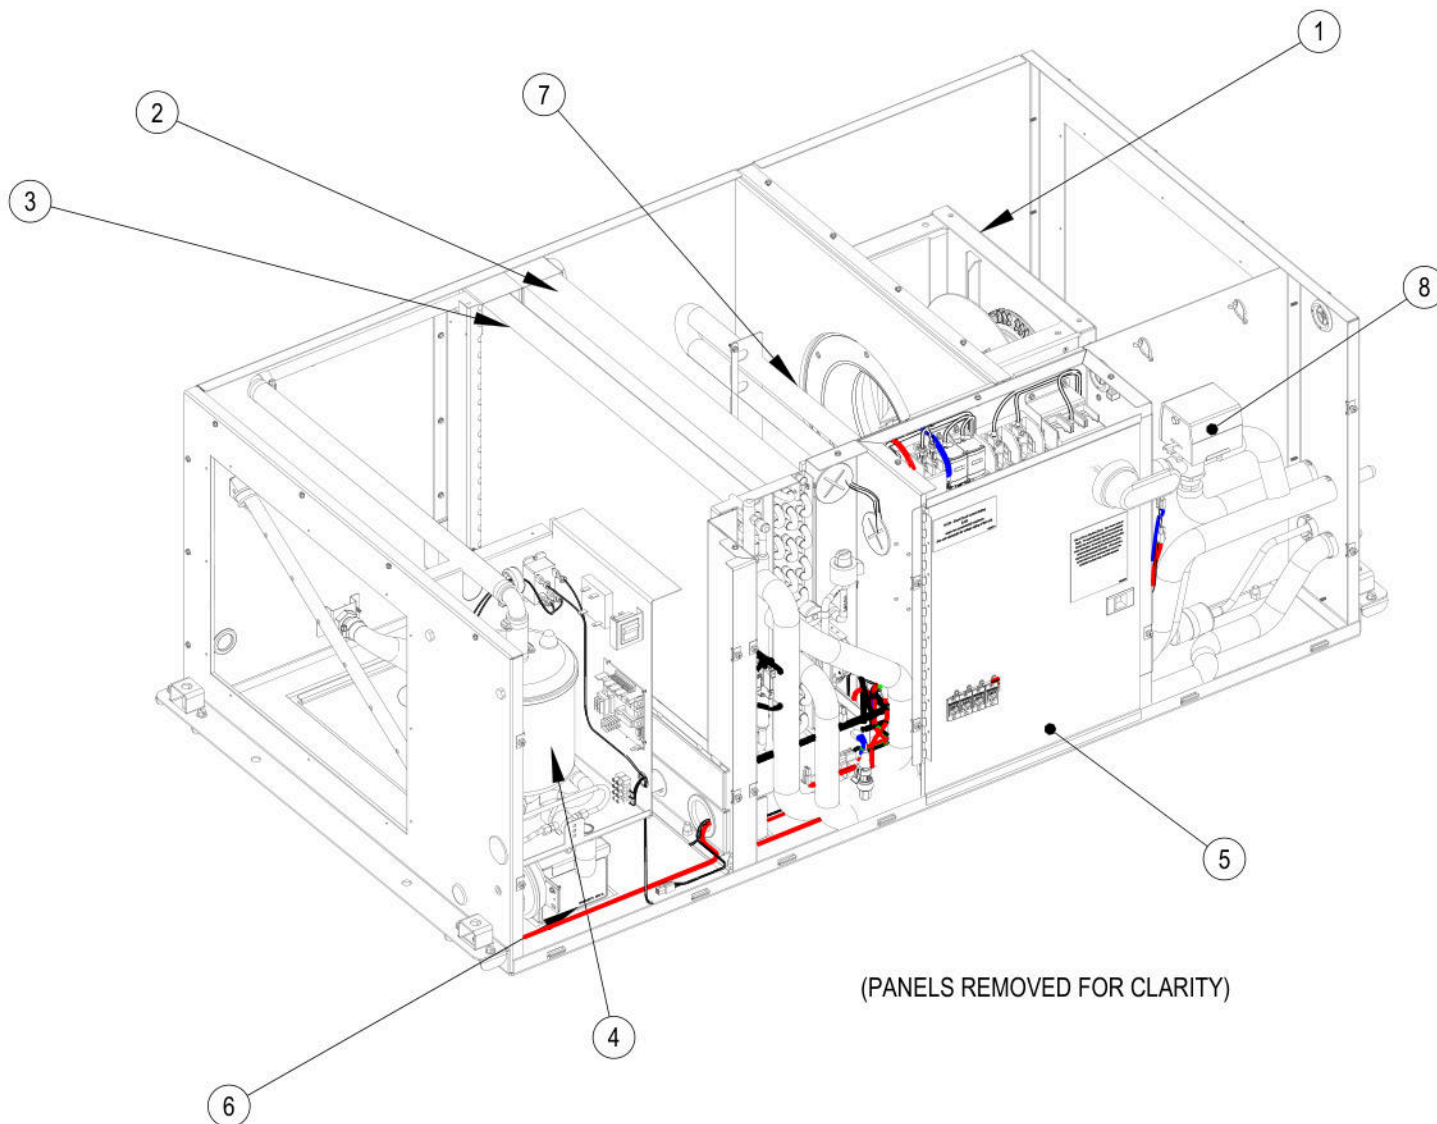


ITEM	DESCRIPTION
1	DIRECT DRIVE FAN WITH VARIABLE SPEED EC MOTOR
2	EVAPORATOR COIL DX
3	EVAPORATOR COIL FREE COOLING (OPTIONAL)
4	HUMIDIFIER (OPTIONAL)
5	ELECTRICAL BOX
6	SMOKE SENSOR (OPTIONAL)
7	ELECTRICAL REHEAT (OPTIONAL)
8	3-WAY VALVE (ONLY IN FREE COOLING OPTION)

COMPONENT LOCATION EVAPORATOR UNIT, 2 & 3 TON

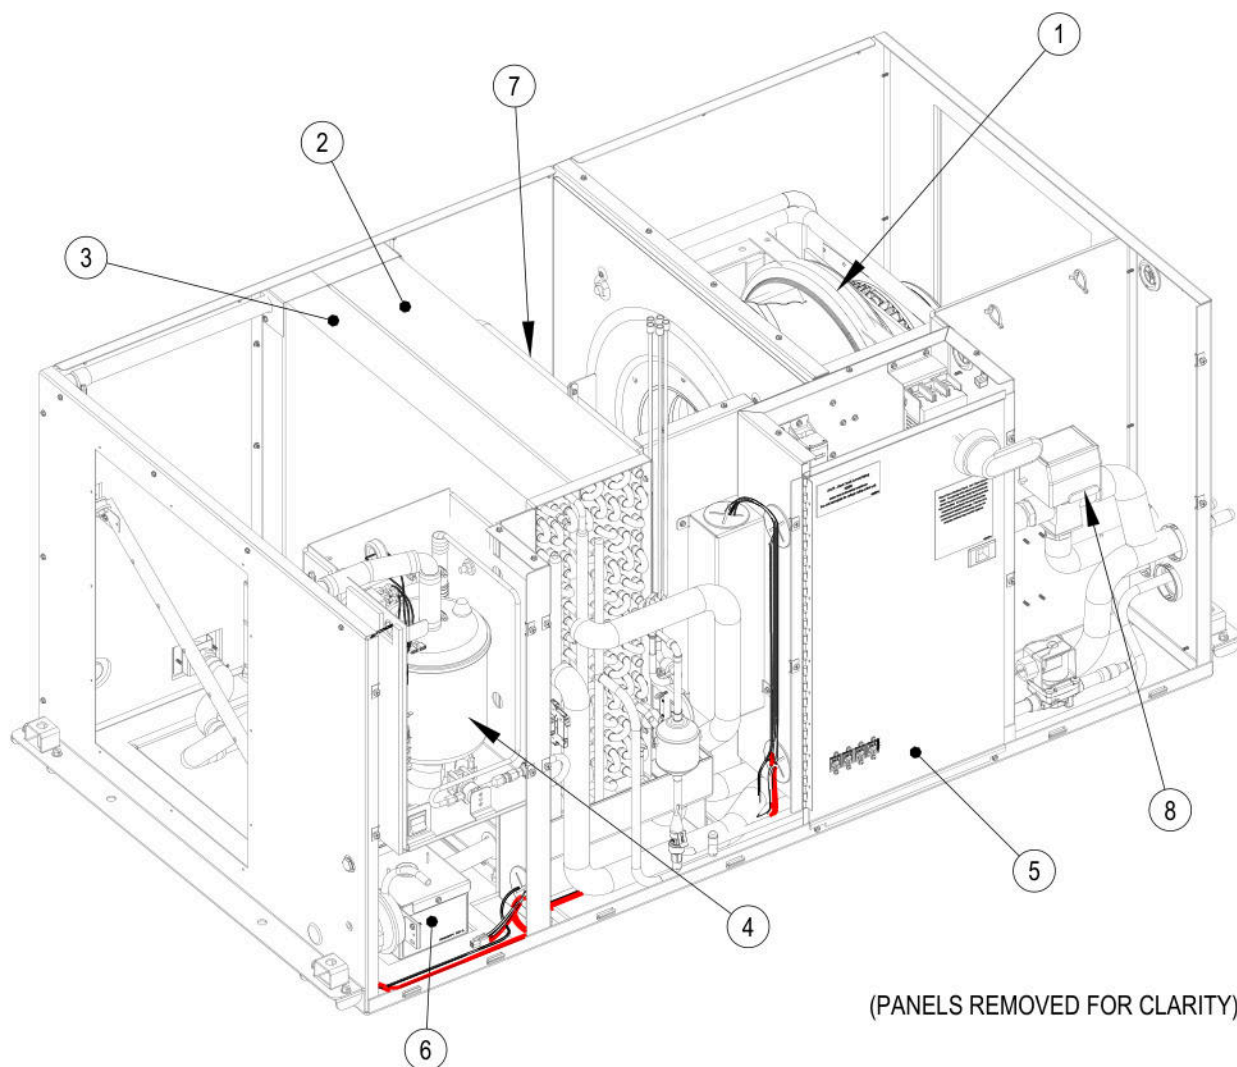

ITEM	DESCRIPTION
1	DIRECT DRIVE FAN WITH VARIABLE SPEED EC MOTOR
2	EVAPORATOR COIL DX
3	EVAPORATOR COIL FREE COOLING (OPTIONAL)
4	HUMIDIFIER (OPTIONAL)
5	ELECTRICAL BOX
6	SMOKE SENSOR (OPTIONAL)
7	ELECTRICAL REHEAT (OPTIONAL)
8	3-WAY VALVE (ONLY IN FREE COOLING OPTION)


COMPONENT LOCATION EVAPORATOR UNIT, 4 & 5 TON

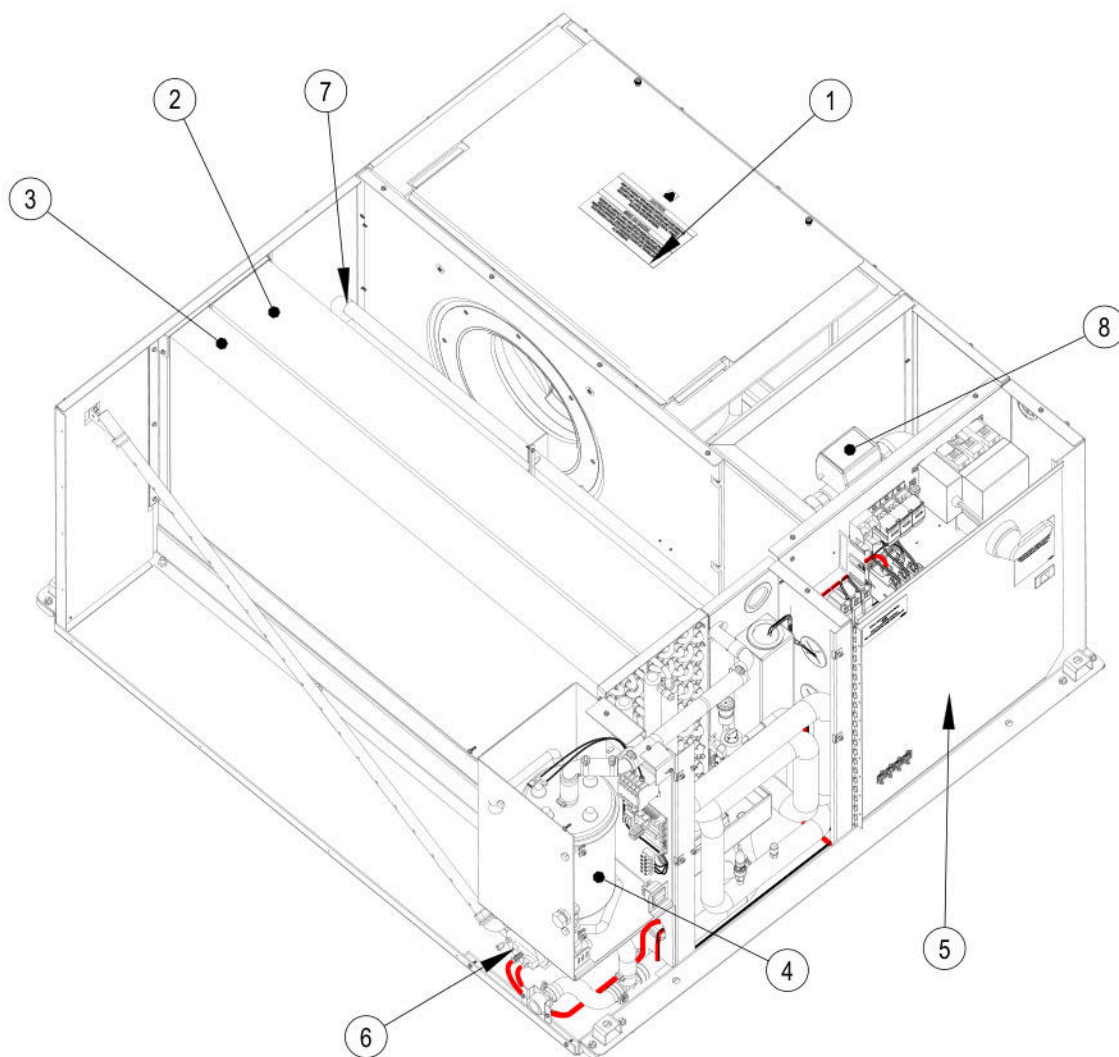

(PANELS REMOVED FOR CLARITY)

ITEM	DESCRIPTION
1	DIRECT DRIVE FAN WITH VARIABLE SPEED EC MOTOR
2	EVAPORATOR COIL DX
3	EVAPORATOR COIL FREE COOLING (OPTIONAL)
4	HUMIDIFIER (OPTIONAL)
5	ELECTRICAL BOX
6	SMOKE SENSOR (OPTIONAL)
7	ELECTRICAL REHEAT (OPTIONAL)
8	3-WAY VALVE (ONLY IN FREE COOLING OPTION)

COMPONENT LOCATION EVAPORATOR UNIT, 8 TON

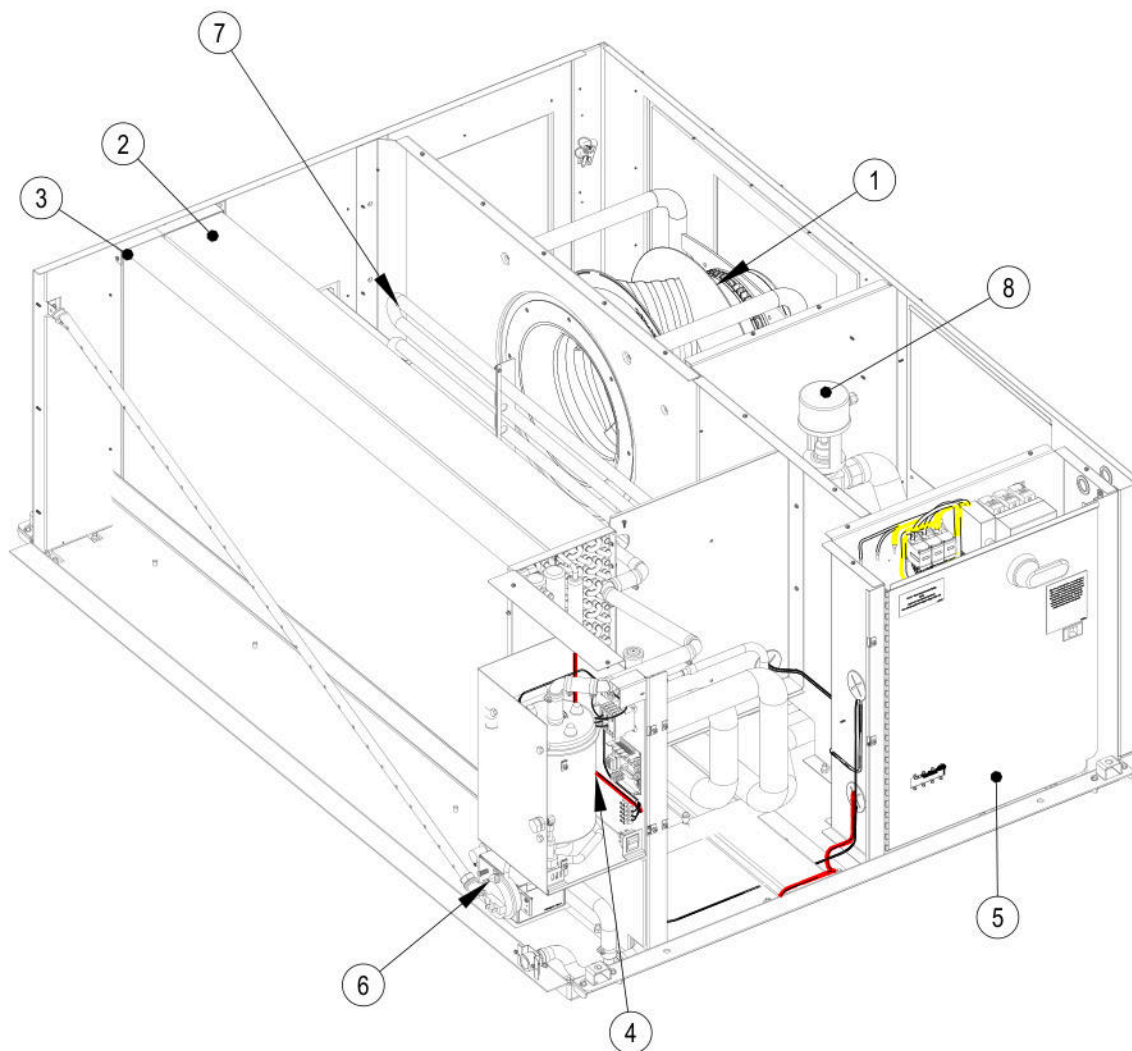

(PANELS REMOVED FOR CLARITY)


ITEM	DESCRIPTION
1	DIRECT DRIVE FAN WITH VARIABLE SPEED EC MOTOR
2	EVAPORATOR COIL DX
3	EVAPORATOR COIL FREE COOLING (OPTIONAL)
4	HUMIDIFIER (OPTIONAL)
5	ELECTRICAL BOX
6	SMOKE SENSOR (OPTIONAL)
7	ELECTRICAL REHEAT (OPTIONAL)
8	3-WAY VALVE (ONLY IN FREE COOLING OPTION)



VERTIV COOLPHASE CEILING

GENERAL ARRANGEMENT, DIMENSIONAL DATA & FIELD CONNECTIONS

VERTIV® ICOM™ WALLMOUNT DISPLAY

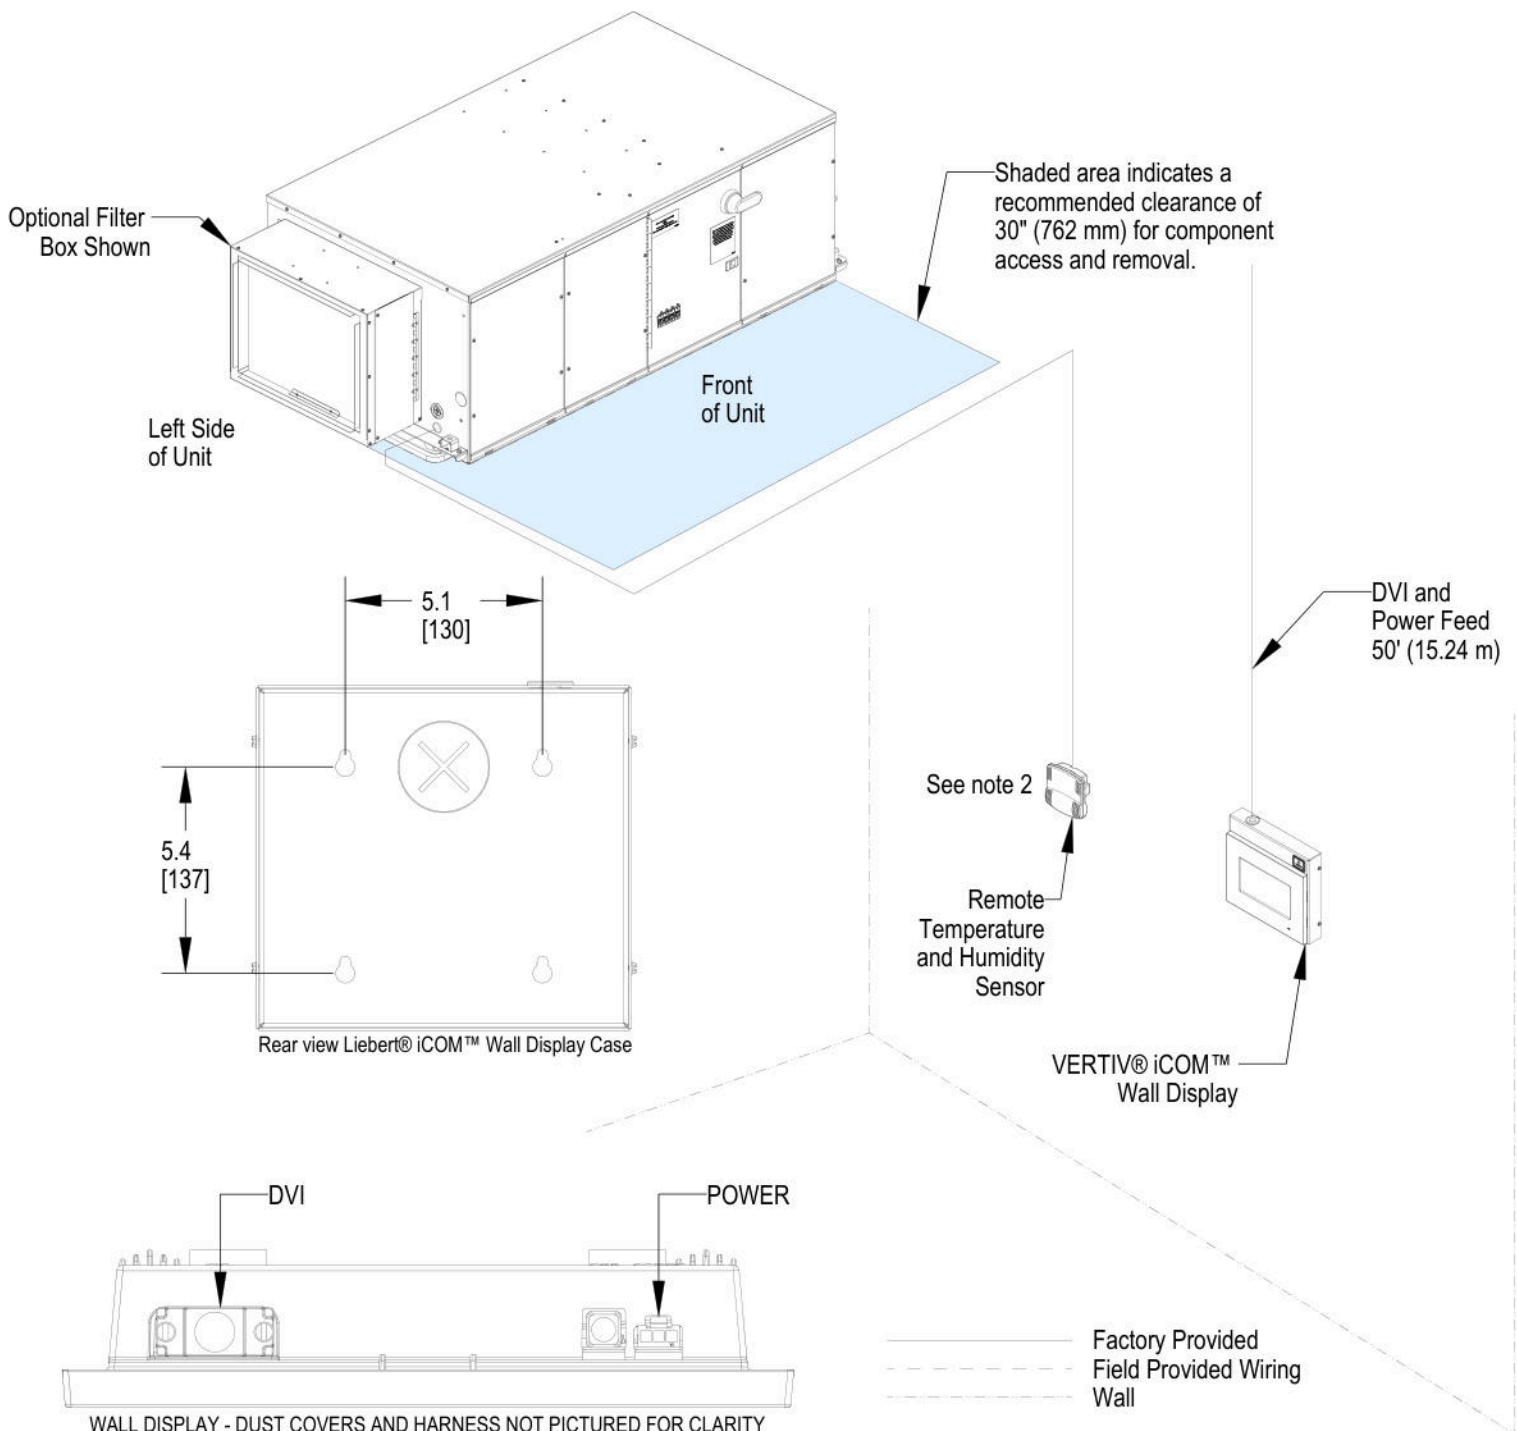


Notes:

1. Refer to 20000913 for connection points on Vertiv™ CoolPhase Ceiling Unit.
2. CANbus cable connection wired form P66 / P67 on the rear of the Remote Temperature / Humidity sensor.
Connection routed to secondary port on rear of Return T/H sensor inside unit or available CANbus port on internal control board (P66 / P67).

VERTIV COOLPHASE CEILING

UNIT TO UNIT NETWORK CONNECTIONS


TWO UNITS NETWORKED

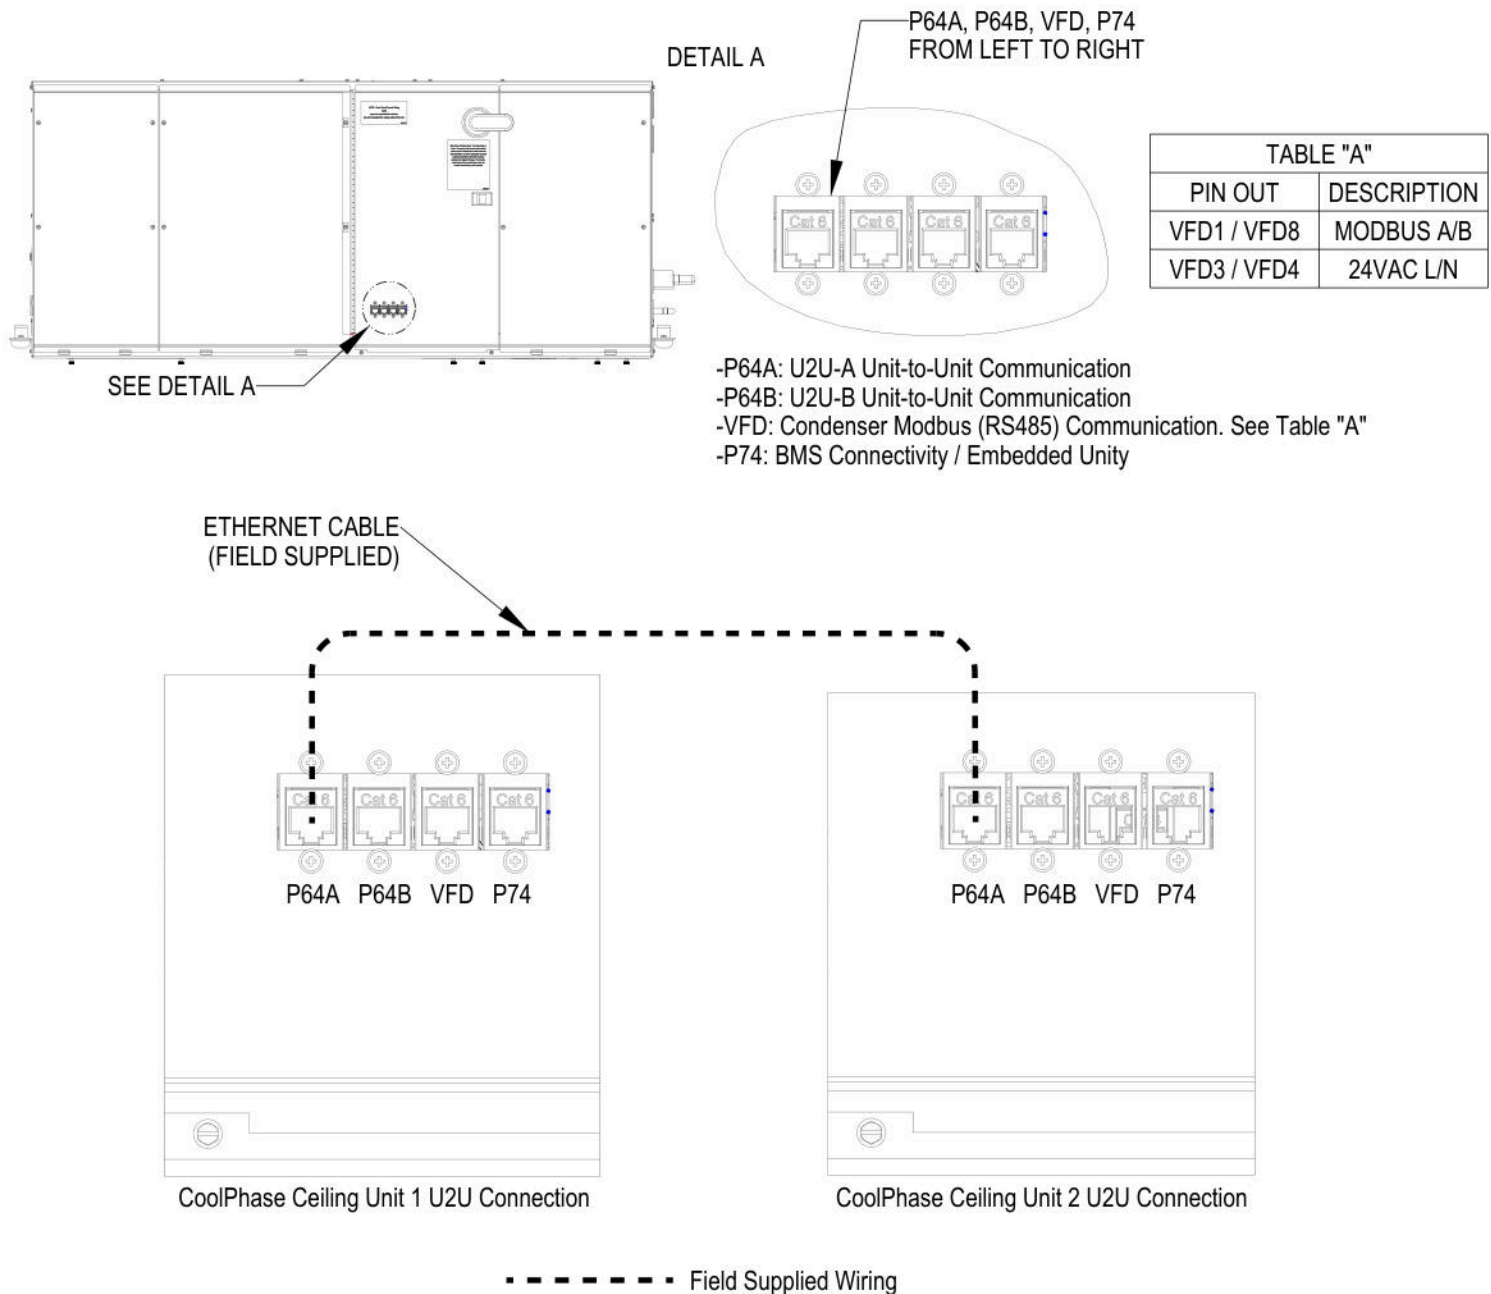

Notes:

1. Refer to 20000193, 20000194, 20000195 & 20000196 for general arrangement and field connections.
2. The dual U2U connection ports on the iCOM controller shall support networking through a daisy-chain Ethernet connection between each CoolPhase Ceiling unit by connection to U2U-A and U2U-B ports.

UNIT TO UNIT NETWORK CONNECTIONS TWO OR MORE UNITS NETWORKED USING SWITCH





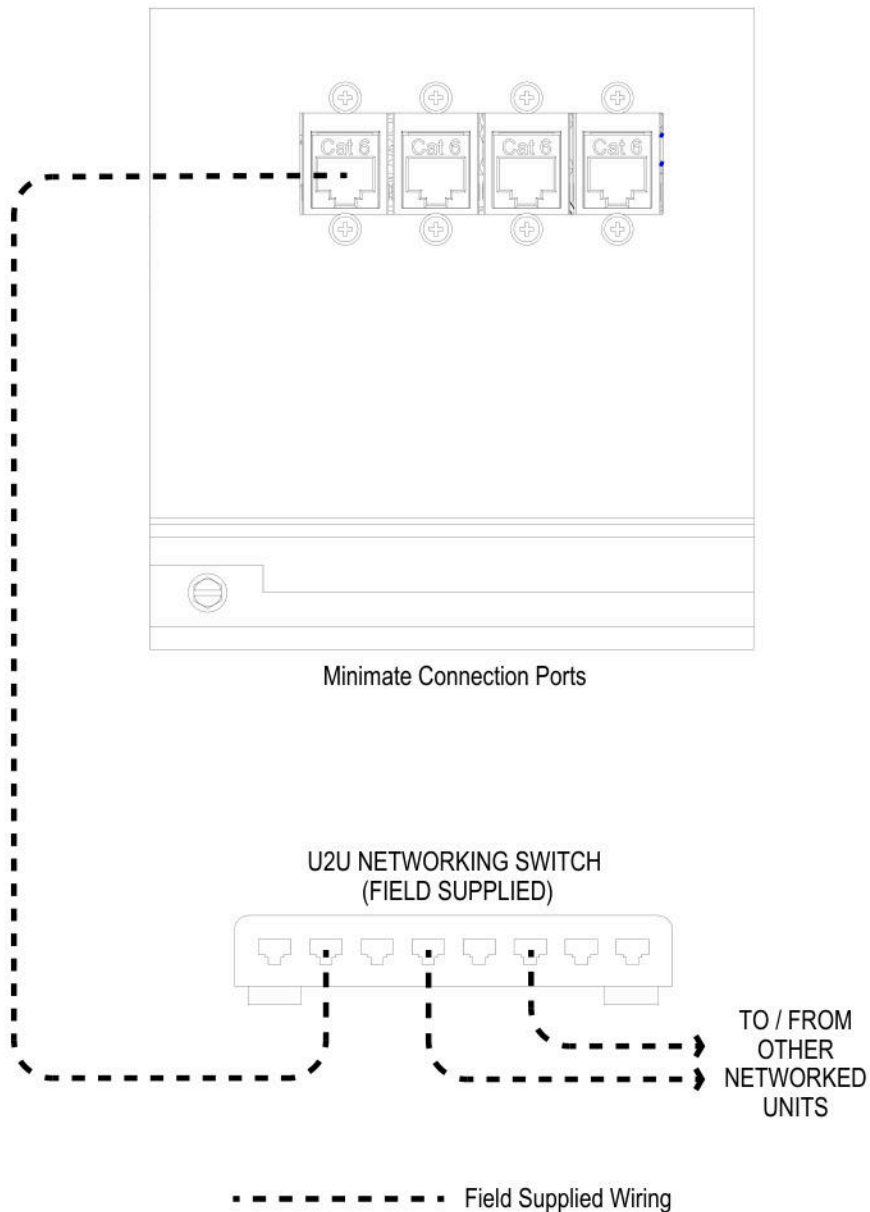


Notes:

1. Refer to 20000193, 20000194, 20000195 & 20000196 for general arrangement and field connections.
2. The dual U2U connection ports on the iCOM controller shall support networking through a daisy-chain Ethernet connection between each CoolPhase Ceiling unit by connecting to U2U-A and U2U-B ports when network group size is 3+ units.
3. iCOM does not support a Loop Network configuration when networking multiple CoolPhase Ceiling units together and connecting them together through a daisy-chain connection by utilizing U2U-A and U2U-B ports.

DIMENSIONAL DATA



CABINET DIMENSIONS, 1 TON

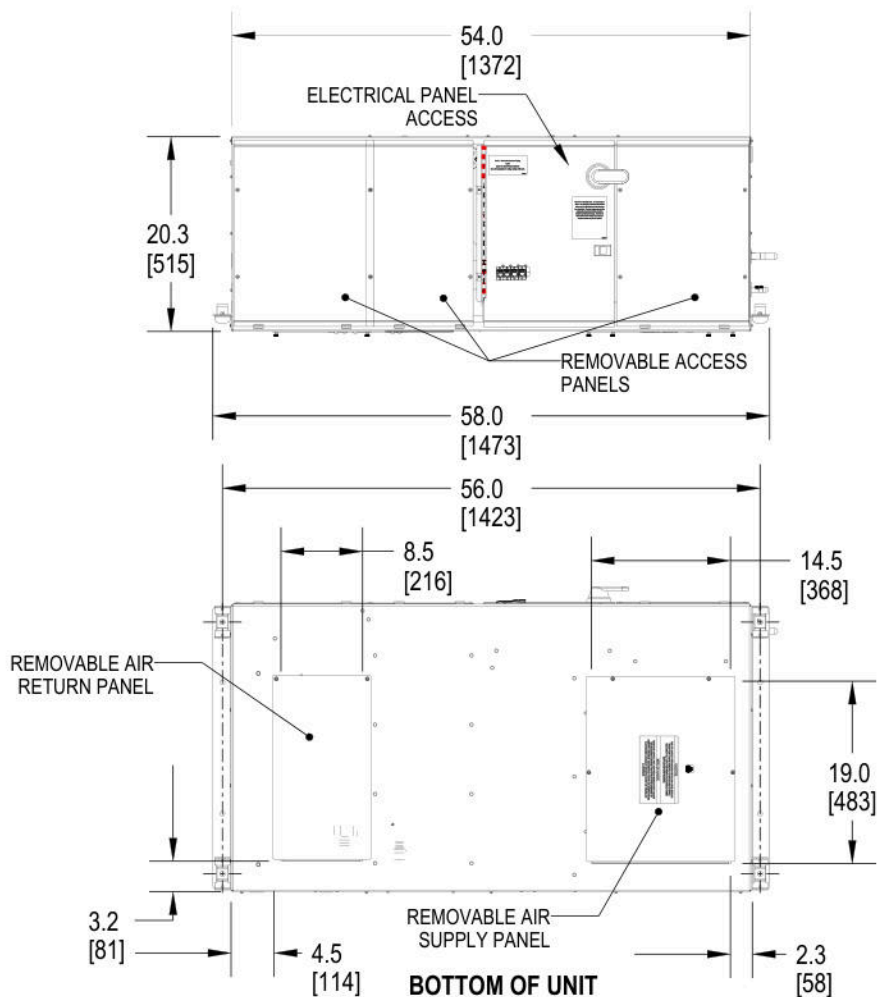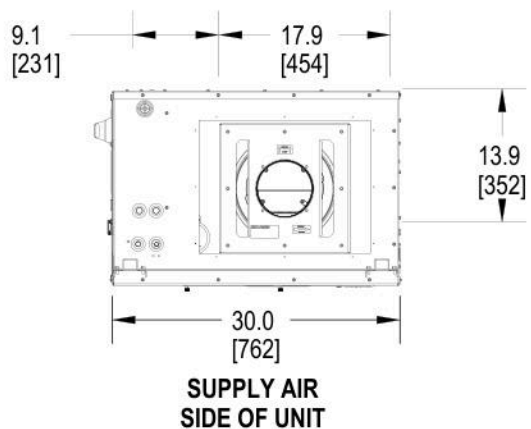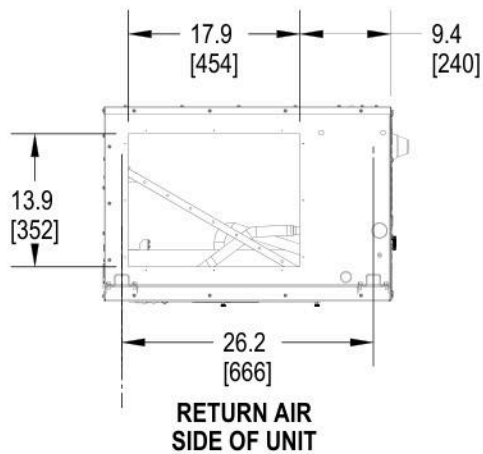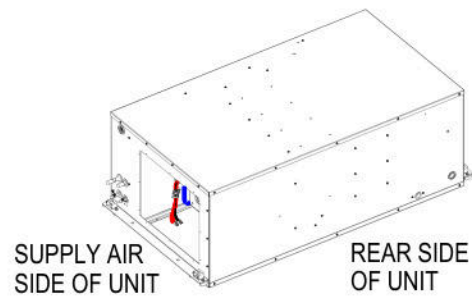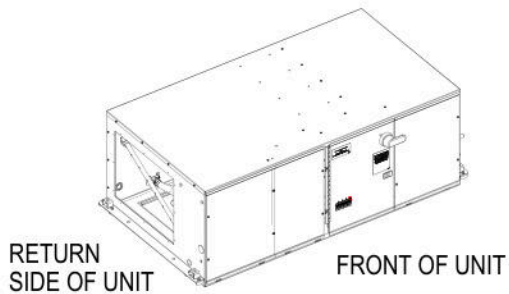

	EVAPORATOR COIL	UNIT NET WEIGHT LBS. (KG)
MMI12 (1 TON) MODEL	DX	269.4 (122.2)
	DX + FC	292.3 (132.6)


DIMENSIONAL DATA

CABINET DIMENSIONS, 2 & 3 TON

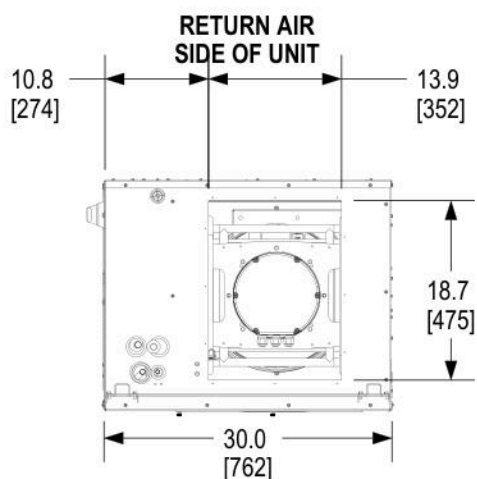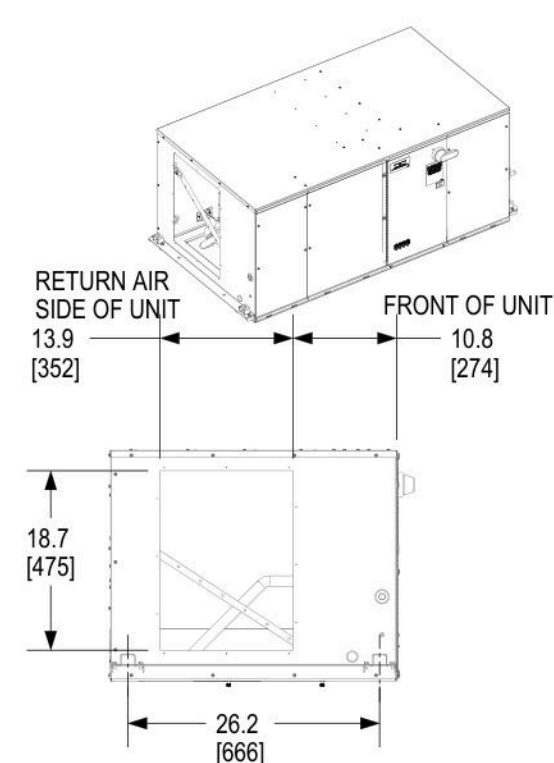




SUPPLY SIDE OF UNIT

	EVAPORATOR COIL	UNIT NET WEIGHT LBS. (KG)
MMI24 (2 TON) MODEL	DX	295.4 (134.0)
	DX + FC	325.4 (147.6)
MMI36 (3 TON) MODEL	DX	299.8 (136.0)
	DX + FC	329.8 (149.6)


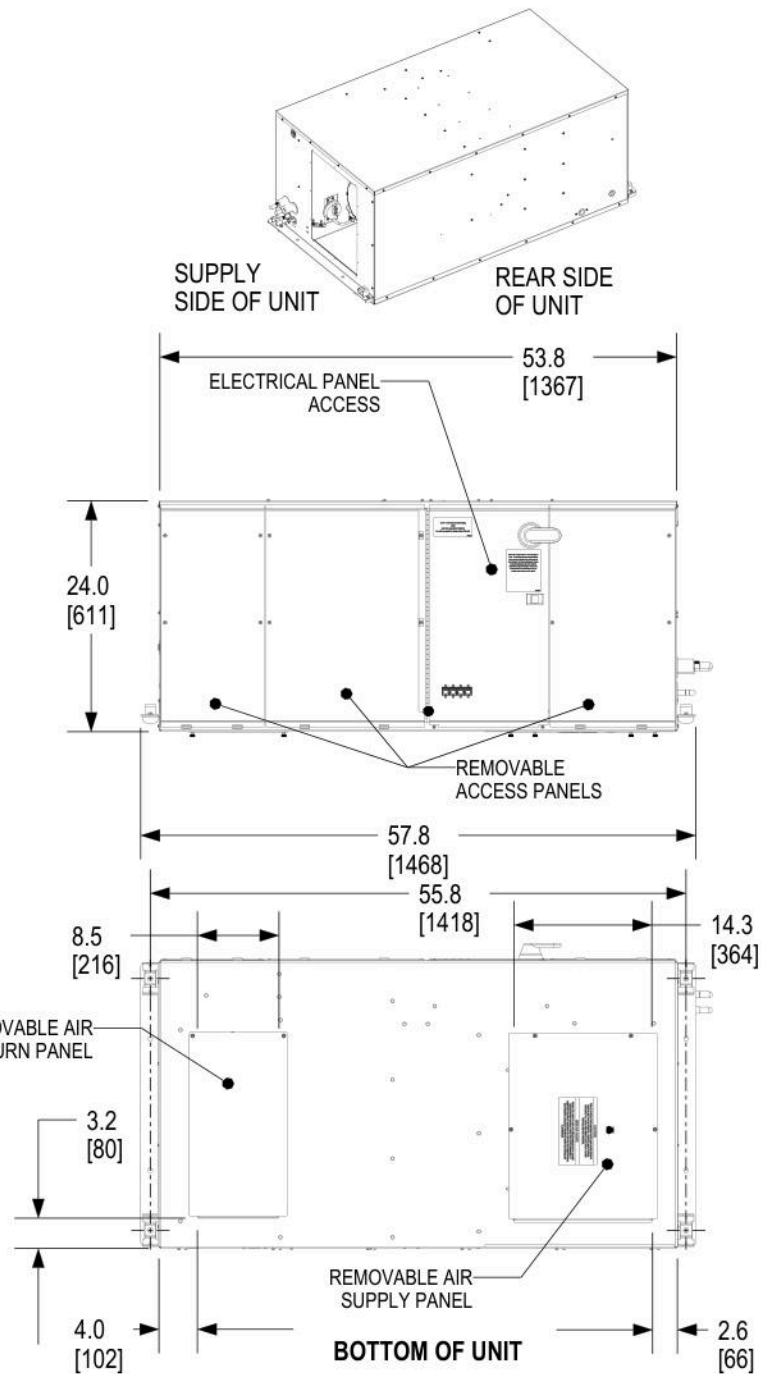


DIMENSIONAL DATA


CABINET DIMENSIONS, 4 & 5 TON

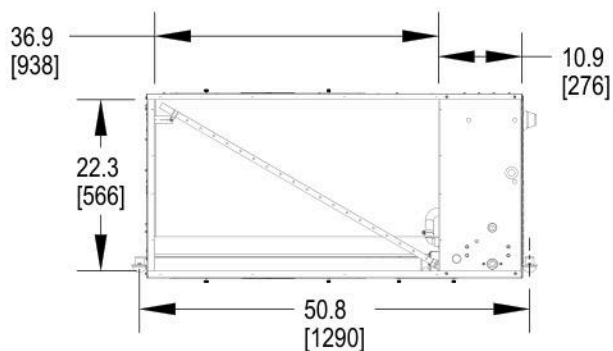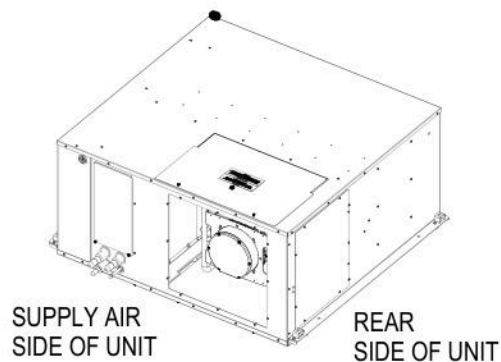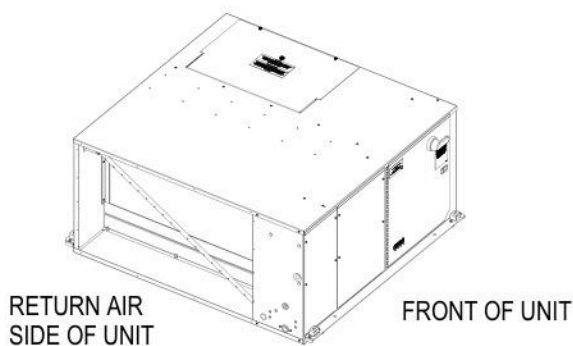


**RETURN
AIR SIDE OF UNIT**

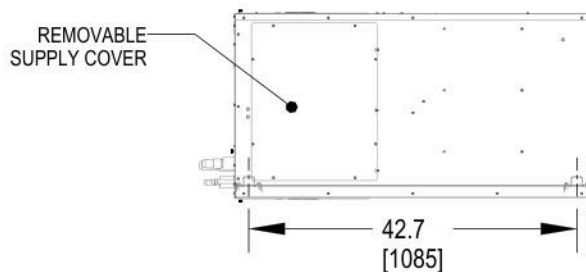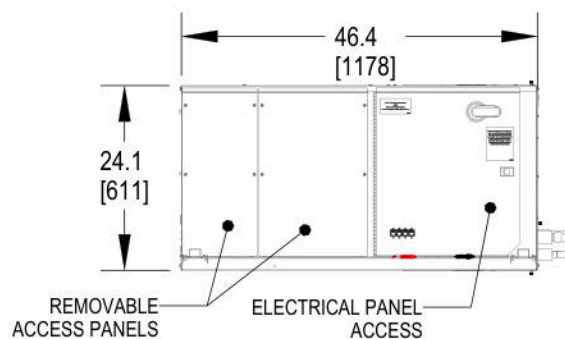

**REAR
SIDE OF UNIT**

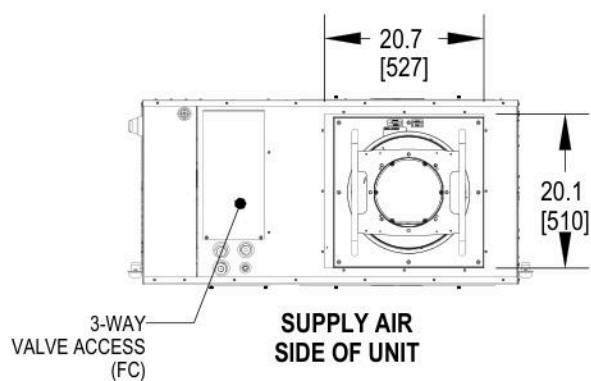

**SUPPLY AIR
SIDE OF UNIT**

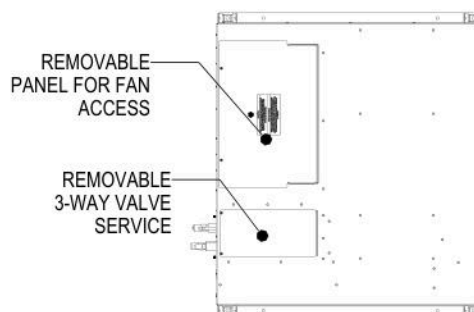


BOTTOM OF UNIT

	EVAPORATOR COIL	UNIT NET WEIGHT LBS. (KG)
MMI48 (4 TON) MODEL	DX	413.4 (187.5)
	DX + FC	483.9 (219.5)
MMI60 (5 TON) MODEL	DX	433.2 (196.5)
	DX + FC	503.7 (228.5)


DIMENSIONAL DATA

CABINET DIMENSIONS, 8 TON

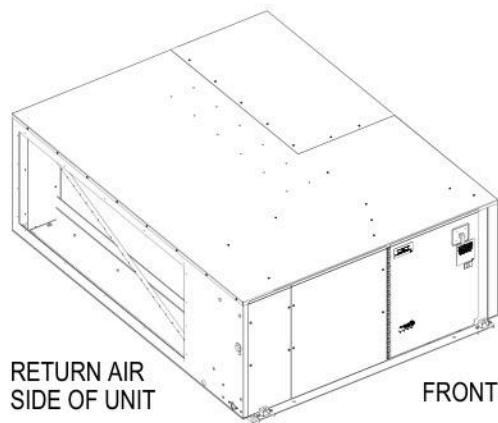


RETURN AIR
SIDE OF UNIT

FRONT OF UNIT


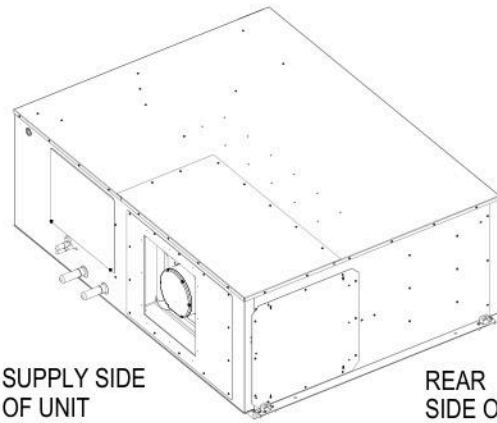


SUPPLY SIDE
OF UNIT


REAR
SIDE OF UNIT

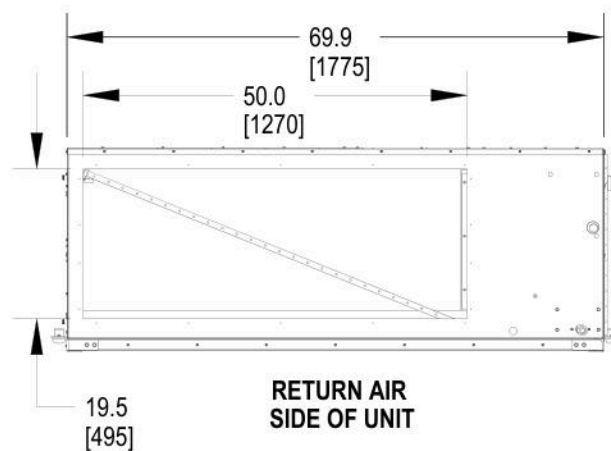

RETURN AIR
SIDE OF UNIT

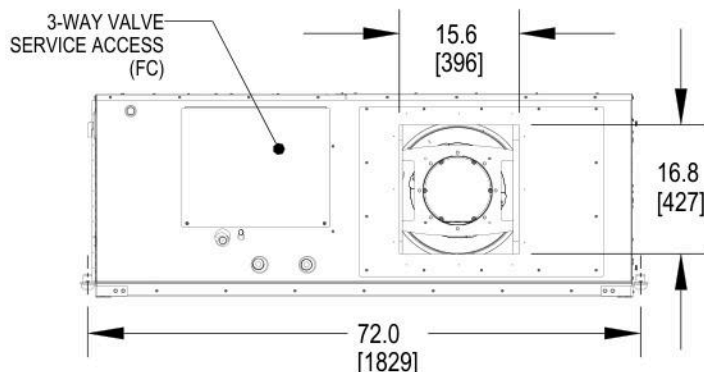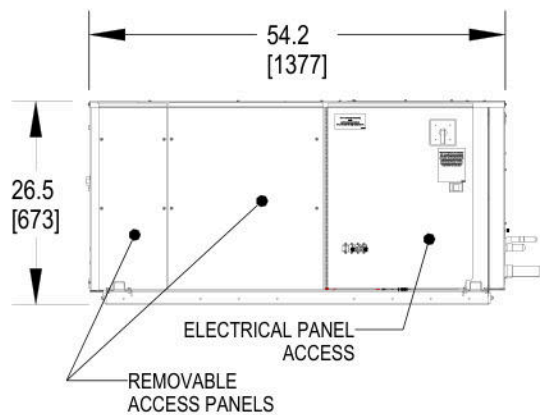

SUPPLY AIR
SIDE OF UNIT

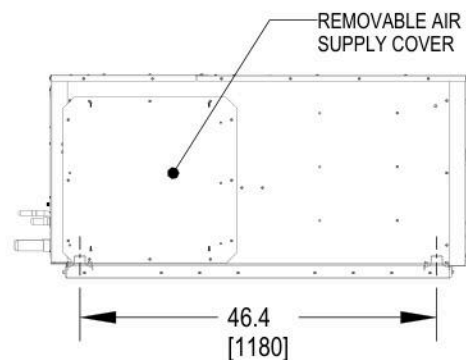


REAR
SIDE OF UNIT

	EVAPORATOR COIL	UNIT NET WEIGHT LBS. (KG)
MMI96 (8 TON) MODEL	DX	673.3 (305.4)
	DX + FC	752.6 (341.4)

Vertiv CoolPhase Condensing Unit

DIMENSIONAL DATA

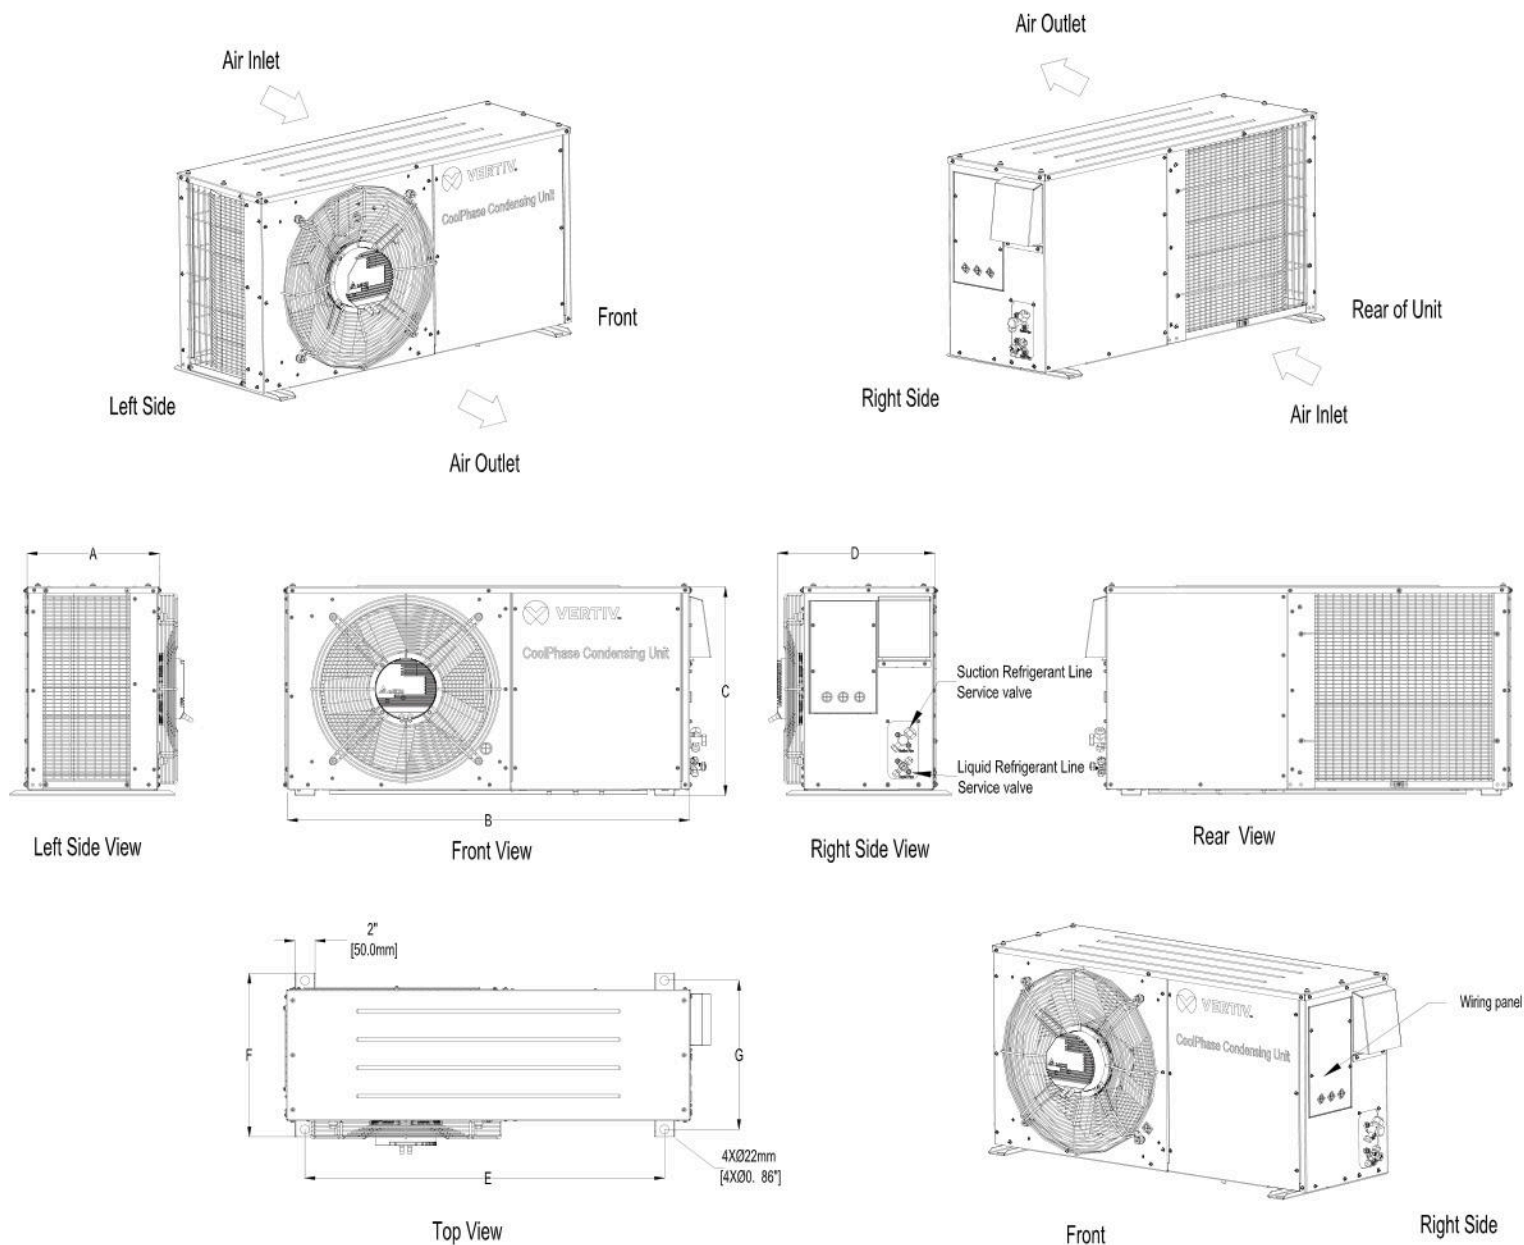


MODEL #	DIMENSIONAL DATA in. (mm).							NET WEIGHT lb (kg)		Shipping Dimensions(W×D×H) in.(mm).		SHIPPING WEIGHT lb (kg)	
	A	B	C	D	E	F	G	CUD	CUL	/		CUD	CUL
CUD030-E000A CUL030-E000A	12.6 (319)	38.8 (985)	20.3 (516)	15.2 (385)	34.7 (881)	15.9 (404)	14.5 (368)	110.2 (50)	116.8 (53)	45.2 x 22 x 28.8 (1149 x 559 x 732)		169.8 (77)	176.4 (80)
CUD070-E000A CUL070-E000A	16.5 (419)	44.4 (1128)		19.1 (485)	40.1 (1018)	19.8 (504)	18.4 (468)	118 (53.5)	130 (59)	50.7 x 26 x 28.8 (1289 x 659 x 732)		188.5 (85.5)	200.6 (91)
CUD111-E000A CUL111-E000A	20.5 (520)	51.3 (1303)	22.8 (580)	23.4 (595)	46.4 (1179)	23.8 (604)	22.4 (568)	175.3 (79.5)	184.1 (83.5)	57.6 x 30.1 x 31.3 (1464 x 764 x 795)		259 (117.5)	272.3 (123.5)
CUD115-E000A CUL115-E000A								174.17 (79)	183 (83)			257.9 (117)	271.2 (123)

Vertiv CoolPhase Condensing Unit

CLEARANCE SPACE

Standard Condensing Unit Install indoor

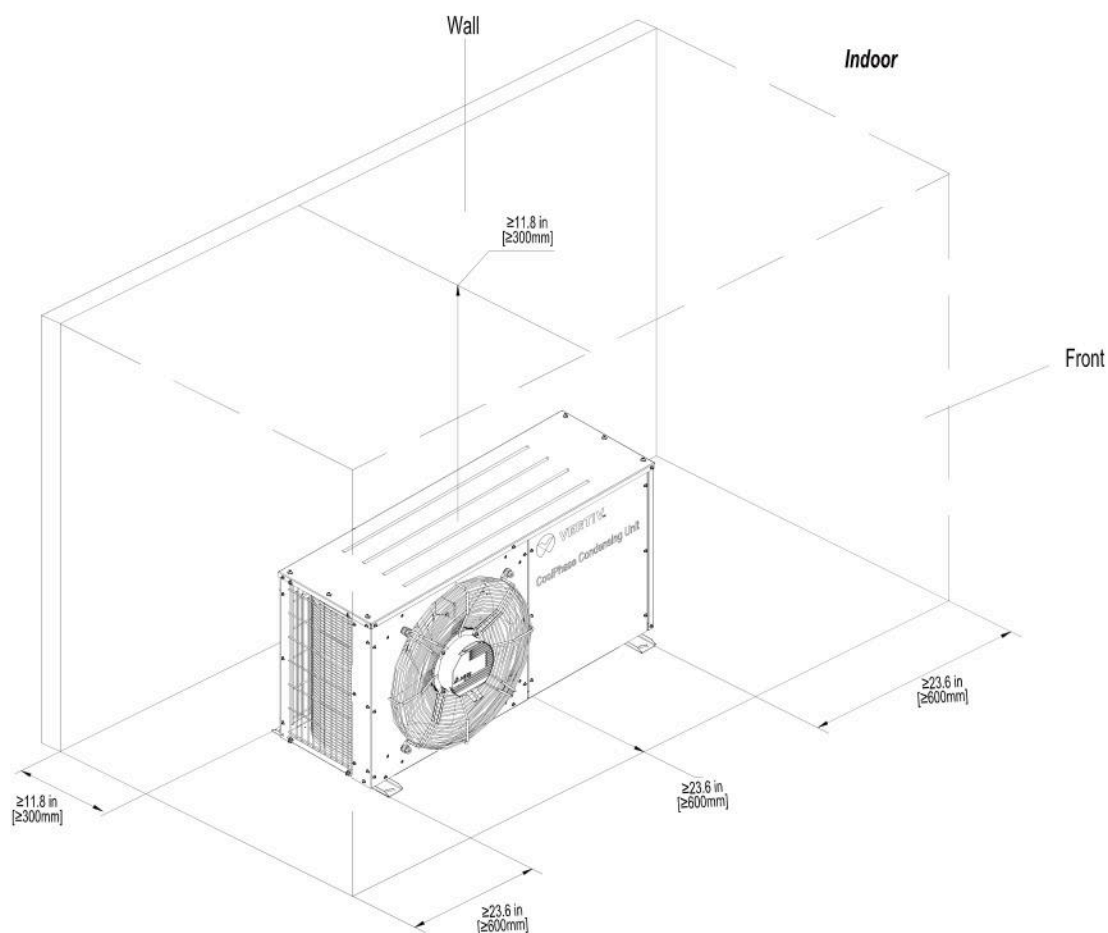


NOTES: When Standard Condensing Unit is installed in indoor environment, it is not necessary to install the wind baffle.

Vertiv CoolPhase Condensing Unit

CLEARANCE SPACE






Standard Condensing Unit Install outdoor

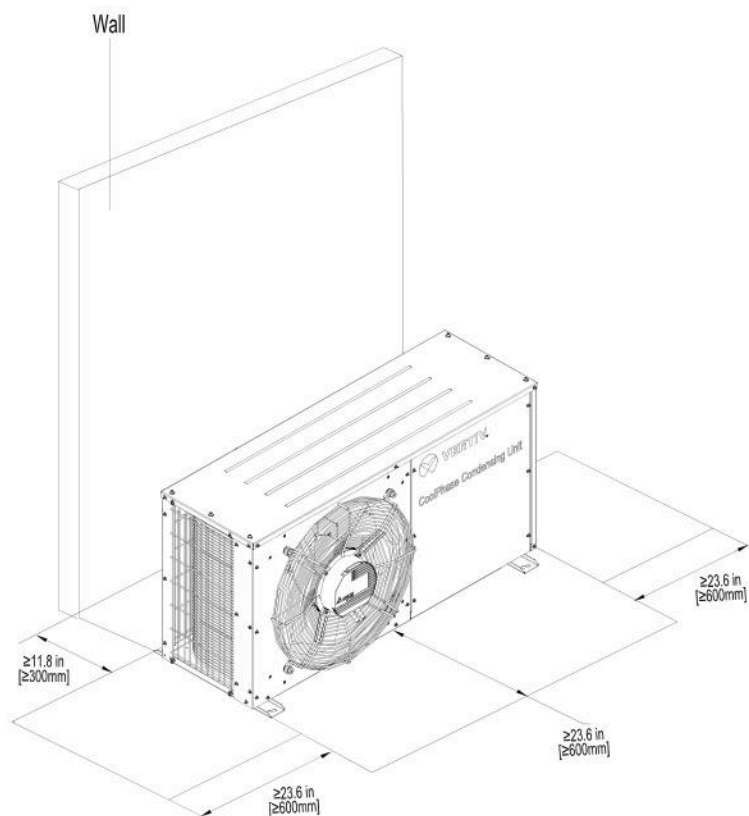



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT




DIMENSIONAL DATA CONDENSER UNIT 15kW

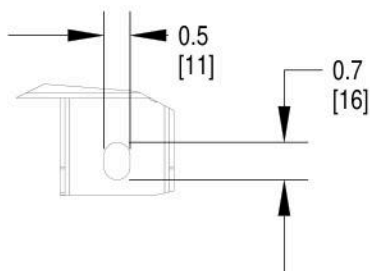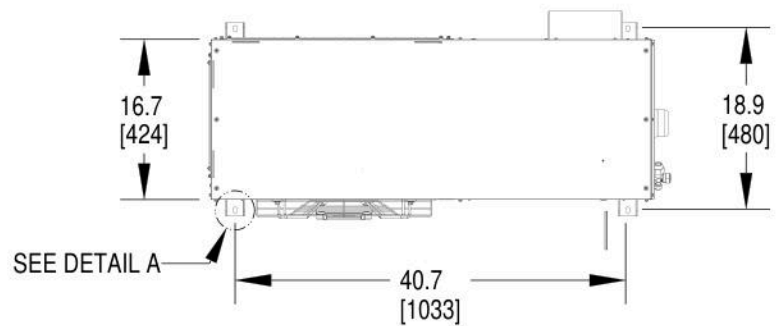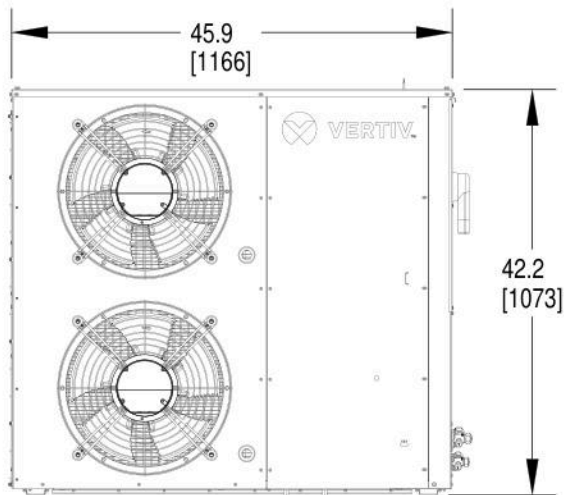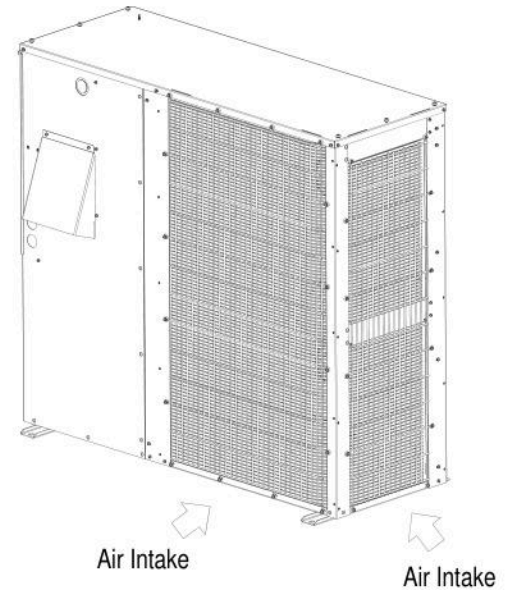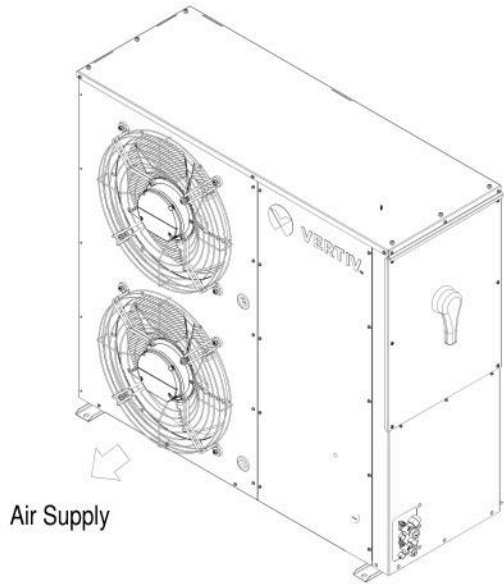


Unit	Net Weight Kg (lb)	Shipping Weight Kg (lb)
Standard 15kW	121.37 (267.57)	147.46 (325.09)
Low ambient 15kW	125.32 (276.56)	151.42 (333.83)

SINGLE POWER SUPPLY UNIT SHOWN*


CABINET DIMENSIONS CONDENSING UNIT 21/28KW

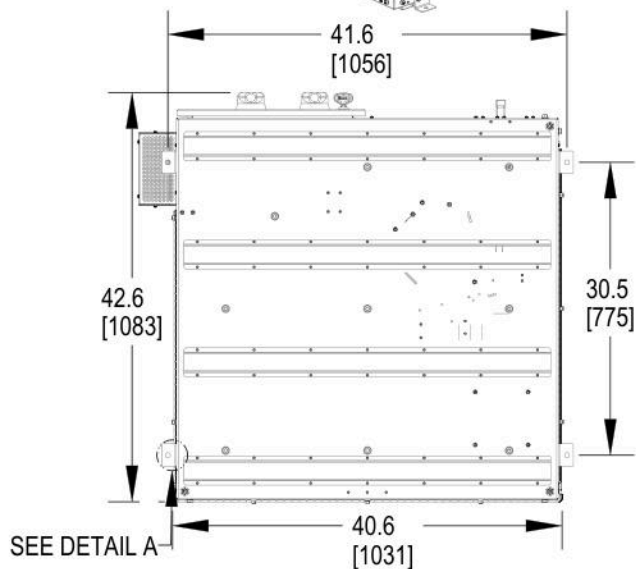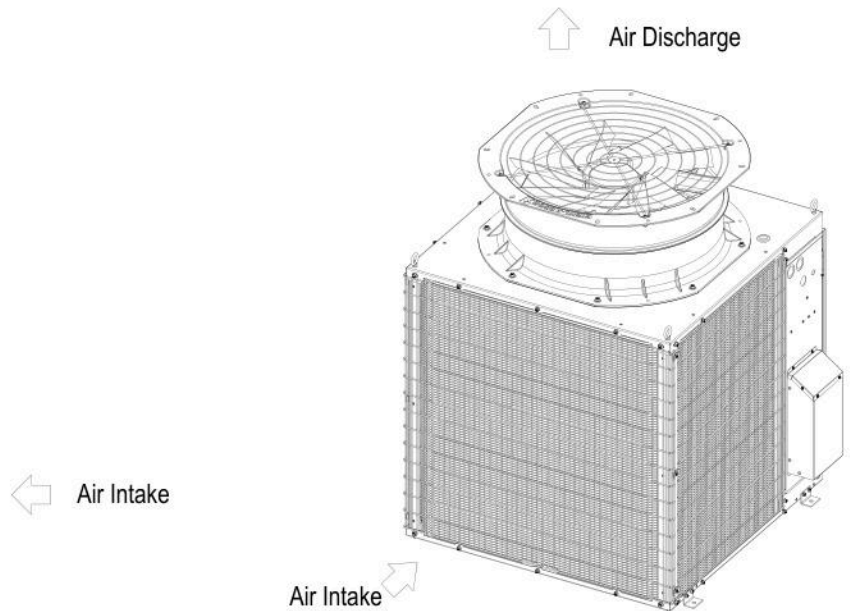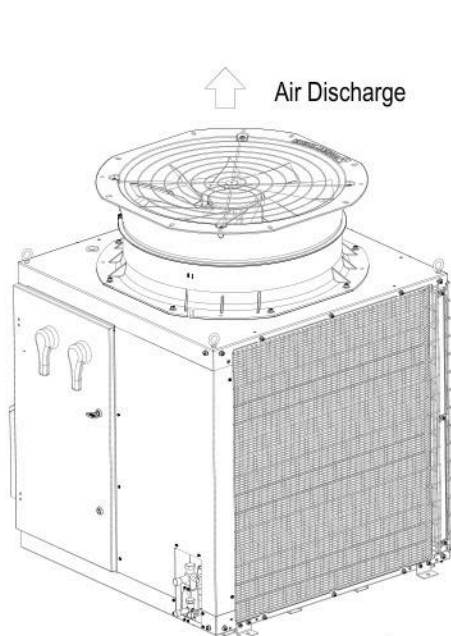

Bottom View

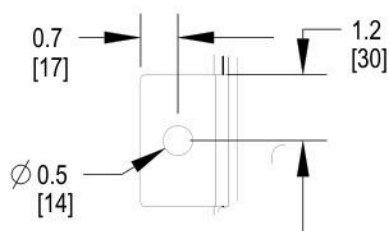

DETAIL A

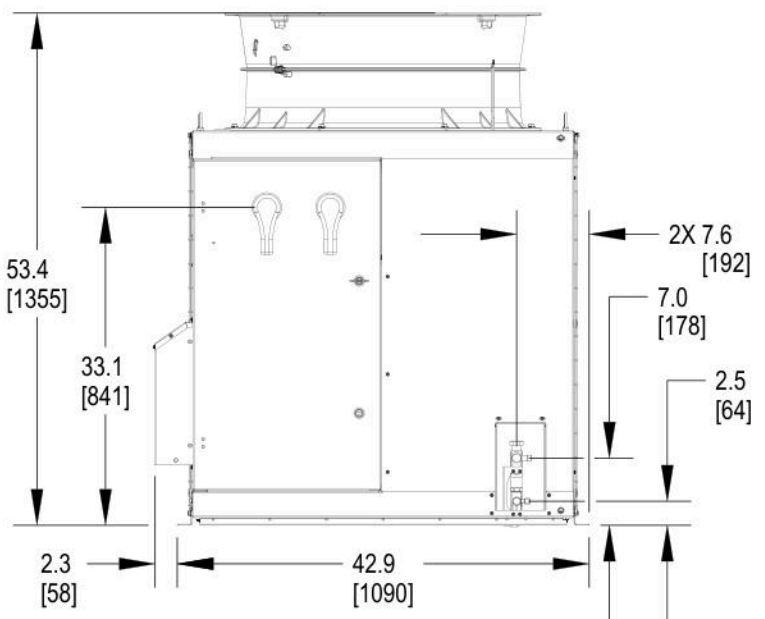

Front View

Unit	Net Weight lbs (kg)	Shipping Weight lbs (kg)
Standard 21kW	421.1 (191.0)	542.3 (246.0)
Low ambient 21kW	443.1 (201.0)	564.4 (256.0)
Standard 28kW	424.6 (192.6)	546.7 (248.0)
Low ambient 28kW	457.6 (207.5)	579.81 (263.0)

DUAL POWER SUPPLY UNIT SHOWN*



VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

1 TON DX & FC

STANDARD ELECTRICAL CONNECTIONS

1) High Voltage connection through the right side of the Ceiling Panel - 1.37" (35mm) diameter concentric knockout

2) Communication connection on the front of the Ceiling Panel
Connect according diagram in the corresponding ethernet port.

3) Electrical service (hard wired) - refer to serial tag information for unit electrical service requirement

- Three Phase - 208-230V 60HZ / 460 60HZ

- Single Phase - 208-230V 60HZ

Connect to terminals on disconnect switch. Electrical service not by Vertiv. Use copper conductors only. Wire per local codes. Refer to specification sheet for total unit full load amps, wire size and max over current protection device size.

4) Communication Bracket

- P64A: U2U-A Unit-to-Unit Communication

- P64B: U2U-B Unit-to-Unit Communication

- VFD: Condenser Modbus (RS485) Communication

- P74: BMS Connectivity / Embedded Unity

5) Terminal Blocks Control Distribution Voltage / Power Voltage Terminals / Communication RS485

- TBK Terminal Ground

- TBK 24M Control Distribution Voltage 24VAC

- TBK 24-24AS Control Distribution Voltage 24VAC Insulated Voltage from Transformer 1:1

6) Fans Terminal Blocks

- MR relay is the power source for MF (Main Fan Relay)


- Main control signal from ICOM 4 (0-10V Distribution)

Reference models showed in this document are 300MM units. All connections, terminal block locations and communication ports also apply for 600MM units.

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

1 TON DX & FC

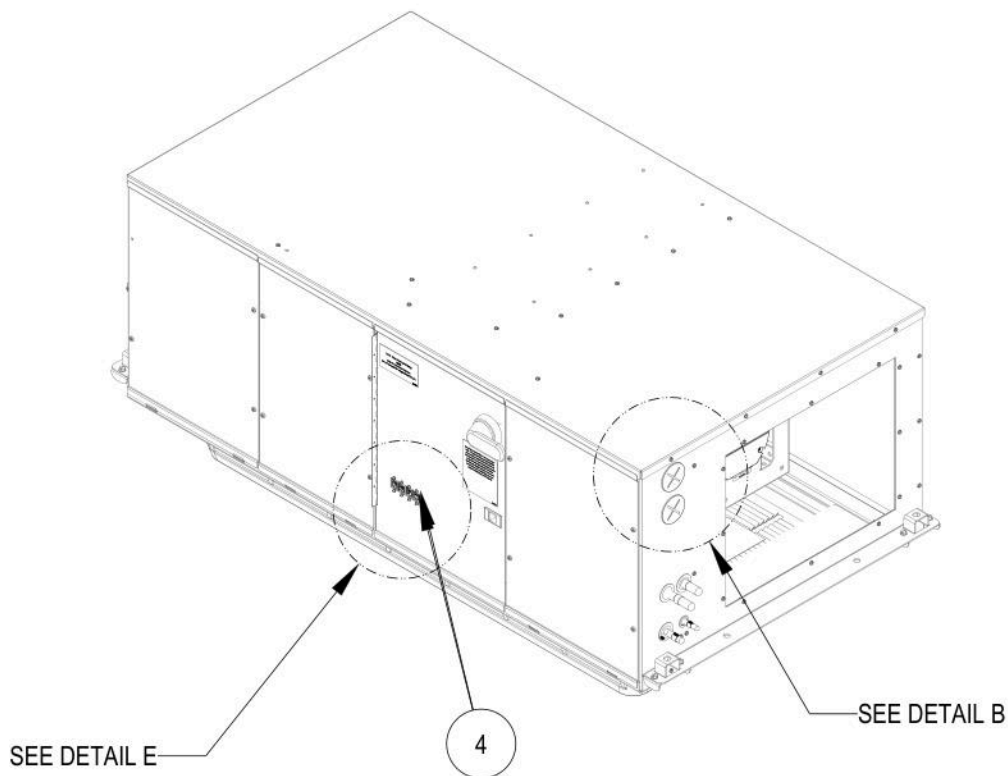

P64A, P64B, VFD, P74
FROM LEFT TO RIGHT

DETAIL E


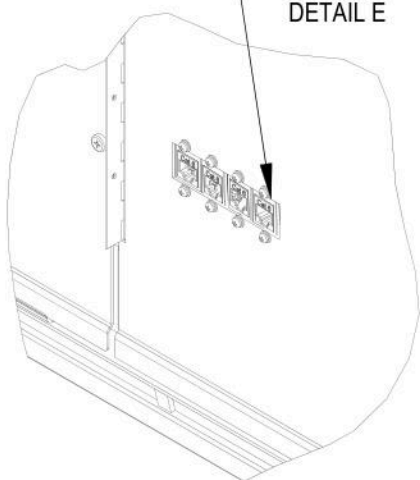


TABLE "A"	
PIN OUT	DESCRIPTION
VFD1 / VFD8	MODBUS A/B
VFD3 / VFD4	24VAC L/N

INPUT POWER
SUPPLY WIRES

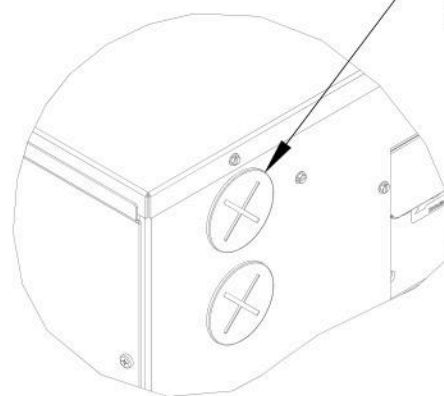


DETAIL B

ETHERNET CABLE CONFIGURATION MUST BE
STRAIGHT CONFIGURATION.
VFD PIN OUT (INDOOR - OUTDOOR COMMUNICATION)
SEE TABLE "A"

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

1 TON DX & FC

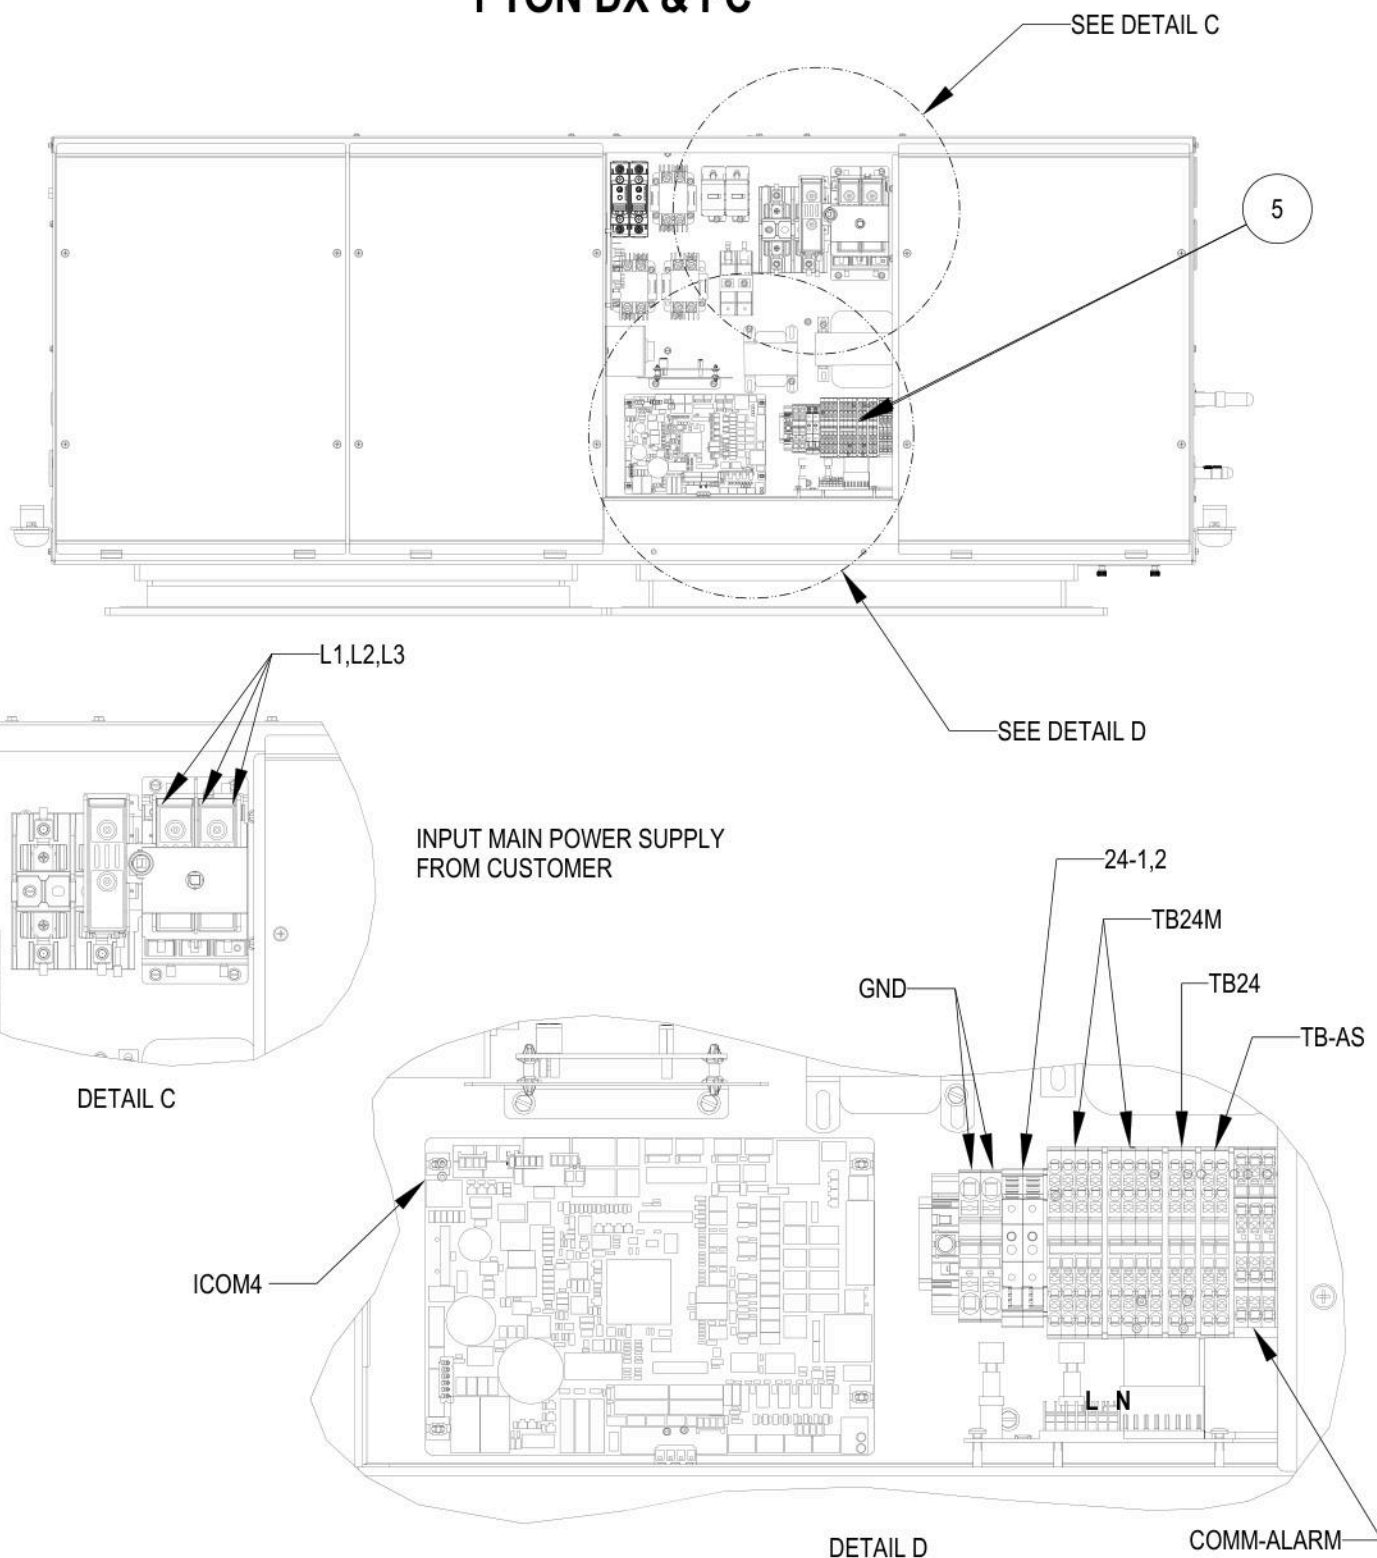



VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

2 & 3 TON DX & FC

STANDARD ELECTRICAL CONNECTIONS

1) High Voltage connection through the right side of the Ceiling Panel - 1.37" (35mm) diameter concentric knockout

2) Communication connection on the front of the Ceiling Panel
Connect according diagram in the corresponding ethernet port.

3) Electrical service (hard wired) - refer to serial tag information for unit electrical service requirement

- Three Phase - 208-230V 60HZ / 460 60HZ

- Single Phase - 208-230V 60HZ

Connect to terminals on disconnect switch. Electrical service not by Vertiv. Use copper conductors only, wire per local codes. Refer to specification sheet for total unit full load amps, wire size amps and max over current protection device size.

4) Communication Bracket

- P64A: U2U-A Unit-to-Unit Communication

- P64B: U2U-B Unit-to-Unit Communication

- VFD: Condenser Modbus (RS485) Communication

- P74: BMS Connectivity / Embedded Unity

5) Terminal Blocks Control Distribution Voltage / Power Voltage Terminals / Communication RS485

- TBK Terminal Ground

- TBK 24M Control Distribution Voltage 24VAC

- TBK 24-24AS Control Distribution Voltage 24VAC Insulated Voltage from Transformer 1:1

6) Fans Terminal Blocks

- MR relay is the power source for MF (Main Fan Relay)


- Main control signal from ICOM 4 (0-10V Distribution)

Reference models showed in this document are 300MM units. All connections, terminal block locations and communication ports also apply for 600MM units.

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

2 & 3 TON DX & FC

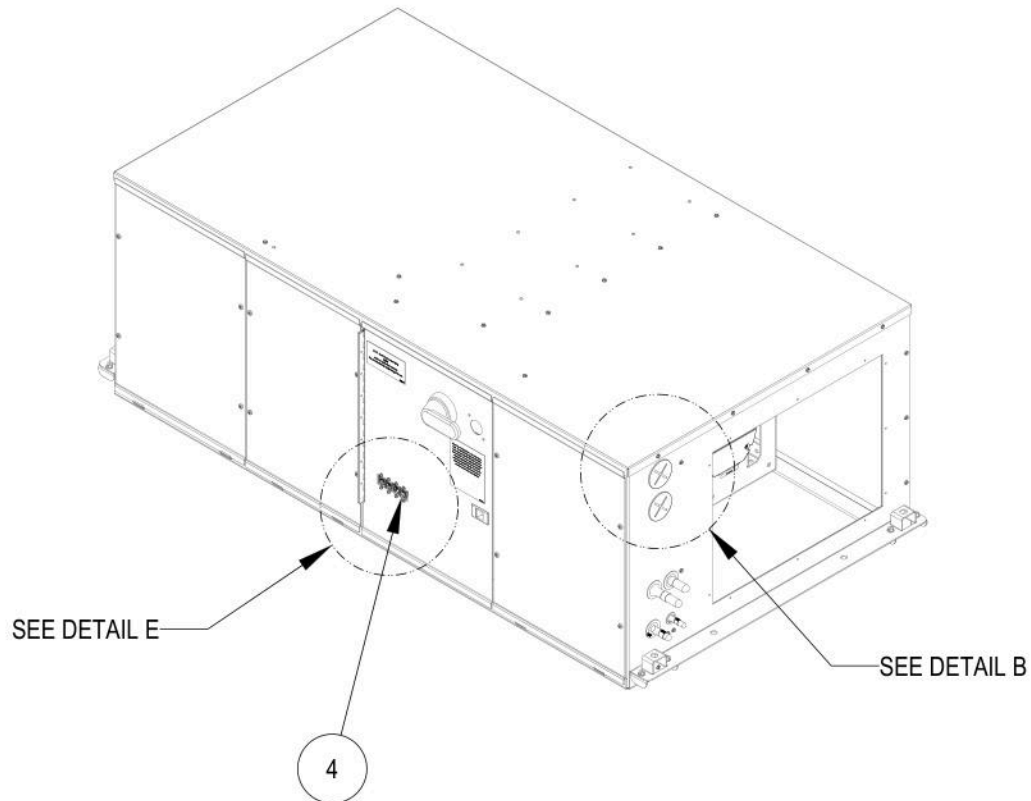

DETAIL E

P64A, P64B, VFD, P74
FROM LEFT TO RIGHT

TABLE "A"	
PIN OUT	DESCRIPTION
VFD1/VFD8	MODBUS A/B
VFD3/VFD4	24VAC L/N

DETAIL B

INPUT POWER
SUPPLY WIRES


ETHERNET CABLE CONFIGURATION MUST BE
STRAIGHT CONFIGURATION.
Z4 PIN OUT (INDOOR - OUTDOOR COMMUNICATION)
SEE TABLE "A"

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS


2 & 3 TON DX & FC

SEE DETAIL A

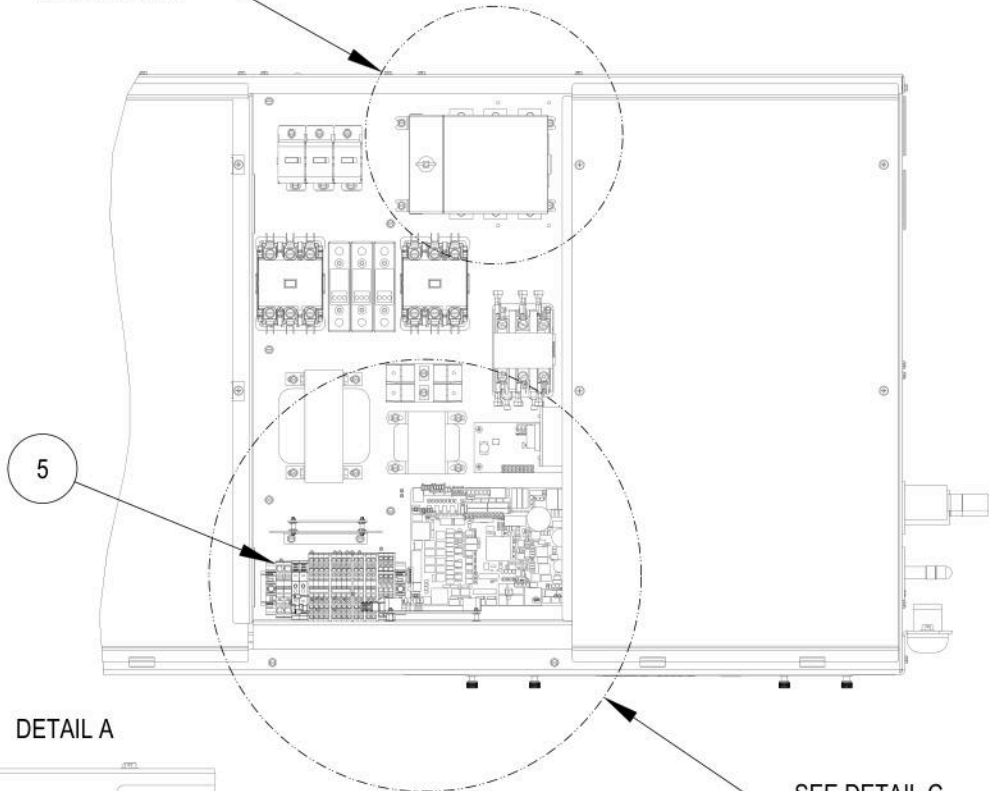


L1,L2,L3

DETAIL A

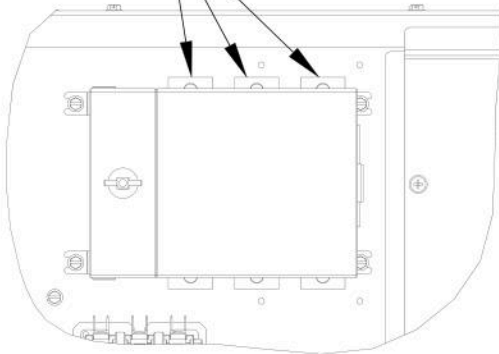

INPUT MAIN POWER SUPPLY
FROM CUSTOMER

SEE DETAIL C

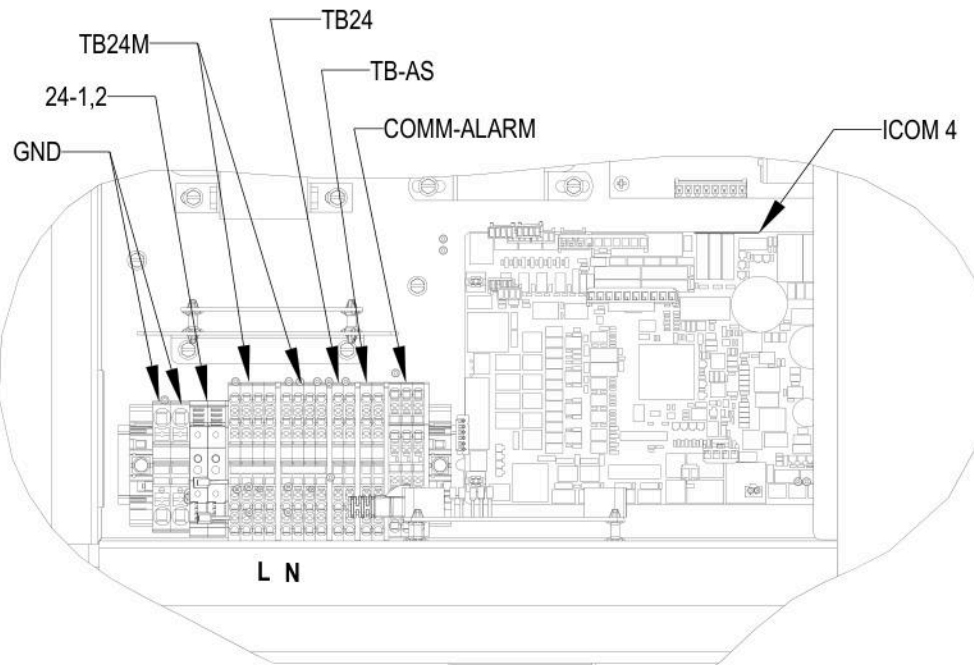

DETAIL C



VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

4 & 5 TON DX & FC

STANDARD ELECTRICAL CONNECTIONS

1) High Voltage connection through the right side of the Ceiling Panel - 1.37" (35mm) diameter concentric knockout

2) Communication connection on the front of the Ceiling Panel
Connect according diagram in the corresponding ethernet port.

3) Electrical service (hard wired) - refer to serial tag information for unit electrical service requirement

- Three Phase - 208-230V 60HZ / 460 60HZ

- Single Phase - 208-230V 60HZ

Connect to terminals on disconnect switch. Electrical service not by Vertiv. Use copper conductors only, wire per local codes. Refer to specification sheet for total unit full load amps, wire size amps and max over current protection device size.

4) Communication Bracket

- P64A: U2U-A Unit-to-Unit Communication

- P64B: U2U-B Unit-to-Unit Communication

- VFD: Condenser Modbus (RS485) Communication

- P74: BMS Connectivity / Embedded Unity

5) Terminal Blocks Control Distribution Voltage / Power Voltage Terminals / Communication RS485

- TBK Terminal Ground

- TBK 24M Control Distribution Voltage 24VAC

- TBK 24-24AS Control Distribution Voltage 24VAC Insulated Voltage from Transformer 1:1

6) Fans Terminal Blocks

- MR relay is the power source for MF (Main Fan Relay)

- Main control signal from ICOM 4. (0-10V Distribution)

Reference models showed in this document are 300MM units. All connections, terminal block locations and communication ports also apply for 600MM units.

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

4 & 5 TON DX & FC



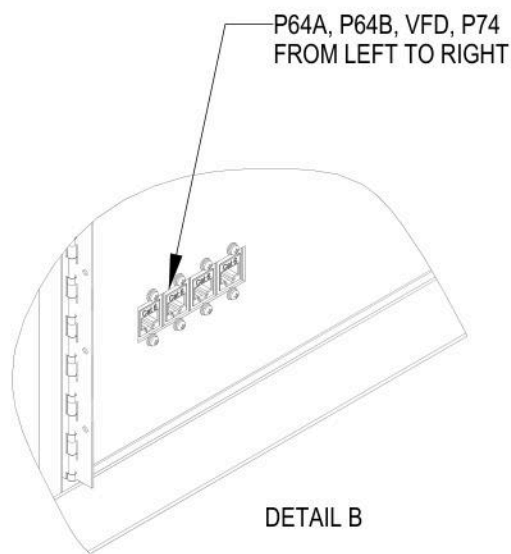


TABLE "A"	
PIN OUT	DESCRIPTION
VFD1 / VFD8	MODBUS A/B
VFD3 / VFD4	24VAC L/N

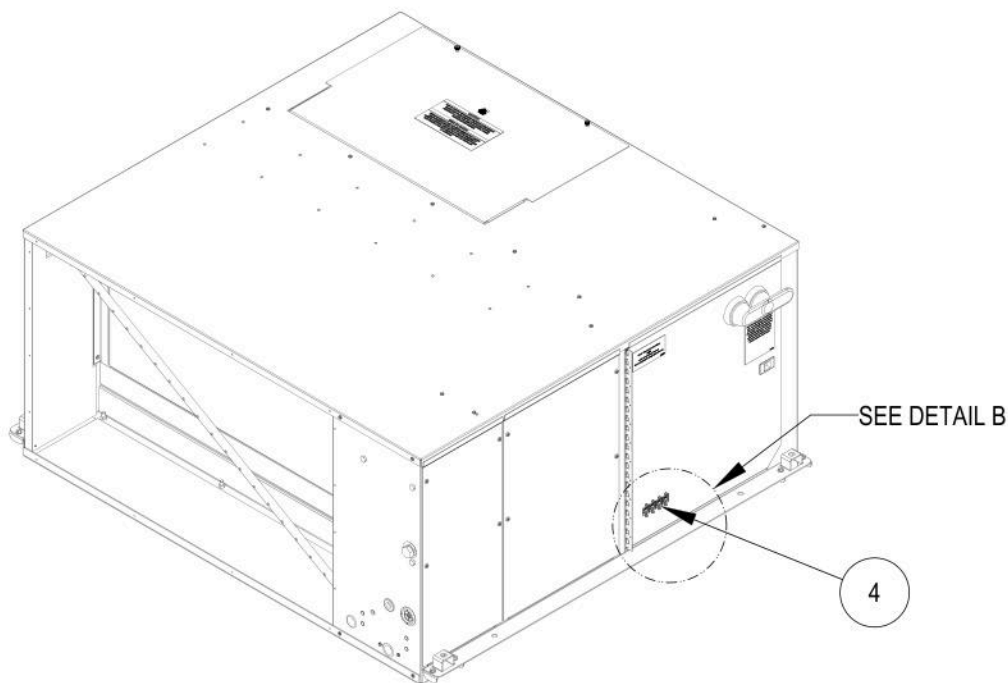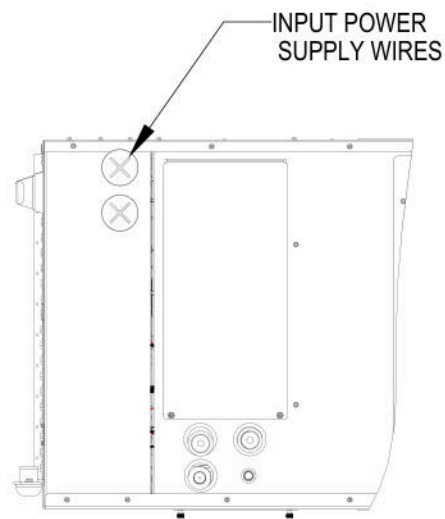


(RIGHT SIDE)

ETHERNET CABLE CONFIGURATION MUST BE
STRAIGHT CONFIGURATION.
VFD PIN OUT(INDOOR - OUTDOOR
COMMUNICATION) SEE TABLE "A"

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

4 & 5 TON DX & FC

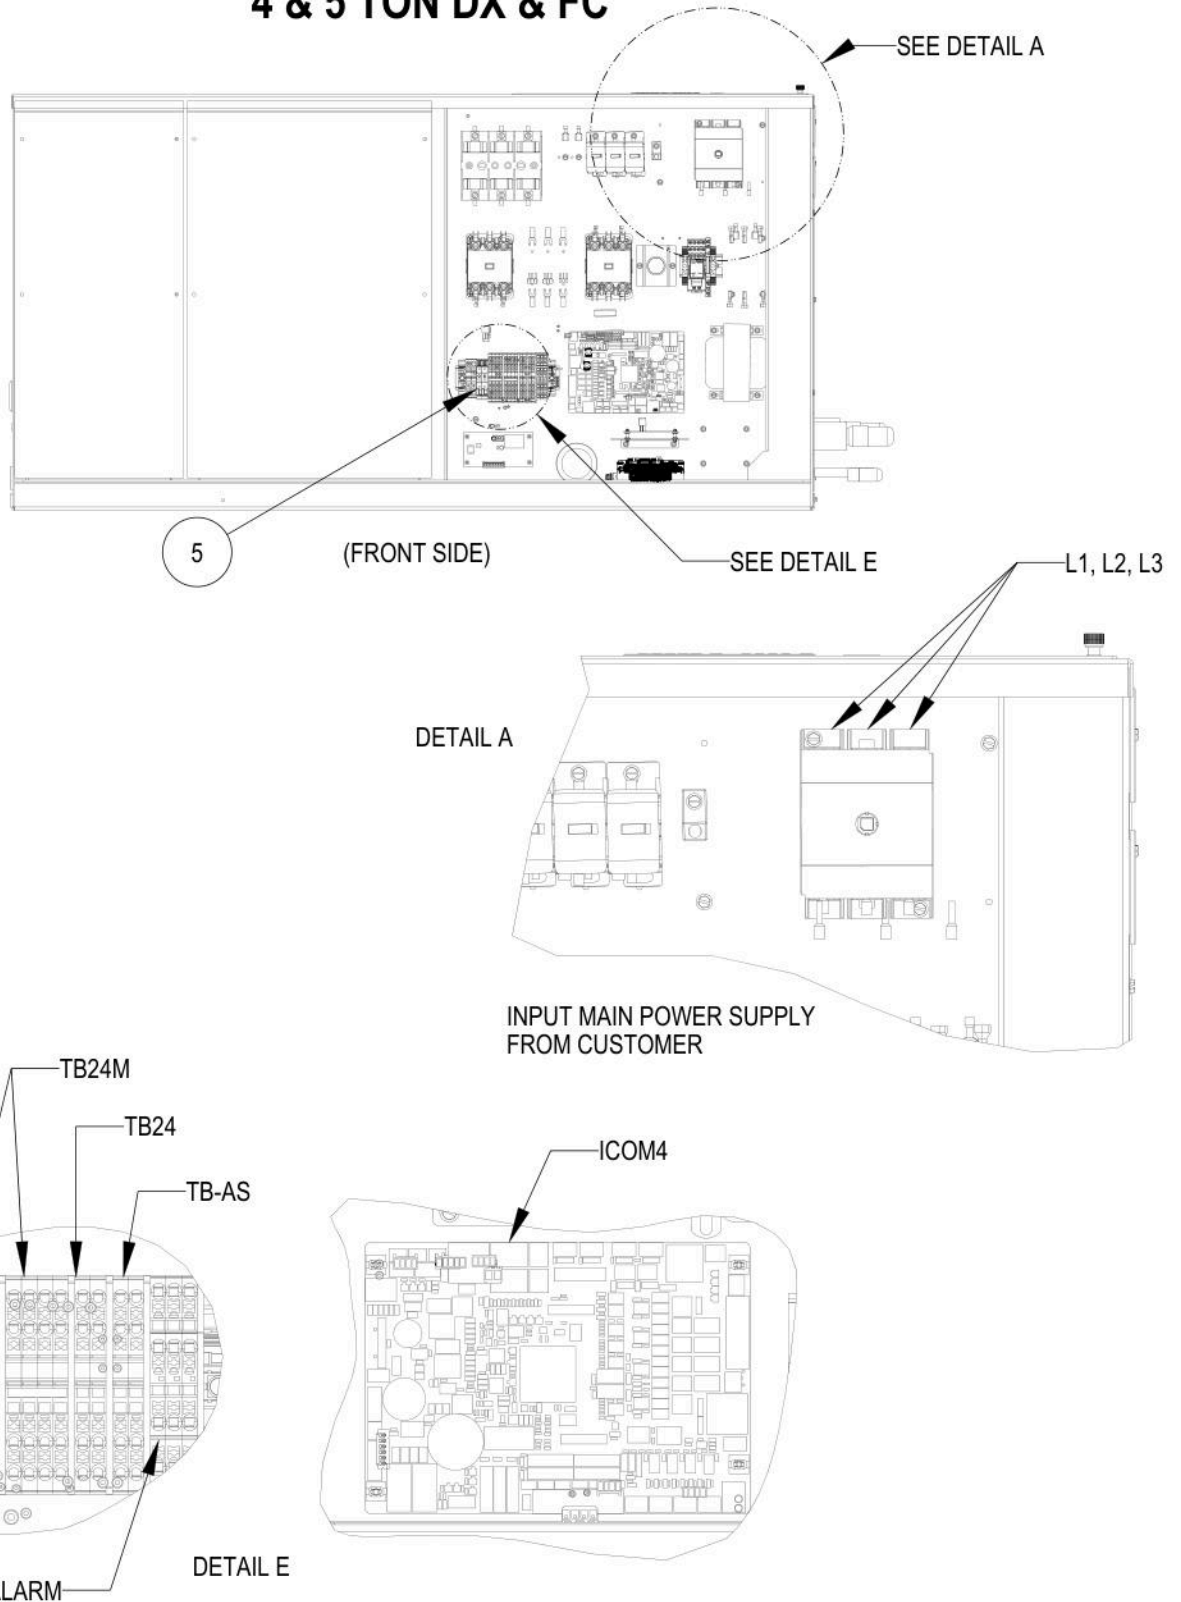



VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

8 TON DX & FC

STANDARD ELECTRICAL CONNECTIONS

1) High Voltage connection through the right side of the Ceiling Panel - 1.37" (35mm) diameter concentric knockout

2) Communication connection on the front of the Ceiling Panel
Connect according diagram in the corresponding ethernet port.

3) Electrical service (hard wired) - refer to serial tag information for unit electrical service requirement

- Three Phase - 208-230V 60HZ / 460 60HZ

- Single Phase - 208-230V 60HZ

Connect to terminals on disconnect switch. Electrical service not by Vertiv. Use copper conductors only, wire per local codes. Refer to specification sheet for total unit full load amps, wire size amps and max over current protection device size.

4) Communication Bracket

- P64A: U2U-A Unit-to-Unit Communication

- P64B: U2U-B Unit-to-Unit Communication

- VFD: Condenser Modbus (RS485) Communication

- P74: BMS Connectivity / Embedded Unity

5) Terminal Blocks Control Distribution Voltage / Power Voltage Terminals / Communication RS485

- TBK Terminal Ground

- TBK 24M Control Distribution Voltage 24VAC

- TBK 24-24AS Control Distribution Voltage 24VAC Insulated Voltage from Transformer 1:1

6) Fans Terminal Blocks

- MR relay is the power source for MF (Main Fan Relay)

- Main control signal from ICOM 4. (0-10V Distribution)

Reference models showed in this document are 300MM units. All connections, terminal block locations and communication ports also apply for 600MM units.

VERTIV COOLPHASE CEILING

ELECTRICAL FIELD CONNECTIONS

8 TON DX & FC



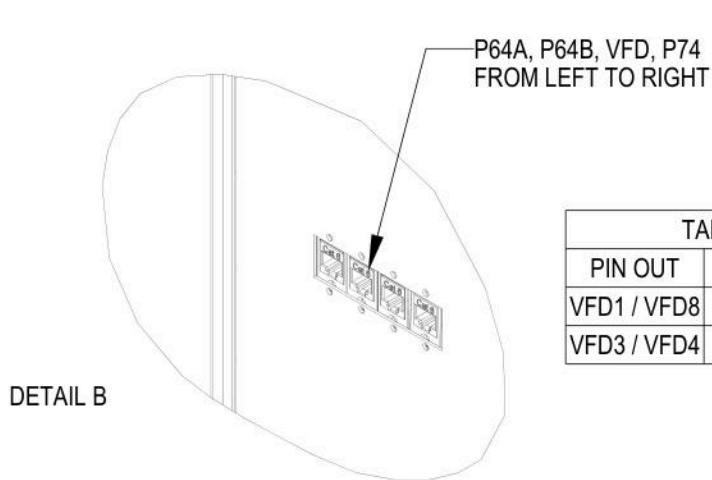


TABLE "A"	
PIN OUT	DESCRIPTION
VFD1 / VFD8	MODBUS A/B
VFD3 / VFD4	24VAC L/N

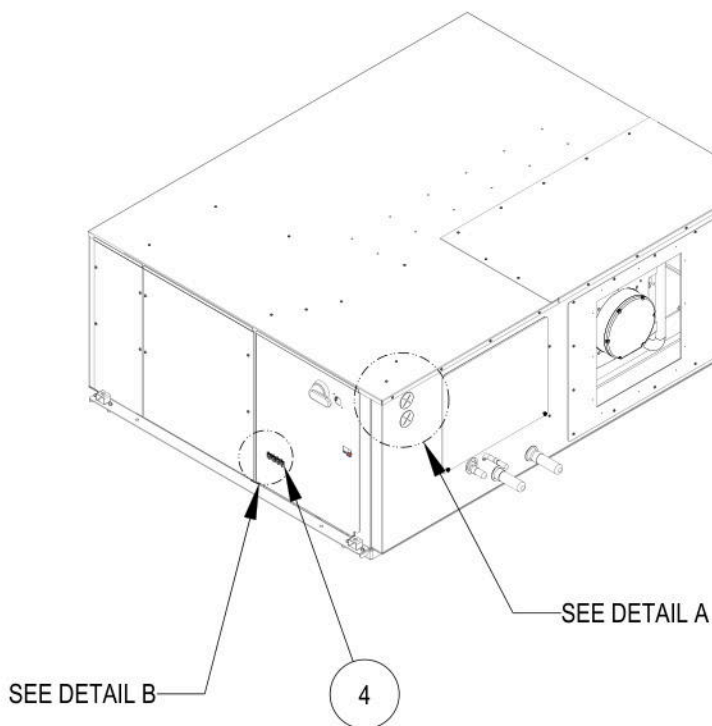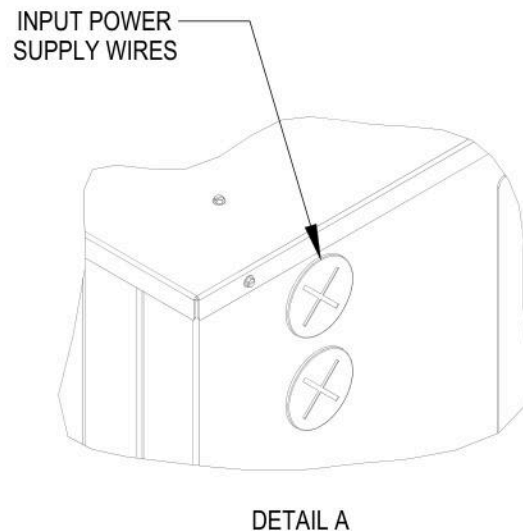


ETHERNET CABLE CONFIGURATION MUST BE
STRAIGHT CONFIGURATION.
Z4 PIN OUT(INDOOR - OUTDOOR
COMMUNICATION) SEE TABLE "A"

VERTIV COOLPHASE CEILING


ELECTRICAL FIELD CONNECTIONS




8 TON DX & FC

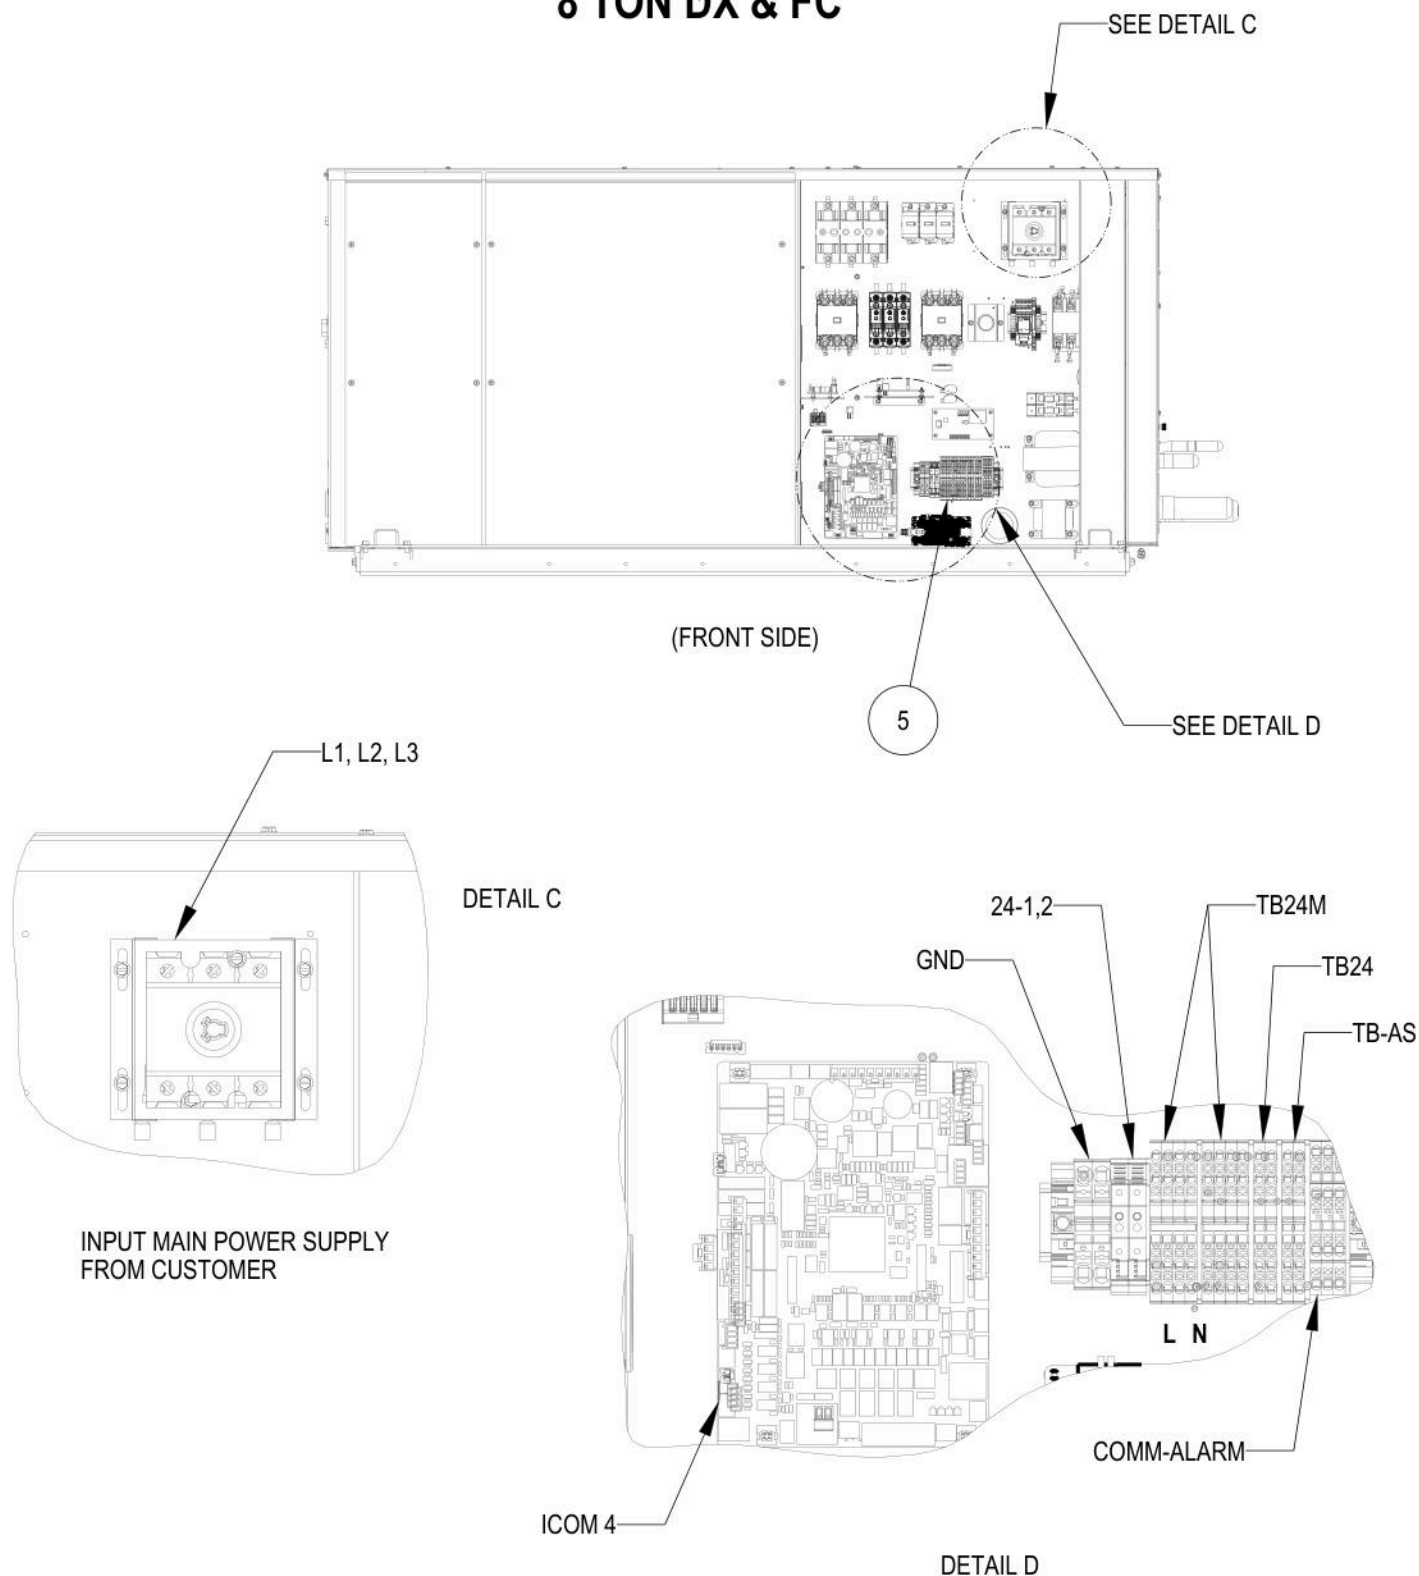

Vertiv CoolPhase Condensing Unit

ELECTRICAL FIELD CONNECTIONS

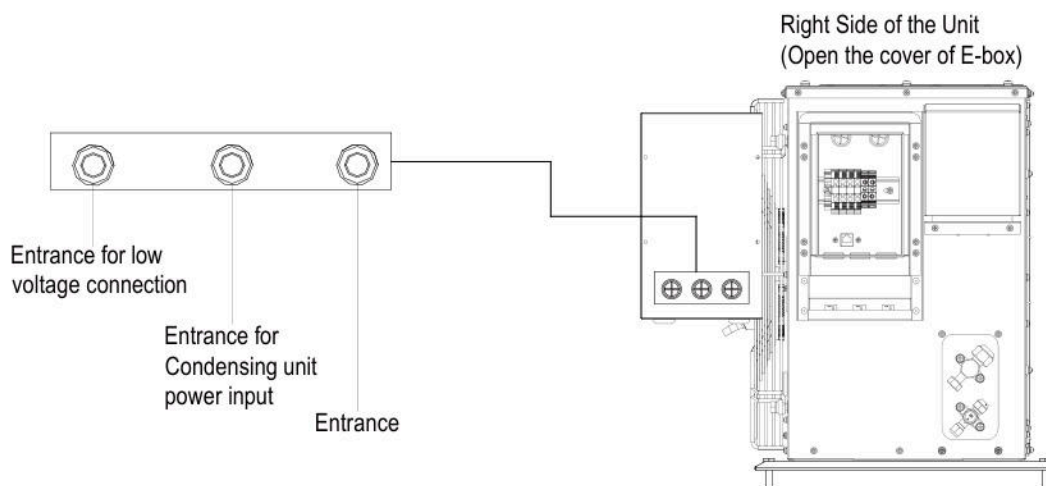

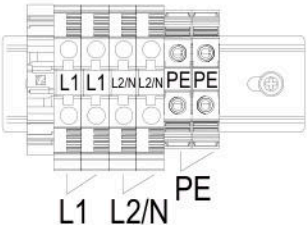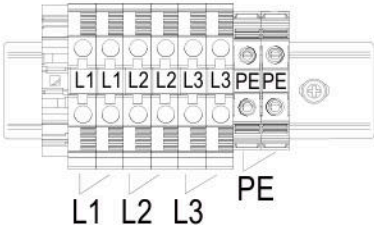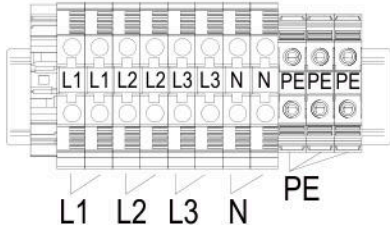Electric control box layout and power supply system		
CUD030-E000A, CUL030-E000A CUD070-E000A, CUL070-E000A	CUD111-E000A, CUL111-E000A	CUD115-E000A, CUL115-E000A
 RJ45-low voltage connector	 RJ45-low voltage connector	 RJ45-low voltage connector
208/230V/1Ph/50/60Hz	208/230V/3Ph/50/60Hz	400V/3Ph+N/50/60Hz

NOTE: After wiring is completed, secure the excess cables with wire ties. The Wire Saddles are at the bottom of the electrical box.



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 21kW

Condenser-rated voltage should be verified with available power supply before installation. Refer to the unit's electrical schematic and serial tag for specific electrical requirements. Line voltage electrical service is required for all condensers at the location of the condenser. The voltage supply to the condenser may not be the same voltage supply as required by the indoor unit. Consider using UPS equipment on both data center cooling units and Liebert MC condensers to maintain uninterrupted cooling capability. Refer to the unit's serial tag for specific condenser electrical requirements. A unit disconnect is standard. However, a site disconnect may be required per local code to isolate the unit for maintenance. Route the supply power to the site disconnect switch and then to the unit. Route the conduit to the knockout provided in the top right end of the electrical control enclosure. Connect the earth ground wire leads to the marked earth ground connection terminal provided near the factory-installed disconnect switch.

KEY ELECTRICAL POWER SUPPLY DETAILS:

- 1) **Three phase electrical service (primary source)** - The connection terminals are on top of fused switch. Three phase service not by Vertiv. See note 4.
- 2) **Earth ground (primary source)** - Field lug terminal for earth ground connection.
- 3) **Three phase electrical service (secondary source)** - The connection terminals are on top of fused switch, the fused switch is located at the top and right side of the E-box. Three phase service not by Vertiv. See note 4.
- 4) **Earth ground (secondary source)** - Terminal for field-supplied earth grounding wire.
- 5) **Modbus terminal connections (RS-485) from the interior unit** - The connection terminals are located in TB-A. See DETAIL B on page 3.
RS485+ terminal is the input terminal for RS485 signal (positive).
RS485- terminal is the input terminal for RS485 signal (negative).
CGND terminal is the input terminal for signal reference ground.
- 6) **24V terminal connections from the interior unit** - The connection terminals are located in TB-A. See DETAIL B on page 3.
24V terminal is the input terminal for the hot wire used for leak detection mitigation on the indoor unit.
COM terminal is the input terminal for the common wire used for leak detection mitigation on the indoor unit.
- 7) **Three phase electrical service entrance (primary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 8) **Three phase electrical service entrance (secondary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 9) **Modbus terminal connections (RS-485) from the interior unit** - Field connections for Modbus cable connection: One - 0.70" (18mm) diameter knockout located at the middle and left side of the E-Box.

NOTES:

1. Refer to specification sheet for unit voltage rating, full load amp, minimum circuit ampacity and maximum circuit protection.
2. The modbus (RS485) wiring is field supplied and must be (See drawing on page 3 for wire configuration):
 - STP straight through wire type.
 - 22-18AWG stranded tinned copper.
 - Twisted pair (minimum 4 twist per foot).
 - Low Capacitance (15pF/FT or less).
 - Must be rated to meet local codes and conditions.
3. Do not run in same conduit, raceway, or chase as high voltage wiring.
4. All wiring must be sized and selected for insulation case per NEC and other local codes.
5. Do not bend cables to less than four times the diameter of the cable.
6. UL approved temperature rated to 75°C.
7. UV - and moisture-resistance for exterior and if it is not provided in conduits.
8. Do not deform cables when securing in bundles or when hanging them.
9. Avoid running the cables by devices that may introduce noise, such as machines, fluorescent lights, and electronics.
10. Avoid stretching cables.



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 21kW

NOTICE

RISK OF IMPROPER INPUT POWER CAN CAUSE EQUIPMENT DAMAGE.

The electronically commutated motors included in the COOLPHASE CONDENSING UNITS are suitable for connection to an electrical service providing input power to the unit with 300V or less line -to-ground potential only.

Acceptable unit input electrical service for 208V(230V) nominal units:
208V wye with solidly grounded neutral and 120V line-to-ground.

Acceptable unit input electrical service for 460V(480V) nominal units:
480V wye with solidly grounded neutral and 277V line-to-ground.


Unacceptable unit input electrical service for 208V to 460V (480V) nominal units:
Wye with high resistance (or impedance) ground
Delta without ground or with floating ground
Delta with corner ground
Delta with grounded center tap




VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS

CONDENSER UNIT 21kW

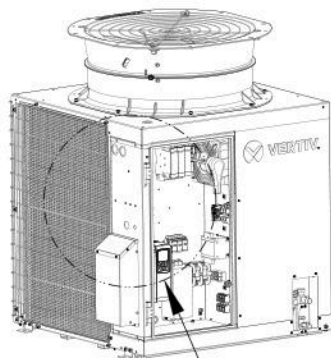

SEE DETAIL A

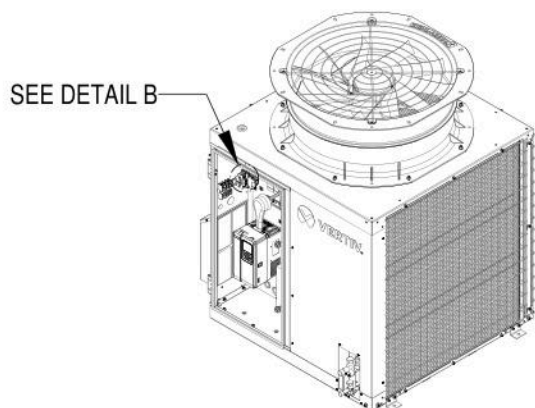

SEE DETAIL B

MAIN
POWER SUPPLY
ENTRY

SECONDARY
POWER SUPPLY
ENTRY


INDOOR UNIT
COMMUNICATION CABLE
ENTRY

DETAIL A
CABLE ENTRY LOCATIONS

INDOOR COMMUNICATION CABLE COM
INDOOR COMMUNICATION CABLE 24V

TB-A

DETAIL B
COMM CABLE CONNECTIONS

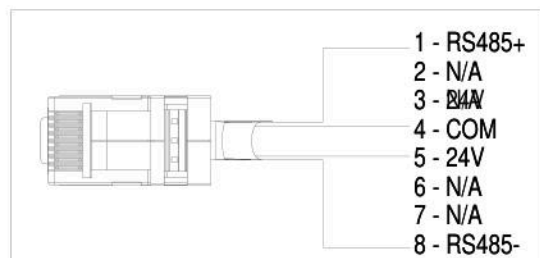

INDOOR-OUTDOOR COMMUNICATION
CABLE CONFIGURATION
USE ETHERNET SHIELDED STRAIGHT THROUGH

INDOOR COMMUNICATION CABLE RS485+
INDOOR COMMUNICATION CABLE RS485-




VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS

CONDENSER UNIT 21kW


SEE DETAIL C

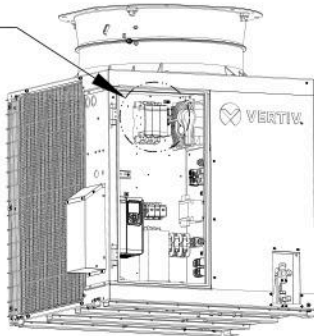

SINGLE POWER SUPPLY OPTIONS

MAIN POWER SUPPLY
L1, L2, L3

MAIN POWER SUPPLY
GROUND LUG

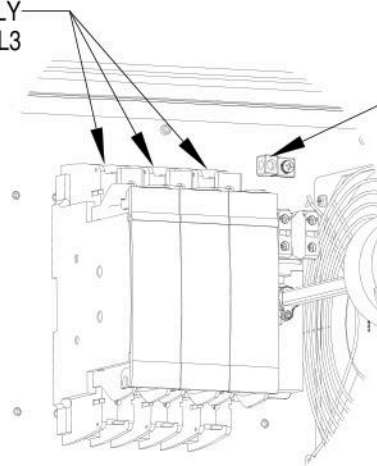


DETAIL C
MAIN POWER SUPPLY CONNECTIONS
SINGLE POWER OPTION



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 21kW

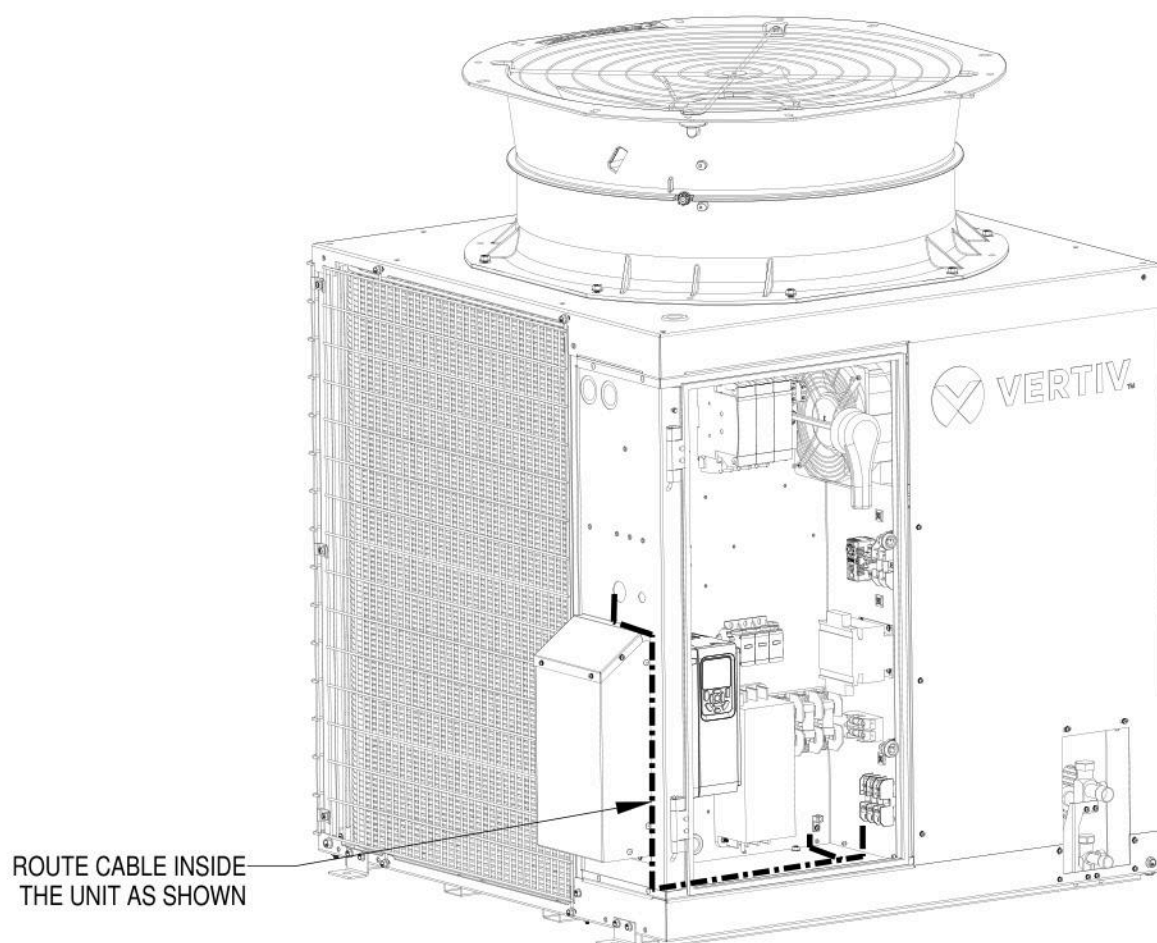



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 15kW

Condenser-rated voltage should be verified with available power supply before installation. Refer to the unit's electrical schematic and serial tag for specific electrical requirements. Line voltage electrical service is required for all condensers at the location of the condenser. The voltage supply to the condenser may not be the same voltage supply as required by the indoor unit. Consider using UPS equipment on both data center cooling units and Liebert MC condensers to maintain uninterrupted cooling capability. Refer to the unit's serial tag for specific condenser electrical requirements. A unit disconnect is standard. However, a site disconnect may be required per local code to isolate the unit for maintenance. Route the supply power to the site disconnect switch and then to the unit. Route the conduit to the knockout provided in the top right end of the electrical control enclosure. Connect the earth ground wire leads to the marked earth ground connection terminal provided near the factory-installed disconnect switch.

KEY ELECTRICAL POWER SUPPLY DETAILS:

- 1) **Three phase electrical service (primary source)** - The connection terminals are on top of fused switch. Three phase service not by Vertiv. See note 4.
- 2) **Earth ground (primary source)** - Field lug terminal for earth ground connection.
- 3) **Three phase electrical service (secondary source)** - The connection terminals are on top of fused switch, the fused switch is located at the top and right side of the E-box. Three phase service not by Vertiv. See note 4.
- 4) **Earth ground (secondary source)** - Terminal for field-supplied earth grounding wire.
- 5) **Modbus terminal connections (RS-485) from the interior unit** - The connection terminals are located in TB-A. See DETAIL B on page 3.
RS485+ terminal is the input terminal for RS485 signal (positive).
RS485- terminal is the input terminal for RS485 signal (negative).
CGND terminal is the input terminal for signal reference ground.
- 6) **24V terminal connections from the interior unit** - The connection terminals are located in TB-A. See DETAIL B on page 3.
24V terminal is the input terminal for the hot wire used for leak detection mitigation on the indoor unit.
COM terminal is the input terminal for the common wire used for leak detection mitigation on the indoor unit.
- 7) **Three phase electrical service entrance (primary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 8) **Three phase electrical service entrance (secondary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 9) **Modbus terminal connections (RS-485) from the interior unit** - Field connections for Modbus cable connection: One - 0.70" (18mm) diameter knockout located at the middle and left side of the E-Box.

NOTES:

1. Refer to specification sheet for unit voltage rating, full load amp, minimum circuit ampacity and maximum circuit protection.
2. The modbus (RS485) wiring is field supplied and must be (See drawing on page 3 for wire configuration):
STP straight through wire type.
22-18AWG stranded tinned copper.
Twisted pair (minimum 4 twist per foot).
Low Capacitance (15pF/FT or less).
Must be rated to meet local codes and conditions.
3. Do not run in same conduit, raceway, or chase as high voltage wiring.
4. All wiring must be sized and selected for insulation case per NEC and other local codes.
5. Do not bend cables to less than four times the diameter of the cable.
6. UL approved temperature rated to 75°C.
7. UV - and moisture-resistance for exterior and if it is not provided in conduits.
8. Do not deform cables when securing in bundles or when hanging them.
9. Avoid running the cables by devices that may introduce noise, such as machines, fluorescent lights, and electronics.
10. Avoid stretching cables.



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 15kW

NOTICE

RISK OF IMPROPER INPUT POWER CAN CAUSE EQUIPMENT DAMAGE.

The electronically commutated motors included in the COOLPHASE CONDENSING UNITS are suitable for connection to an electrical service providing input power to the unit with 300V or less line -to-ground potential only.

Acceptable unit input electrical service for 208V(230V) nominal units:
208V wye with solidly grounded neutral and 120V line-to-ground.


Acceptable unit input electrical service for 460V(480V) nominal units:
480V wye with solidly grounded neutral and 277V line-to-ground.

Unacceptable unit input electrical service for 208V to 460V (480V) nominal units:
Wye with high resistance (or impedance) ground
Delta without ground or with floating ground
Delta with corner ground
Delta with grounded center tap



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS CONDENSER UNIT 15kW

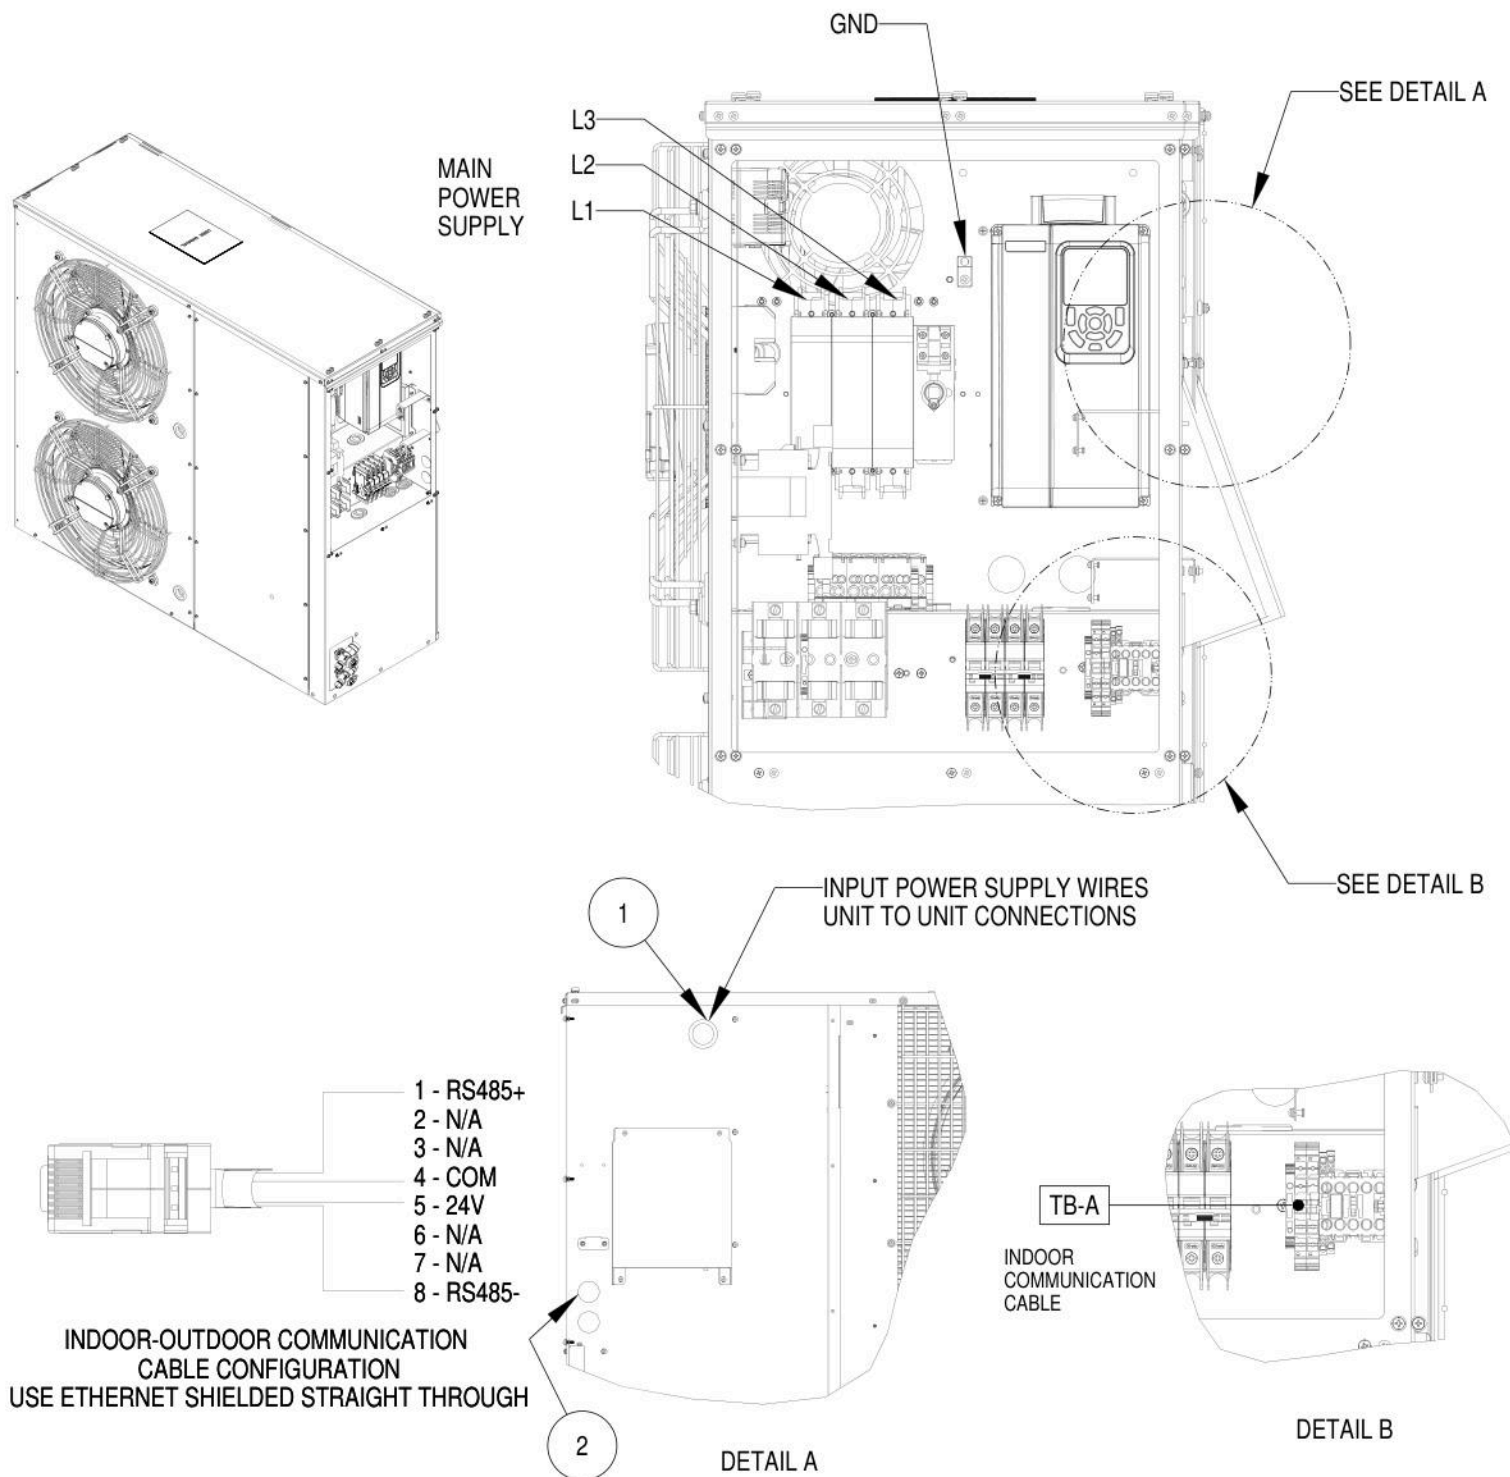



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS

Condensing unit-rated voltage should be verified with available power supply before installation. Refer to the unit's electrical schematic and serial tag for specific electrical requirements. Line voltage electrical service is required for all condensing units at the location of the condensing units. The voltage supply to the condensing unit may not be the same voltage supply as required by the indoor unit. Consider using UPS equipment on both data center cooling units and CoolPhase Condensing units to maintain uninterrupted cooling capability. Refer to the unit's serial tag for specific condenser electrical requirements. A unit disconnect is standard. However, a site disconnect may be required per local code to isolate the unit for maintenance. Route the supply power to the site disconnect switch and then to the unit. Route the conduit to the knockout provided in the top right end of the electrical control enclosure. Connect the earth ground wire leads to the marked earth ground connection terminal provided near the factory-installed disconnect switch.

NOTE

CoolPhase Condensing unit may include a dual power supply option, this will require a separate line voltage electrical supply from an emergency power supply.

KEY ELECTRICAL POWER SUPPLY DETAILS:

- 1) **Three phase electrical service (primary source)** - The connection terminals are on top of fused switch. Three phase service not by Vertiv. See note 4.
- 2) **Earth ground (primary source)** - Field lug terminal for earth ground connection.
- 3) **Three phase electrical service (secondary source)** - The connection terminals are on top of fused switch, the fused switch is located at the top and right side of the E-box. Three phase service not by Vertiv. See note 4.
- 4) **Earth ground (secondary source)** - Terminal for field-supplied earth grounding wire.
- 5) **Modbus terminal connections (RS-485) from the interior unit** - The ethernet port Z4 are located in the bracket. See DETAIL C on page 3 CONNECT.
 - RS485+ terminal is the input terminal for RS485 signal (positive).
 - RS485- terminal is the input terminal for RS485 signal (negative).
 - CGND terminal is the input terminal for signal reference ground.
 - POWER METER RS485+ terminals are the input terminal for RS485 signal when using the Power Meter accessory. Refer to its QIG for more details on installation.
- 6) **24V terminal connections from the interior unit** - The connection terminals are located in TB-A. See DETAIL B on page 3.
 - 24V terminal is the input terminal for the hot wire used for leak detection mitigation on the indoor unit.
 - COM terminal is the input terminal for the common wire used for leak detection mitigation on the indoor unit.
- 7) **Three phase electrical service entrance (primary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 8) **Three phase electrical service entrance (secondary source)** - One 1.875in (47.63mm) diameter knockout located at the top and left side of the E-Box.
- 9) **Modbus terminal connections (RS-485) from the interior unit** - Field connections for Modbus cable connection: One - 0.70" (18mm) diameter knockout located at the middle and left side of the E-Box.

NOTES:

1. Refer to specification sheet for unit voltage rating, full load amp, minimum circuit ampacity and maximum circuit protection.
2. The modbus (RS485) wiring is field supplied and must be (See drawing on page 3 for wire configuration):
 - STP straight through wire type.
 - 22-18AWG stranded tinned copper.
 - Twisted pair (minimum 4 twist per foot).
 - Low Capacitance (15pF/FT or less).
 - Must be rated to meet local codes and conditions.
3. Do not run in same conduit, raceway, or chase as high voltage wiring.
4. All wiring must be sized and selected for insulation case per NEC and other local codes.
5. Do not bend cables to less than four times the diameter of the cable.
6. UL approved temperature rated to 75°C.
7. UV - and moisture-resistance for exterior and if it is not provided in conduits.
8. Do not deform cables when securing in bundles or when hanging them.
9. Avoid running the cables by devices that may introduce noise, such as machines, fluorescent lights, and electronics.
10. Avoid stretching cables.



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS

NOTICE

RISK OF IMPROPER INPUT POWER CAN CAUSE EQUIPMENT DAMAGE.

The electronically commutated motors included in the COOLPHASE CONDENSING UNITS - included in 480V in COOLPHASE ROW30 + CONDENSING UNIT AND COOLPHASE ROW40 + CONDENSING UNIT - are suitable for connection to an electrical service providing input power to the unit with 300V or less line -to-ground potential only.

Acceptable unit input electrical service for 208V(230V) nominal units:
208V wye with solidly grounded neutral and 120V line-to-ground.


Acceptable unit input electrical service for 460V(480V) nominal units:
480V wye with solidly grounded neutral and 277V line-to-ground.

Unacceptable unit input electrical service for 208V to 460V (480V) nominal units:
Wye with high resistance (or impedance) ground
Delta without ground or with floating ground
Delta with corner ground
Delta with grounded center tap





VERTIV™ VERTIV COOLPHASE CONDENSING UNIT


ELECTRICAL FIELD CONNECTIONS

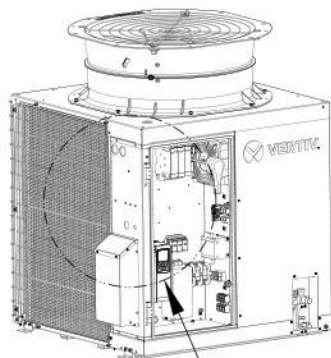


SEE DETAIL A

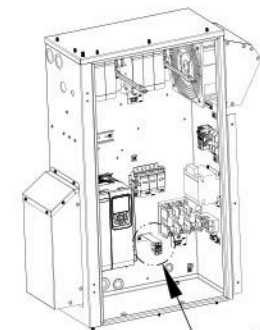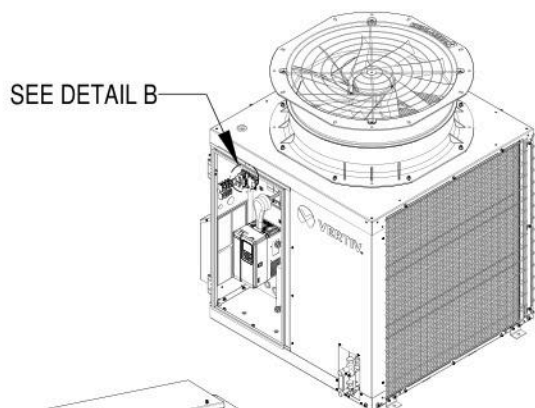

SEE DETAIL A

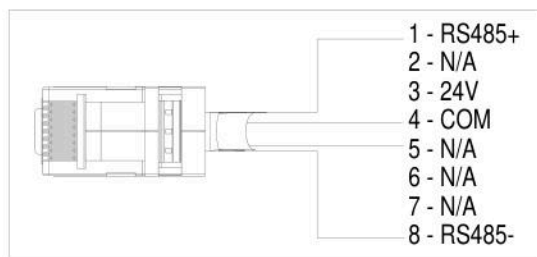

INDOOR-OUTDOOR COMMUNICATION
CABLE CONFIGURATION
USE ETHERNET SHIELDED STRAIGHT THROUGH

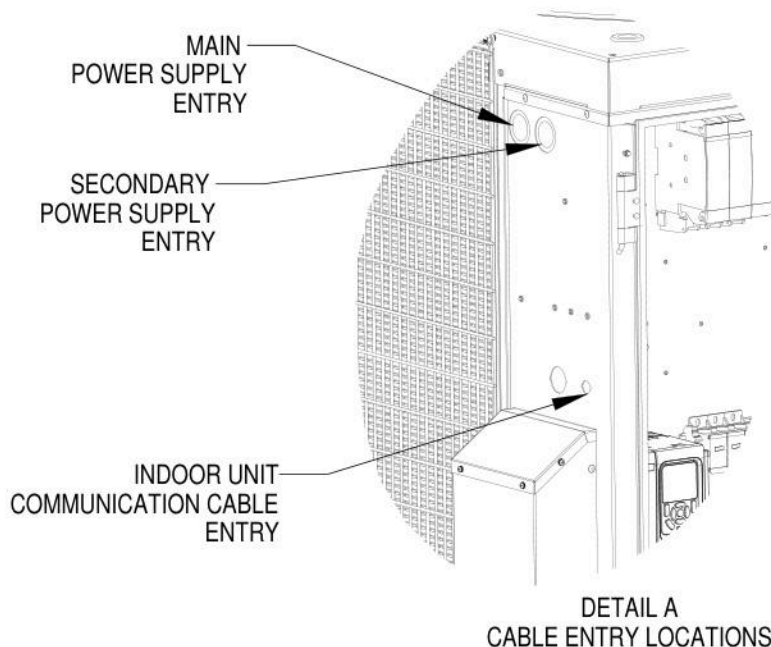

INDOOR COMMUNICATION CABLE COM
INDOOR COMMUNICATION CABLE 24V



DETAIL A
ETHERNET PORT
COMMUNICATION
INDOOR - OUTDOOR
Z4

TB-A

POWER METER ACCESSORY 485-
POWER METER ACCESSORY 485+
INDOOR COMMUNICATION CABLE RS485+
INDOOR COMMUNICATION CABLE RS485-


DETAIL B
COMM CABLE CONNECTIONS



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS


SEE DETAIL C

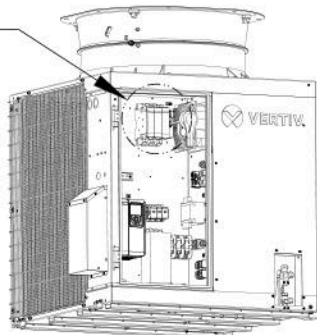

SINGLE POWER SUPPLY OPTIONS


MAIN POWER SUPPLY
L1, L2, L3

MAIN POWER SUPPLY
GROUND LUG

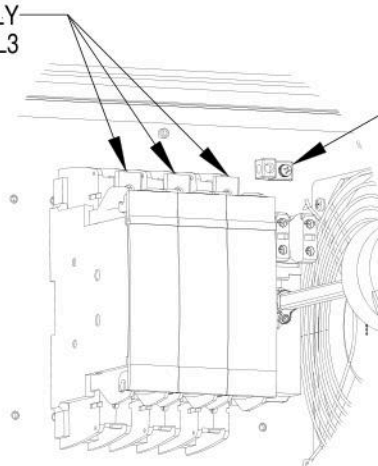

DETAIL C
MAIN POWER SUPPLY CONNECTIONS
SINGLE POWER OPTION

SEE DETAIL D

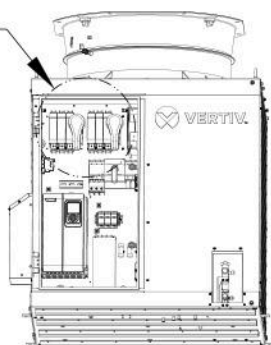


DUAL POWER SUPPLY OPTIONS

MAIN POWER SUPPLY
L1, L2, L3

MAIN
POWER SUPPLY
GROUND LUG

BACKUP POWER SUPPLY
L1, L2, L3

BACKUP
POWER SUPPLY
GROUND LUG

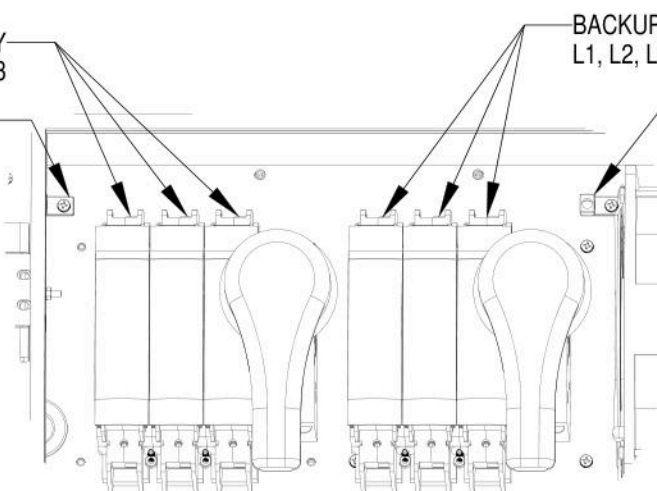


DETAIL D
MAIN POWER SUPPLY CONNECTIONS
DUAL POWER OPTION




VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

ELECTRICAL FIELD CONNECTIONS

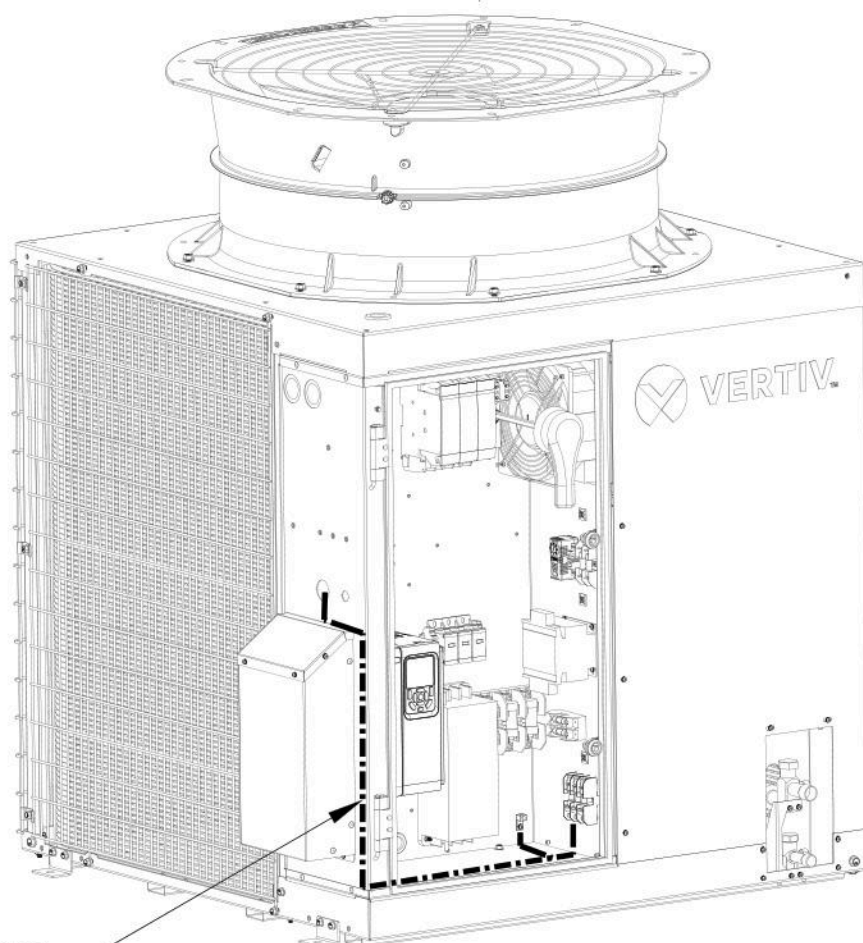

ROUTE CABLE INSIDE
THE UNIT AS SHOWN

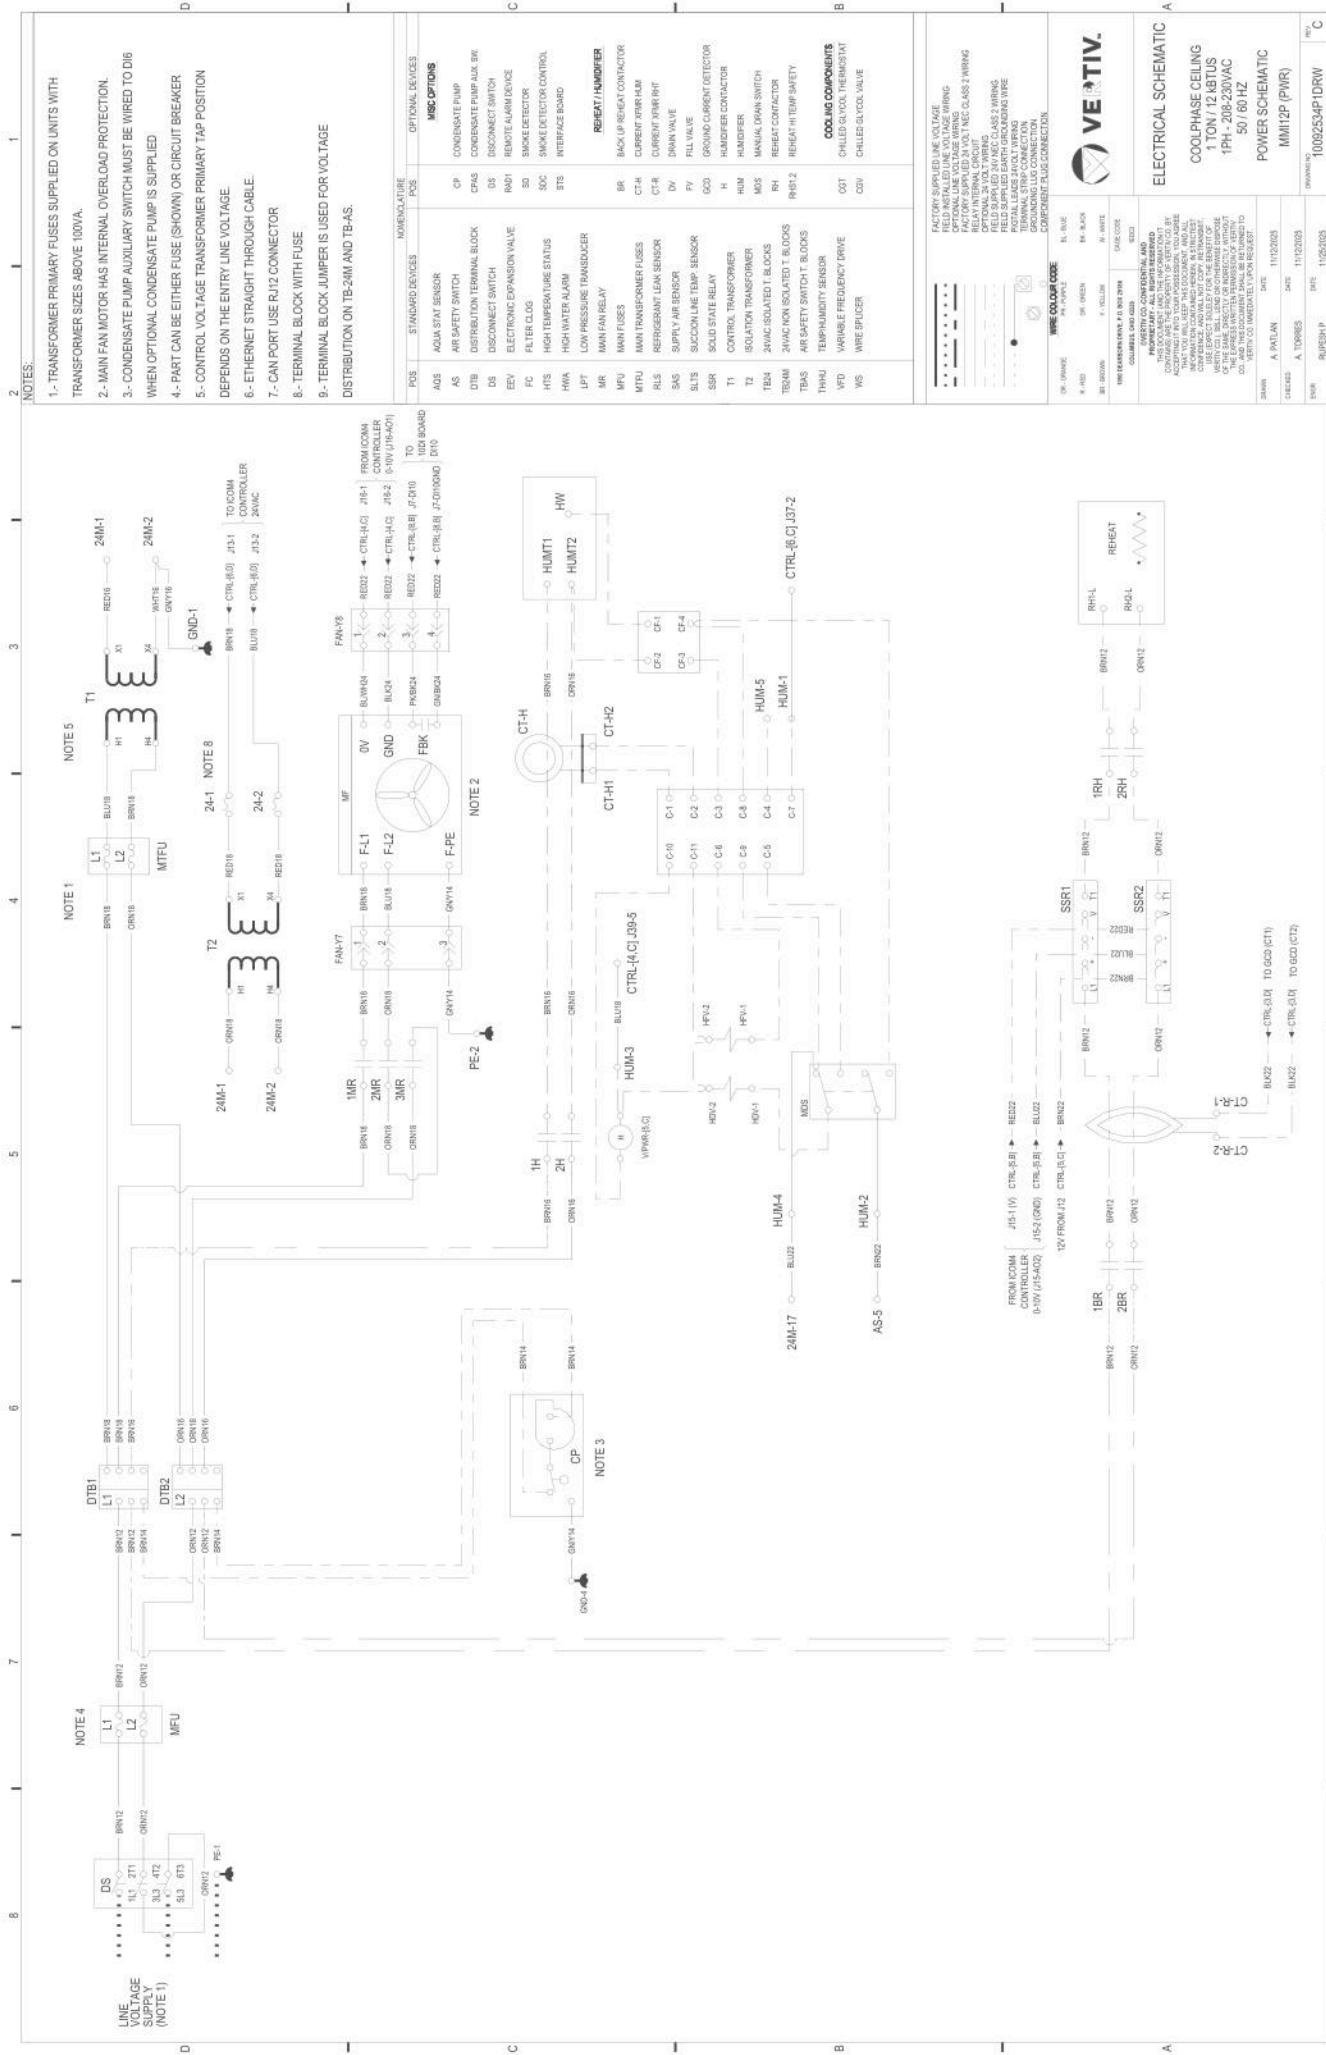

FACTORY SUPPLIED LINE VOLTAGE

OPTIONAL LINE VOLTAGE WIRING

FACTORY SUPPLIED 24 VOLT NEC CLASS 2 WIRING

RELAY INTERNAL CIRCUIT

FIELD SUPPLIED 24VDC CLASS 2 WIRING

POTENTIAL LEADS 240VOLT WIRING


GROUNDED FLUX CONNECTION

COMPONENT PLUG CONNECTION

OR - ORANGE PK - PURPLE W - RED BT - BROWN	BL - BLUE BK - BLACK GR - GREEN Y - YELLOW WH - WHITE	 VETIV. THE ESSENCE OF NATURE
WIRE COLOUR CODE WIRE SEARCHING: P.A. P.O. BOX 2908 CABLE CODE		

[illegible]

2

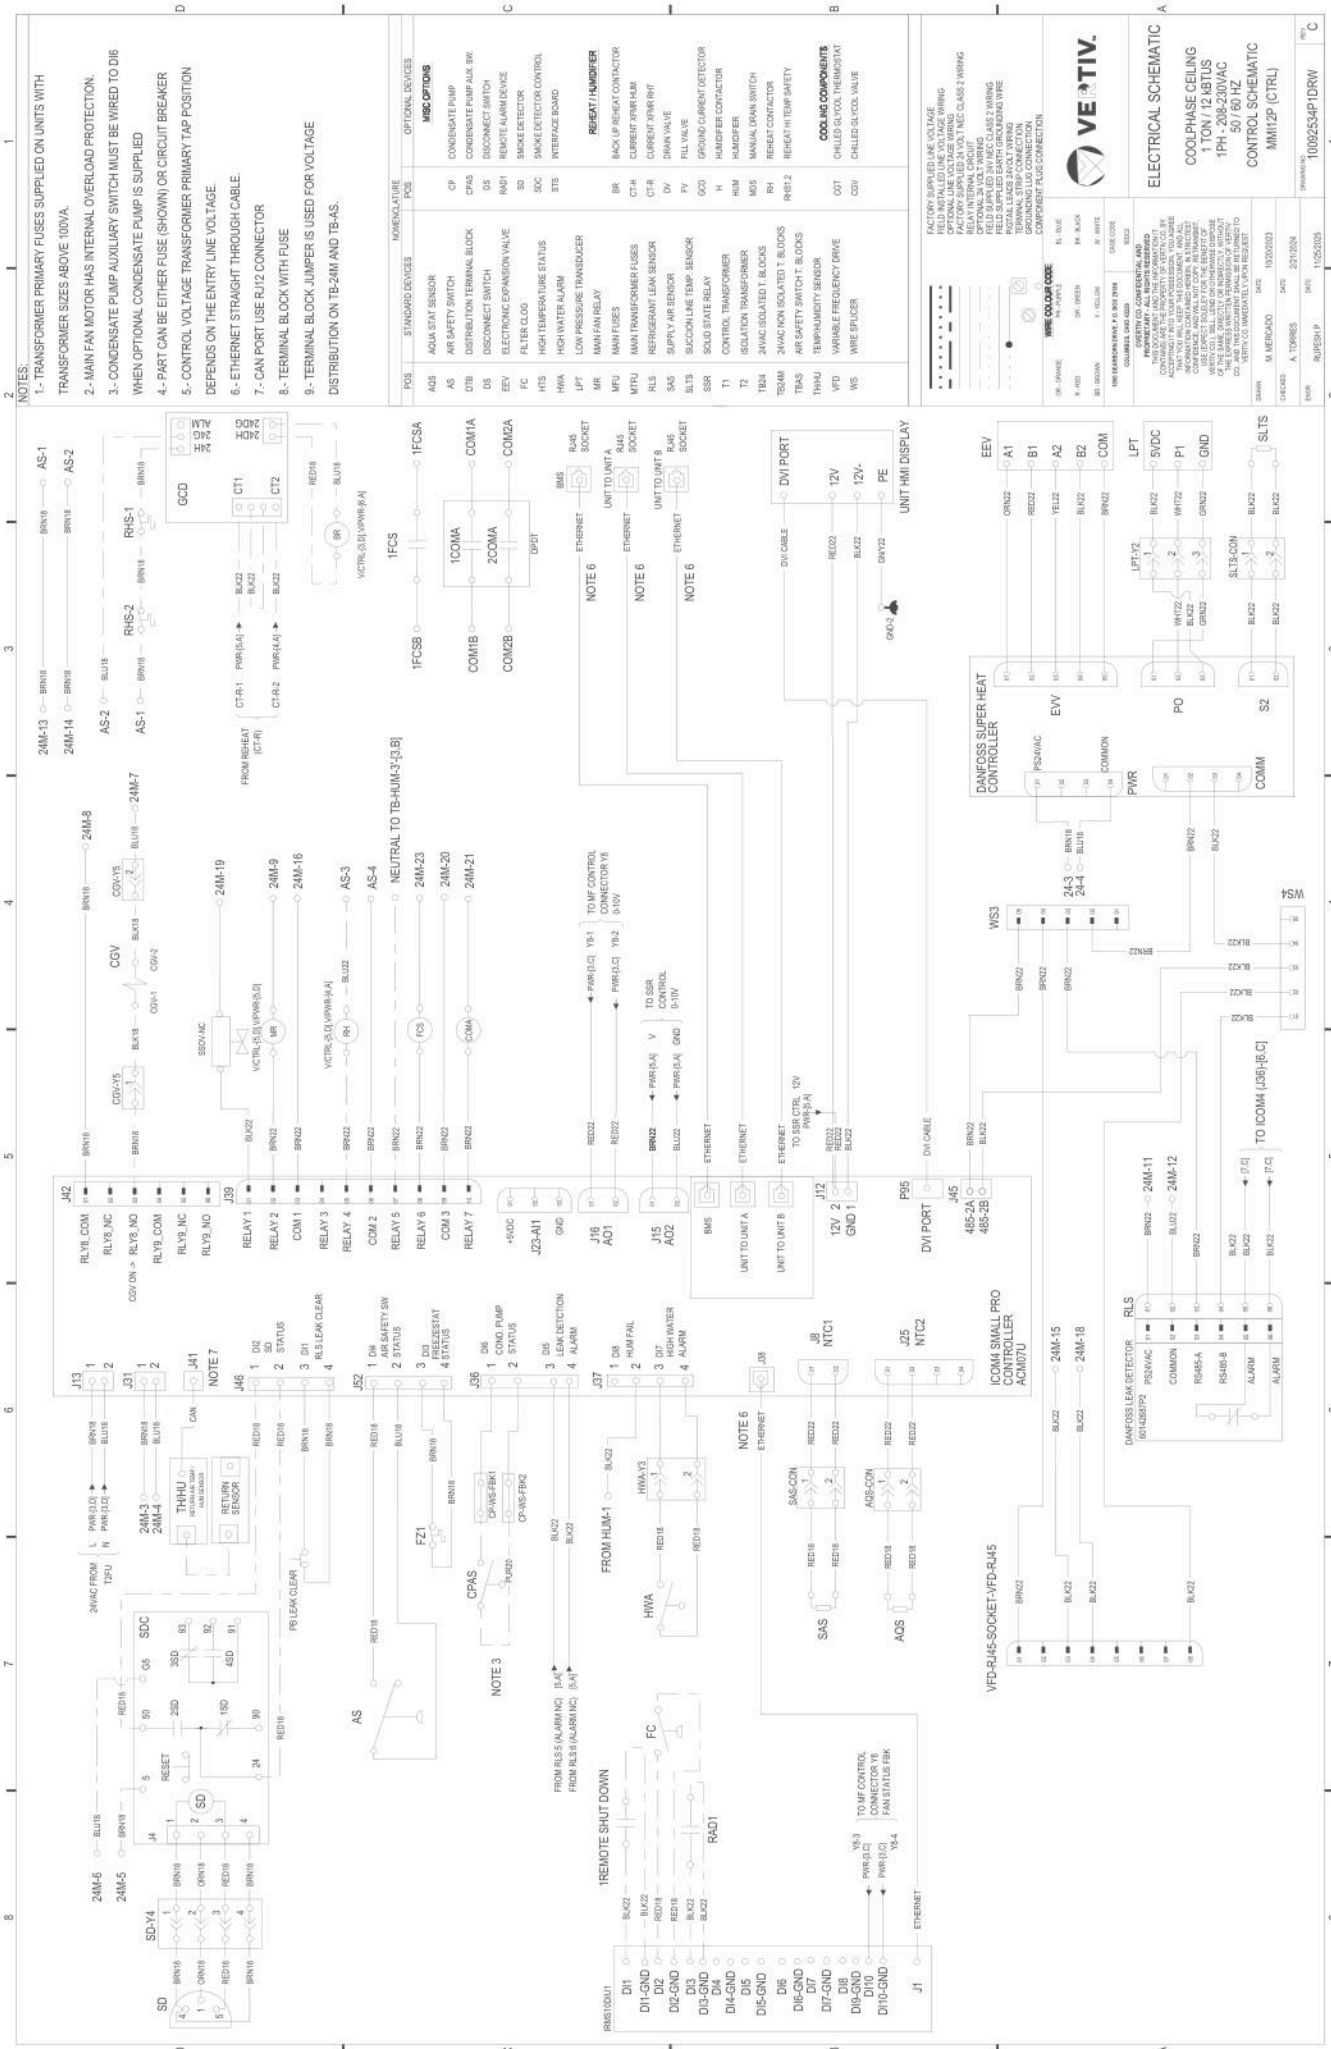

NOTES:


- 1- TRANSFORMER PRIMARY FUSES SUPPLIED ON UNITS WITH TRANSFORMER SIZES ABOVE 100VA.
- 2- MAIN FAN MOTOR HAS INTERNAL OVERLOAD PROTECTION.
- 3- CONDENSATE PUMP AUXILIARY SWITCH MUST BE WIRED TO DIE WHEN OPTIONAL CONDENSATE PUMP IS SUPPLIED
- 4- PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER
- 5- CONTROL VOLTAGE TRANSFORMER PRIMARY TAP POSITION DEPENDS ON THE ENTRY LINE VOLTAGE
- 6- ETHERNET STRAIGHT THROUGH CABLE
- 7- CAN PORT USE RJ45 CONNECTOR
- 8- TERMINAL BLOCK WITH FUSE
- 9- TERMINAL BLOCK JUMPER IS USED FOR VOLTAGE DISTRIBUTION ON TB-24M AND TB-AS.

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD
AS-7	HIGH WATER ALARM	AS-7	REPEAT HANDICAP
AS-8	LOW PRESSURE TRANSDUCER	AS-8	BACK OF REPEAT CONTRACTOR
AS-9	MAN (AN) RELAY	AS-9	CURRENT XMR ALM
AS-10	MAN (AN) RELAY	AS-10	CURRENT XMR RHT
AS-11	MAN (AN) RELAY	AS-11	DRAIN VALVE
AS-12	MAN (AN) RELAY	AS-12	FILL VALVE
AS-13	MAN (AN) RELAY	AS-13	GROUND CURRENT DETECTOR
AS-14	MAN (AN) RELAY	AS-14	HANDICAP CONTRACTOR
AS-15	MAN (AN) RELAY	AS-15	HANDICAP
AS-16	MAN (AN) RELAY	AS-16	MANUAL DRAIN SWITCH
AS-17	MAN (AN) RELAY	AS-17	REPEAT CONTRACTOR
AS-18	MAN (AN) RELAY	AS-18	REPEAT HI TEMP SAFETY
AS-19	MAN (AN) RELAY	AS-19	REPEAT HI TEMP SAFETY
AS-20	MAN (AN) RELAY	AS-20	REPEAT HI TEMP SAFETY
AS-21	MAN (AN) RELAY	AS-21	REPEAT HI TEMP SAFETY
AS-22	MAN (AN) RELAY	AS-22	REPEAT HI TEMP SAFETY
AS-23	MAN (AN) RELAY	AS-23	REPEAT HI TEMP SAFETY
AS-24	MAN (AN) RELAY	AS-24	REPEAT HI TEMP SAFETY
AS-25	MAN (AN) RELAY	AS-25	REPEAT HI TEMP SAFETY
AS-26	MAN (AN) RELAY	AS-26	REPEAT HI TEMP SAFETY
AS-27	MAN (AN) RELAY	AS-27	REPEAT HI TEMP SAFETY
AS-28	MAN (AN) RELAY	AS-28	REPEAT HI TEMP SAFETY
AS-29	MAN (AN) RELAY	AS-29	REPEAT HI TEMP SAFETY
AS-30	MAN (AN) RELAY	AS-30	REPEAT HI TEMP SAFETY
AS-31	MAN (AN) RELAY	AS-31	REPEAT HI TEMP SAFETY
AS-32	MAN (AN) RELAY	AS-32	REPEAT HI TEMP SAFETY
AS-33	MAN (AN) RELAY	AS-33	REPEAT HI TEMP SAFETY
AS-34	MAN (AN) RELAY	AS-34	REPEAT HI TEMP SAFETY
AS-35	MAN (AN) RELAY	AS-35	REPEAT HI TEMP SAFETY
AS-36	MAN (AN) RELAY	AS-36	REPEAT HI TEMP SAFETY
AS-37	MAN (AN) RELAY	AS-37	REPEAT HI TEMP SAFETY
AS-38	MAN (AN) RELAY	AS-38	REPEAT HI TEMP SAFETY
AS-39	MAN (AN) RELAY	AS-39	REPEAT HI TEMP SAFETY
AS-40	MAN (AN) RELAY	AS-40	REPEAT HI TEMP SAFETY
AS-41	MAN (AN) RELAY	AS-41	REPEAT HI TEMP SAFETY
AS-42	MAN (AN) RELAY	AS-42	REPEAT HI TEMP SAFETY
AS-43	MAN (AN) RELAY	AS-43	REPEAT HI TEMP SAFETY
AS-44	MAN (AN) RELAY	AS-44	REPEAT HI TEMP SAFETY
AS-45	MAN (AN) RELAY	AS-45	REPEAT HI TEMP SAFETY
AS-46	MAN (AN) RELAY	AS-46	REPEAT HI TEMP SAFETY
AS-47	MAN (AN) RELAY	AS-47	REPEAT HI TEMP SAFETY
AS-48	MAN (AN) RELAY	AS-48	REPEAT HI TEMP SAFETY
AS-49	MAN (AN) RELAY	AS-49	REPEAT HI TEMP SAFETY
AS-50	MAN (AN) RELAY	AS-50	REPEAT HI TEMP SAFETY
AS-51	MAN (AN) RELAY	AS-51	REPEAT HI TEMP SAFETY
AS-52	MAN (AN) RELAY	AS-52	REPEAT HI TEMP SAFETY
AS-53	MAN (AN) RELAY	AS-53	REPEAT HI TEMP SAFETY
AS-54	MAN (AN) RELAY	AS-54	REPEAT HI TEMP SAFETY
AS-55	MAN (AN) RELAY	AS-55	REPEAT HI TEMP SAFETY
AS-56	MAN (AN) RELAY	AS-56	REPEAT HI TEMP SAFETY
AS-57	MAN (AN) RELAY	AS-57	REPEAT HI TEMP SAFETY
AS-58	MAN (AN) RELAY	AS-58	REPEAT HI TEMP SAFETY
AS-59	MAN (AN) RELAY	AS-59	REPEAT HI TEMP SAFETY
AS-60	MAN (AN) RELAY	AS-60	REPEAT HI TEMP SAFETY
AS-61	MAN (AN) RELAY	AS-61	REPEAT HI TEMP SAFETY
AS-62	MAN (AN) RELAY	AS-62	REPEAT HI TEMP SAFETY
AS-63	MAN (AN) RELAY	AS-63	REPEAT HI TEMP SAFETY
AS-64	MAN (AN) RELAY	AS-64	REPEAT HI TEMP SAFETY
AS-65	MAN (AN) RELAY	AS-65	REPEAT HI TEMP SAFETY
AS-66	MAN (AN) RELAY	AS-66	REPEAT HI TEMP SAFETY
AS-67	MAN (AN) RELAY	AS-67	REPEAT HI TEMP SAFETY
AS-68	MAN (AN) RELAY	AS-68	REPEAT HI TEMP SAFETY
AS-69	MAN (AN) RELAY	AS-69	REPEAT HI TEMP SAFETY
AS-70	MAN (AN) RELAY	AS-70	REPEAT HI TEMP SAFETY
AS-71	MAN (AN) RELAY	AS-71	REPEAT HI TEMP SAFETY
AS-72	MAN (AN) RELAY	AS-72	REPEAT HI TEMP SAFETY
AS-73	MAN (AN) RELAY	AS-73	REPEAT HI TEMP SAFETY
AS-74	MAN (AN) RELAY	AS-74	REPEAT HI TEMP SAFETY
AS-75	MAN (AN) RELAY	AS-75	REPEAT HI TEMP SAFETY
AS-76	MAN (AN) RELAY	AS-76	REPEAT HI TEMP SAFETY
AS-77	MAN (AN) RELAY	AS-77	REPEAT HI TEMP SAFETY
AS-78	MAN (AN) RELAY	AS-78	REPEAT HI TEMP SAFETY
AS-79	MAN (AN) RELAY	AS-79	REPEAT HI TEMP SAFETY
AS-80	MAN (AN) RELAY	AS-80	REPEAT HI TEMP SAFETY
AS-81	MAN (AN) RELAY	AS-81	REPEAT HI TEMP SAFETY
AS-82	MAN (AN) RELAY	AS-82	REPEAT HI TEMP SAFETY
AS-83	MAN (AN) RELAY	AS-83	REPEAT HI TEMP SAFETY
AS-84	MAN (AN) RELAY	AS-84	REPEAT HI TEMP SAFETY
AS-85	MAN (AN) RELAY	AS-85	REPEAT HI TEMP SAFETY
AS-86	MAN (AN) RELAY	AS-86	REPEAT HI TEMP SAFETY
AS-87	MAN (AN) RELAY	AS-87	REPEAT HI TEMP SAFETY
AS-88	MAN (AN) RELAY	AS-88	REPEAT HI TEMP SAFETY
AS-89	MAN (AN) RELAY	AS-89	REPEAT HI TEMP SAFETY
AS-90	MAN (AN) RELAY	AS-90	REPEAT HI TEMP SAFETY
AS-91	MAN (AN) RELAY	AS-91	REPEAT HI TEMP SAFETY
AS-92	MAN (AN) RELAY	AS-92	REPEAT HI TEMP SAFETY
AS-93	MAN (AN) RELAY	AS-93	REPEAT HI TEMP SAFETY
AS-94	MAN (AN) RELAY	AS-94	REPEAT HI TEMP SAFETY
AS-95	MAN (AN) RELAY	AS-95	REPEAT HI TEMP SAFETY
AS-96	MAN (AN) RELAY	AS-96	REPEAT HI TEMP SAFETY
AS-97	MAN (AN) RELAY	AS-97	REPEAT HI TEMP SAFETY
AS-98	MAN (AN) RELAY	AS-98	REPEAT HI TEMP SAFETY
AS-99	MAN (AN) RELAY	AS-99	REPEAT HI TEMP SAFETY
AS-100	MAN (AN) RELAY	AS-100	REPEAT HI TEMP SAFETY

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD
AS-7	HIGH WATER ALARM	AS-7	REPEAT HANDICAP
AS-8	LOW PRESSURE TRANSDUCER	AS-8	BACK OF REPEAT CONTRACTOR
AS-9	MAN (AN) RELAY	AS-9	CURRENT XMR ALM
AS-10	MAN (AN) RELAY	AS-10	CURRENT XMR RHT
AS-11	MAN (AN) RELAY	AS-11	DRAIN VALVE
AS-12	MAN (AN) RELAY	AS-12	FILL VALVE
AS-13	MAN (AN) RELAY	AS-13	GROUND CURRENT DETECTOR
AS-14	MAN (AN) RELAY	AS-14	HANDICAP CONTRACTOR
AS-15	MAN (AN) RELAY	AS-15	HANDICAP
AS-16	MAN (AN) RELAY	AS-16	MANUAL DRAIN SWITCH
AS-17	MAN (AN) RELAY	AS-17	REPEAT CONTRACTOR
AS-18	MAN (AN) RELAY	AS-18	REPEAT HI TEMP SAFETY
AS-19	MAN (AN) RELAY	AS-19	REPEAT HI TEMP SAFETY
AS-20	MAN (AN) RELAY	AS-20	REPEAT HI TEMP SAFETY
AS-21	MAN (AN) RELAY	AS-21	REPEAT HI TEMP SAFETY
AS-22	MAN (AN) RELAY	AS-22	REPEAT HI TEMP SAFETY
AS-23	MAN (AN) RELAY	AS-23	REPEAT HI TEMP SAFETY
AS-24	MAN (AN) RELAY	AS-24	REPEAT HI TEMP SAFETY
AS-25	MAN (AN) RELAY	AS-25	REPEAT HI TEMP SAFETY
AS-26	MAN (AN) RELAY	AS-26	REPEAT HI TEMP SAFETY
AS-27	MAN (AN) RELAY	AS-27	REPEAT HI TEMP SAFETY
AS-28	MAN (AN) RELAY	AS-28	REPEAT HI TEMP SAFETY
AS-29	MAN (AN) RELAY	AS-29	REPEAT HI TEMP SAFETY
AS-30	MAN (AN) RELAY	AS-30	REPEAT HI TEMP SAFETY
AS-31	MAN (AN) RELAY	AS-31	REPEAT HI TEMP SAFETY
AS-32	MAN (AN) RELAY	AS-32	REPEAT HI TEMP SAFETY
AS-33	MAN (AN) RELAY	AS-33	REPEAT HI TEMP SAFETY
AS-34	MAN (AN) RELAY	AS-34	REPEAT HI TEMP SAFETY
AS-35	MAN (AN) RELAY	AS-35	REPEAT HI TEMP SAFETY
AS-36	MAN (AN) RELAY	AS-36	REPEAT HI TEMP SAFETY
AS-37	MAN (AN) RELAY	AS-37	REPEAT HI TEMP SAFETY
AS-38	MAN (AN) RELAY	AS-38	REPEAT HI TEMP SAFETY
AS-39	MAN (AN) RELAY	AS-39	REPEAT HI TEMP SAFETY
AS-40	MAN (AN) RELAY	AS-40	REPEAT HI TEMP SAFETY
AS-41	MAN (AN) RELAY	AS-41	REPEAT HI TEMP SAFETY
AS-42	MAN (AN) RELAY	AS-42	REPEAT HI TEMP SAFETY
AS-43	MAN (AN) RELAY	AS-43	REPEAT HI TEMP SAFETY
AS-44	MAN (AN) RELAY	AS-44	REPEAT HI TEMP SAFETY
AS-45	MAN (AN) RELAY	AS-45	REPEAT HI TEMP SAFETY
AS-46	MAN (AN) RELAY	AS-46	REPEAT HI TEMP SAFETY
AS-47	MAN (AN) RELAY	AS-47	REPEAT HI TEMP SAFETY
AS-48	MAN (AN) RELAY	AS-48	REPEAT HI TEMP SAFETY
AS-49	MAN (AN) RELAY	AS-49	REPEAT HI TEMP SAFETY
AS-50	MAN (AN) RELAY	AS-50	REPEAT HI TEMP SAFETY
AS-51	MAN (AN) RELAY	AS-51	REPEAT HI TEMP SAFETY
AS-52	MAN (AN) RELAY	AS-52	REPEAT HI TEMP SAFETY
AS-53	MAN (AN) RELAY	AS-53	REPEAT HI TEMP SAFETY
AS-54	MAN (AN) RELAY	AS-54	REPEAT HI TEMP SAFETY
AS-55	MAN (AN) RELAY	AS-55	REPEAT HI TEMP SAFETY
AS-56	MAN (AN) RELAY	AS-56	REPEAT HI TEMP SAFETY
AS-57	MAN (AN) RELAY	AS-57	REPEAT HI TEMP SAFETY
AS-58	MAN (AN) RELAY	AS-58	REPEAT HI TEMP SAFETY
AS-59	MAN (AN) RELAY	AS-59	REPEAT HI TEMP SAFETY
AS-60	MAN (AN) RELAY	AS-60	REPEAT HI TEMP SAFETY
AS-61	MAN (AN) RELAY	AS-61	REPEAT HI TEMP SAFETY
AS-62	MAN (AN) RELAY	AS-62	REPEAT HI TEMP SAFETY
AS-63	MAN (AN) RELAY	AS-63	REPEAT HI TEMP SAFETY
AS-64	MAN (AN) RELAY	AS-64	REPEAT HI TEMP SAFETY
AS-65	MAN (AN) RELAY	AS-65	REPEAT HI TEMP SAFETY
AS-66	MAN (AN) RELAY	AS-66	REPEAT HI TEMP SAFETY
AS-67	MAN (AN) RELAY	AS-67	REPEAT HI TEMP SAFETY
AS-68	MAN (AN) RELAY	AS-68	REPEAT HI TEMP SAFETY
AS-69	MAN (AN) RELAY	AS-69	REPEAT HI TEMP SAFETY
AS-70	MAN (AN) RELAY	AS-70	REPEAT HI TEMP SAFETY
AS-71	MAN (AN) RELAY	AS-71	REPEAT HI TEMP SAFETY
AS-72	MAN (AN) RELAY	AS-72	REPEAT HI TEMP SAFETY
AS-73	MAN (AN) RELAY	AS-73	REPEAT HI TEMP SAFETY
AS-74	MAN (AN) RELAY	AS-74	REPEAT HI TEMP SAFETY
AS-75	MAN (AN) RELAY	AS-75	REPEAT HI TEMP SAFETY
AS-76	MAN (AN) RELAY	AS-76	REPEAT HI TEMP SAFETY
AS-77	MAN (AN) RELAY	AS-77	REPEAT HI TEMP SAFETY
AS-78	MAN (AN) RELAY	AS-78	REPEAT HI TEMP SAFETY
AS-79	MAN (AN) RELAY	AS-79	REPEAT HI TEMP SAFETY
AS-80	MAN (AN) RELAY	AS-80	REPEAT HI TEMP SAFETY
AS-81	MAN (AN) RELAY	AS-81	REPEAT HI TEMP SAFETY
AS-82	MAN (AN) RELAY	AS-82	REPEAT HI TEMP SAFETY
AS-83	MAN (AN) RELAY	AS-83	REPEAT HI TEMP SAFETY
AS-84	MAN (AN) RELAY	AS-84	REPEAT HI TEMP SAFETY
AS-85	MAN (AN) RELAY	AS-85	REPEAT HI TEMP SAFETY
AS-86	MAN (AN) RELAY	AS-86	REPEAT HI TEMP SAFETY
AS-87	MAN (AN) RELAY	AS-87	REPEAT HI TEMP SAFETY
AS-88	MAN (AN) RELAY	AS-88	REPEAT HI TEMP SAFETY
AS-89	MAN (AN) RELAY	AS-89	REPEAT HI TEMP SAFETY
AS-90	MAN (AN) RELAY	AS-90	REPEAT HI TEMP SAFETY
AS-91	MAN (AN) RELAY	AS-91	REPEAT HI TEMP SAFETY
AS-92	MAN (AN) RELAY	AS-92	REPEAT HI TEMP SAFETY
AS-93	MAN (AN) RELAY	AS-93	REPEAT HI TEMP SAFETY
AS-94	MAN (AN) RELAY	AS-94	REPEAT HI TEMP SAFETY
AS-95	MAN (AN) RELAY	AS-95	REPEAT HI TEMP SAFETY
AS-96	MAN (AN) RELAY	AS-96	REPEAT HI TEMP SAFETY
AS-97	MAN (AN) RELAY	AS-97	REPEAT HI TEMP SAFETY
AS-98	MAN (AN) RELAY	AS-98	REPEAT HI TEMP SAFETY
AS-99	MAN (AN) RELAY	AS-99	REPEAT HI TEMP SAFETY
AS-100	MAN (AN) RELAY	AS-100	REPEAT HI TEMP SAFETY

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD

TERMINAL BLOCKS DISTRIBUTION DETAILS

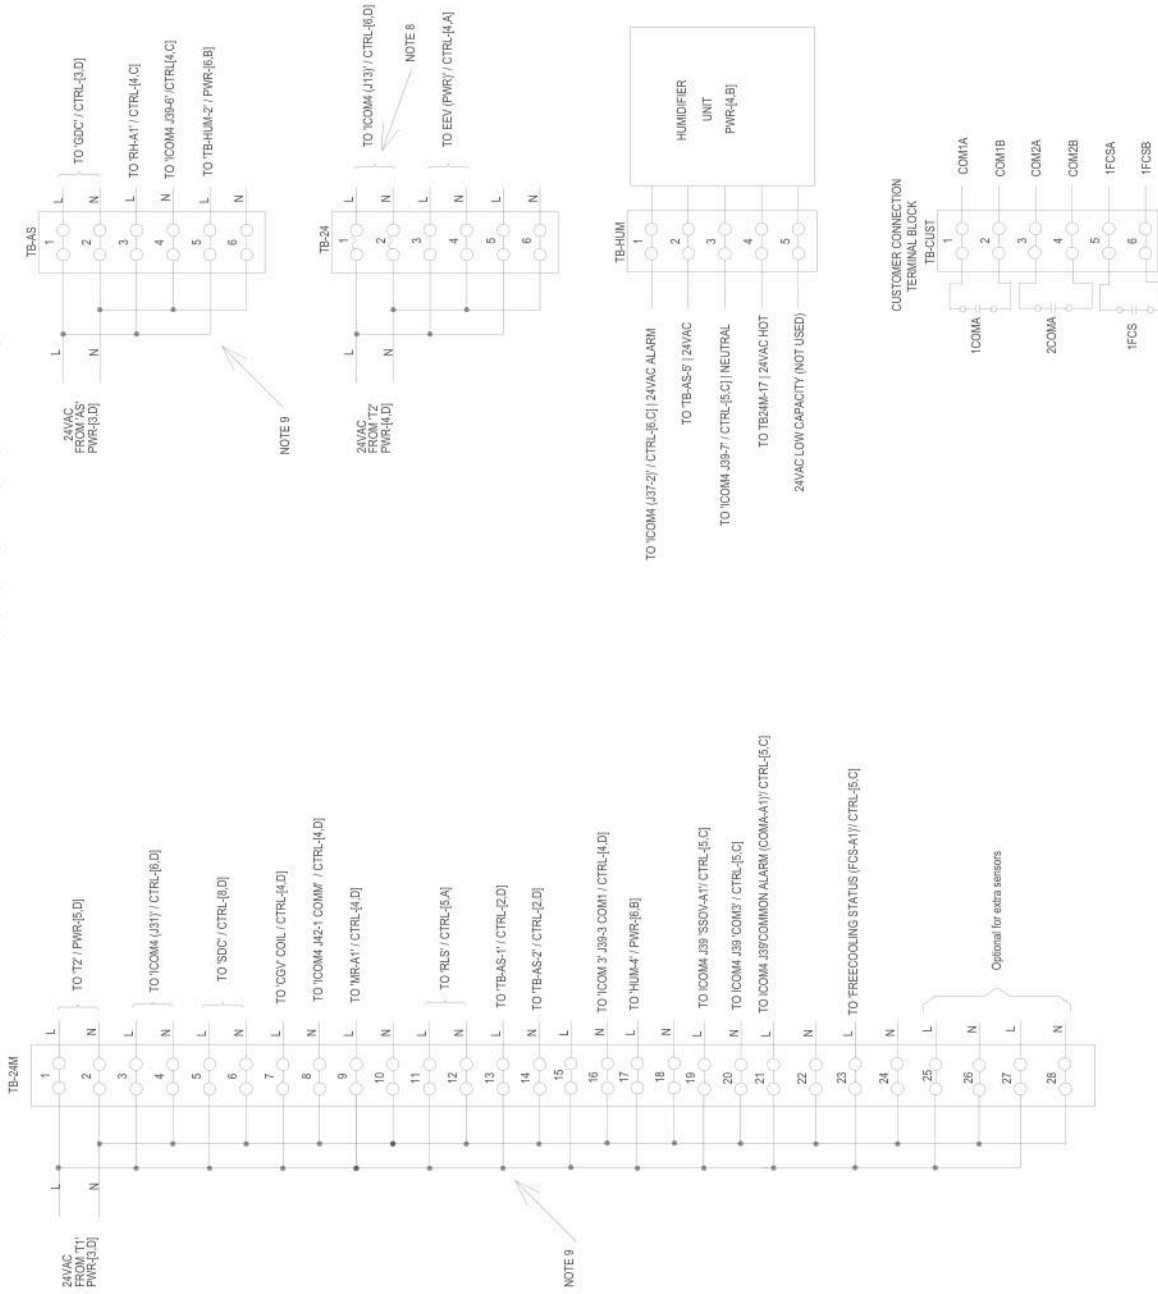

- NOTES:
- 1- TRANSFORMER PRIMARY FUSES SUPPLIED ON UNITS WITH TRANSFORMER SIZES ABOVE 100VA.
 - 2- MAIN FAN MOTOR HAS INTERNAL OVERLOAD PROTECTION.
 - 3- CONDENSATE PUMP AUXILIARY SWITCH MUST BE WIRED TO D16 WHEN OPTIONAL CONDENSATE PUMP IS SUPPLIED.
 - 4- PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER.
 - 5- CONTROL VOLTAGE TRANSFORMER PRIMARY TAP POSITION DEPENDS ON THE ENTRY LINE VOLTAGE.
 - 6- ETHERNET STRAIGHT THROUGH CABLE.
 - 7- CAN PORT USE RJ12 CONNECTOR.
 - 8- TERMINAL BLOCK WITH FUSE.
 - 9- TERMINAL BLOCK JUMPER IS USED FOR VOLTAGE DISTRIBUTION ON TB-24M AND TB-AS.

STANDARD DEVICES		NOMENCLATURE	POS	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP	
AS	AIR SAFETY SWITCH	AS	CONDENSATE PUMP AUX. SW	
DTB	DISTRIBUTION TERMINAL BLOCK	DTB	DISCONNECT SWITCH	
DS	DISCONNECT SWITCH	DS	REMOTE ALARM DEVICE	
EEV	ELECTRONIC EXPANSION VALVE	EEV	SMOKE DETECTOR	
FC	FILTER CLOG	FC	SMOKE DETECTOR CONTROL	
HTS	HIGH TEMPERATURE STATUS	HTS	INTERFACE BOARD	
HWA	HIGH WATER ALARM	HWA		
LPT	LOW PRESSURE TRANSDUCER	LPT		
MR	MAIN FAN RELAY	MR	REHEAT / HUMIDIFIER	
MPU	MAIN FAN PUMP	MPU	BACK UP REHEAT CONTRACTOR	
MTU	MAIN TRANSFORMER FUSES	MTU	CURRENT XMR IN HT	
RLS	REFRIGERANT LEAK SENSOR	RLS	DRAIN VALVE	
SAS	SUPPLY AIR SENSOR	SAS	FILL VALVE	
SLTS	SUCTION LINE TEMP. SENSOR	SLTS	GROUND CURRENT DETECTOR	
SSR	SOLID STATE RELAY	SSR	HUMIDIFIER CONTRACTOR	
T1	CONTROL TRANSFORMER	T1	HUMIDIFIER	
T2	ISOLATION TRANSFORMER	T2	MANUAL DRAIN SWITCH	
TEB4	24VAC ISOLATED T. BLOCKS	TEB4	REHEAT CONTRACTOR	
TEB4M	24VAC NON ISOLATED T. BLOCKS	TEB4M	REHEAT HI TEMP SAFETY	
TEAS	AIR SAFETY SWITCH T. BLOCKS	TEAS		
THRU	TEMPERATURE SENSOR	THRU		
VFD	VARIABLE FREQUENCY DRIVE	VFD		
WIS	WIRE BRIDGE	WIS		
				COOLING COMPONENTS
				CHILLED WATER, THERMISTAT
				CHILLED WATER VALVE

FACTORY SUPPLIED LINE VOLTAGE
FIELD INSTALLED LINE VOLTAGE WIRING
FACTORY SUPPLIED 24VAC 1 WIRING
FACTORY SUPPLIED 120VAC 1 WIRING
FACTORY SUPPLIED 24VAC 2 WIRING
FACTORY SUPPLIED 120VAC 2 WIRING
FACTORY SUPPLIED 24VAC 3 WIRING
FACTORY SUPPLIED 120VAC 3 WIRING
FACTORY SUPPLIED 24VAC 4 WIRING
FACTORY SUPPLIED 120VAC 4 WIRING
FACTORY SUPPLIED 24VAC 5 WIRING
FACTORY SUPPLIED 120VAC 5 WIRING
FACTORY SUPPLIED 24VAC 6 WIRING
FACTORY SUPPLIED 120VAC 6 WIRING
FACTORY SUPPLIED 24VAC 7 WIRING
FACTORY SUPPLIED 120VAC 7 WIRING
FACTORY SUPPLIED 24VAC 8 WIRING
FACTORY SUPPLIED 120VAC 8 WIRING
FACTORY SUPPLIED 24VAC 9 WIRING
FACTORY SUPPLIED 120VAC 9 WIRING
FACTORY SUPPLIED 24VAC 10 WIRING
FACTORY SUPPLIED 120VAC 10 WIRING
FACTORY SUPPLIED 24VAC 11 WIRING
FACTORY SUPPLIED 120VAC 11 WIRING
FACTORY SUPPLIED 24VAC 12 WIRING
FACTORY SUPPLIED 120VAC 12 WIRING
FACTORY SUPPLIED 24VAC 13 WIRING
FACTORY SUPPLIED 120VAC 13 WIRING
FACTORY SUPPLIED 24VAC 14 WIRING
FACTORY SUPPLIED 120VAC 14 WIRING
FACTORY SUPPLIED 24VAC 15 WIRING
FACTORY SUPPLIED 120VAC 15 WIRING
FACTORY SUPPLIED 24VAC 16 WIRING
FACTORY SUPPLIED 120VAC 16 WIRING
FACTORY SUPPLIED 24VAC 17 WIRING
FACTORY SUPPLIED 120VAC 17 WIRING
FACTORY SUPPLIED 24VAC 18 WIRING
FACTORY SUPPLIED 120VAC 18 WIRING
FACTORY SUPPLIED 24VAC 19 WIRING
FACTORY SUPPLIED 120VAC 19 WIRING
FACTORY SUPPLIED 24VAC 20 WIRING
FACTORY SUPPLIED 120VAC 20 WIRING
FACTORY SUPPLIED 24VAC 21 WIRING
FACTORY SUPPLIED 120VAC 21 WIRING
FACTORY SUPPLIED 24VAC 22 WIRING
FACTORY SUPPLIED 120VAC 22 WIRING
FACTORY SUPPLIED 24VAC 23 WIRING
FACTORY SUPPLIED 120VAC 23 WIRING
FACTORY SUPPLIED 24VAC 24 WIRING
FACTORY SUPPLIED 120VAC 24 WIRING
FACTORY SUPPLIED 24VAC 25 WIRING
FACTORY SUPPLIED 120VAC 25 WIRING
FACTORY SUPPLIED 24VAC 26 WIRING
FACTORY SUPPLIED 120VAC 26 WIRING
FACTORY SUPPLIED 24VAC 27 WIRING
FACTORY SUPPLIED 120VAC 27 WIRING
FACTORY SUPPLIED 24VAC 28 WIRING
FACTORY SUPPLIED 120VAC 28 WIRING
FACTORY SUPPLIED 24VAC 29 WIRING
FACTORY SUPPLIED 120VAC 29 WIRING
FACTORY SUPPLIED 24VAC 30 WIRING
FACTORY SUPPLIED 120VAC 30 WIRING
FACTORY SUPPLIED 24VAC 31 WIRING
FACTORY SUPPLIED 120VAC 31 WIRING
FACTORY SUPPLIED 24VAC 32 WIRING
FACTORY SUPPLIED 120VAC 32 WIRING
FACTORY SUPPLIED 24VAC 33 WIRING
FACTORY SUPPLIED 120VAC 33 WIRING
FACTORY SUPPLIED 24VAC 34 WIRING
FACTORY SUPPLIED 120VAC 34 WIRING
FACTORY SUPPLIED 24VAC 35 WIRING
FACTORY SUPPLIED 120VAC 35 WIRING
FACTORY SUPPLIED 24VAC 36 WIRING
FACTORY SUPPLIED 120VAC 36 WIRING
FACTORY SUPPLIED 24VAC 37 WIRING
FACTORY SUPPLIED 120VAC 37 WIRING
FACTORY SUPPLIED 24VAC 38 WIRING
FACTORY SUPPLIED 120VAC 38 WIRING
FACTORY SUPPLIED 24VAC 39 WIRING
FACTORY SUPPLIED 120VAC 39 WIRING
FACTORY SUPPLIED 24VAC 40 WIRING
FACTORY SUPPLIED 120VAC 40 WIRING
FACTORY SUPPLIED 24VAC 41 WIRING
FACTORY SUPPLIED 120VAC 41 WIRING
FACTORY SUPPLIED 24VAC 42 WIRING
FACTORY SUPPLIED 120VAC 42 WIRING
FACTORY SUPPLIED 24VAC 43 WIRING
FACTORY SUPPLIED 120VAC 43 WIRING
FACTORY SUPPLIED 24VAC 44 WIRING
FACTORY SUPPLIED 120VAC 44 WIRING
FACTORY SUPPLIED 24VAC 45 WIRING
FACTORY SUPPLIED 120VAC 45 WIRING
FACTORY SUPPLIED 24VAC 46 WIRING
FACTORY SUPPLIED 120VAC 46 WIRING
FACTORY SUPPLIED 24VAC 47 WIRING
FACTORY SUPPLIED 120VAC 47 WIRING
FACTORY SUPPLIED 24VAC 48 WIRING
FACTORY SUPPLIED 120VAC 48 WIRING
FACTORY SUPPLIED 24VAC 49 WIRING
FACTORY SUPPLIED 120VAC 49 WIRING
FACTORY SUPPLIED 24VAC 50 WIRING
FACTORY SUPPLIED 120VAC 50 WIRING
FACTORY SUPPLIED 24VAC 51 WIRING
FACTORY SUPPLIED 120VAC 51 WIRING
FACTORY SUPPLIED 24VAC 52 WIRING
FACTORY SUPPLIED 120VAC 52 WIRING
FACTORY SUPPLIED 24VAC 53 WIRING
FACTORY SUPPLIED 120VAC 53 WIRING
FACTORY SUPPLIED 24VAC 54 WIRING
FACTORY SUPPLIED 120VAC 54 WIRING
FACTORY SUPPLIED 24VAC 55 WIRING
FACTORY SUPPLIED 120VAC 55 WIRING
FACTORY SUPPLIED 24VAC 56 WIRING
FACTORY SUPPLIED 120VAC 56 WIRING
FACTORY SUPPLIED 24VAC 57 WIRING
FACTORY SUPPLIED 120VAC 57 WIRING
FACTORY SUPPLIED 24VAC 58 WIRING
FACTORY SUPPLIED 120VAC 58 WIRING
FACTORY SUPPLIED 24VAC 59 WIRING
FACTORY SUPPLIED 120VAC 59 WIRING
FACTORY SUPPLIED 24VAC 60 WIRING
FACTORY SUPPLIED 120VAC 60 WIRING
FACTORY SUPPLIED 24VAC 61 WIRING
FACTORY SUPPLIED 120VAC 61 WIRING
FACTORY SUPPLIED 24VAC 62 WIRING
FACTORY SUPPLIED 120VAC 62 WIRING
FACTORY SUPPLIED 24VAC 63 WIRING
FACTORY SUPPLIED 120VAC 63 WIRING
FACTORY SUPPLIED 24VAC 64 WIRING
FACTORY SUPPLIED 120VAC 64 WIRING
FACTORY SUPPLIED 24VAC 65 WIRING
FACTORY SUPPLIED 120VAC 65 WIRING
FACTORY SUPPLIED 24VAC 66 WIRING
FACTORY SUPPLIED 120VAC 66 WIRING
FACTORY SUPPLIED 24VAC 67 WIRING
FACTORY SUPPLIED 120VAC 67 WIRING
FACTORY SUPPLIED 24VAC 68 WIRING
FACTORY SUPPLIED 120VAC 68 WIRING
FACTORY SUPPLIED 24VAC 69 WIRING
FACTORY SUPPLIED 120VAC 69 WIRING
FACTORY SUPPLIED 24VAC 70 WIRING
FACTORY SUPPLIED 120VAC 70 WIRING
FACTORY SUPPLIED 24VAC 71 WIRING
FACTORY SUPPLIED 120VAC 71 WIRING
FACTORY SUPPLIED 24VAC 72 WIRING
FACTORY SUPPLIED 120VAC 72 WIRING
FACTORY SUPPLIED 24VAC 73 WIRING
FACTORY SUPPLIED 120VAC 73 WIRING
FACTORY SUPPLIED 24VAC 74 WIRING
FACTORY SUPPLIED 120VAC 74 WIRING
FACTORY SUPPLIED 24VAC 75 WIRING
FACTORY SUPPLIED 120VAC 75 WIRING
FACTORY SUPPLIED 24VAC 76 WIRING
FACTORY SUPPLIED 120VAC 76 WIRING
FACTORY SUPPLIED 24VAC 77 WIRING
FACTORY SUPPLIED 120VAC 77 WIRING
FACTORY SUPPLIED 24VAC 78 WIRING
FACTORY SUPPLIED 120VAC 78 WIRING
FACTORY SUPPLIED 24VAC 79 WIRING
FACTORY SUPPLIED 120VAC 79 WIRING
FACTORY SUPPLIED 24VAC 80 WIRING
FACTORY SUPPLIED 120VAC 80 WIRING
FACTORY SUPPLIED 24VAC 81 WIRING
FACTORY SUPPLIED 120VAC 81 WIRING
FACTORY SUPPLIED 24VAC 82 WIRING
FACTORY SUPPLIED 120VAC 82 WIRING
FACTORY SUPPLIED 24VAC 83 WIRING
FACTORY SUPPLIED 120VAC 83 WIRING
FACTORY SUPPLIED 24VAC 84 WIRING
FACTORY SUPPLIED 120VAC 84 WIRING
FACTORY SUPPLIED 24VAC 85 WIRING
FACTORY SUPPLIED 120VAC 85 WIRING
FACTORY SUPPLIED 24VAC 86 WIRING
FACTORY SUPPLIED 120VAC 86 WIRING
FACTORY SUPPLIED 24VAC 87 WIRING
FACTORY SUPPLIED 120VAC 87 WIRING
FACTORY SUPPLIED 24VAC 88 WIRING
FACTORY SUPPLIED 120VAC 88 WIRING
FACTORY SUPPLIED 24VAC 89 WIRING
FACTORY SUPPLIED 120VAC 89 WIRING
FACTORY SUPPLIED 24VAC 90 WIRING
FACTORY SUPPLIED 120VAC 90 WIRING
FACTORY SUPPLIED 24VAC 91 WIRING
FACTORY SUPPLIED 120VAC 91 WIRING
FACTORY SUPPLIED 24VAC 92 WIRING
FACTORY SUPPLIED 120VAC 92 WIRING
FACTORY SUPPLIED 24VAC 93 WIRING
FACTORY SUPPLIED 120VAC 93 WIRING
FACTORY SUPPLIED 24VAC 94 WIRING
FACTORY SUPPLIED 120VAC 94 WIRING
FACTORY SUPPLIED 24VAC 95 WIRING
FACTORY SUPPLIED 120VAC 95 WIRING
FACTORY SUPPLIED 24VAC 96 WIRING
FACTORY SUPPLIED 120VAC 96 WIRING
FACTORY SUPPLIED 24VAC 97 WIRING
FACTORY SUPPLIED 120VAC 97 WIRING
FACTORY SUPPLIED 24VAC 98 WIRING
FACTORY SUPPLIED 120VAC 98 WIRING
FACTORY SUPPLIED 24VAC 99 WIRING
FACTORY SUPPLIED 120VAC 99 WIRING
FACTORY SUPPLIED 24VAC 100 WIRING
FACTORY SUPPLIED 120VAC 100 WIRING

VE TIV.

ELECTRICAL SCHEMATIC

COOLPHASE CEILING

200V 24.1A


1PH-208-230VAC

50/60 HZ

T. BLOCK DISTRIBUTION

MM24P (TBLK)

10092534P2DRW

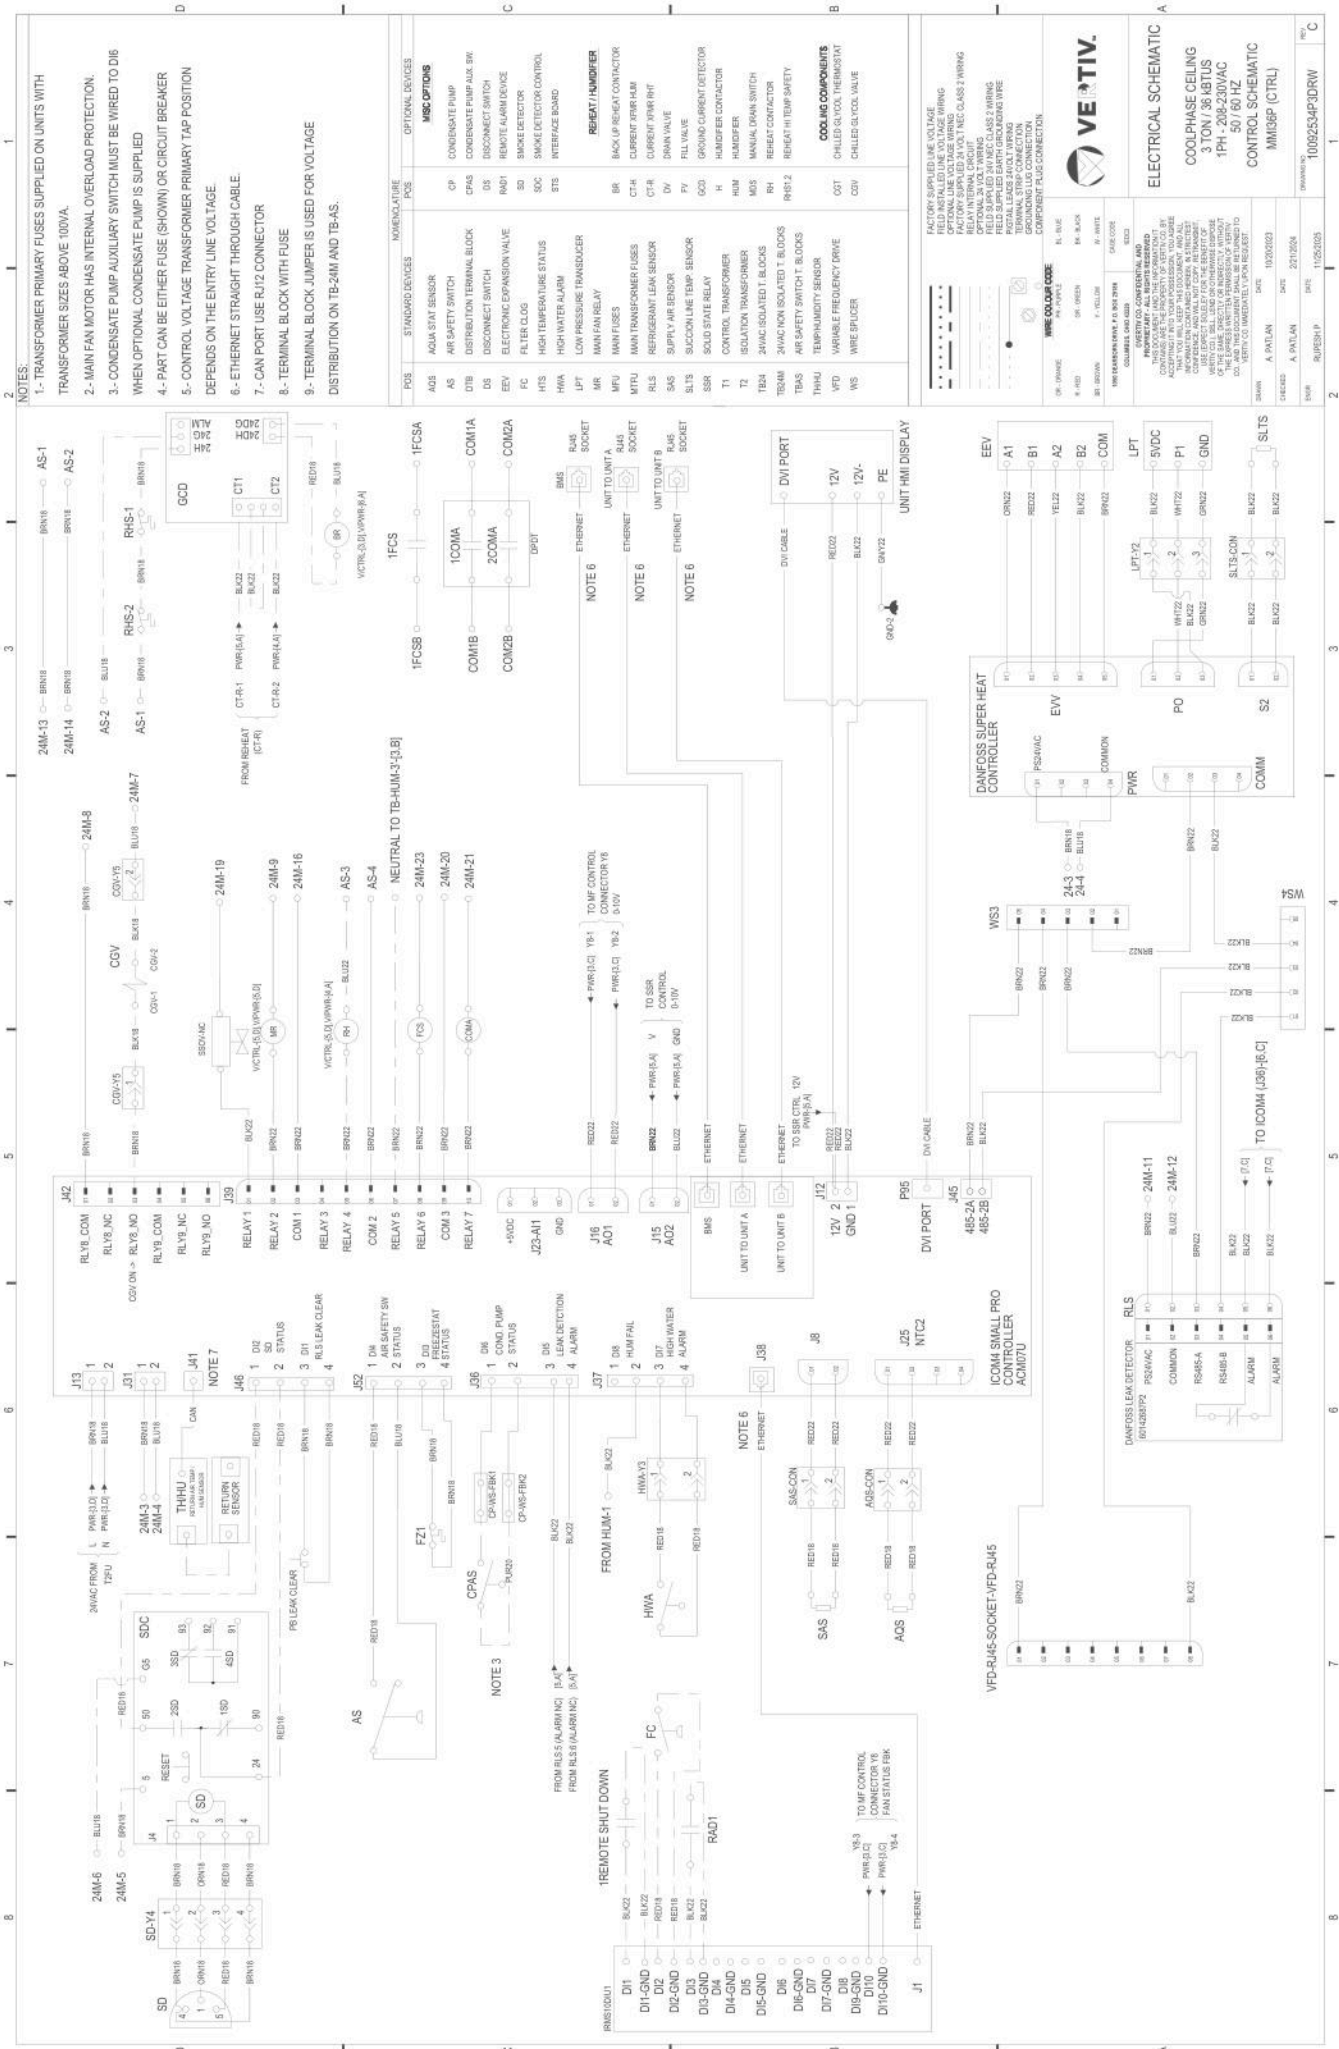



NOTES:
1- TRANSFORMER PRIMARY FUSES SUPPLIED ON UNITS WITH TRANSFORMER SIZES ABOVE 100VA.
2- MAIN FAN MOTOR HAS INTERNAL OVERLOAD PROTECTION.
3- CONDENSATE PUMP AUXILIARY SWITCH MUST BE WIRED TO DIE WHEN OPTIONAL CONDENSATE PUMP IS SUPPLIED
4- PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER
5- CONTROL VOLTAGE TRANSFORMER PRIMARY TAP POSITION DEPENDS ON THE ENTRY LINE VOLTAGE
6- ETHERNET STRAIGHT THROUGH CABLE
7- CAN PORT USE RJ45 CONNECTOR
8- TERMINAL BLOCK WITH FUSE
9- TERMINAL BLOCK JUMPER IS USED FOR VOLTAGE DISTRIBUTION ON TB-24M AND TB-AS.

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD
AS-7	HIGH WATER ALARM	AS-7	
AS-8	LOW PRESSURE TRANSDUCER	AS-8	
AS-9	MAN FAN RELAY	AS-9	
AS-10	MAN FAN RELAY	AS-10	
AS-11	MAN FAN RELAY	AS-11	
AS-12	MAN FAN RELAY	AS-12	
AS-13	MAN FAN RELAY	AS-13	
AS-14	MAN FAN RELAY	AS-14	
AS-15	MAN FAN RELAY	AS-15	
AS-16	MAN FAN RELAY	AS-16	
AS-17	MAN FAN RELAY	AS-17	
AS-18	MAN FAN RELAY	AS-18	
AS-19	MAN FAN RELAY	AS-19	
AS-20	MAN FAN RELAY	AS-20	
AS-21	MAN FAN RELAY	AS-21	
AS-22	MAN FAN RELAY	AS-22	
AS-23	MAN FAN RELAY	AS-23	
AS-24	MAN FAN RELAY	AS-24	
AS-25	MAN FAN RELAY	AS-25	
AS-26	MAN FAN RELAY	AS-26	
AS-27	MAN FAN RELAY	AS-27	
AS-28	MAN FAN RELAY	AS-28	
AS-29	MAN FAN RELAY	AS-29	
AS-30	MAN FAN RELAY	AS-30	
AS-31	MAN FAN RELAY	AS-31	
AS-32	MAN FAN RELAY	AS-32	
AS-33	MAN FAN RELAY	AS-33	
AS-34	MAN FAN RELAY	AS-34	
AS-35	MAN FAN RELAY	AS-35	
AS-36	MAN FAN RELAY	AS-36	
AS-37	MAN FAN RELAY	AS-37	
AS-38	MAN FAN RELAY	AS-38	
AS-39	MAN FAN RELAY	AS-39	
AS-40	MAN FAN RELAY	AS-40	
AS-41	MAN FAN RELAY	AS-41	
AS-42	MAN FAN RELAY	AS-42	
AS-43	MAN FAN RELAY	AS-43	
AS-44	MAN FAN RELAY	AS-44	
AS-45	MAN FAN RELAY	AS-45	
AS-46	MAN FAN RELAY	AS-46	
AS-47	MAN FAN RELAY	AS-47	
AS-48	MAN FAN RELAY	AS-48	
AS-49	MAN FAN RELAY	AS-49	
AS-50	MAN FAN RELAY	AS-50	
AS-51	MAN FAN RELAY	AS-51	
AS-52	MAN FAN RELAY	AS-52	
AS-53	MAN FAN RELAY	AS-53	
AS-54	MAN FAN RELAY	AS-54	
AS-55	MAN FAN RELAY	AS-55	
AS-56	MAN FAN RELAY	AS-56	
AS-57	MAN FAN RELAY	AS-57	
AS-58	MAN FAN RELAY	AS-58	
AS-59	MAN FAN RELAY	AS-59	
AS-60	MAN FAN RELAY	AS-60	
AS-61	MAN FAN RELAY	AS-61	
AS-62	MAN FAN RELAY	AS-62	
AS-63	MAN FAN RELAY	AS-63	
AS-64	MAN FAN RELAY	AS-64	
AS-65	MAN FAN RELAY	AS-65	
AS-66	MAN FAN RELAY	AS-66	
AS-67	MAN FAN RELAY	AS-67	
AS-68	MAN FAN RELAY	AS-68	
AS-69	MAN FAN RELAY	AS-69	
AS-70	MAN FAN RELAY	AS-70	
AS-71	MAN FAN RELAY	AS-71	
AS-72	MAN FAN RELAY	AS-72	
AS-73	MAN FAN RELAY	AS-73	
AS-74	MAN FAN RELAY	AS-74	
AS-75	MAN FAN RELAY	AS-75	
AS-76	MAN FAN RELAY	AS-76	
AS-77	MAN FAN RELAY	AS-77	
AS-78	MAN FAN RELAY	AS-78	
AS-79	MAN FAN RELAY	AS-79	
AS-80	MAN FAN RELAY	AS-80	
AS-81	MAN FAN RELAY	AS-81	
AS-82	MAN FAN RELAY	AS-82	
AS-83	MAN FAN RELAY	AS-83	
AS-84	MAN FAN RELAY	AS-84	
AS-85	MAN FAN RELAY	AS-85	
AS-86	MAN FAN RELAY	AS-86	
AS-87	MAN FAN RELAY	AS-87	
AS-88	MAN FAN RELAY	AS-88	
AS-89	MAN FAN RELAY	AS-89	
AS-90	MAN FAN RELAY	AS-90	
AS-91	MAN FAN RELAY	AS-91	
AS-92	MAN FAN RELAY	AS-92	
AS-93	MAN FAN RELAY	AS-93	
AS-94	MAN FAN RELAY	AS-94	
AS-95	MAN FAN RELAY	AS-95	
AS-96	MAN FAN RELAY	AS-96	
AS-97	MAN FAN RELAY	AS-97	
AS-98	MAN FAN RELAY	AS-98	
AS-99	MAN FAN RELAY	AS-99	
AS-100	MAN FAN RELAY	AS-100	

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD
AS-7	HIGH WATER ALARM	AS-7	
AS-8	LOW PRESSURE TRANSDUCER	AS-8	
AS-9	MAN FAN RELAY	AS-9	
AS-10	MAN FAN RELAY	AS-10	
AS-11	MAN FAN RELAY	AS-11	
AS-12	MAN FAN RELAY	AS-12	
AS-13	MAN FAN RELAY	AS-13	
AS-14	MAN FAN RELAY	AS-14	
AS-15	MAN FAN RELAY	AS-15	
AS-16	MAN FAN RELAY	AS-16	
AS-17	MAN FAN RELAY	AS-17	
AS-18	MAN FAN RELAY	AS-18	
AS-19	MAN FAN RELAY	AS-19	
AS-20	MAN FAN RELAY	AS-20	
AS-21	MAN FAN RELAY	AS-21	
AS-22	MAN FAN RELAY	AS-22	
AS-23	MAN FAN RELAY	AS-23	
AS-24	MAN FAN RELAY	AS-24	
AS-25	MAN FAN RELAY	AS-25	
AS-26	MAN FAN RELAY	AS-26	
AS-27	MAN FAN RELAY	AS-27	
AS-28	MAN FAN RELAY	AS-28	
AS-29	MAN FAN RELAY	AS-29	
AS-30	MAN FAN RELAY	AS-30	
AS-31	MAN FAN RELAY	AS-31	
AS-32	MAN FAN RELAY	AS-32	
AS-33	MAN FAN RELAY	AS-33	
AS-34	MAN FAN RELAY	AS-34	
AS-35	MAN FAN RELAY	AS-35	
AS-36	MAN FAN RELAY	AS-36	
AS-37	MAN FAN RELAY	AS-37	
AS-38	MAN FAN RELAY	AS-38	
AS-39	MAN FAN RELAY	AS-39	
AS-40	MAN FAN RELAY	AS-40	
AS-41	MAN FAN RELAY	AS-41	
AS-42	MAN FAN RELAY	AS-42	
AS-43	MAN FAN RELAY	AS-43	
AS-44	MAN FAN RELAY	AS-44	
AS-45	MAN FAN RELAY	AS-45	
AS-46	MAN FAN RELAY	AS-46	
AS-47	MAN FAN RELAY	AS-47	
AS-48	MAN FAN RELAY	AS-48	
AS-49	MAN FAN RELAY	AS-49	
AS-50	MAN FAN RELAY	AS-50	
AS-51	MAN FAN RELAY	AS-51	
AS-52	MAN FAN RELAY	AS-52	
AS-53	MAN FAN RELAY	AS-53	
AS-54	MAN FAN RELAY	AS-54	
AS-55	MAN FAN RELAY	AS-55	
AS-56	MAN FAN RELAY	AS-56	
AS-57	MAN FAN RELAY	AS-57	
AS-58	MAN FAN RELAY	AS-58	
AS-59	MAN FAN RELAY	AS-59	
AS-60	MAN FAN RELAY	AS-60	
AS-61	MAN FAN RELAY	AS-61	
AS-62	MAN FAN RELAY	AS-62	
AS-63	MAN FAN RELAY	AS-63	
AS-64	MAN FAN RELAY	AS-64	
AS-65	MAN FAN RELAY	AS-65	
AS-66	MAN FAN RELAY	AS-66	
AS-67	MAN FAN RELAY	AS-67	
AS-68	MAN FAN RELAY	AS-68	
AS-69	MAN FAN RELAY	AS-69	
AS-70	MAN FAN RELAY	AS-70	
AS-71	MAN FAN RELAY	AS-71	
AS-72	MAN FAN RELAY	AS-72	
AS-73	MAN FAN RELAY	AS-73	
AS-74	MAN FAN RELAY	AS-74	
AS-75	MAN FAN RELAY	AS-75	
AS-76	MAN FAN RELAY	AS-76	
AS-77	MAN FAN RELAY	AS-77	
AS-78	MAN FAN RELAY	AS-78	
AS-79	MAN FAN RELAY	AS-79	
AS-80	MAN FAN RELAY	AS-80	
AS-81	MAN FAN RELAY	AS-81	
AS-82	MAN FAN RELAY	AS-82	
AS-83	MAN FAN RELAY	AS-83	
AS-84	MAN FAN RELAY	AS-84	
AS-85	MAN FAN RELAY	AS-85	
AS-86	MAN FAN RELAY	AS-86	
AS-87	MAN FAN RELAY	AS-87	
AS-88	MAN FAN RELAY	AS-88	
AS-89	MAN FAN RELAY	AS-89	
AS-90	MAN FAN RELAY	AS-90	
AS-91	MAN FAN RELAY	AS-91	
AS-92	MAN FAN RELAY	AS-92	
AS-93	MAN FAN RELAY	AS-93	
AS-94	MAN FAN RELAY	AS-94	
AS-95	MAN FAN RELAY	AS-95	
AS-96	MAN FAN RELAY	AS-96	
AS-97	MAN FAN RELAY	AS-97	
AS-98	MAN FAN RELAY	AS-98	
AS-99	MAN FAN RELAY	AS-99	
AS-100	MAN FAN RELAY	AS-100	

POS	STANDARD DEVICES	MONUMENTAL PCB	OPTIONAL DEVICES
AS	AQUA STAT SENSOR	AS	CONDENSATE PUMP
AS-1	AIR SAFETY SWITCH	AS-1	CONDENSATE PUMP AUX. SW
AS-2	DISTRIBUTION TERMINAL BLOCK	AS-2	DISCONNECT SWITCH
AS-3	DISCONNECT SWITCH	AS-3	REMOTE ALARM DEVICE
AS-4	ELECTRONIC EXPANSION VALVE	AS-4	SMOKE DETECTOR
AS-5	FILTER CLOG	AS-5	SMOKE DETECTOR CONTROL
AS-6	HIGH TEMPERATURE STATUS	AS-6	INTERFACE BOARD
AS-7	HIGH WATER ALARM	AS-7	
AS-8	LOW PRESSURE TRANSDUCER	AS-8	
AS-9	MAN FAN RELAY	AS-9	
AS-10	MAN FAN RELAY	AS-10	
AS-11	MAN FAN RELAY	AS-11	
AS-12	MAN FAN RELAY	AS-12	
AS-13	MAN FAN RELAY	AS-13	
AS-14	MAN FAN RELAY	AS-14	
AS-15	MAN FAN RELAY	AS-15	
AS-16	MAN FAN RELAY	AS-16	
AS-17	MAN FAN RELAY	AS-17	
AS-18	MAN FAN RELAY	AS-18	
AS-19	MAN FAN RELAY	AS-19	
AS-20	MAN FAN RELAY	AS-20	
AS-21	MAN FAN RELAY	AS-21	
AS-22	MAN FAN RELAY	AS-22	
AS-23	MAN FAN RELAY	AS-23	
AS-24	MAN FAN RELAY	AS-24	
AS-25	MAN FAN RELAY	AS-25	
AS-26	MAN FAN RELAY	AS-26	
AS-27	MAN FAN RELAY	AS-27	
AS-28	MAN FAN RELAY	AS-28	
AS-29	MAN FAN RELAY	AS-29	
AS-30	MAN FAN RELAY	AS-30	
AS-31	MAN FAN RELAY	AS-31	
AS-32	MAN FAN RELAY	AS-32	
AS-33	MAN FAN RELAY	AS-33	
AS-34	MAN FAN RELAY	AS-34	
AS-35	MAN FAN RELAY	AS-35	
AS-36	MAN FAN RELAY	AS-36	
AS-37	MAN FAN RELAY	AS-37	
AS-38	MAN FAN RELAY	AS-38	
AS-39	MAN FAN RELAY	AS-39	
AS-40	MAN FAN RELAY	AS-40	
AS-41	MAN FAN RELAY	AS-41	
AS-42	MAN FAN RELAY	AS-42	
AS-43	MAN FAN RELAY	AS-43	
AS-44	MAN FAN RELAY	AS-44	
AS-45	MAN FAN RELAY	AS-45	
AS-46	MAN FAN RELAY	AS-46	
AS-47	MAN FAN RELAY	AS-47	
AS-48	MAN FAN RELAY	AS-48	
AS-49	MAN FAN RELAY	AS-49	
AS-50	MAN FAN RELAY	AS-50	
AS-51	MAN FAN RELAY	AS-51	
AS-52	MAN FAN RELAY	AS-52	
AS-53	MAN FAN RELAY	AS-53	
AS-54	MAN FAN RELAY	AS-54	
AS-55	MAN FAN RELAY	AS-55	
AS-56	MAN FAN RELAY	AS-56	
AS-57	MAN FAN RELAY	AS-57	
AS-58	MAN FAN RELAY	AS-58	
AS-59	MAN FAN RELAY	AS-59	
AS-60	MAN FAN RELAY	AS-60	
AS-61	MAN FAN RELAY	AS-61	
AS-62	MAN FAN RELAY	AS-62	
AS-63	MAN FAN RELAY	AS-63	
AS-64	MAN FAN RELAY	AS-64	
AS-65	MAN FAN RELAY	AS-65	
AS-66	MAN FAN RELAY	AS-66	
AS-67	MAN FAN RELAY	AS-67	
AS-68	MAN FAN RELAY	AS-68	
AS-69	MAN FAN RELAY	AS-69	
AS-70	MAN FAN RELAY	AS-70	
AS-71	MAN FAN RELAY	AS-71	
AS-72	MAN FAN RELAY	AS-72	
AS-73	MAN FAN RELAY	AS-73	
AS-74	MAN FAN RELAY	AS-74	
AS-75	MAN FAN RELAY	AS-75	
AS-76	MAN FAN RELAY	AS-76	
AS-77	MAN FAN RELAY	AS-77	
AS-78	MAN FAN RELAY	AS-78	
AS-79	MAN FAN RELAY	AS-79	
AS-80	MAN FAN RELAY	AS-80	
AS-81	MAN FAN RELAY	AS-81	
AS-82	MAN FAN RELAY	AS-82	
AS-83	MAN FAN RELAY	AS-83	
AS-84	MAN FAN RELAY	AS-84	
AS-85	MAN FAN RELAY	AS-85	
AS-86	MAN FAN RELAY	AS-86	
AS-87	MAN FAN RELAY	AS-87	
AS-88	MAN FAN RELAY	AS-88	
AS-89	MAN FAN RELAY	AS-89	
AS-90	MAN FAN RELAY	AS-90	
AS-91	MAN FAN RELAY	AS-91	
AS-92	MAN FAN RELAY	AS-92	
AS-93	MAN FAN RELAY	AS-93	
AS-94	MAN FAN RELAY	AS-94	
AS-95	MAN FAN RELAY	AS-95	
AS-96	MAN FAN RELAY	AS-96	
AS-97	MAN FAN RELAY	AS-97	
AS-98	MAN FAN RELAY	AS-98	
AS-99	MAN FAN RELAY	AS-99	
AS-100	MAN FAN RELAY	AS-100	

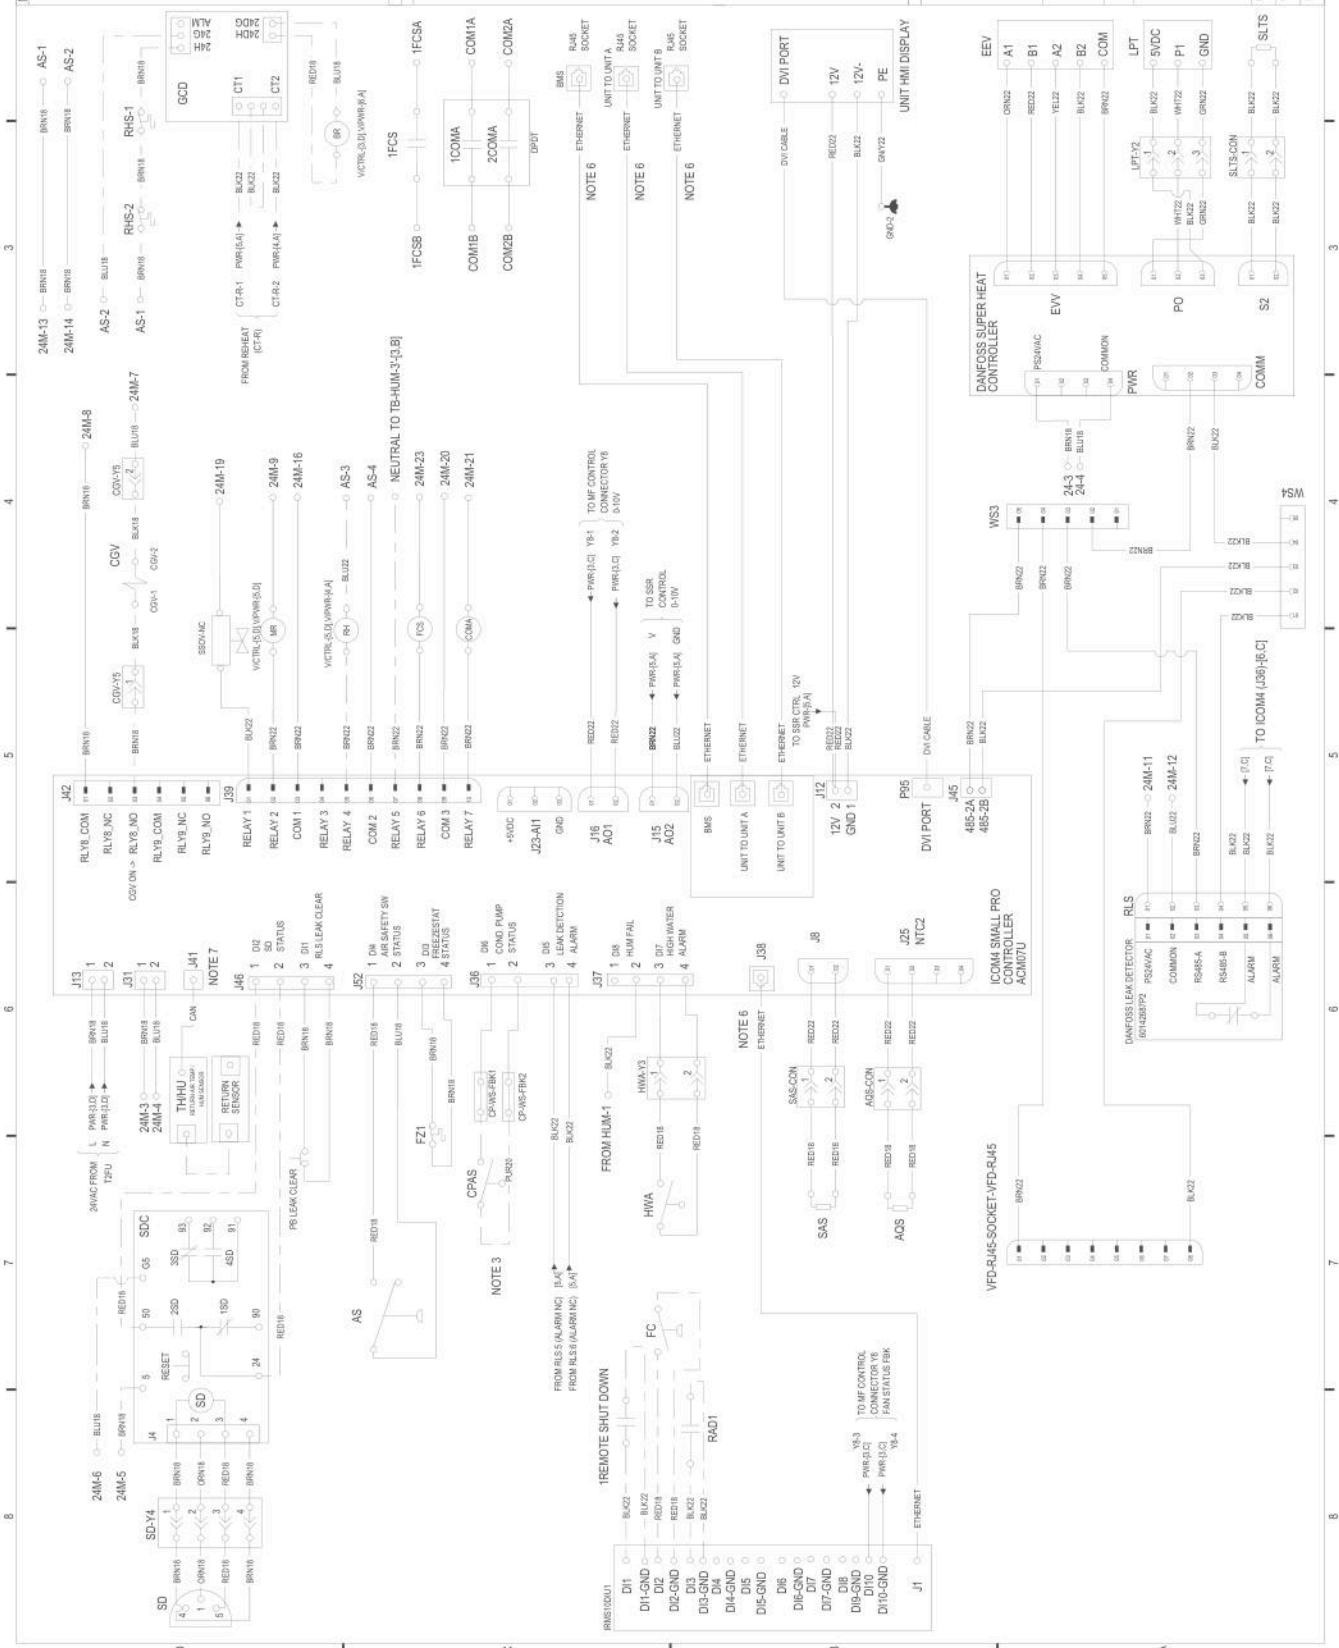

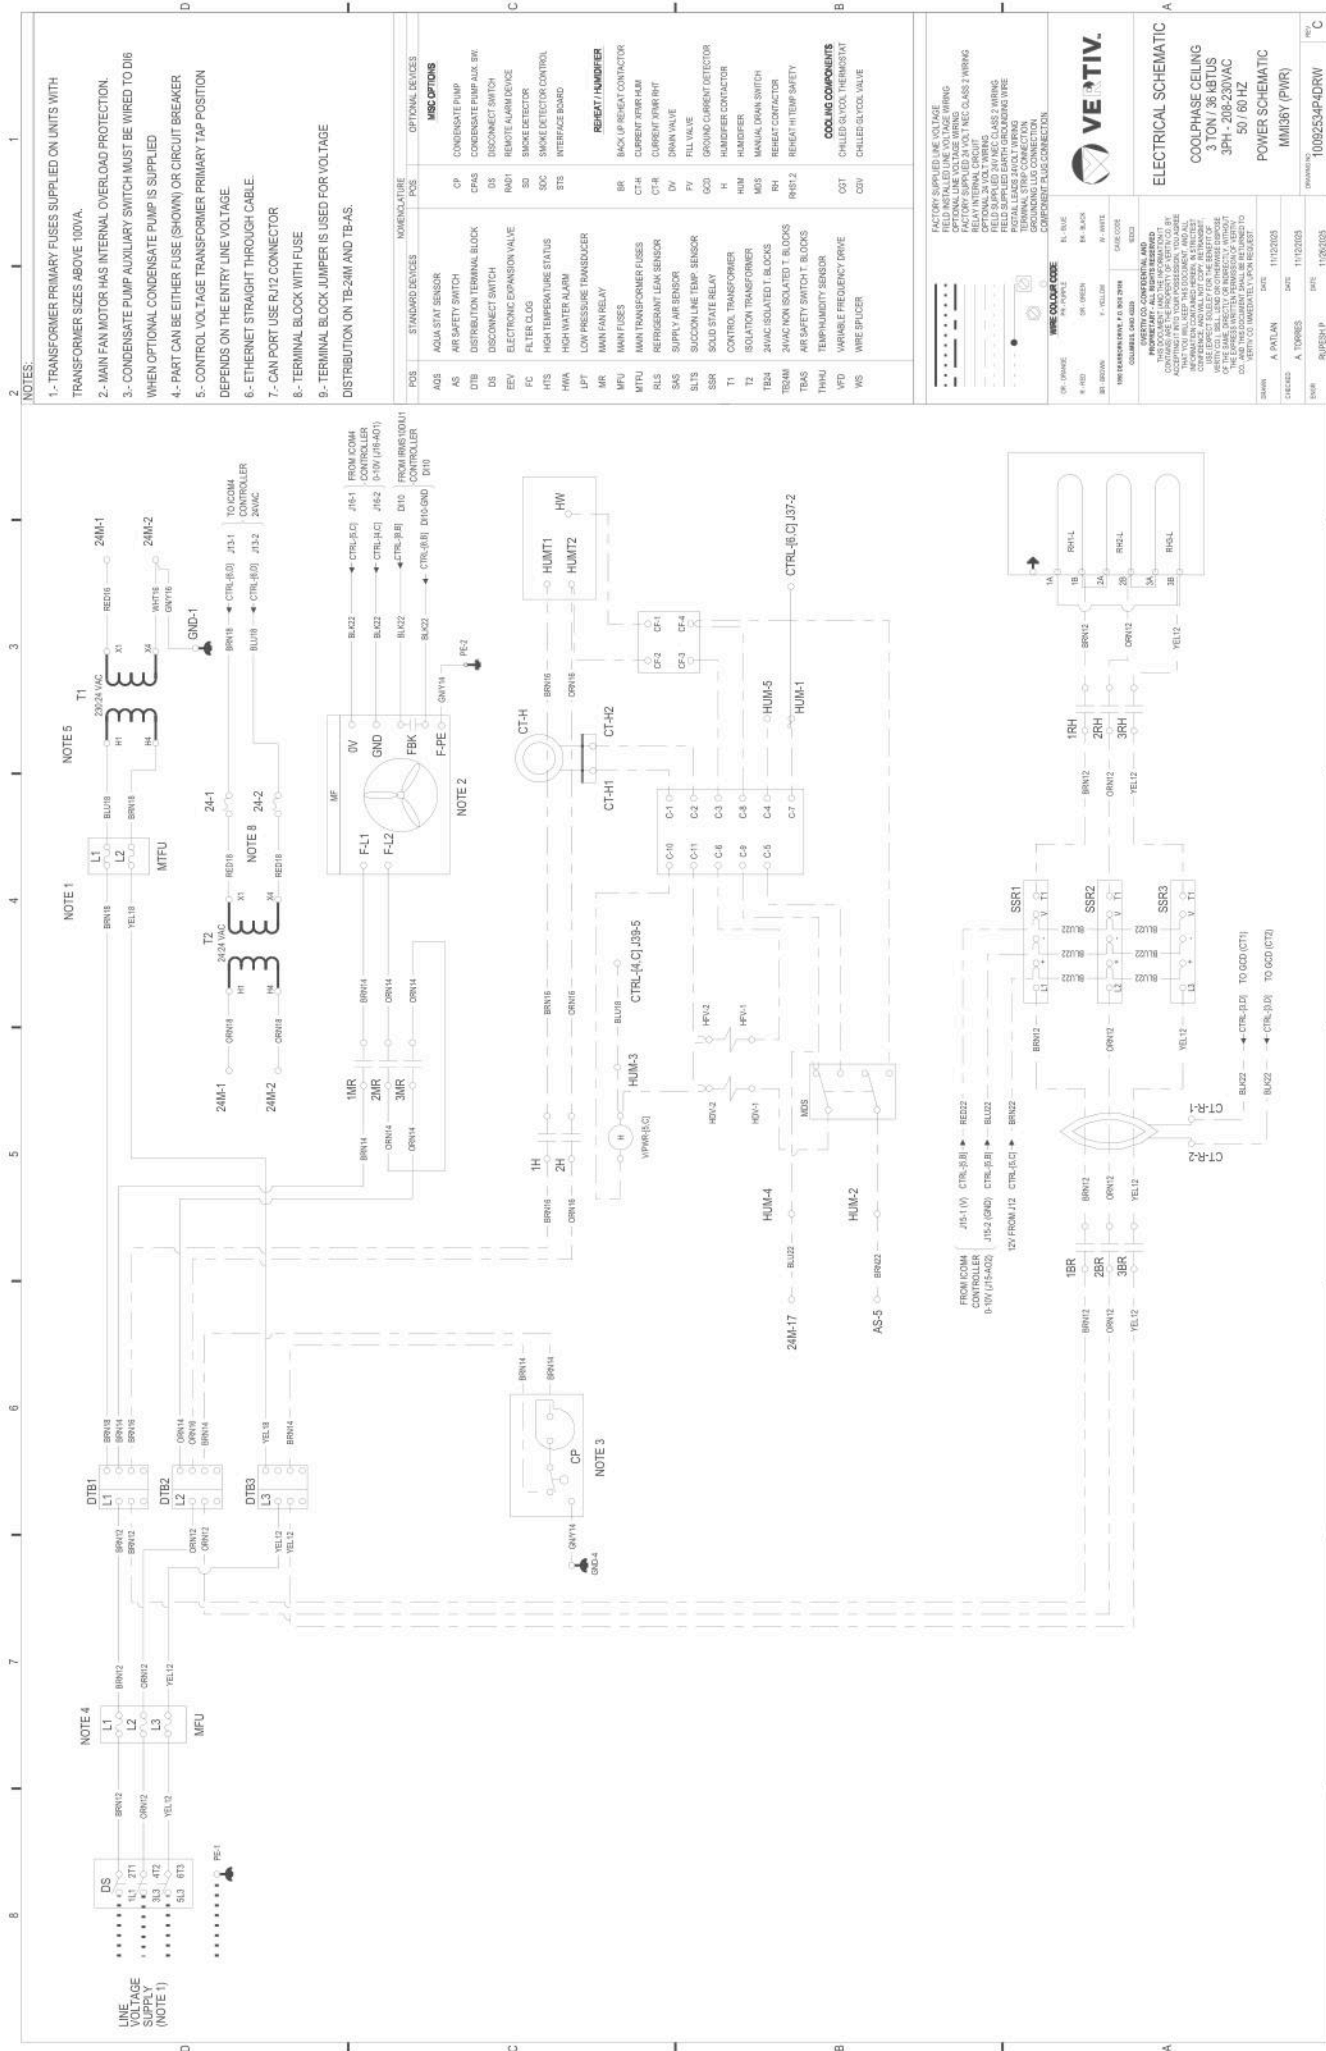

FACTORY SUPPLIED LINE VOLTAGE
INCHES FROM THE END OF THE WIRING
OPTIONAL LINE VOLTAGE WIRING
FACTORY SUPPLIED 24 VOLT 1 CLASS 2 WIRING
RELAY INTERNAL CIRCUIT
FIELD SUPPLIED 24 VOLT 1 CLASS 2 WIRING
FIELD SUPPLIED 24 VOLT 2 CLASS 2 WIRING
FIELD SUPPLIED EARTH GROUNDING WIRE
TERMINAL STRIP CONNECTION
COMPONENT PLUG CONNECTION

WIRE COLOUR CODE			DATE CODE
GR - GRAY	BL - BLUE		
BR - BROWN	BL - BLACK		
R - RED	GR - GREEN		
BS - BROWN	Y - YELLOW		
WIRE TERMINATION (W/T) P. 9-3.218			

[illegible]

2

NOTES:

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520




521

5

- [illegible]

[illegible][illegible][illegible][illegible][illegible]

TERMINAL BLOCKS DISTRIBUTION DETAILS

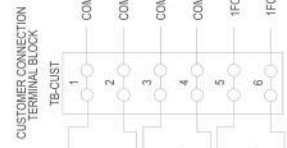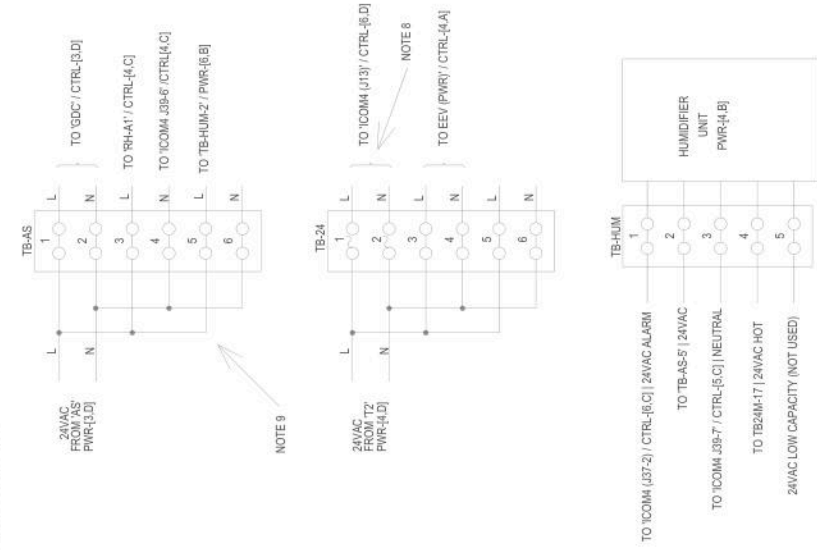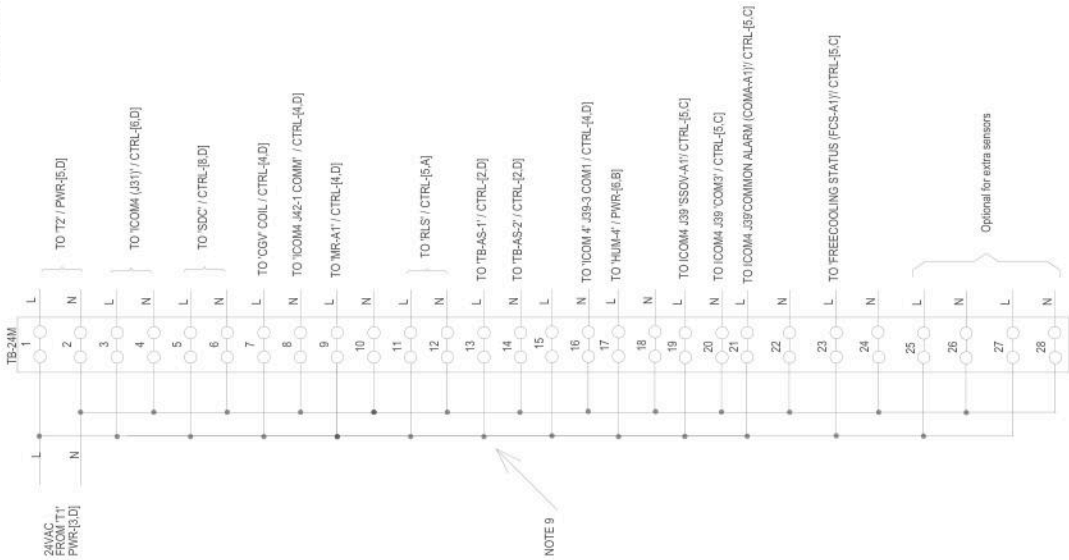


NOTES:

- 1- TRANSFORMER PRIMARY FUSES SUPPLIED ON UNITS WITH TRANSFORMER SIZES ABOVE 100VA.
- 2- MAIN FAN MOTOR HAS INTERNAL OVERLOAD PROTECTION.
- 3- CONDENSATE PUMP AUXILIARY SWITCH MUST BE WIRED TO D16 WHEN OPTIONAL CONDENSATE PUMP IS SUPPLIED.
- 4- PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER
- 5- CONTROL VOLTAGE TRANSFORMER PRIMARY TAP POSITION DEPENDS ON THE ENTRY LINE VOLTAGE.
- 6- ETHERNET STRAIGHT THROUGH CABLE.
- 7- CAN PORT USE RJ12 CONNECTOR
- 8- TERMINAL BLOCK WITH FUSE
- 9- TERMINAL BLOCK JUMPER IS USED FOR VOLTAGE DISTRIBUTION ON TB-24M AND TB-AS.

POS	STANDARD DEVICES	MONOLITHIC PCB	OPTIONAL DEVICES
A05	AQUA STAT SENSOR	CP	CONDENSATE PUMP
AS	AIR SAFETY SWITCH	CRAS	CONDENSATE PUMP AUX. BR.
DTB	DISTRIBUTION TERMINAL BLOCK	DS	DISCONNECT SWITCH
EEV	DISCONNECT SWITCH	PNV1	REMOTE ALARM DEVICE
FC	ELECTRONIC EXPANSION VALVE	SD	SMOKE DETECTOR
HTS	FILTER CLOG	SOC	SMOKE DETECTOR CONTROL
HWA	HIGH TEMPERATURE STATUS	STS	INTERFACE BOARD
LPT	HIGH WATER ALARM		
MR	LOW PRESSURE TRANSDUCER		
MPU	MAIN FAN RELAY		
MTFU	MAIN FAN RELAY		
RLS	MAIN TRANSFORMER FUSES		
SAS	REFRIGERANT LEAK SENSOR		
SLS	SUPPLY AIR SENSOR		
SSR	SUCCTION LINE TEMP. SENSOR		
T1	SOLID STATE RELAY		
T2	CONTROL TRANSFORMER		
TB4	ISOLATION TRANSFORMER		
TB4M	24VAC NON ISOLATED T. BLOCKS		
TB4S	24VAC NON ISOLATED T. BLOCKS		
THRU	TEMPERATURE SENSOR		
VFD	VARIABLE FREQUENCY DRIVE		
WIS	WIRE SPLICER		

FACTORY SUPPLIED LINE VOLTAGE
FIELD INSTALLED LINE VOLTAGE WIRING
FACTORY SUPPLIED 24VAC 1 WIRING
FACTORY SUPPLIED 24VAC 2 WIRING
FACTORY SUPPLIED 24VAC 3 WIRING
FACTORY SUPPLIED 24VAC 4 WIRING
FACTORY SUPPLIED 24VAC 5 WIRING
FACTORY SUPPLIED 24VAC 6 WIRING
FACTORY SUPPLIED 24VAC 7 WIRING
FACTORY SUPPLIED 24VAC 8 WIRING
FACTORY SUPPLIED 24VAC 9 WIRING
FACTORY SUPPLIED 24VAC 10 WIRING
FACTORY SUPPLIED 24VAC 11 WIRING
FACTORY SUPPLIED 24VAC 12 WIRING
FACTORY SUPPLIED 24VAC 13 WIRING
FACTORY SUPPLIED 24VAC 14 WIRING
FACTORY SUPPLIED 24VAC 15 WIRING
FACTORY SUPPLIED 24VAC 16 WIRING
FACTORY SUPPLIED 24VAC 17 WIRING
FACTORY SUPPLIED 24VAC 18 WIRING
FACTORY SUPPLIED 24VAC 19 WIRING
FACTORY SUPPLIED 24VAC 20 WIRING
FACTORY SUPPLIED 24VAC 21 WIRING
FACTORY SUPPLIED 24VAC 22 WIRING
FACTORY SUPPLIED 24VAC 23 WIRING
FACTORY SUPPLIED 24VAC 24 WIRING
FACTORY SUPPLIED 24VAC 25 WIRING
FACTORY SUPPLIED 24VAC 26 WIRING
FACTORY SUPPLIED 24VAC 27 WIRING
FACTORY SUPPLIED 24VAC 28 WIRING
FACTORY SUPPLIED 24VAC 29 WIRING
FACTORY SUPPLIED 24VAC 30 WIRING
FACTORY SUPPLIED 24VAC 31 WIRING
FACTORY SUPPLIED 24VAC 32 WIRING
FACTORY SUPPLIED 24VAC 33 WIRING
FACTORY SUPPLIED 24VAC 34 WIRING
FACTORY SUPPLIED 24VAC 35 WIRING
FACTORY SUPPLIED 24VAC 36 WIRING
FACTORY SUPPLIED 24VAC 37 WIRING
FACTORY SUPPLIED 24VAC 38 WIRING
FACTORY SUPPLIED 24VAC 39 WIRING
FACTORY SUPPLIED 24VAC 40 WIRING
FACTORY SUPPLIED 24VAC 41 WIRING
FACTORY SUPPLIED 24VAC 42 WIRING
FACTORY SUPPLIED 24VAC 43 WIRING
FACTORY SUPPLIED 24VAC 44 WIRING
FACTORY SUPPLIED 24VAC 45 WIRING
FACTORY SUPPLIED 24VAC 46 WIRING
FACTORY SUPPLIED 24VAC 47 WIRING
FACTORY SUPPLIED 24VAC 48 WIRING
FACTORY SUPPLIED 24VAC 49 WIRING
FACTORY SUPPLIED 24VAC 50 WIRING
FACTORY SUPPLIED 24VAC 51 WIRING
FACTORY SUPPLIED 24VAC 52 WIRING
FACTORY SUPPLIED 24VAC 53 WIRING
FACTORY SUPPLIED 24VAC 54 WIRING
FACTORY SUPPLIED 24VAC 55 WIRING
FACTORY SUPPLIED 24VAC 56 WIRING
FACTORY SUPPLIED 24VAC 57 WIRING
FACTORY SUPPLIED 24VAC 58 WIRING
FACTORY SUPPLIED 24VAC 59 WIRING
FACTORY SUPPLIED 24VAC 60 WIRING
FACTORY SUPPLIED 24VAC 61 WIRING
FACTORY SUPPLIED 24VAC 62 WIRING
FACTORY SUPPLIED 24VAC 63 WIRING
FACTORY SUPPLIED 24VAC 64 WIRING
FACTORY SUPPLIED 24VAC 65 WIRING
FACTORY SUPPLIED 24VAC 66 WIRING
FACTORY SUPPLIED 24VAC 67 WIRING
FACTORY SUPPLIED 24VAC 68 WIRING
FACTORY SUPPLIED 24VAC 69 WIRING
FACTORY SUPPLIED 24VAC 70 WIRING
FACTORY SUPPLIED 24VAC 71 WIRING
FACTORY SUPPLIED 24VAC 72 WIRING
FACTORY SUPPLIED 24VAC 73 WIRING
FACTORY SUPPLIED 24VAC 74 WIRING
FACTORY SUPPLIED 24VAC 75 WIRING
FACTORY SUPPLIED 24VAC 76 WIRING
FACTORY SUPPLIED 24VAC 77 WIRING
FACTORY SUPPLIED 24VAC 78 WIRING
FACTORY SUPPLIED 24VAC 79 WIRING
FACTORY SUPPLIED 24VAC 80 WIRING
FACTORY SUPPLIED 24VAC 81 WIRING
FACTORY SUPPLIED 24VAC 82 WIRING
FACTORY SUPPLIED 24VAC 83 WIRING
FACTORY SUPPLIED 24VAC 84 WIRING
FACTORY SUPPLIED 24VAC 85 WIRING
FACTORY SUPPLIED 24VAC 86 WIRING
FACTORY SUPPLIED 24VAC 87 WIRING
FACTORY SUPPLIED 24VAC 88 WIRING
FACTORY SUPPLIED 24VAC 89 WIRING
FACTORY SUPPLIED 24VAC 90 WIRING
FACTORY SUPPLIED 24VAC 91 WIRING
FACTORY SUPPLIED 24VAC 92 WIRING
FACTORY SUPPLIED 24VAC 93 WIRING
FACTORY SUPPLIED 24VAC 94 WIRING
FACTORY SUPPLIED 24VAC 95 WIRING
FACTORY SUPPLIED 24VAC 96 WIRING
FACTORY SUPPLIED 24VAC 97 WIRING
FACTORY SUPPLIED 24VAC 98 WIRING
FACTORY SUPPLIED 24VAC 99 WIRING
FACTORY SUPPLIED 24VAC 100 WIRING


ELECTRICAL SCHEMATIC
COOLPHASE CEILING
3 TON / 35.4 BTU
3PH 480VAC
50 / 60 HZ
T. BLOCK DISTRIBUTION
MM38A (TELK)

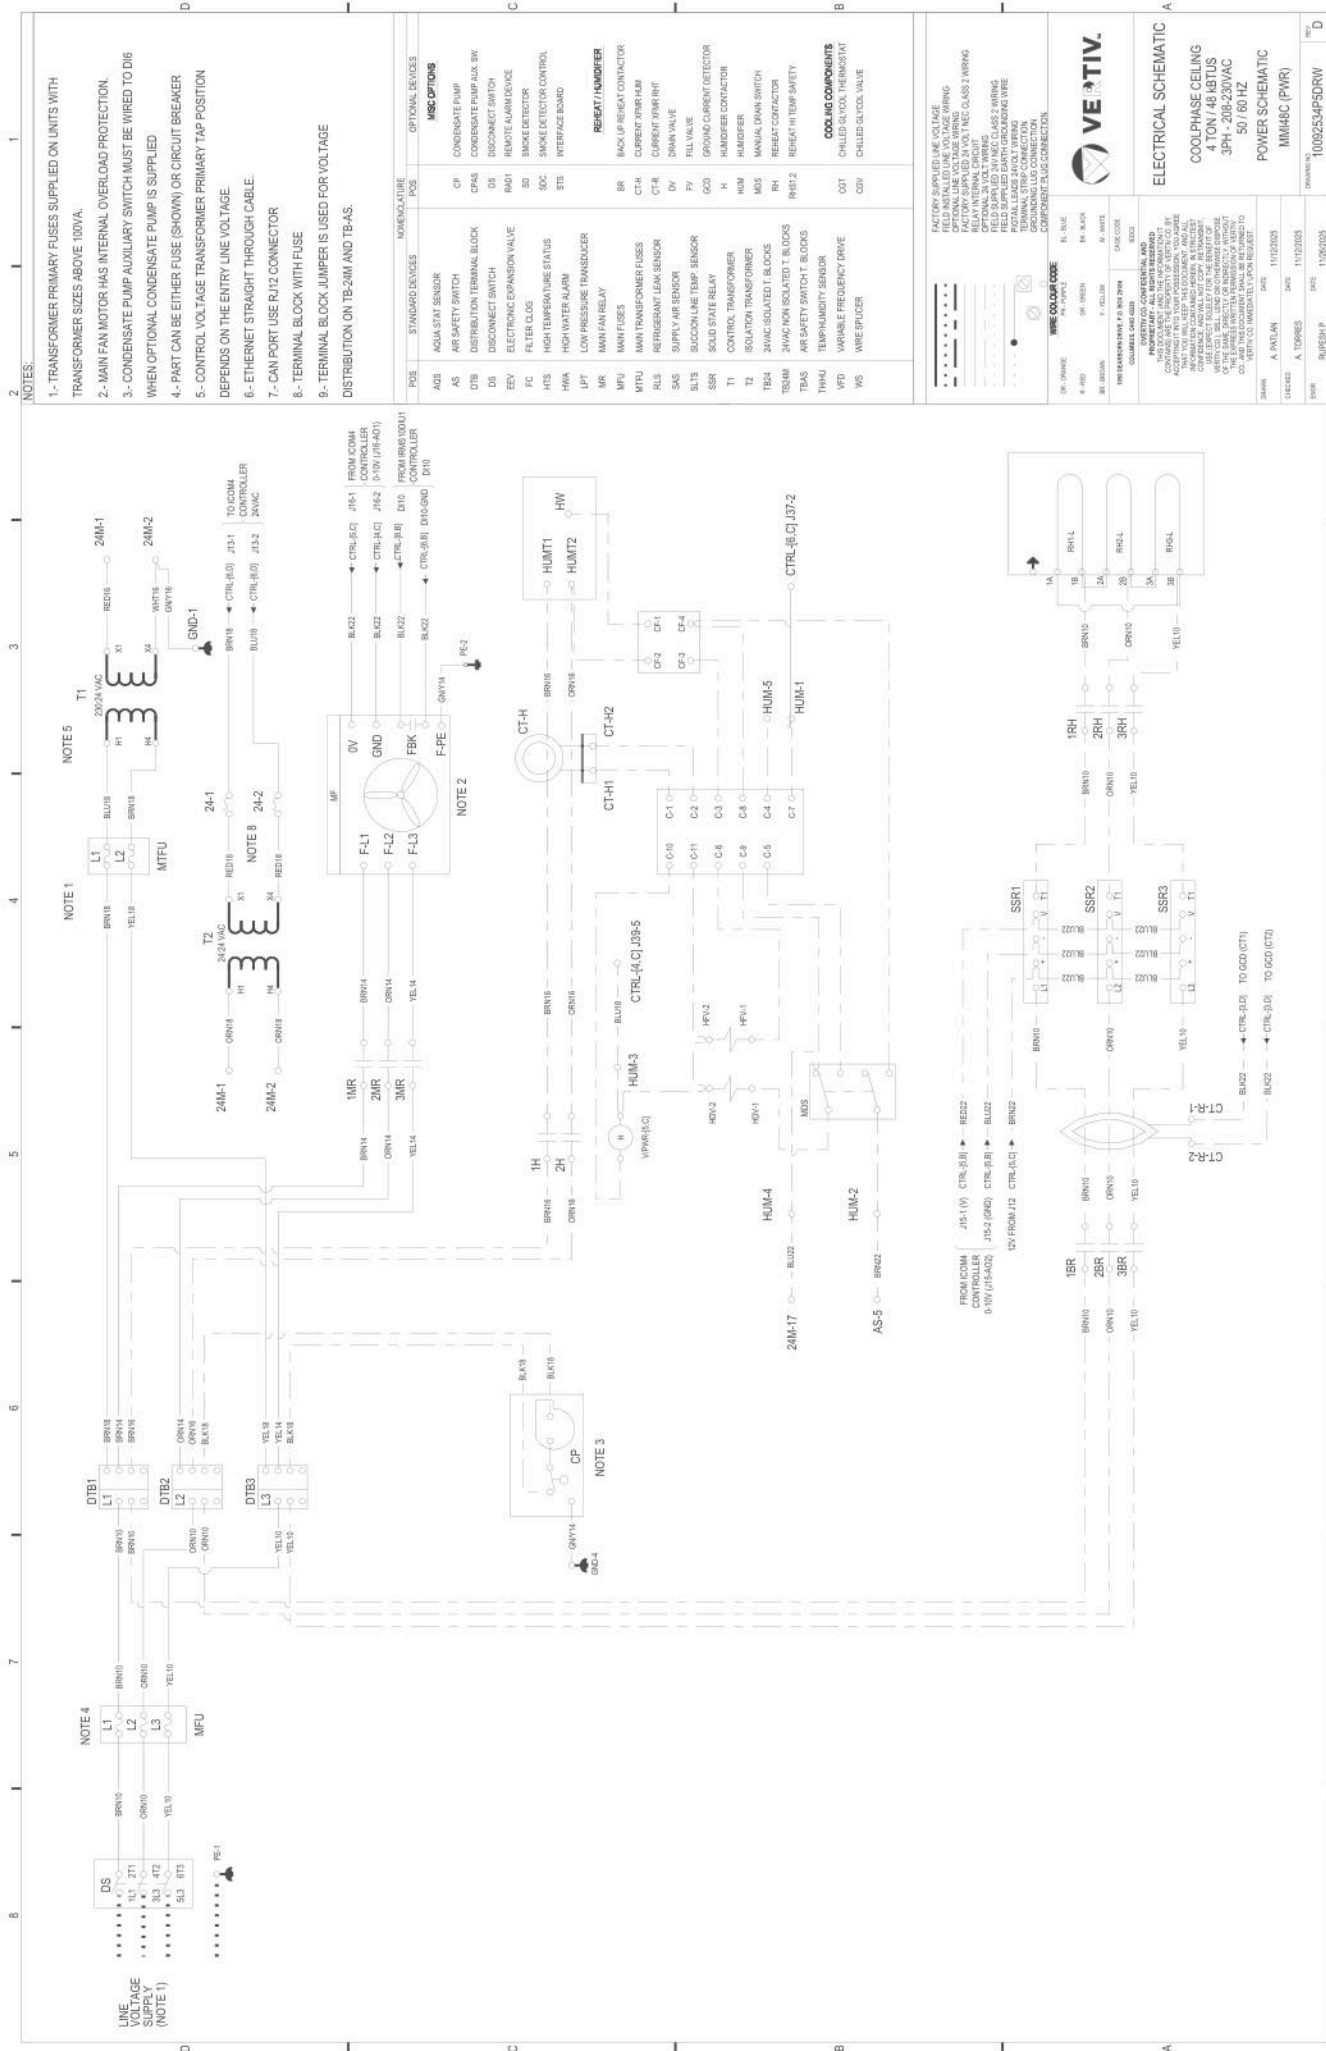

FACTORY SUPPLIED LINE VOLTAGE
INCHES FROM TERMINAL BLOCK
OPTIONAL LINE VOLTAGE WIRING
FACTORY SUPPLIED 24 VOLT CLASS 2 WIRING
RELAY INTERNAL CIRCUIT
RELAY COIL
FIELD SUPPLIED 24 VOLT CLASS 2 WIRING
FIELD SUPPLIED EARTH GROUNDING WIRE
RIGID LEADS 240 VOLT WIRING
TERMINAL STRIP CONNECTION
COMMON
COMPONENT PLUG CONNECTION

WIRE COLOUR CODE			DATE CODE
GR - GRAY	BL - BLUE		
PK - PINK	BL - BLACK		
R - RED	GR - GREEN		
BR - BROWN	Y - YELLOW		
WIRE TERMINATION (W/T) P. 9-3.218			

[illegible]

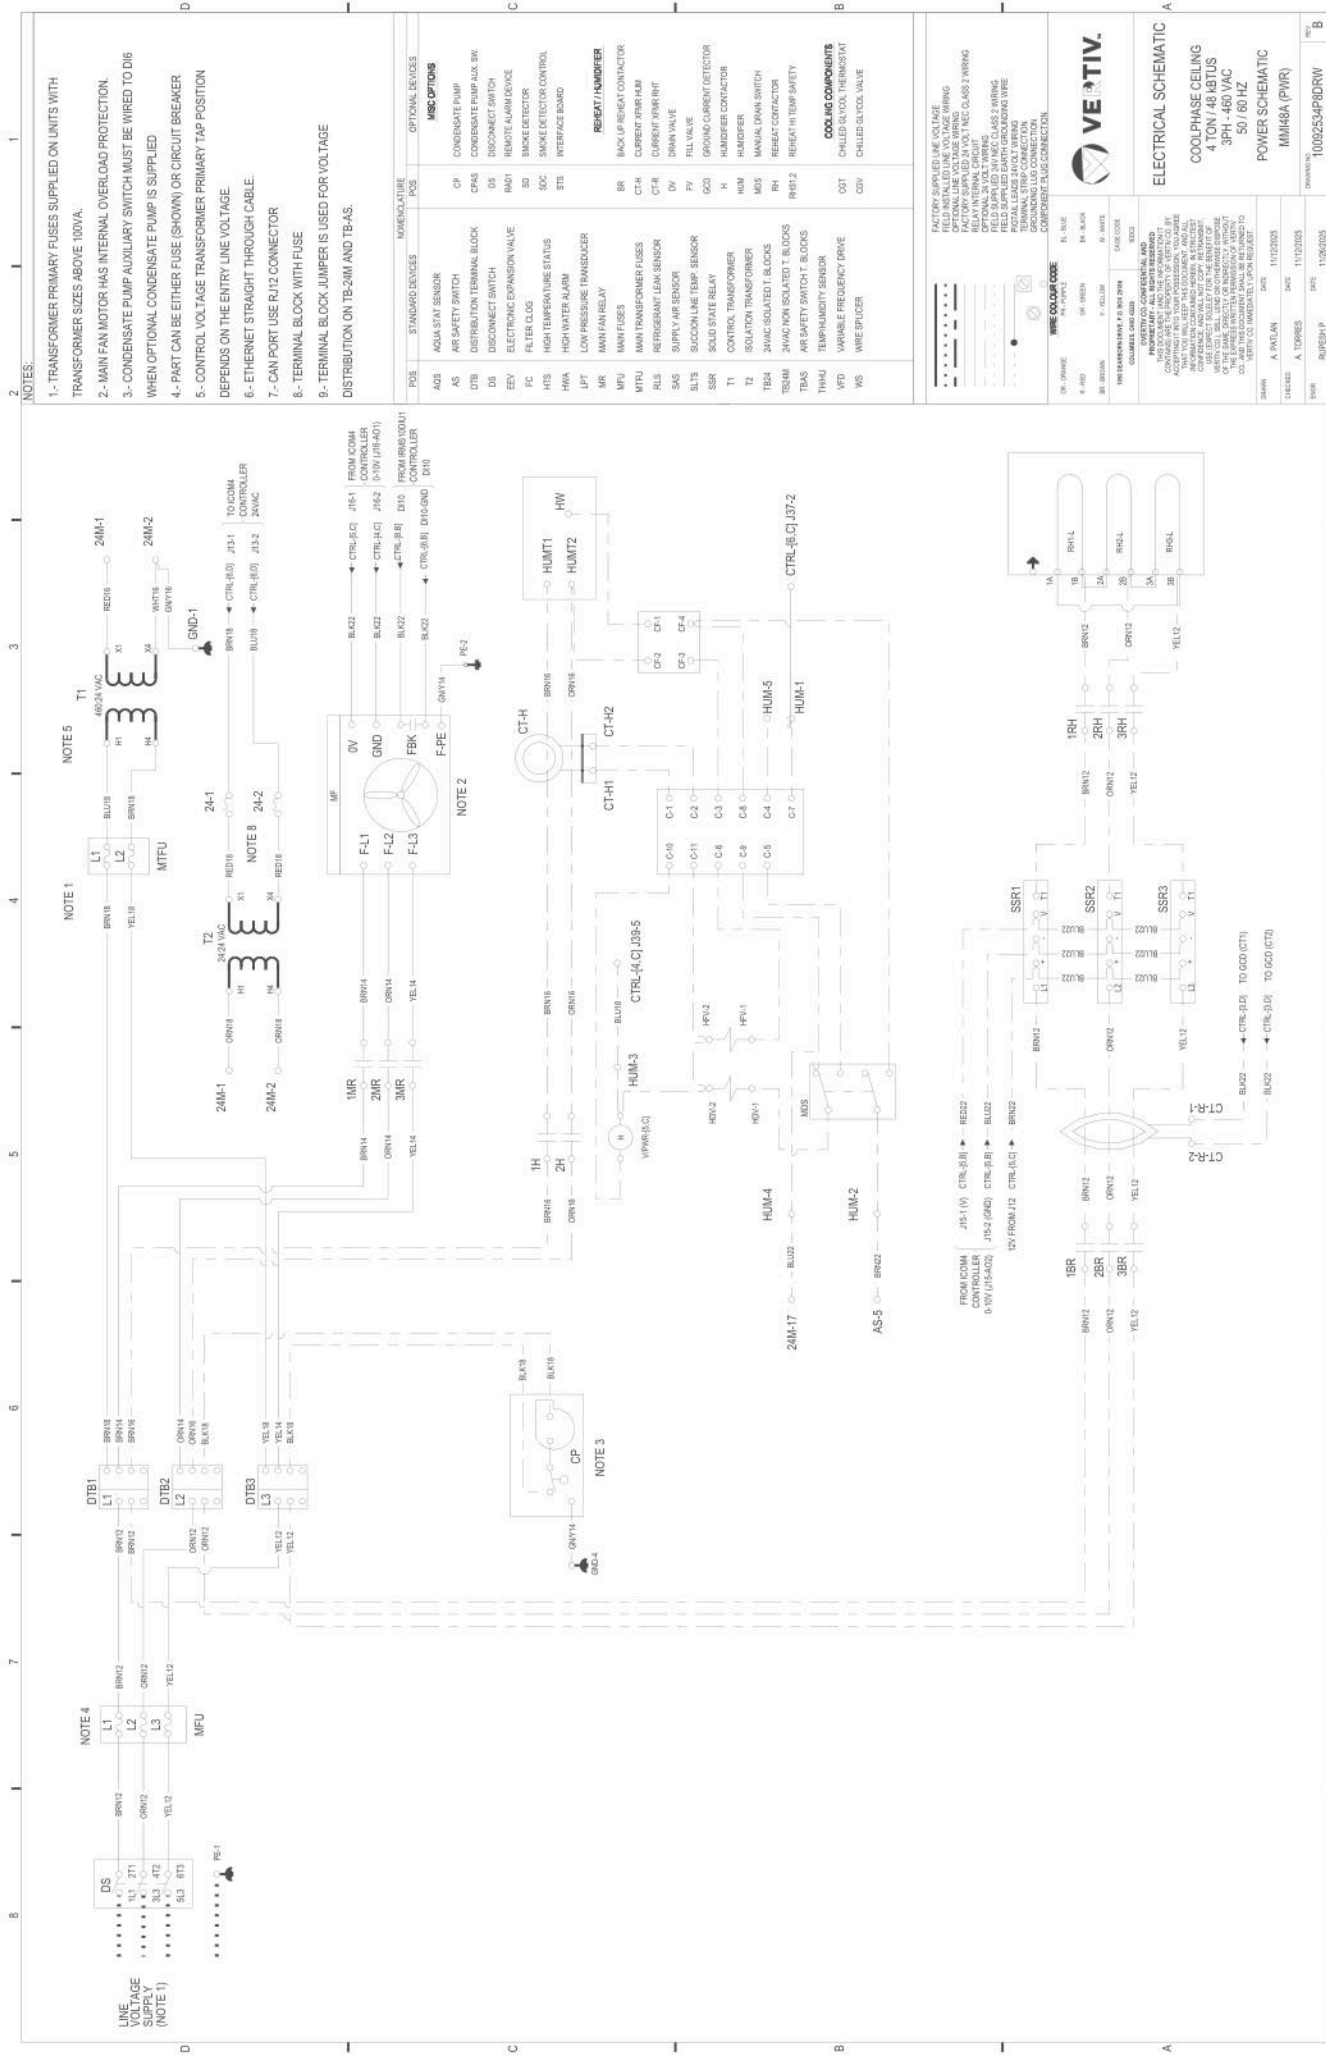

FACTORY SUPPLIED LINE VOLTAGE		B1 BLUE		 VERIVIV.		ELECTRIC SCHEMATIC		POWER SCHEMATIC MM48A (PWR)	
FED INSTALLED LINE VOLTAGE		B4 BLACK							
FACTORY SUPPLIED WIRE CLASS 3 WIRING		N1 WHITE		 GROUNDING FLUG CONNECTION		COOLPHASE CEILING 4 TON 148 KBTUS 3PH 480 VAC 50 / 60 HZ		10082534PDRW	
FACTORY SUPPLIED WIRE CLASS 2 WIRING		N2 WHITE							
OPTIONAL WIRE SIZING		N3 WHITE		VERIVIV		VERIVIV		VERIVIV	
FACTORY SUPPLIED WIRE CLASS 1 WIRING		N4 WHITE							
FEDAL ASSELY WIRING		N5 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N6 WHITE							
FEDAL ASSELY WIRING		N7 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N8 WHITE							
FEDAL ASSELY WIRING		N9 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N10 WHITE							
FEDAL ASSELY WIRING		N11 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N12 WHITE							
FEDAL ASSELY WIRING		N13 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N14 WHITE							
FEDAL ASSELY WIRING		N15 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N16 WHITE							
FEDAL ASSELY WIRING		N17 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N18 WHITE							
FEDAL ASSELY WIRING		N19 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N20 WHITE							
FEDAL ASSELY WIRING		N21 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N22 WHITE							
FEDAL ASSELY WIRING		N23 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N24 WHITE							
FEDAL ASSELY WIRING		N25 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N26 WHITE							
FEDAL ASSELY WIRING		N27 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N28 WHITE							
FEDAL ASSELY WIRING		N29 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N30 WHITE							
FEDAL ASSELY WIRING		N31 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N32 WHITE							
FEDAL ASSELY WIRING		N33 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N34 WHITE							
FEDAL ASSELY WIRING		N35 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N36 WHITE							
FEDAL ASSELY WIRING		N37 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N38 WHITE							
FEDAL ASSELY WIRING		N39 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N40 WHITE							
FEDAL ASSELY WIRING		N41 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N42 WHITE							
FEDAL ASSELY WIRING		N43 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N44 WHITE							
FEDAL ASSELY WIRING		N45 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N46 WHITE							
FEDAL ASSELY WIRING		N47 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N48 WHITE							
FEDAL ASSELY WIRING		N49 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N50 WHITE							
FEDAL ASSELY WIRING		N51 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N52 WHITE							
FEDAL ASSELY WIRING		N53 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N54 WHITE							
FEDAL ASSELY WIRING		N55 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N56 WHITE							
FEDAL ASSELY WIRING		N57 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N58 WHITE							
FEDAL ASSELY WIRING		N59 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N60 WHITE							
FEDAL ASSELY WIRING		N61 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N62 WHITE							
FEDAL ASSELY WIRING		N63 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N64 WHITE							
FEDAL ASSELY WIRING		N65 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N66 WHITE							
FEDAL ASSELY WIRING		N67 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N68 WHITE							
FEDAL ASSELY WIRING		N69 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N70 WHITE							
FEDAL ASSELY WIRING		N71 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N72 WHITE							
FEDAL ASSELY WIRING		N73 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N74 WHITE							
FEDAL ASSELY WIRING		N75 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N76 WHITE							
FEDAL ASSELY WIRING		N77 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N78 WHITE							
FEDAL ASSELY WIRING		N79 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N80 WHITE							
FEDAL ASSELY WIRING		N81 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N82 WHITE							
FEDAL ASSELY WIRING		N83 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N84 WHITE							
FEDAL ASSELY WIRING		N85 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N86 WHITE							
FEDAL ASSELY WIRING		N87 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N88 WHITE							
FEDAL ASSELY WIRING		N89 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N90 WHITE							
FEDAL ASSELY WIRING		N91 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N92 WHITE							
FEDAL ASSELY WIRING		N93 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N94 WHITE							
FEDAL ASSELY WIRING		N95 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N96 WHITE							
FEDAL ASSELY WIRING		N97 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N98 WHITE							
FEDAL ASSELY WIRING		N99 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N100 WHITE							
FEDAL ASSELY WIRING		N101 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N102 WHITE							
FEDAL ASSELY WIRING		N103 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N104 WHITE							
FEDAL ASSELY WIRING		N105 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N106 WHITE							
FEDAL ASSELY WIRING		N107 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N108 WHITE							
FEDAL ASSELY WIRING		N109 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N110 WHITE							
FEDAL ASSELY WIRING		N111 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N112 WHITE							
FEDAL ASSELY WIRING		N113 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N114 WHITE							
FEDAL ASSELY WIRING		N115 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N116 WHITE							
FEDAL ASSELY WIRING		N117 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N118 WHITE							
FEDAL ASSELY WIRING		N119 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N120 WHITE							
FEDAL ASSELY WIRING		N121 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N122 WHITE							
FEDAL ASSELY WIRING		N123 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N124 WHITE							
FEDAL ASSELY WIRING		N125 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N126 WHITE							
FEDAL ASSELY WIRING		N127 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N128 WHITE							
FEDAL ASSELY WIRING		N129 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N130 WHITE							
FEDAL ASSELY WIRING		N131 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N132 WHITE							
FEDAL ASSELY WIRING		N133 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N134 WHITE							
FEDAL ASSELY WIRING		N135 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N136 WHITE							
FEDAL ASSELY WIRING		N137 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N138 WHITE							
FEDAL ASSELY WIRING		N139 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N140 WHITE							
FEDAL ASSELY WIRING		N141 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N142 WHITE							
FEDAL ASSELY WIRING		N143 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N144 WHITE							
FEDAL ASSELY WIRING		N145 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N146 WHITE							
FEDAL ASSELY WIRING		N147 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N148 WHITE							
FEDAL ASSELY WIRING		N149 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N150 WHITE							
FEDAL ASSELY WIRING		N151 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N152 WHITE							
FEDAL ASSELY WIRING		N153 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N154 WHITE							
FEDAL ASSELY WIRING		N155 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N156 WHITE							
FEDAL ASSELY WIRING		N157 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N158 WHITE							
FEDAL ASSELY WIRING		N159 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N160 WHITE							
FEDAL ASSELY WIRING		N161 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N162 WHITE							
FEDAL ASSELY WIRING		N163 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N164 WHITE							
FEDAL ASSELY WIRING		N165 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N166 WHITE							
FEDAL ASSELY WIRING		N167 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N168 WHITE							
FEDAL ASSELY WIRING		N169 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N170 WHITE							
FEDAL ASSELY WIRING		N171 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N172 WHITE							
FEDAL ASSELY WIRING		N173 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N174 WHITE							
FEDAL ASSELY WIRING		N175 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N176 WHITE							
FEDAL ASSELY WIRING		N177 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N178 WHITE							
FEDAL ASSELY WIRING		N179 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N180 WHITE							
FEDAL ASSELY WIRING		N181 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N182 WHITE							
FEDAL ASSELY WIRING		N183 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N184 WHITE							
FEDAL ASSELY WIRING		N185 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N186 WHITE							
FEDAL ASSELY WIRING		N187 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N188 WHITE							
FEDAL ASSELY WIRING		N189 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N190 WHITE							
FEDAL ASSELY WIRING		N191 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N192 WHITE							
FEDAL ASSELY WIRING		N193 WHITE		VERIVIV		VERIVIV		VERIVIV	
FEDAL ASSELY WIRING		N194 WHITE							
FEDAL ASSELY WIRING		N195 WHITE		VERIVIV		VERIVIV		VERIVIV	
F									



[illegible]

- NOTES:

1

2

3

4

5

6

7

8

TERMINAL BLOCKS DISTRIBUTION DETAILS
- The diagram illustrates the terminal block distribution details for a system, showing connections for various components and sensors. The main terminal block is TB-24M, which is connected to TB-AS, TB-24, TB-HUM, and TB-CUST. The connections are as follows:

 - TB-24M:** 1. 24VAC FROM T1 PWR-3[D] (L, N); 2. TO T2 / PWR-5[D] (L, N); 3. TO T2 / PWR-5[D] (L, N); 4. TO T2 / PWR-5[D] (L, N); 5. TO T2 / PWR-5[D] (L, N); 6. TO T2 / PWR-5[D] (L, N); 7. TO T2 / PWR-5[D] (L, N); 8. TO T2 / PWR-5[D] (L, N); 9. TO T2 / PWR-5[D] (L, N); 10. TO T2 / PWR-5[D] (L, N); 11. TO T2 / PWR-5[D] (L, N); 12. TO T2 / PWR-5[D] (L, N); 13. TO T2 / PWR-5[D] (L, N); 14. TO T2 / PWR-5[D] (L, N); 15. TO T2 / PWR-5[D] (L, N); 16. TO T2 / PWR-5[D] (L, N); 17. TO T2 / PWR-5[D] (L, N); 18. TO T2 / PWR-5[D] (L, N); 19. TO T2 / PWR-5[D] (L, N); 20. TO T2 / PWR-5[D] (L, N); 21. TO T2 / PWR-5[D] (L, N); 22. TO T2 / PWR-5[D] (L, N); 23. TO T2 / PWR-5[D] (L, N); 24. TO T2 / PWR-5[D] (L, N); 25. TO T2 / PWR-5[D] (L, N); 26. TO T2 / PWR-5[D] (L, N); 27. TO T2 / PWR-5[D] (L, N); 28. TO T2 / PWR-5[D] (L, N).
 - TB-AS:** 1. 24VAC FROM T1 PWR-3[D] (L, N); 2. TO T2 / PWR-5[D] (L, N); 3. TO T2 / PWR-5[D] (L, N); 4. TO T2 / PWR-5[D] (L, N); 5. TO T2 / PWR-5[D] (L, N); 6. TO T2 / PWR-5[D] (L, N); 7. TO T2 / PWR-5[D] (L, N); 8. TO T2 / PWR-5[D] (L, N); 9. TO T2 / PWR-5[D] (L, N); 10. TO T2 / PWR-5[D] (L, N); 11. TO T2 / PWR-5[D] (L, N); 12. TO T2 / PWR-5[D] (L, N); 13. TO T2 / PWR-5[D] (L, N); 14. TO T2 / PWR-5[D] (L, N); 15. TO T2 / PWR-5[D] (L, N); 16. TO T2 / PWR-5[D] (L, N); 17. TO T2 / PWR-5[D] (L, N); 18. TO T2 / PWR-5[D] (L, N); 19. TO T2 / PWR-5[D] (L, N); 20. TO T2 / PWR-5[D] (L, N); 21. TO T2 / PWR-5[D] (L, N); 22. TO T2 / PWR-5[D] (L, N); 23. TO T2 / PWR-5[D] (L, N); 24. TO T2 / PWR-5[D] (L, N); 25. TO T2 / PWR-5[D] (L, N); 26. TO T2 / PWR-5[D] (L, N); 27. TO T2 / PWR-5[D] (L, N); 28. TO T2 / PWR-5[D] (L, N).
 - TB-24:** 1. 24VAC FROM T2 PWR-4[D] (L, N); 2. TO T2 / PWR-5[D] (L, N); 3. TO T2 / PWR-5[D] (L, N); 4. TO T2 / PWR-5[D] (L, N); 5. TO T2 / PWR-5[D] (L, N); 6. TO T2 / PWR-5[D] (L, N); 7. TO T2 / PWR-5[D] (L, N); 8. TO T2 / PWR-5[D] (L, N); 9. TO T2 / PWR-5[D] (L, N); 10. TO T2 / PWR-5[D] (L, N); 11. TO T2 / PWR-5[D] (L, N); 12. TO T2 / PWR-5[D] (L, N); 13. TO T2 / PWR-5[D] (L, N); 14. TO T2 / PWR-5[D] (L, N); 15. TO T2 / PWR-5[D] (L, N); 16. TO T2 / PWR-5[D] (L, N); 17. TO T2 / PWR-5[D] (L, N); 18. TO T2 / PWR-5[D] (L, N); 19. TO T2 / PWR-5[D] (L, N); 20. TO T2 / PWR-5[D] (L, N); 21. TO T2 / PWR-5[D] (L, N); 22. TO T2 / PWR-5[D] (L, N); 23. TO T2 / PWR-5[D] (L, N); 24. TO T2 / PWR-5[D] (L, N); 25. TO T2 / PWR-5[D] (L, N); 26. TO T2 / PWR-5[D] (L, N); 27. TO T2 / PWR-5[D] (L, N); 28. TO T2 / PWR-5[D] (L, N).
 - TB-HUM:** 1. TO T2 / PWR-5[D] (L, N); 2. TO T2 / PWR-5[D] (L, N); 3. TO T2 / PWR-5[D] (L, N); 4. TO T2 / PWR-5[D] (L, N); 5. TO T2 / PWR-5[D] (L, N); 6. TO T2 / PWR-5[D] (L, N); 7. TO T2 / PWR-5[D] (L, N); 8. TO T2 / PWR-5[D] (L, N); 9. TO T2 / PWR-5[D] (L, N); 10. TO T2 / PWR-5[D] (L, N); 11. TO T2 / PWR-5[D] (L, N); 12. TO T2 / PWR-5[D] (L, N); 13. TO T2 / PWR-5[D] (L, N); 14. TO T2 / PWR-5[D] (L, N); 15. TO T2 / PWR-5[D] (L, N); 16. TO T2 / PWR-5[D] (L, N); 17. TO T2 / PWR-5[D] (L, N); 18. TO T2 / PWR-5[D] (L, N); 19. TO T2 / PWR-5[D] (L, N); 20. TO T2 / PWR-5[D] (L, N); 21. TO T2 / PWR-5[D] (L, N); 22. TO T2 / PWR-5[D] (L, N); 23. TO T2 / PWR-5[D] (L, N); 24. TO T2 / PWR-5[D] (L, N); 25. TO T2 / PWR-5[D] (L, N); 26. TO T2 / PWR-5[D] (L, N); 27. TO T2 / PWR-5[D] (L, N); 28. TO T2 / PWR-5[D] (L, N).
 - TB-CUST:** 1. 1COMA (L, N); 2. 1COMA (L, N); 3. 2COMA (L, N); 4. 2COMA (L, N); 5. 1FCSA (L, N); 6. 1FCSB (L, N); 7. 1FCSA (L, N); 8. 1FCSB (L, N); 9. 1FCSA (L, N); 10. 1FCSB (L, N); 11. 1FCSA (L, N); 12. 1FCSB (L, N); 13. 1FCSA (L, N); 14. 1FCSB (L, N); 15. 1FCSA (L, N); 16. 1FCSB (L, N); 17. 1FCSA (L, N); 18. 1FCSB (L, N); 19. 1FCSA (L, N); 20. 1FCSB (L, N); 21. 1FCSA (L, N); 22. 1FCSB (L, N); 23. 1FCSA (L, N); 24. 1FCSB (L, N); 25. 1FCSA (L, N); 26. 1FCSB (L, N); 27. 1FCSA (L, N); 28. 1FCSB (L, N).

The diagram also includes a table of components and their connections, as well as a section for optional components and their connections.

COMPONENT	TERMINAL	WIRING
CONDENSATE PUMP	CP	CONDENSATE PUMP AUX SW
DISCONNECT SWITCH	DS	DISCONNECT SWITCH
REMOTE ALARM DEVICE	RA1	REMOTE ALARM DEVICE
SMOKE DETECTOR	SD	SMOKE DETECTOR
SMOKE DETECTOR CONTROL	SOC	SMOKE DETECTOR CONTROL
INTERFERENCE BOARD	ITS	INTERFERENCE BOARD
REHEAT HUMIDIFIER	BR	REHEAT HUMIDIFIER
BACKUP REHEAT CONTACTOR	CT-4	BACKUP REHEAT CONTACTOR
CURRENT PWR UNIT	CT-4	CURRENT PWR UNIT
RAIN VALVE	DV	RAIN VALVE
FILL VALVE	FV	FILL VALVE
GROUND CURRENT DETECTOR	GCD	GROUND CURRENT DETECTOR
HUMIDIFIER CONTACTOR	H	HUMIDIFIER CONTACTOR
HUMIDIFIER	HUM	HUMIDIFIER
MANUAL DRAIN SWITCH	MDS	MANUAL DRAIN SWITCH
REHEAT CONTACTOR	RH	REHEAT CONTACTOR
REHEAT HI TEMP SAFETY	RHS12	REHEAT HI TEMP SAFETY
COOLING COMPONENTS	CST	COOLING COMPONENTS
CHILLED LIQUID THERMOSTAT	CST	CHILLED LIQUID THERMOSTAT
CHILLED LIQUID VALVE	CST	CHILLED LIQUID VALVE

Optional components and their connections:

 - CONDENSATE PUMP: CP
 - DISCONNECT SWITCH: DS
 - REMOTE ALARM DEVICE: RA1
 - SMOKE DETECTOR: SD
 - SMOKE DETECTOR CONTROL: SOC
 - INTERFERENCE BOARD: ITS
 - REHEAT HUMIDIFIER: BR
 - BACKUP REHEAT CONTACTOR: CT-4
 - CURRENT PWR UNIT: CT-4
 - RAIN VALVE: DV
 - FILL VALVE: FV
 - GROUND CURRENT DETECTOR: GCD
 - HUMIDIFIER CONTACTOR: H
 - HUMIDIFIER: HUM
 - MANUAL DRAIN SWITCH: MDS
 - REHEAT CONTACTOR: RH
 - REHEAT HI TEMP SAFETY: RHS12
 - COOLING COMPONENTS: CST
 - CHILLED LIQUID THERMOSTAT: CST
 - CHILLED LIQUID VALVE: CST
- 1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

5

NOTES:

1

2

3

4

5

6

7

8

TERMINAL BLOCKS DISTRIBUTION DETAILS

The diagram illustrates the terminal block distribution details for a system. It includes the following components and connections:

- TB-24M:** 28 terminals. Connections include 24VAC FROM TT1 PWR-3[D], 24VAC FROM TT2 PWR-4[D], TO T2Z PWR-5[D], TO T2Z PWR-6[D], TO T2Z PWR-7[D], TO T2Z PWR-8[D], TO T2Z PWR-9[D], TO T2Z PWR-10[D], TO T2Z PWR-11[D], TO T2Z PWR-12[D], TO T2Z PWR-13[D], TO T2Z PWR-14[D], TO T2Z PWR-15[D], TO T2Z PWR-16[D], TO T2Z PWR-17[D], TO T2Z PWR-18[D], TO T2Z PWR-19[D], TO T2Z PWR-20[D], TO T2Z PWR-21[D], TO T2Z PWR-22[D], TO T2Z PWR-23[D], TO T2Z PWR-24[D], TO T2Z PWR-25[D], TO T2Z PWR-26[D], TO T2Z PWR-27[D], TO T2Z PWR-28[D].
- TB-AS:** 6 terminals. Connections include 24VAC FROM TT1 PWR-3[D], 24VAC FROM TT2 PWR-4[D], TO T2Z PWR-5[D], TO T2Z PWR-6[D], TO T2Z PWR-7[D], TO T2Z PWR-8[D].
- TB-24:** 6 terminals. Connections include 24VAC FROM TT1 PWR-3[D], 24VAC FROM TT2 PWR-4[D], TO T2Z PWR-5[D], TO T2Z PWR-6[D], TO T2Z PWR-7[D], TO T2Z PWR-8[D].
- TB-HUM:** 5 terminals. Connections include 24VAC FROM TT1 PWR-3[D], 24VAC FROM TT2 PWR-4[D], TO T2Z PWR-5[D], TO T2Z PWR-6[D], TO T2Z PWR-7[D].
- TB-CUST:** 6 terminals. Connections include 24VAC FROM TT1 PWR-3[D], 24VAC FROM TT2 PWR-4[D], TO T2Z PWR-5[D], TO T2Z PWR-6[D], TO T2Z PWR-7[D], TO T2Z PWR-8[D].

Notes:

- NOTE 9: 24VAC FROM TT1 PWR-3[D]
- NOTE 8: 24VAC FROM TT2 PWR-4[D]
- NOTE 7: 24VAC FROM TT3 PWR-5[D]
- NOTE 6: 24VAC FROM TT4 PWR-6[D]
- NOTE 5: 24VAC FROM TT5 PWR-7[D]
- NOTE 4: 24VAC FROM TT6 PWR-8[D]
- NOTE 3: 24VAC FROM TT7 PWR-9[D]
- NOTE 2: 24VAC FROM TT8 PWR-10[D]
- NOTE 1: 24VAC FROM TT9 PWR-11[D]

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387


388

389

390

391</

[illegible][illegible][illegible][illegible][illegible][illegible]

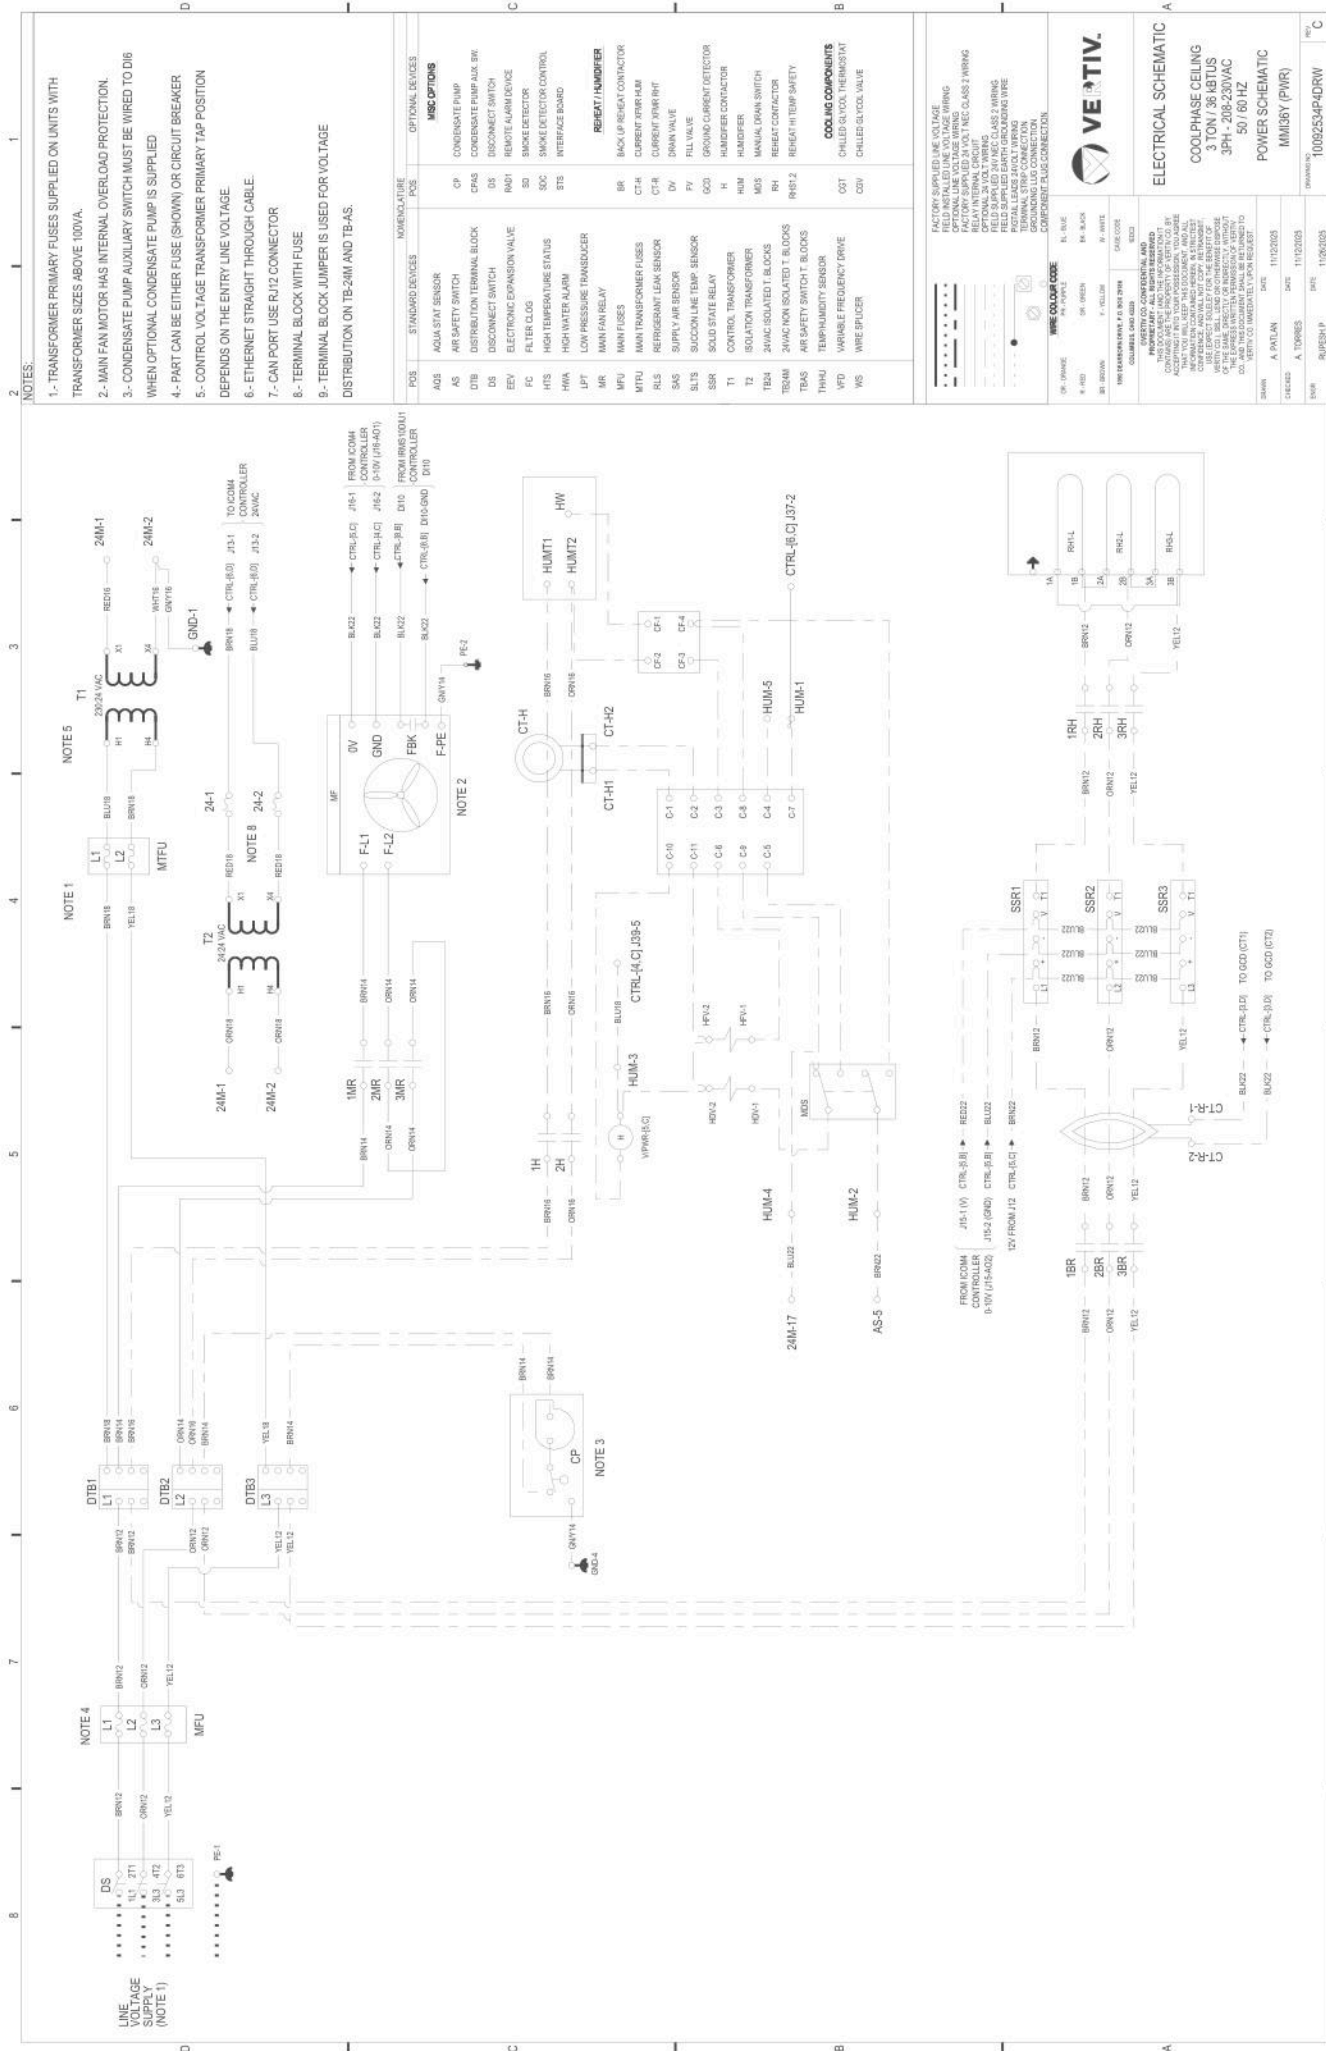

FACTORY SUPPLIED LINE VOLTAGE
INSTRUMENTS AND WIRING
OPTIONAL LINE VOLTAGE WIRING
FACTORY SUPPLIED 24 VOLT 1 CLASS 2 WIRING
RELAY INTERNAL CIRCUIT
RELAY EXTERNAL CIRCUIT
FIELD SUPPLIED 24 VOLT 1 CLASS 2 WIRING
FIELD SUPPLIED EARTH GROUNDING WIRE
PIGTAIL LEADS 24 VOLT WIRING
TERMINAL STRIP CONNECTION
CONNECTION TO FIELD SUPPLIED
COMPONENT PLUG CONNECTION

WIRE COLOUR CODE			DATE CODE
GR - GRAY	BL - BLUE		
PK - PINK	BL - BLACK		
R - RED	GR - GREEN		
BR - BROWN	Y - YELLOW		
WIRE TERMINATION (W/T) P. 9-3.218			

[illegible]

2

NOTES:

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465

466

467

468

469

470

471

472

473

474

475

476

477

478

479

480

481

482

483

484

485

486

487

488

489

490

491

492

493

494

495

496

497

498

499

500

501

502

503

504

505

506

507

508

509

510

511

512

513

514

515

516

517

518

519

520

521

5

- [illegible]

[illegible][illegible][illegible][illegible][illegible]

2 1

NOTES:

4. PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER




4 - PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER

4 - PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER

4 - PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER

4 - PART CAN BE EITHER FUSE (SHOWN) OR CIRCUIT BREAKER

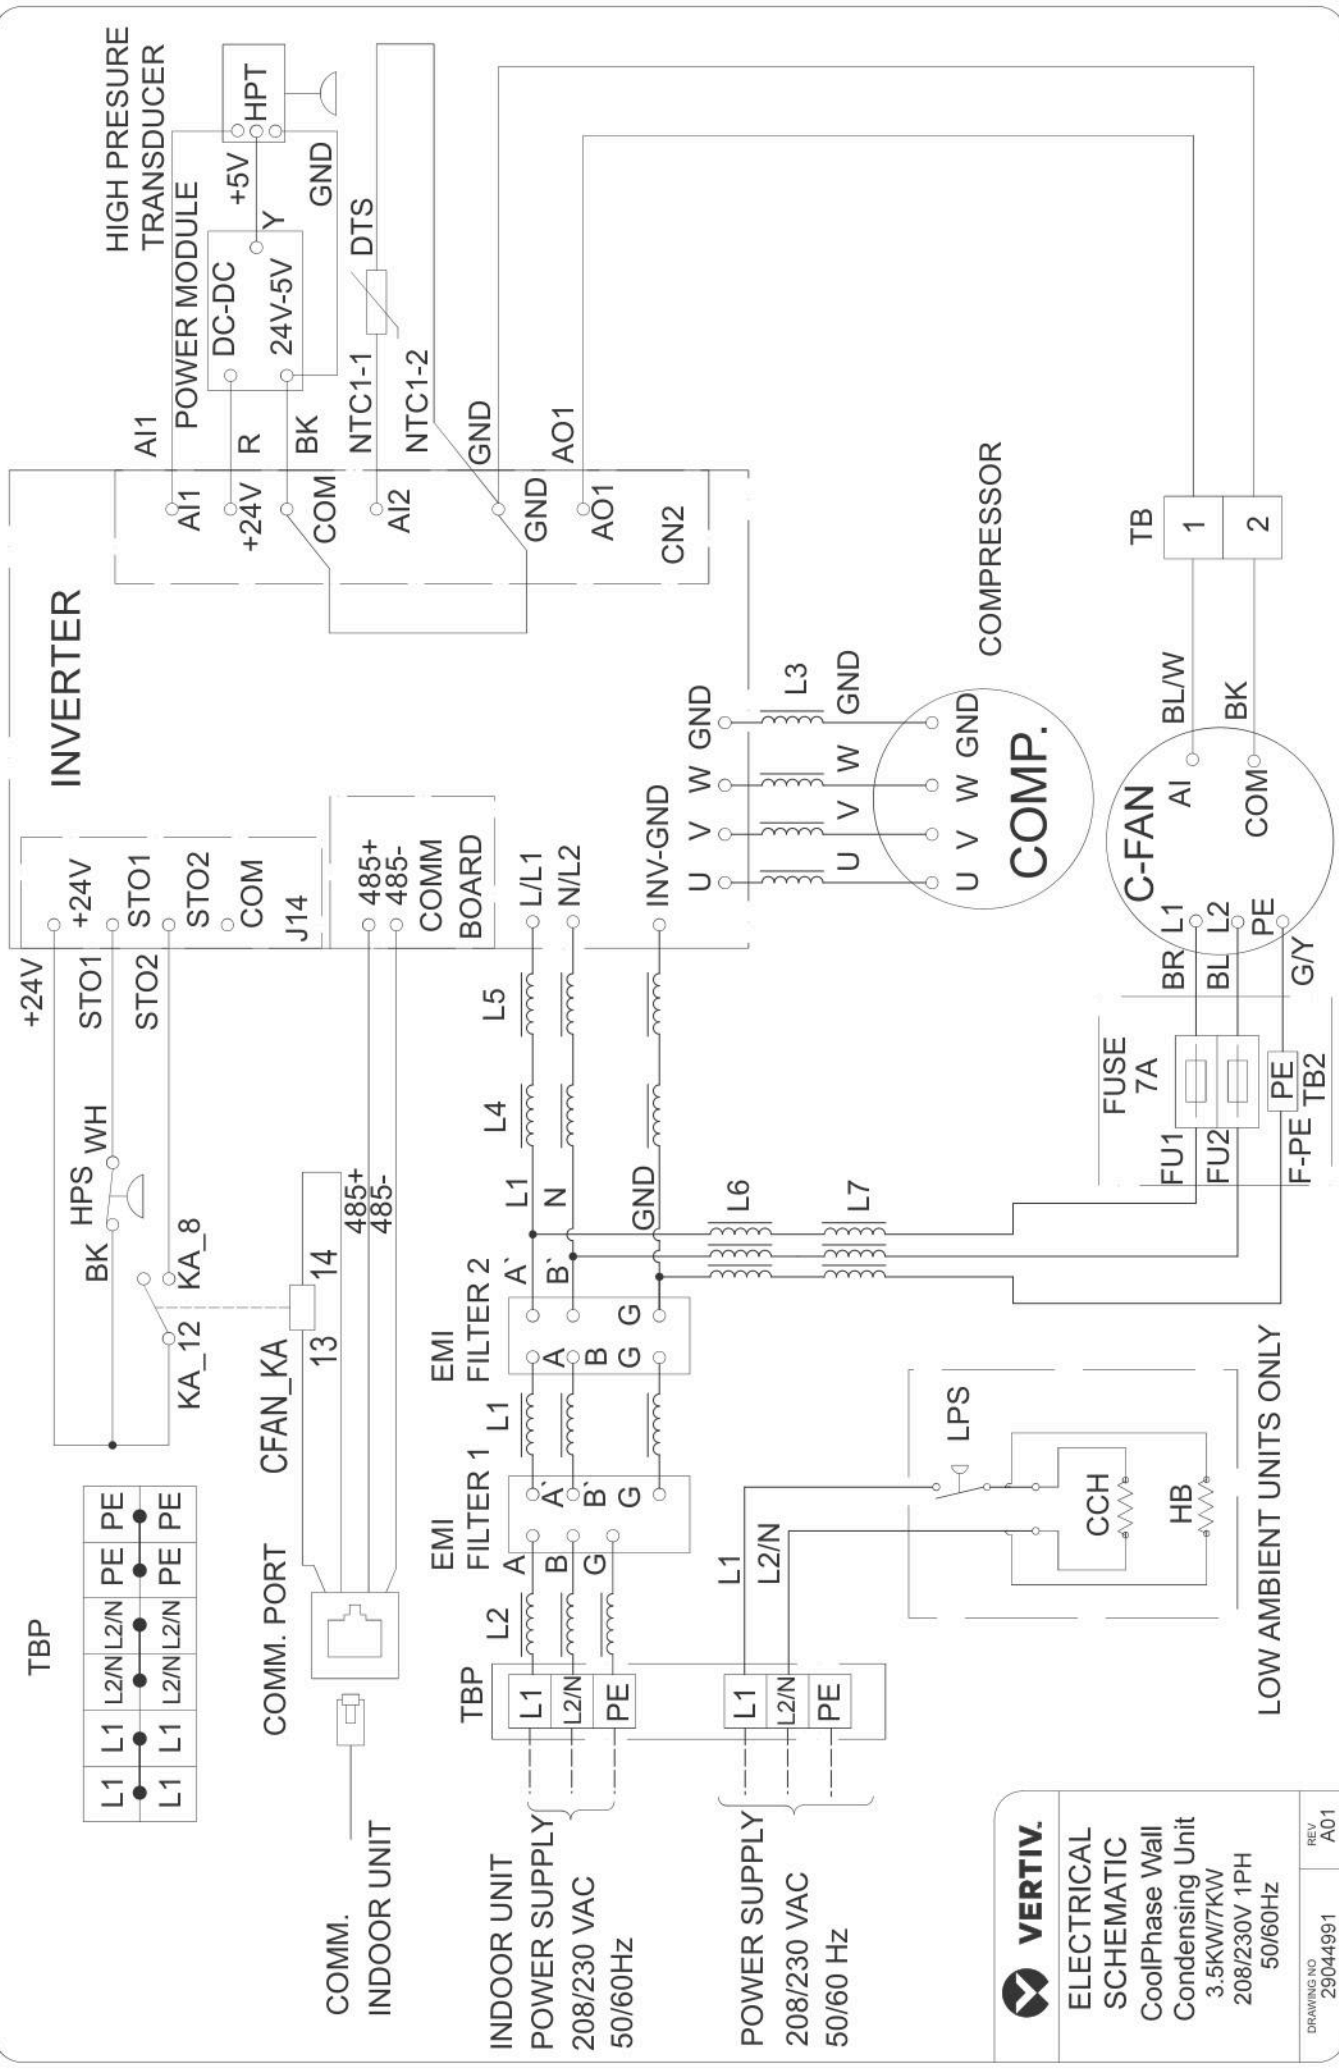

ELECTRICAL SCHEMATIC
CoolPhase Wall Condensing Unit
3.5KW/7KW
208/230V 1PH
50/60Hz

DRAWING NO
29044991



REV
A01




TBP






COMM.
INDOOR UNIT

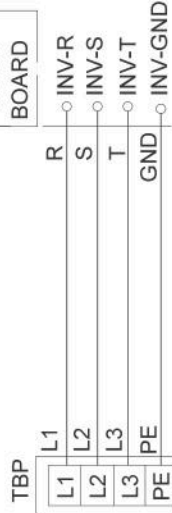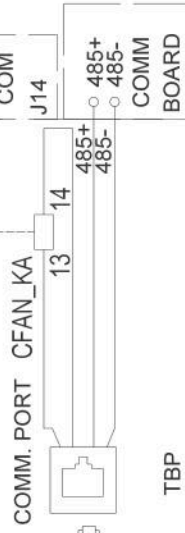

INVERTER

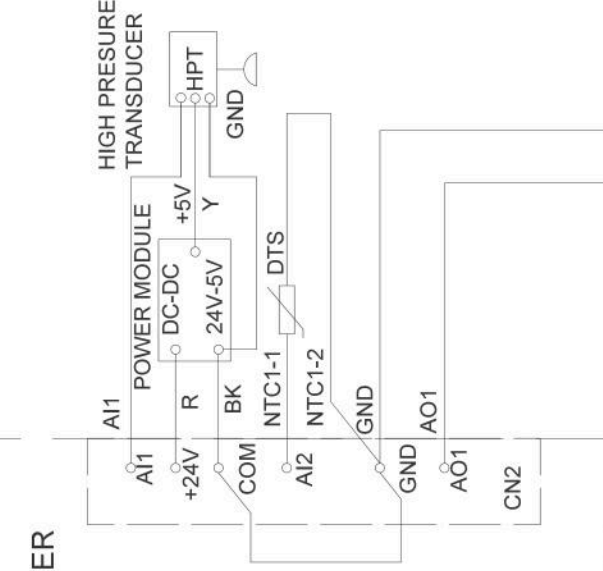

U V W GND

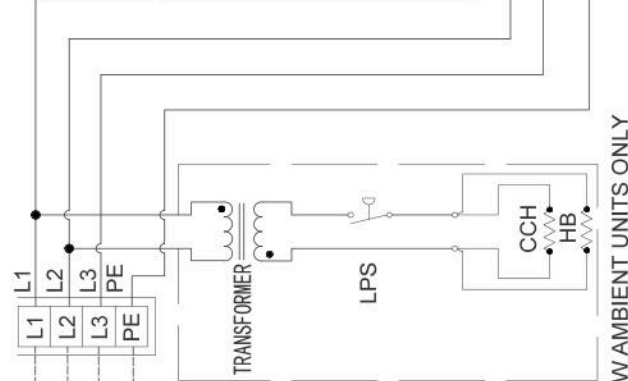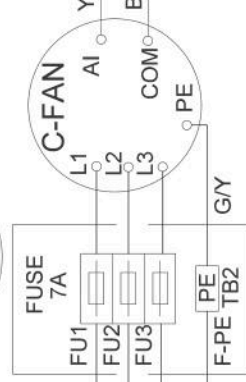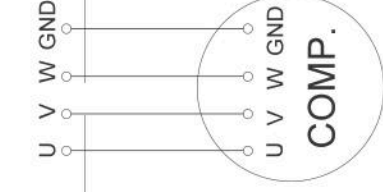


POWER SUPPLY
460 VAC
60 Hz





ELECTRICAL
SCHEMATIC
CoolPhase
Condensing Unit
11KW
460V 3PH
60Hz

DRAWING NO
29045791


REV
A01

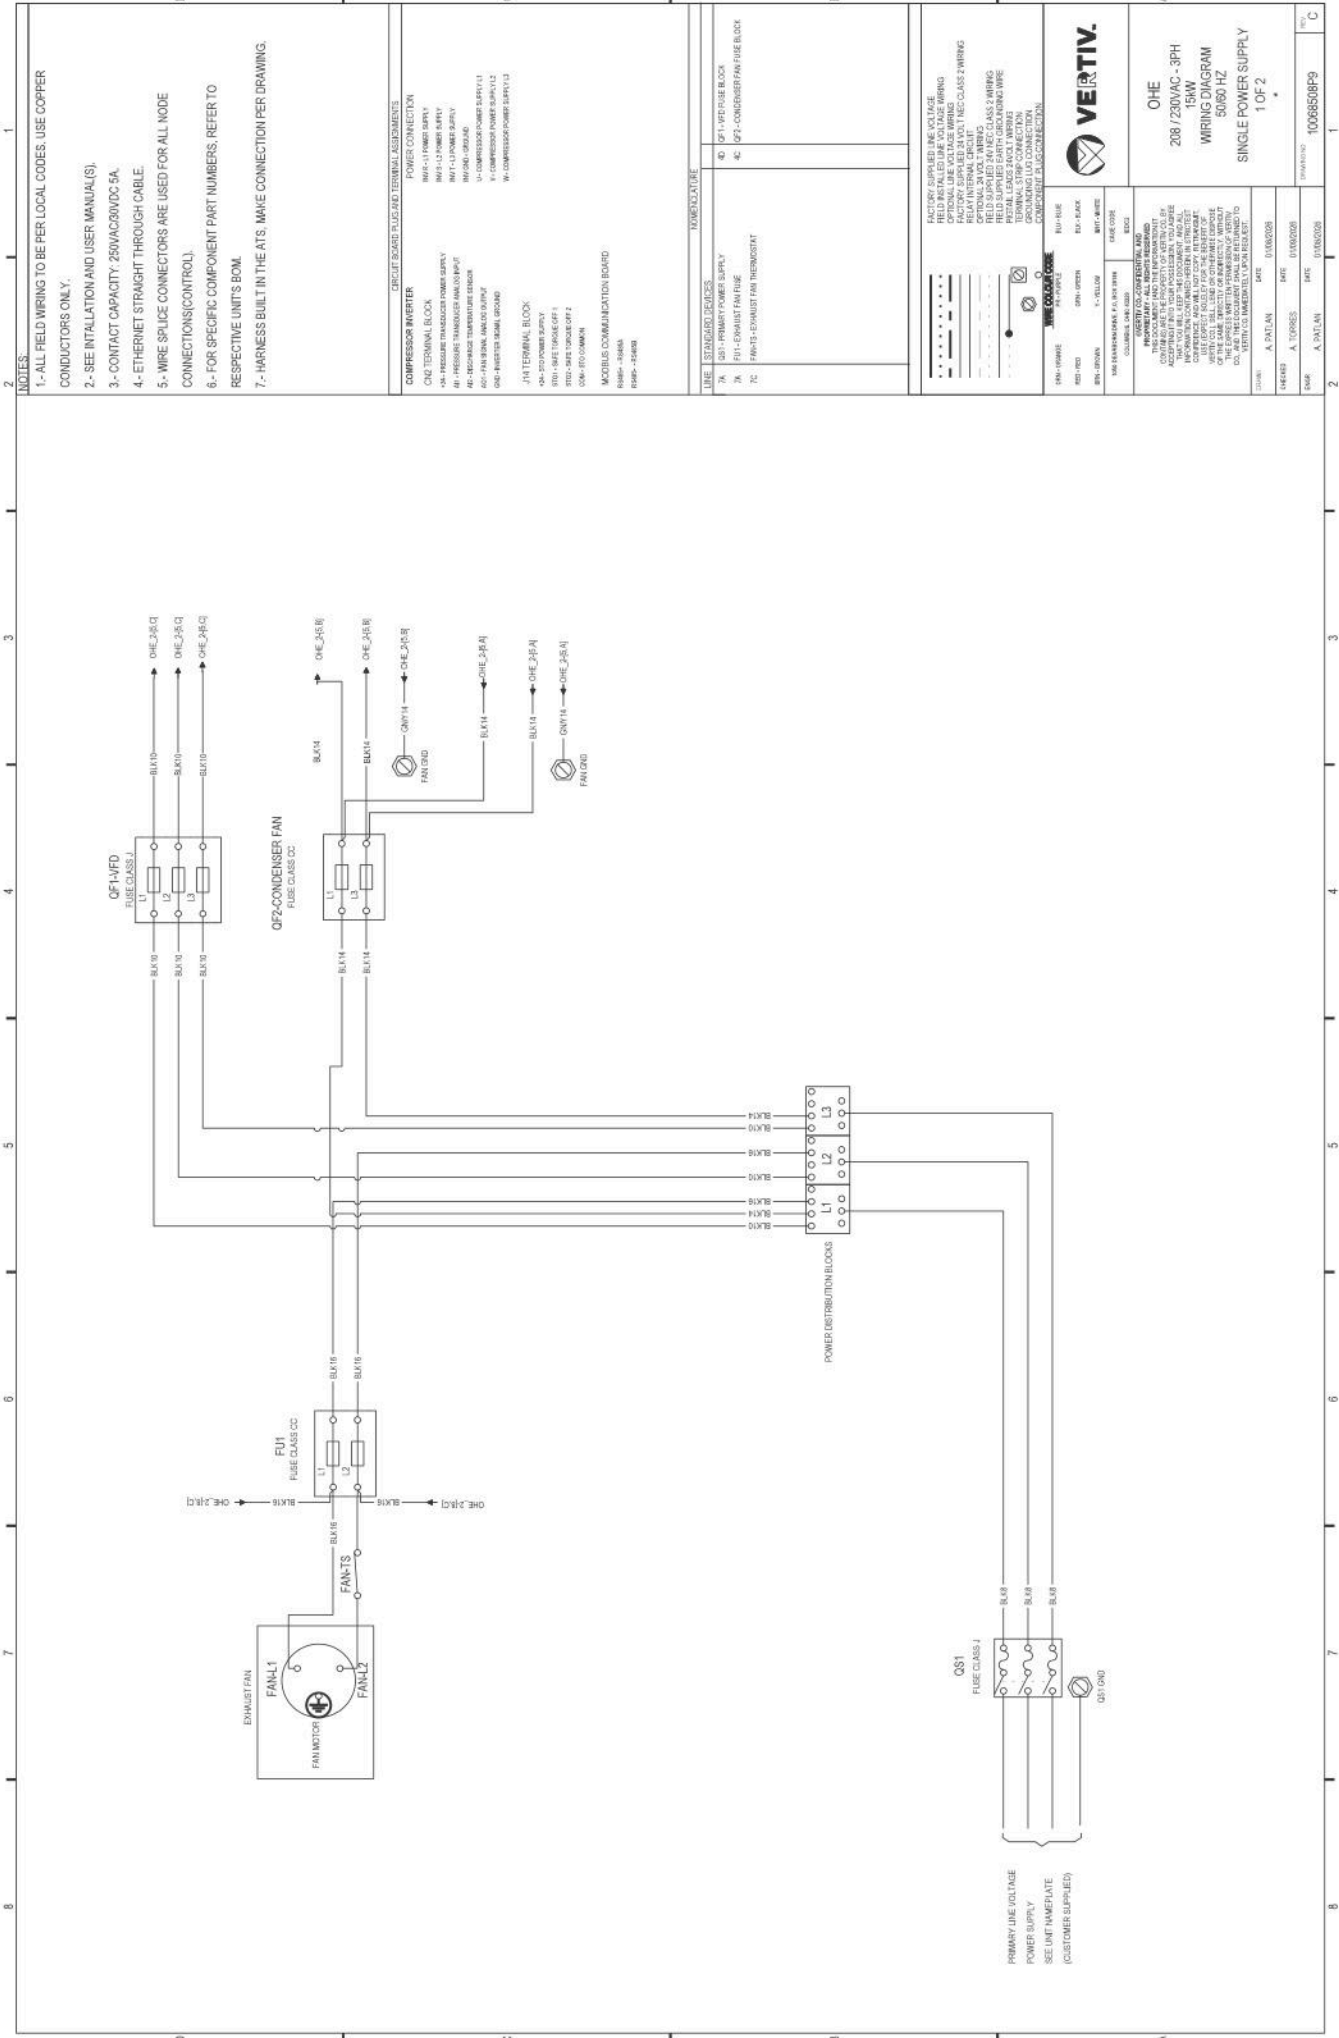

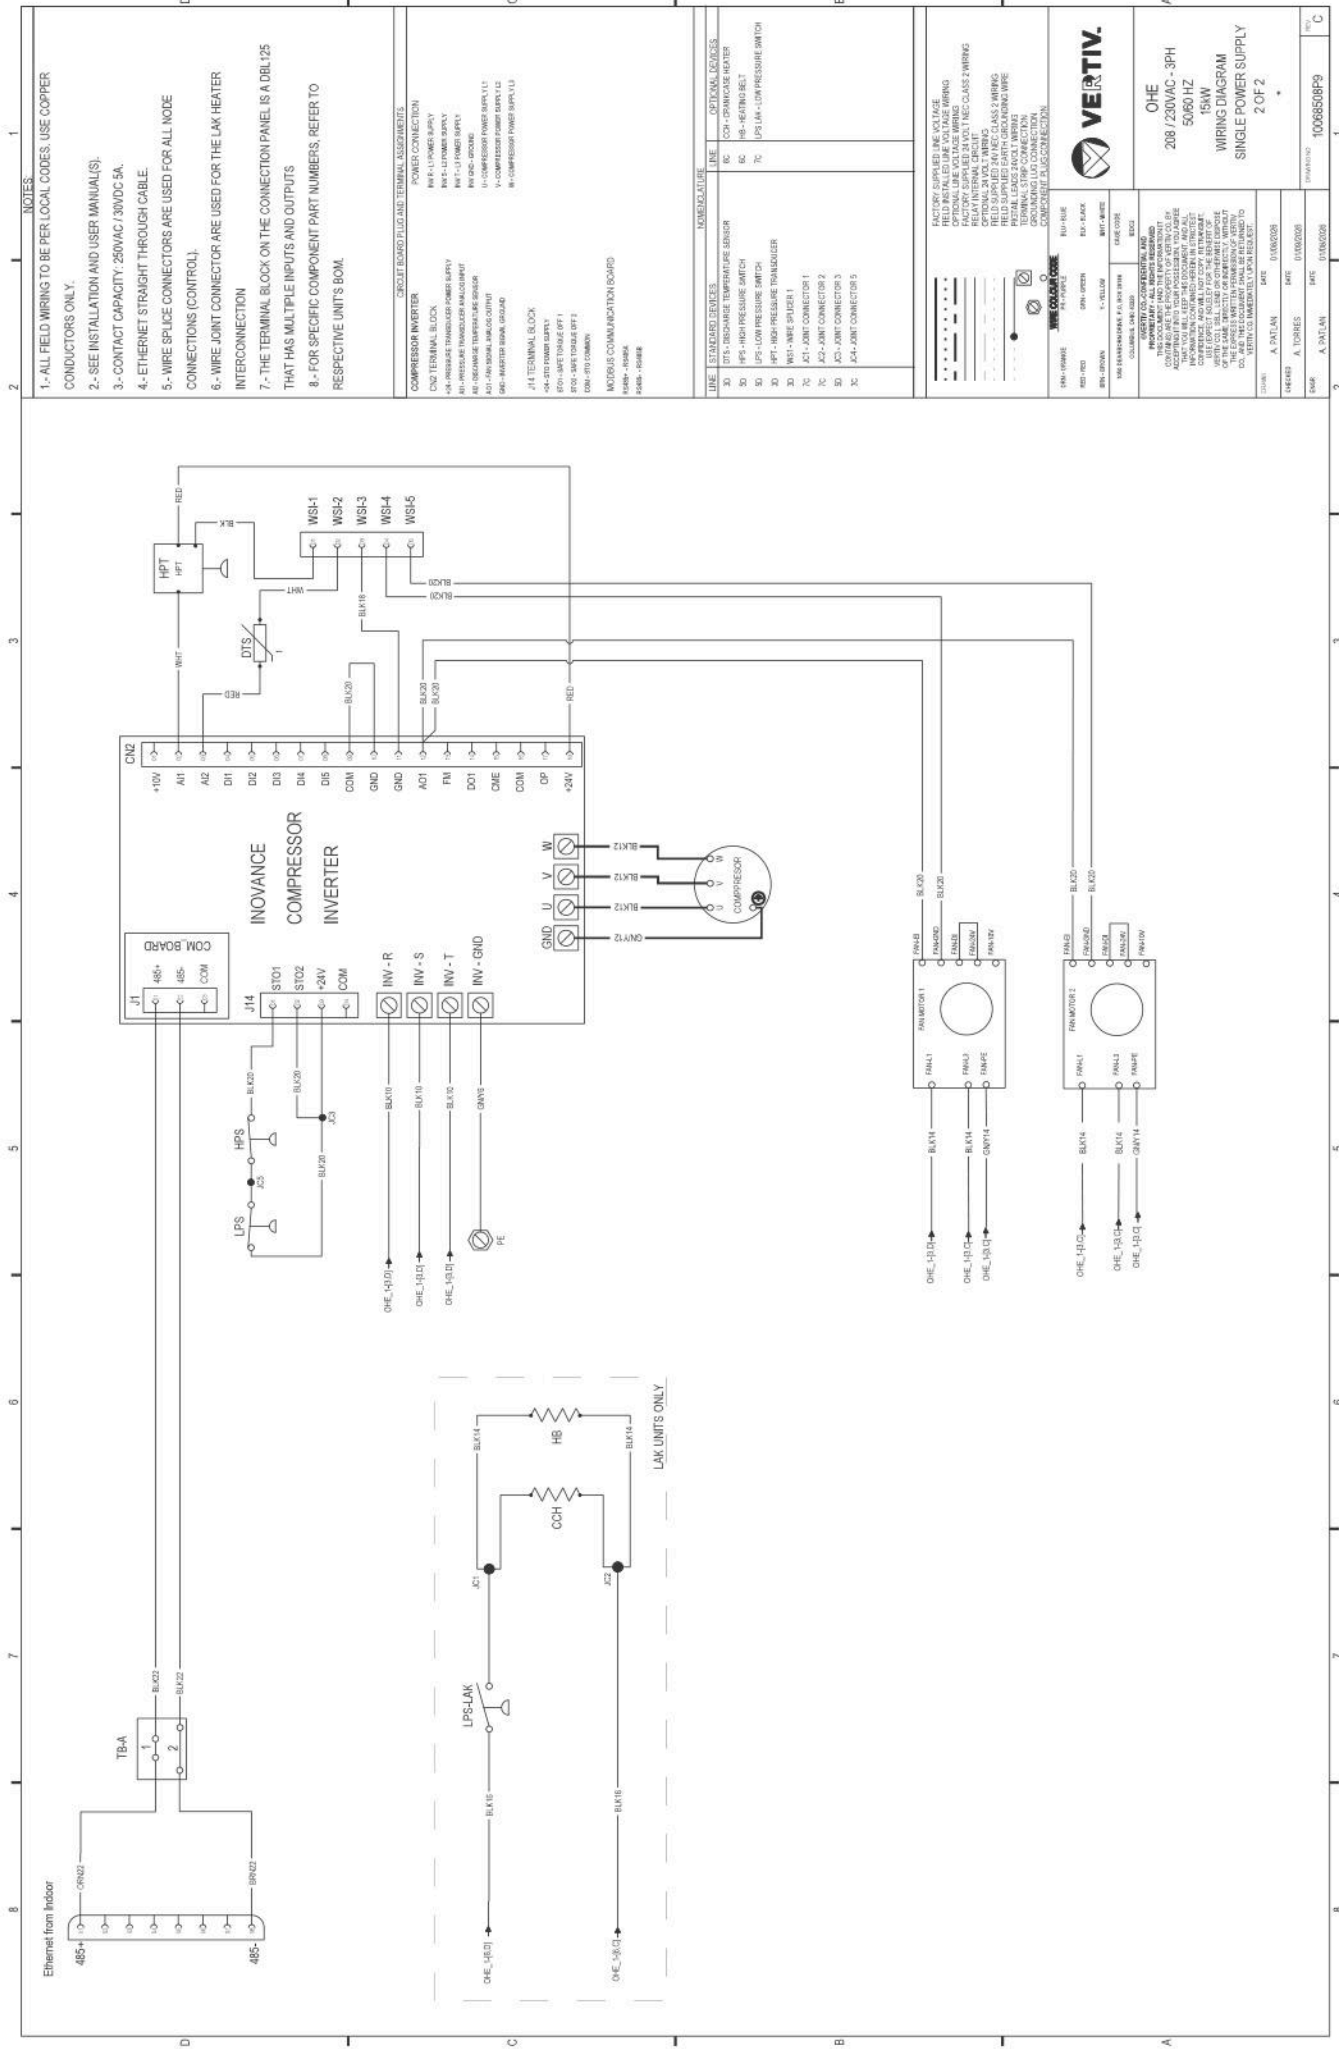

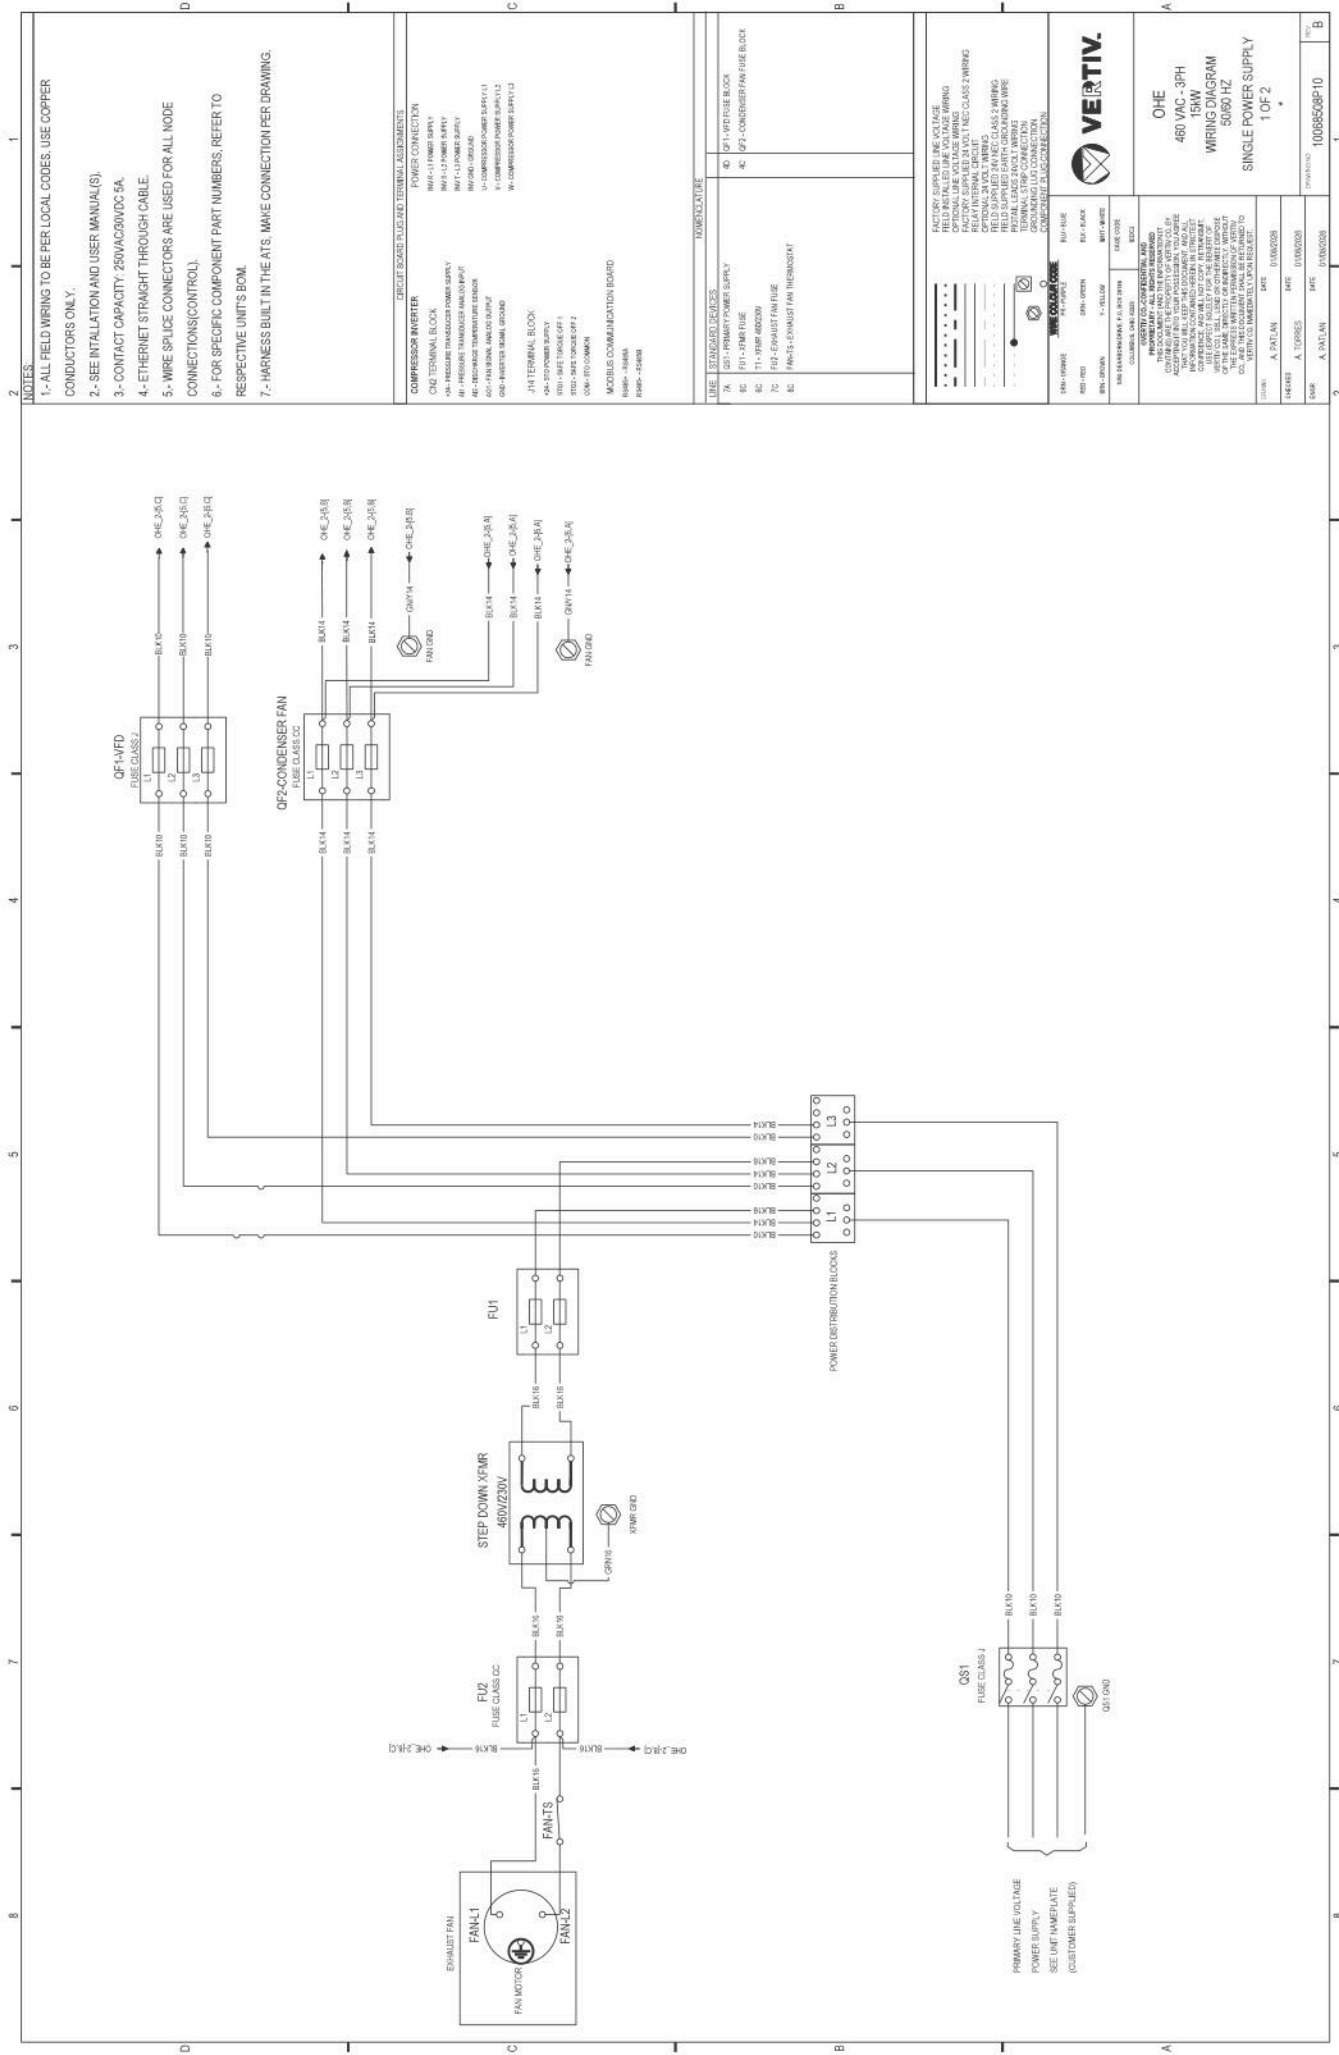[illegible]

Ethernet from Indoor

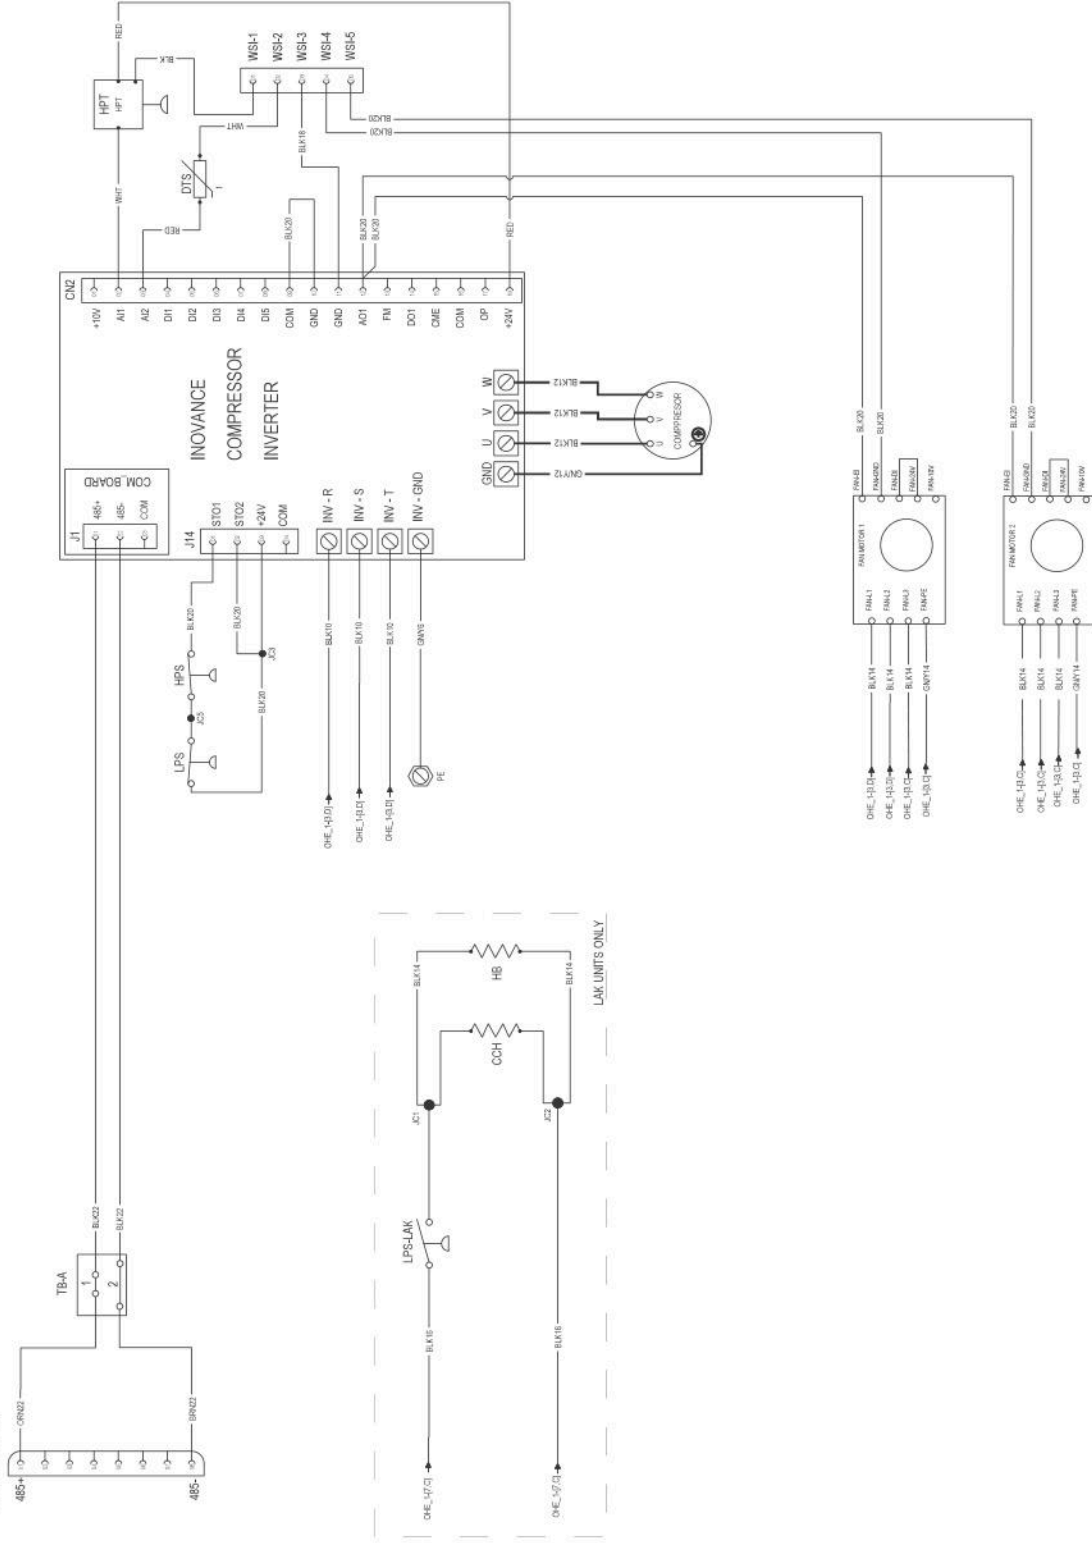

NOTES

- 1.- ALL FIELD WIRING TO BE PER LOCAL CODES. USE COPPER CONDUCTORS ONLY.
- 2.- SEE INSTALLATION AND USER MANUAL(S).
- 3.- CONTACT CAPACITY: 250VAC / 30VDC 5A.
- 4.- ETHERNET STRAIGHT THROUGH CABLE.
- 5.- WIRE SPLICE CONNECTORS ARE USED FOR ALL NODE CONNECTIONS (CONTROL).
- 6.- WIRE JOINT CONNECTOR ARE USED FOR THE LAK HEATER INTERCONNECTION
- 7.- THE TERMINAL BLOCK ON THE CONNECTION PANEL IS A DRL 25 THAT HAS MULTIPLE INPUTS AND OUTPUTS
- 8.- FOR SPECIFIC COMPONENT PART NUMBERS, REFER TO RESPECTIVE UNIT'S BOM.

CIRCUIT BOARD J1 AND TERMINAL ASSIGNMENTS

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER

COMPRESSION INVERTER




COMPRESSION INVERTER


COMPRESSION INVERTER


COMPRESSION INVERTER


COMPRESSION INVERTER


COMPRESSION INVERTER

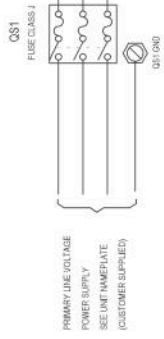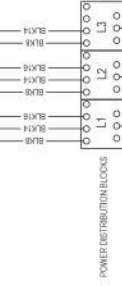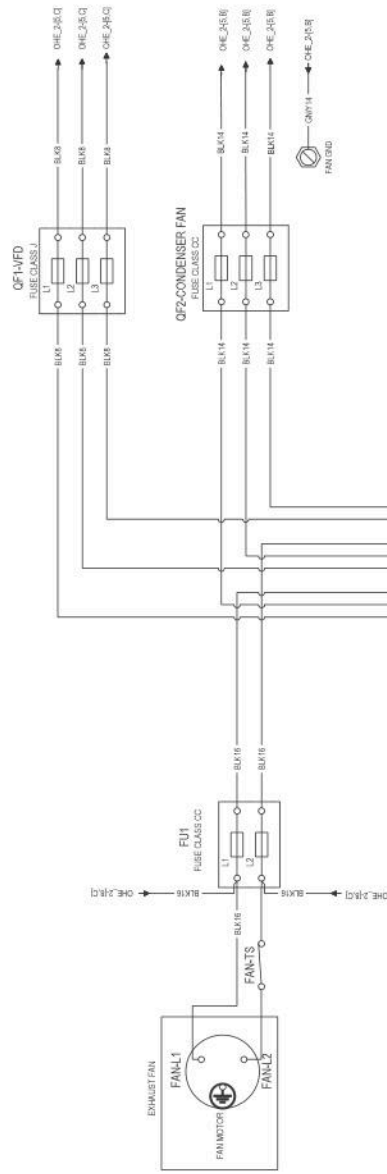
[illegible]

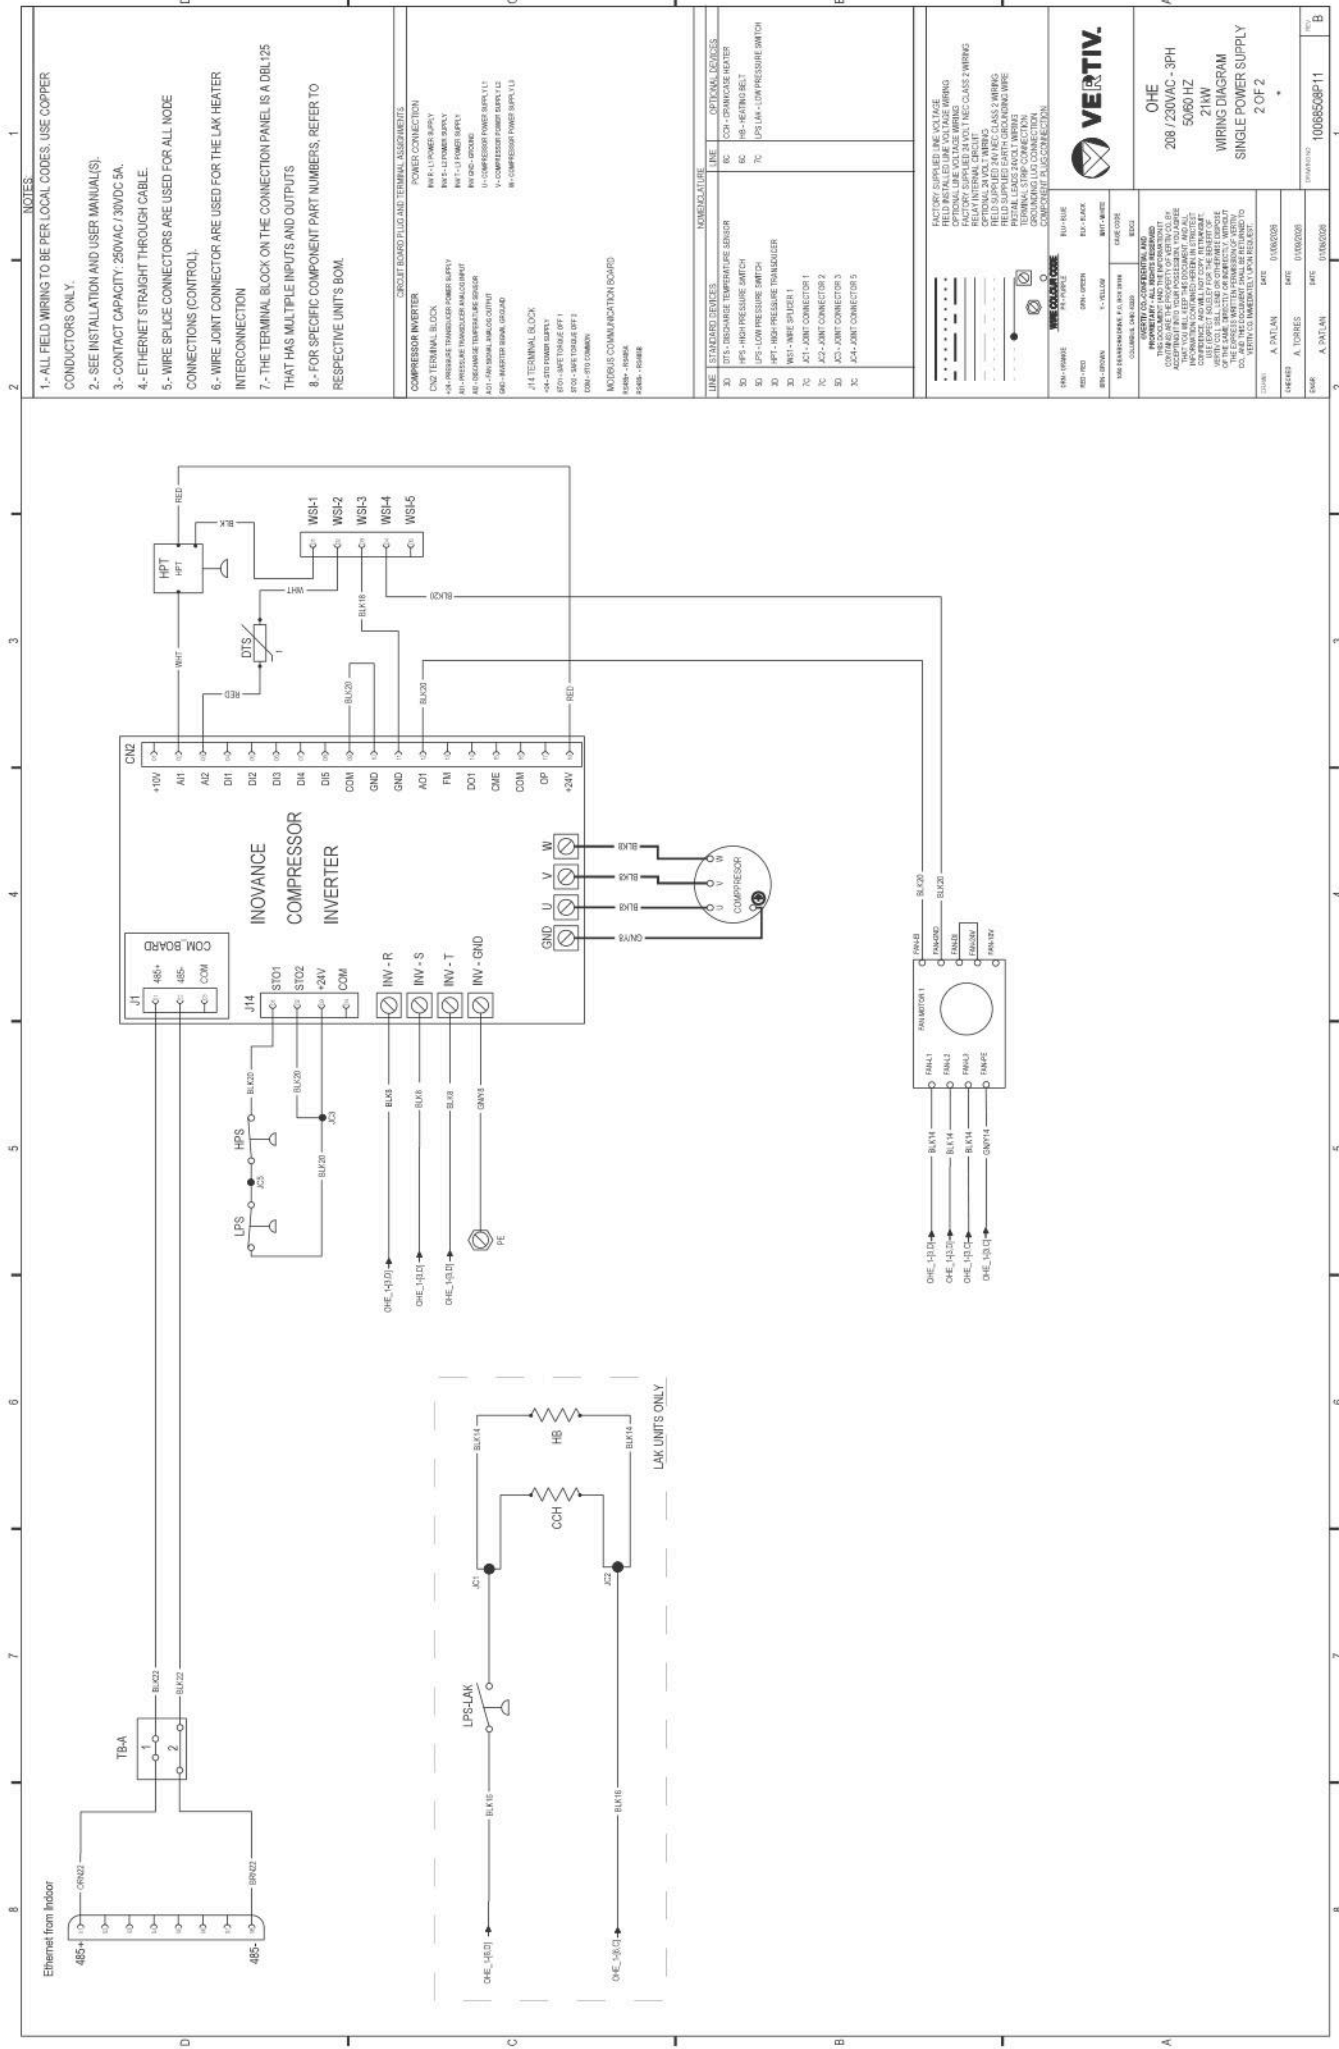

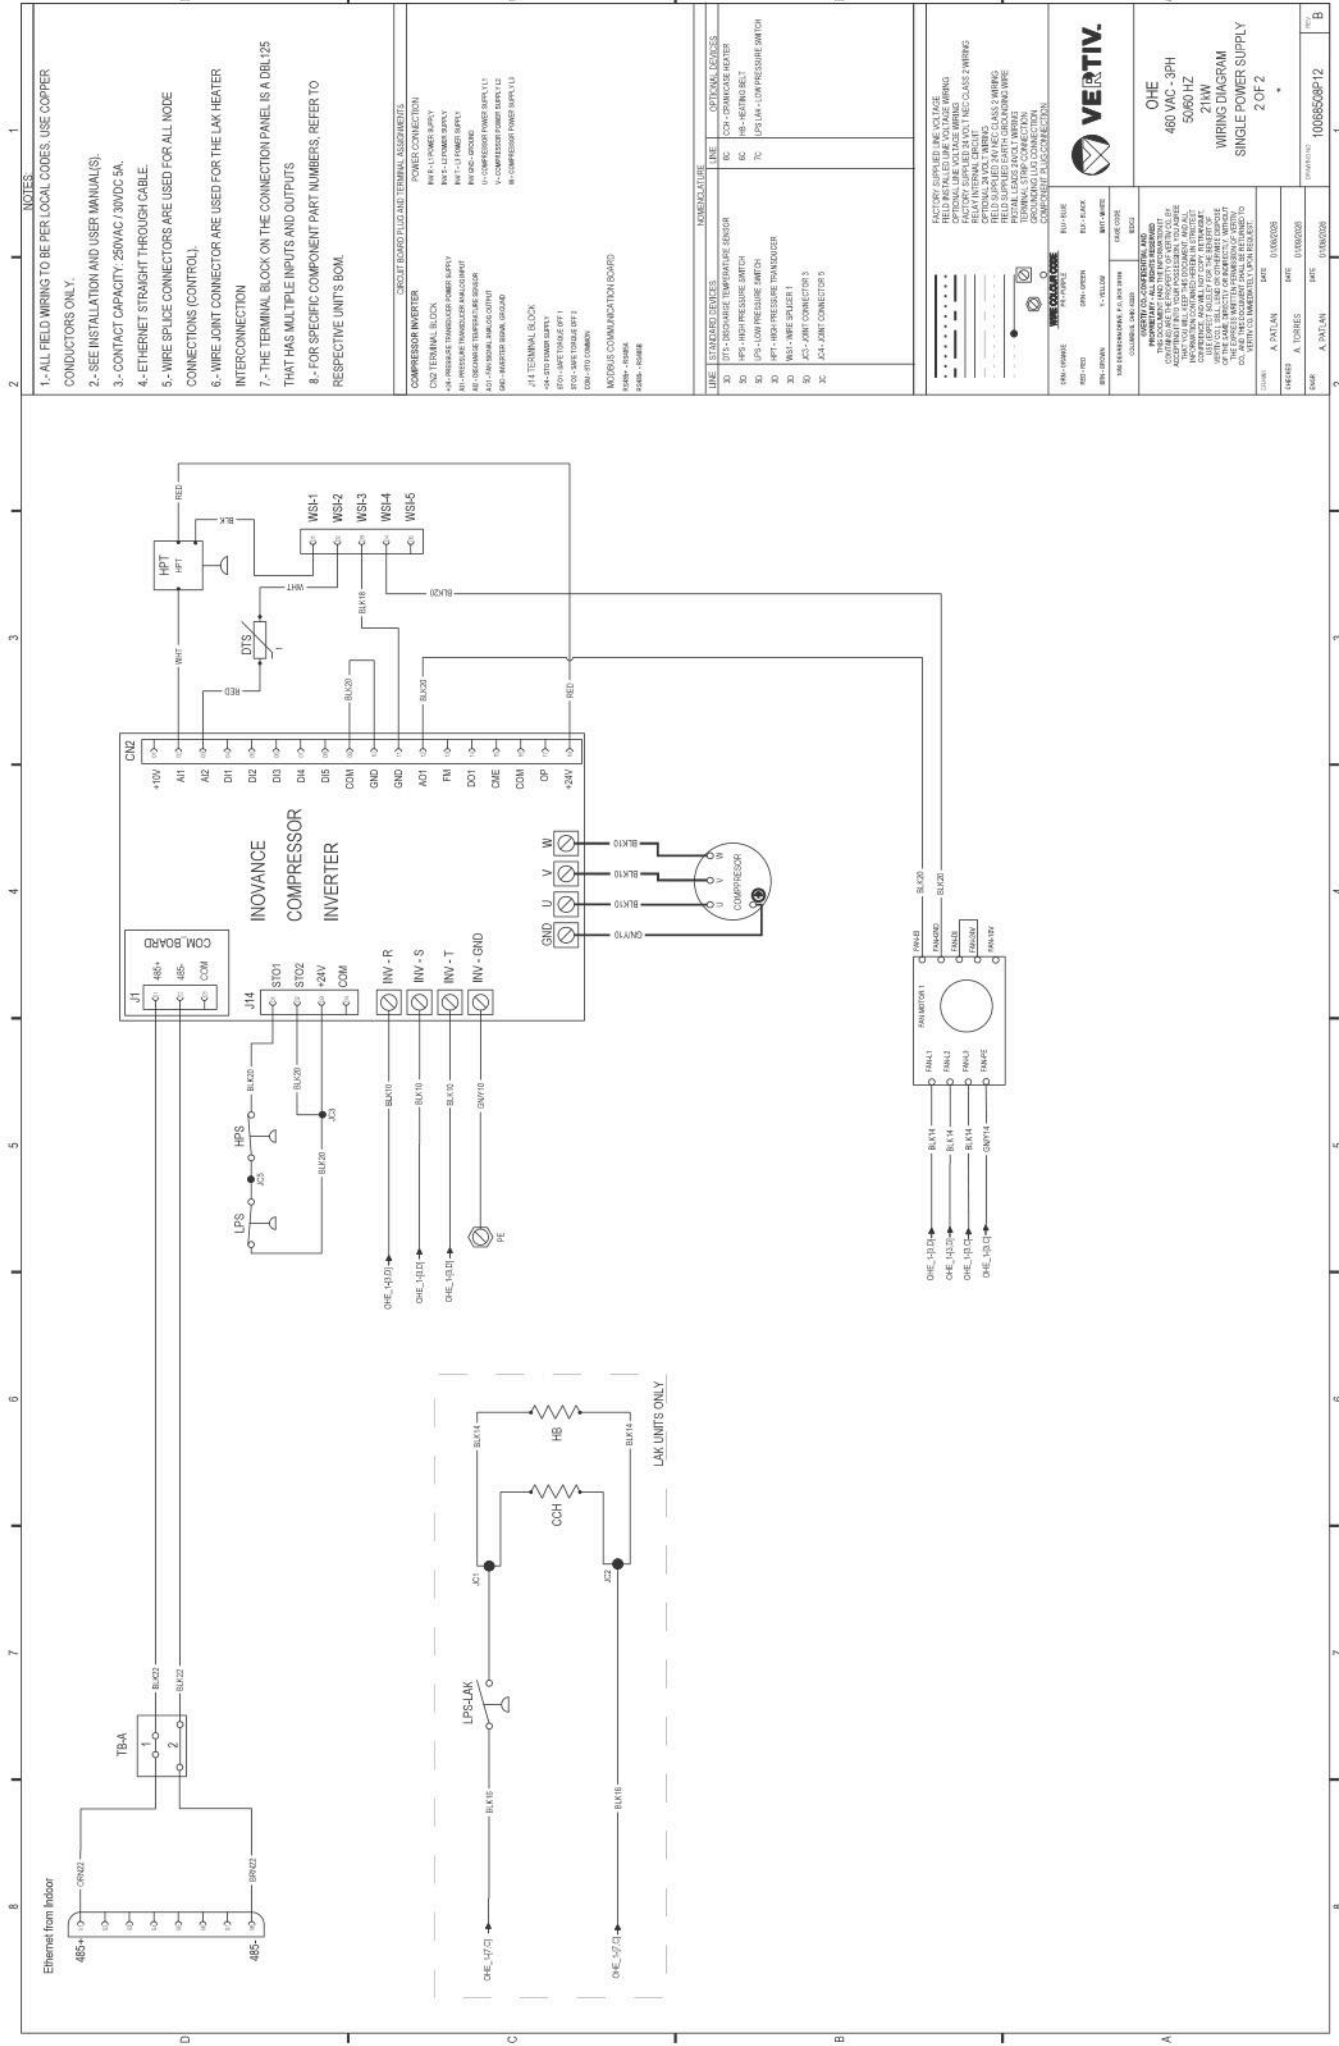


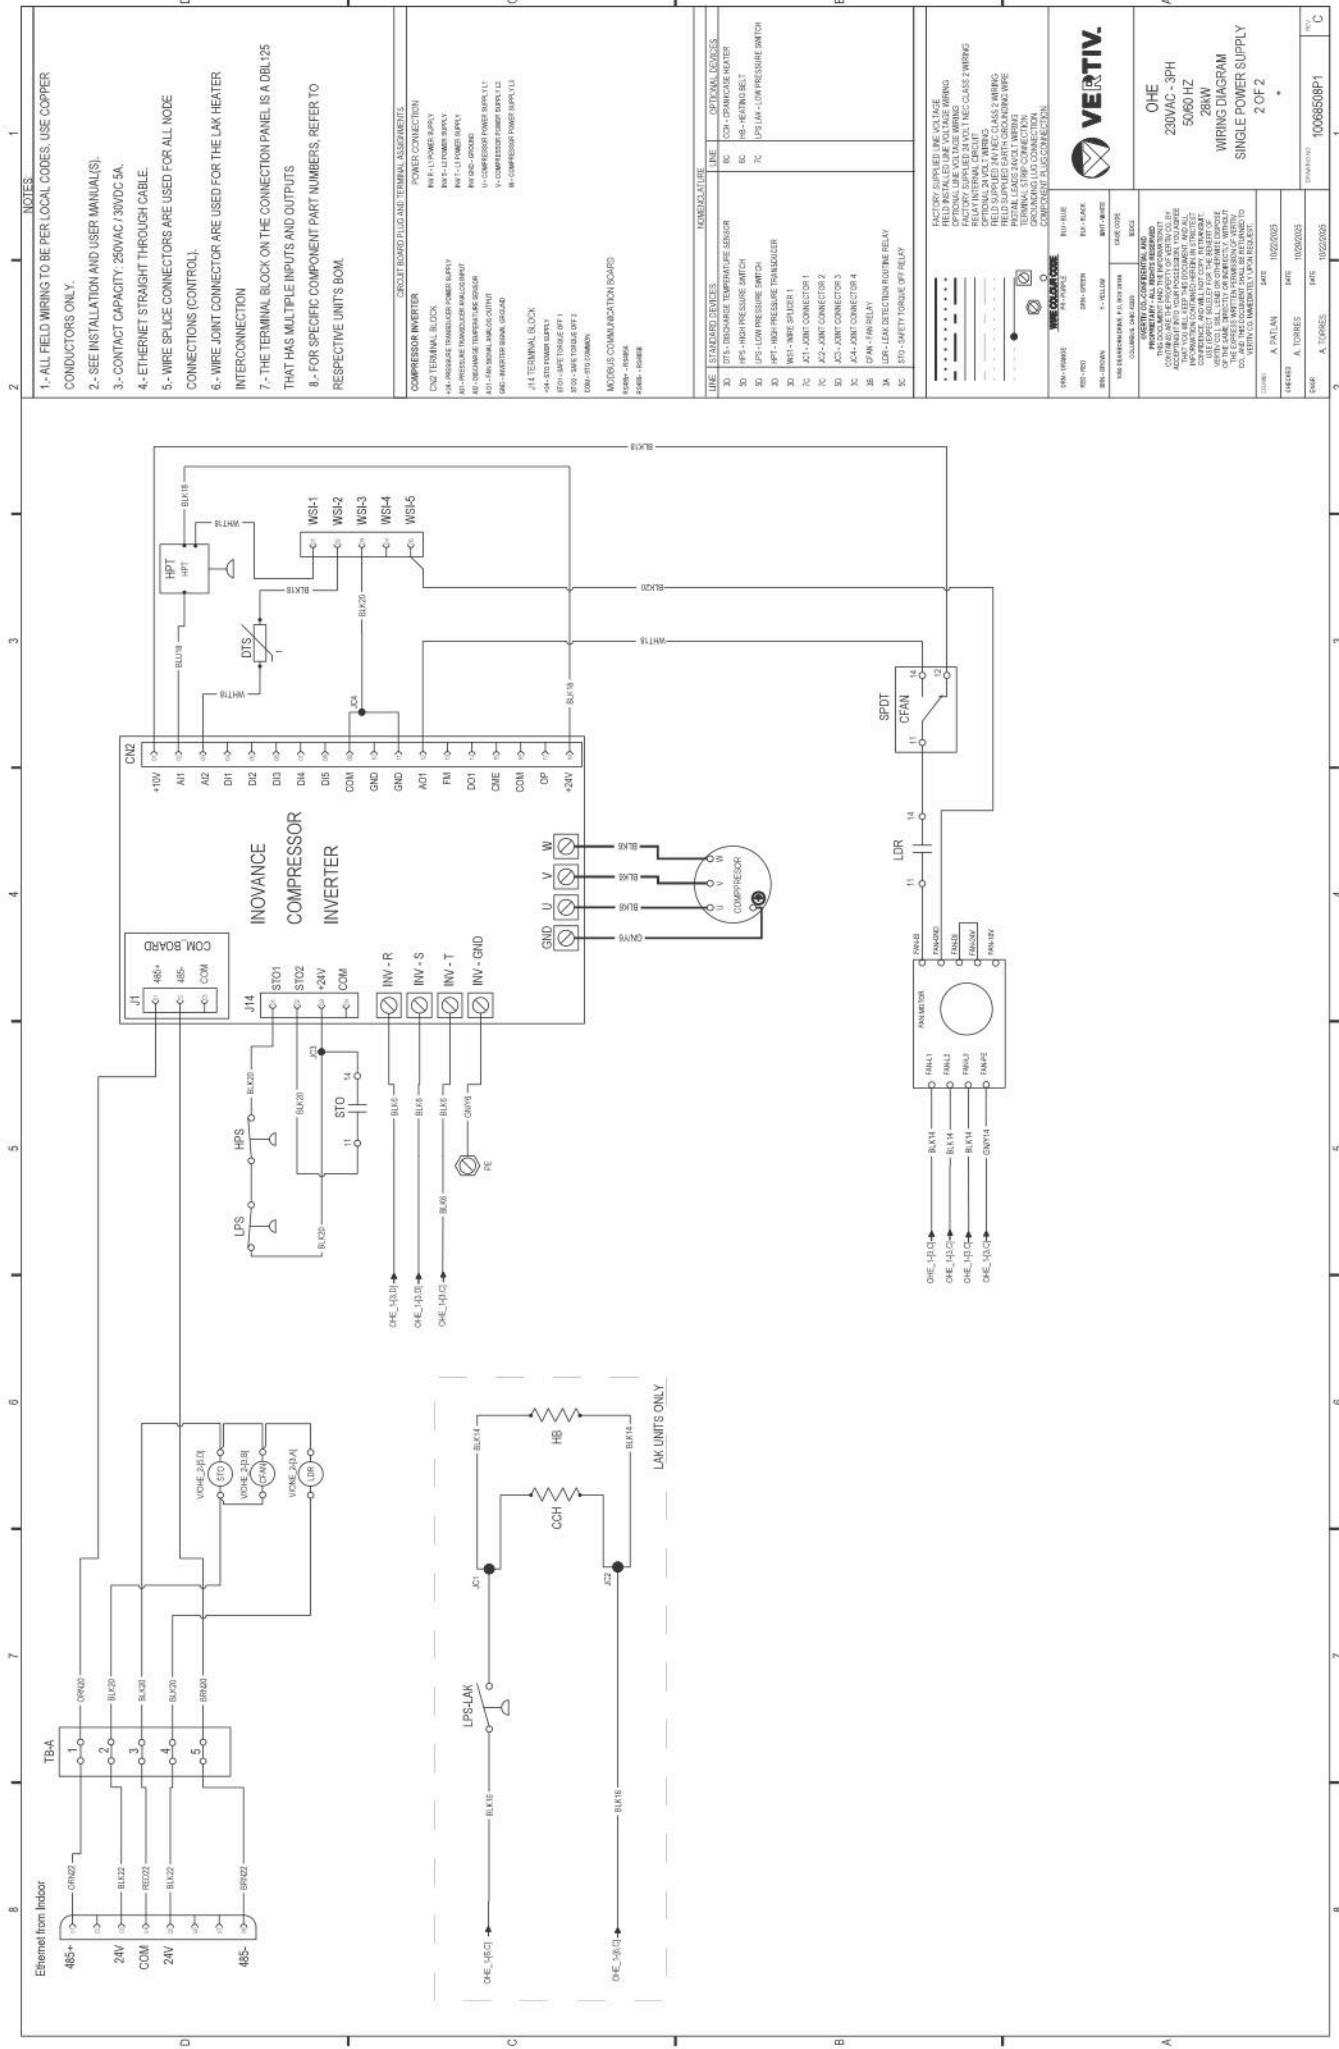
[illegible]

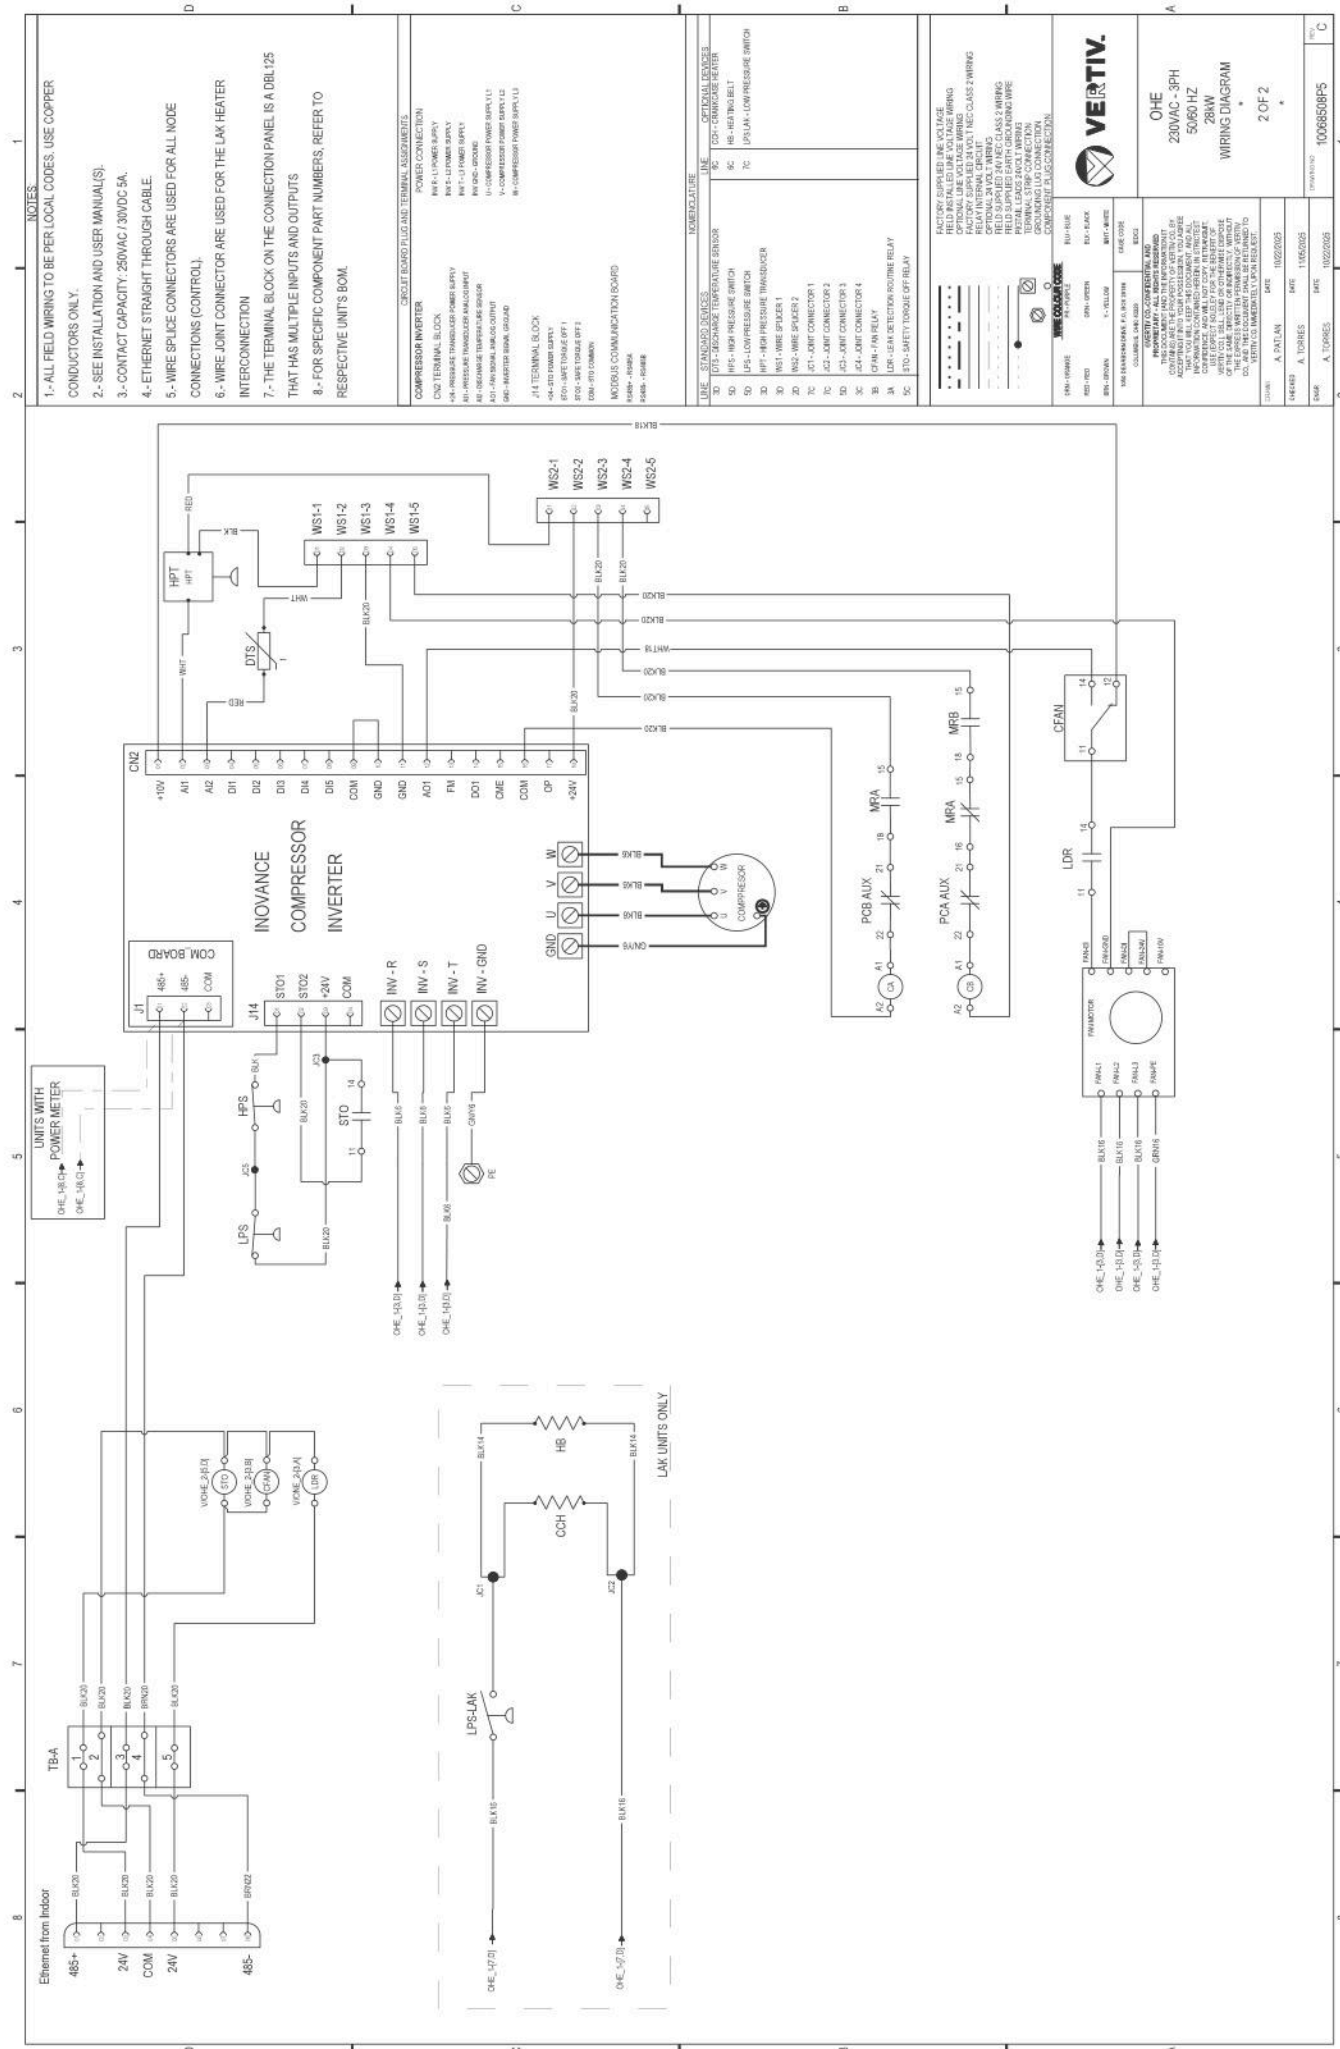

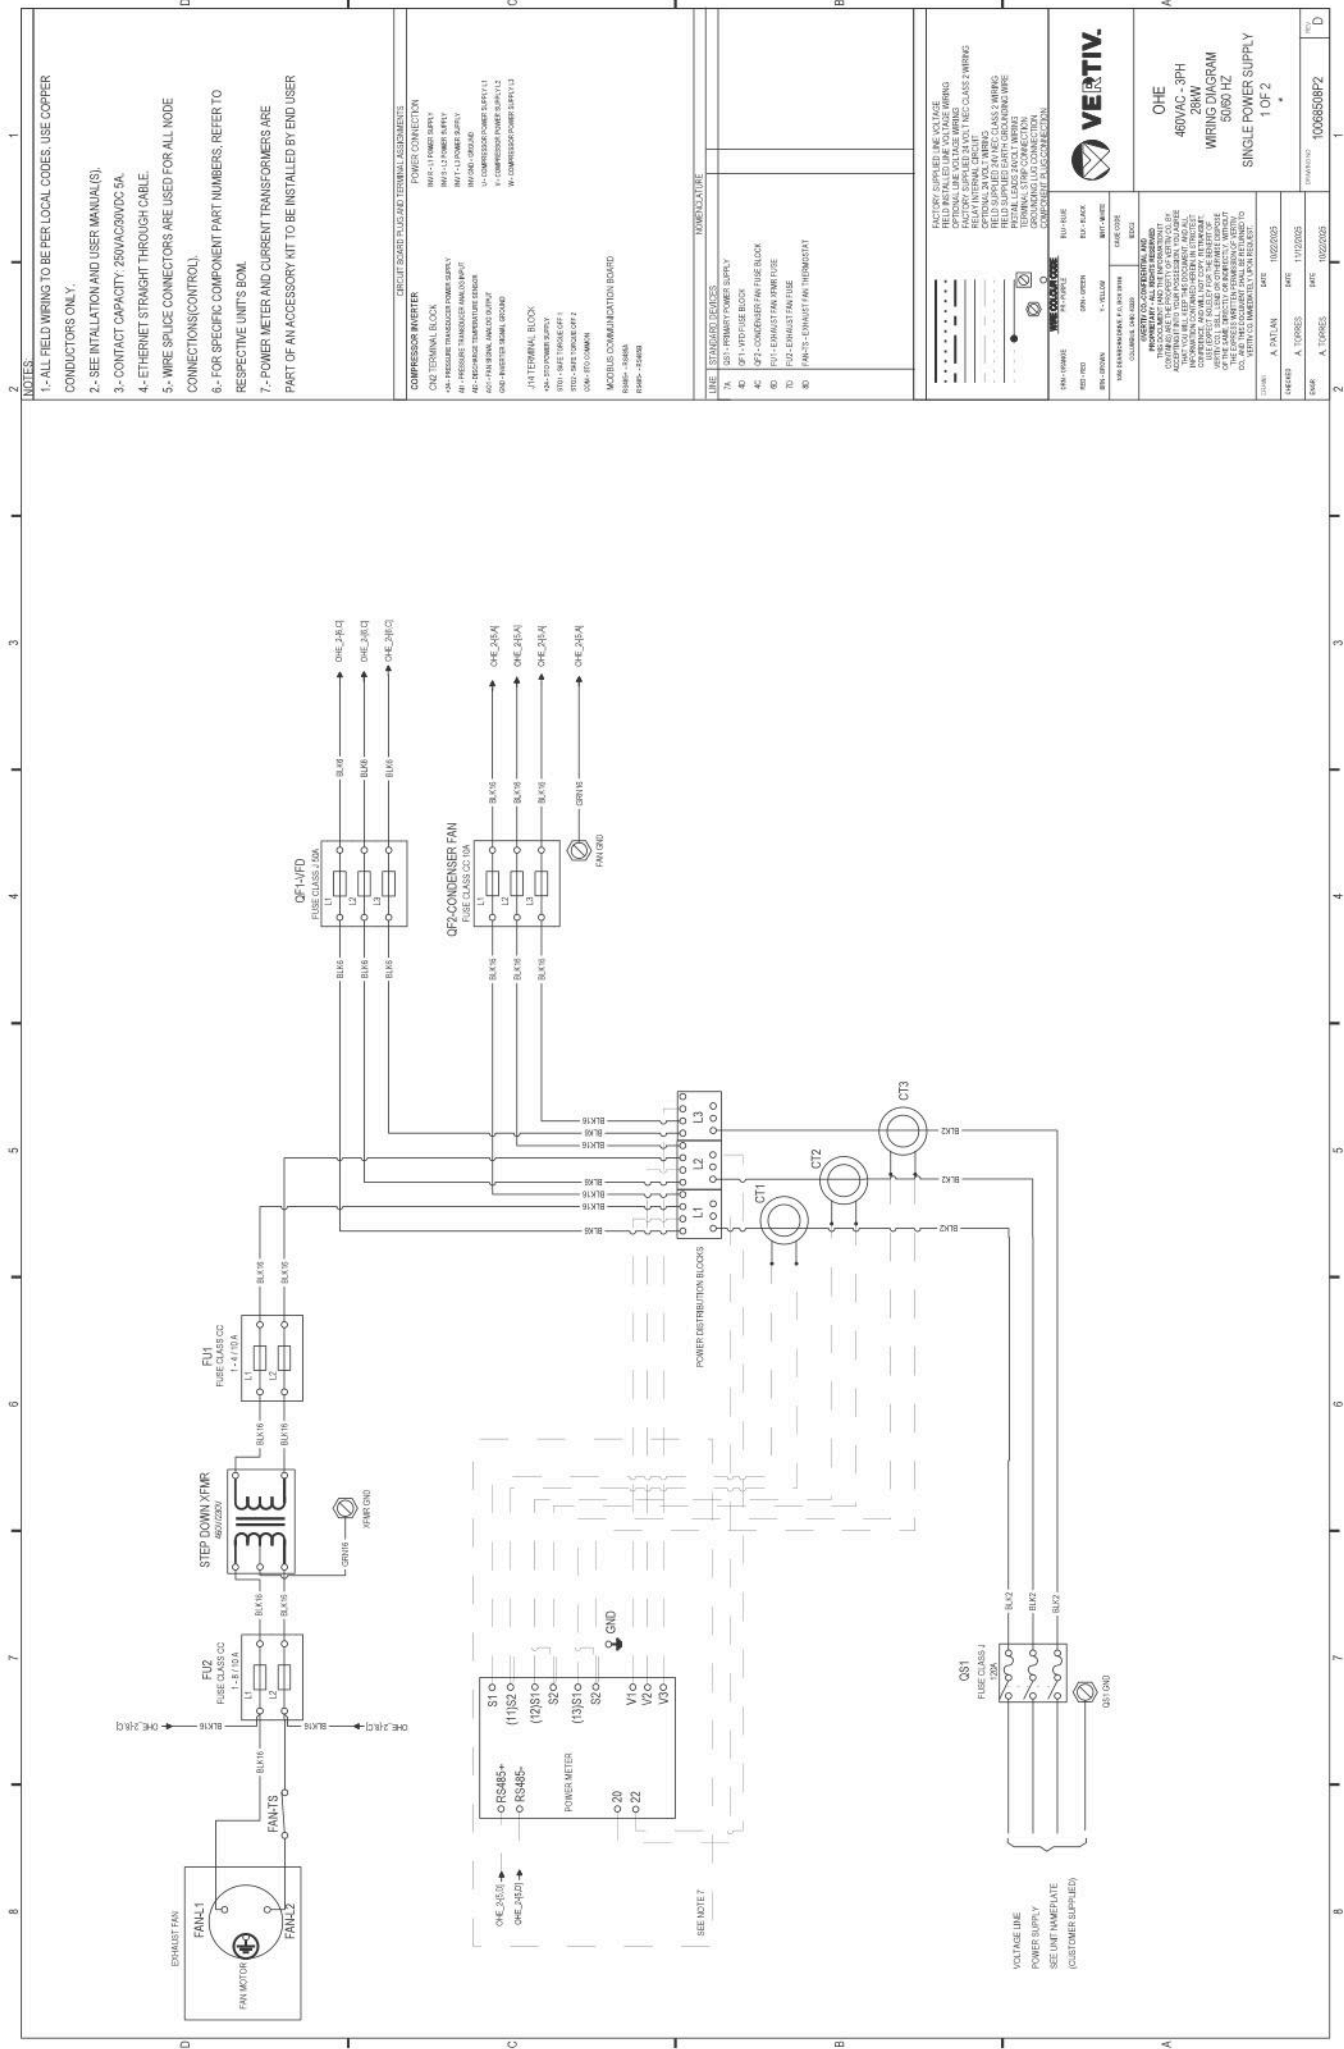

NOTES:		1
1.- ALL FIELD WIRING TO BE PER LOCAL CODES, USE COPPER CONDUCTORS ONLY.		
2.- SEE INTALATION AND USER MANUAL(S).		
3.- CONTACT CAPACITY: 250VAC/50DC 5A.		
4.- ETHERNET STRAIGHT THROUGH CABLE.		
5.- WIRE SPLICE CONNECTORS ARE USED FOR ALL NODE CONNECTIONS(CONTROL).		
6.- FOR SPECIFIC COMPONENT PART NUMBERS, REFER TO RESPECTIVE UNIT'S BOM.		
7.- POWER METER AND CURRENT TRANSFORMERS ARE PART OF AN ACCESSORY KIT TO BE INSTALLED BY END USER		
CHECK BOARD FUSED AND TERMINAL ASSIGNMENTS		
COMPRESSOR INVERTER		
C/O TERMINAL BLOCK		
W-1-1 FUSED SUPPLY		
W-1-2 FUSED SUPPLY		
W-1-3 FUSED SUPPLY		
W-1-4 FUSED SUPPLY		
W-1-5 FUSED SUPPLY		
W-1-6 FUSED SUPPLY		
W-1-7 FUSED SUPPLY		
W-1-8 FUSED SUPPLY		
W-1-9 FUSED SUPPLY		
W-1-10 FUSED SUPPLY		
W-1-11 FUSED SUPPLY		
W-1-12 FUSED SUPPLY		
W-1-13 FUSED SUPPLY		
W-1-14 FUSED SUPPLY		
W-1-15 FUSED SUPPLY		
W-1-16 FUSED SUPPLY		
W-1-17 FUSED SUPPLY		
W-1-18 FUSED SUPPLY		
W-1-19 FUSED SUPPLY		
W-1-20 FUSED SUPPLY		
W-1-21 FUSED SUPPLY		
W-1-22 FUSED SUPPLY		
W-1-23 FUSED SUPPLY		
W-1-24 FUSED SUPPLY		
W-1-25 FUSED SUPPLY		
W-1-26 FUSED SUPPLY		
W-1-27 FUSED SUPPLY		
W-1-28 FUSED SUPPLY		
W-1-29 FUSED SUPPLY		
W-1-30 FUSED SUPPLY		
W-1-31 FUSED SUPPLY		
W-1-32 FUSED SUPPLY		
W-1-33 FUSED SUPPLY		
W-1-34 FUSED SUPPLY		
W-1-35 FUSED SUPPLY		
W-1-36 FUSED SUPPLY		
W-1-37 FUSED SUPPLY		
W-1-38 FUSED SUPPLY		
W-1-39 FUSED SUPPLY		
W-1-40 FUSED SUPPLY		
W-1-41 FUSED SUPPLY		
W-1-42 FUSED SUPPLY		
W-1-43 FUSED SUPPLY		
W-1-44 FUSED SUPPLY		
W-1-45 FUSED SUPPLY		
W-1-46 FUSED SUPPLY		
W-1-47 FUSED SUPPLY		
W-1-48 FUSED SUPPLY		
W-1-49 FUSED SUPPLY		
W-1-50 FUSED SUPPLY		
W-1-51 FUSED SUPPLY		
W-1-52 FUSED SUPPLY		
W-1-53 FUSED SUPPLY		
W-1-54 FUSED SUPPLY		
W-1-55 FUSED SUPPLY		
W-1-56 FUSED SUPPLY		
W-1-57 FUSED SUPPLY		
W-1-58 FUSED SUPPLY		
W-1-59 FUSED SUPPLY		
W-1-60 FUSED SUPPLY		
W-1-61 FUSED SUPPLY		
W-1-62 FUSED SUPPLY		
W-1-63 FUSED SUPPLY		
W-1-64 FUSED SUPPLY		
W-1-65 FUSED SUPPLY		
W-1-66 FUSED SUPPLY		
W-1-67 FUSED SUPPLY		
W-1-68 FUSED SUPPLY		
W-1-69 FUSED SUPPLY		
W-1-70 FUSED SUPPLY		
W-1-71 FUSED SUPPLY		
W-1-72 FUSED SUPPLY		
W-1-73 FUSED SUPPLY		
W-1-74 FUSED SUPPLY		
W-1-75 FUSED SUPPLY		
W-1-76 FUSED SUPPLY		
W-1-77 FUSED SUPPLY		
W-1-78 FUSED SUPPLY		
W-1-79 FUSED SUPPLY		
W-1-80 FUSED SUPPLY		
W-1-81 FUSED SUPPLY		
W-1-82 FUSED SUPPLY		
W-1-83 FUSED SUPPLY		
W-1-84 FUSED SUPPLY		
W-1-85 FUSED SUPPLY		
W-1-86 FUSED SUPPLY		
W-1-87 FUSED SUPPLY		
W-1-88 FUSED SUPPLY		
W-1-89 FUSED SUPPLY		
W-1-90 FUSED SUPPLY		
W-1-91 FUSED SUPPLY		
W-1-92 FUSED SUPPLY		
W-1-93 FUSED SUPPLY		
W-1-94 FUSED SUPPLY		
W-1-95 FUSED SUPPLY		
W-1-96 FUSED SUPPLY		
W-1-97 FUSED SUPPLY		
W-1-98 FUSED SUPPLY		
W-1-99 FUSED SUPPLY		
W-1-100 FUSED SUPPLY		
W-1-101 FUSED SUPPLY		
W-1-102 FUSED SUPPLY		
W-1-103 FUSED SUPPLY		
W-1-104 FUSED SUPPLY		
W-1-105 FUSED SUPPLY		
W-1-106 FUSED SUPPLY		
W-1-107 FUSED SUPPLY		
W-1-108 FUSED SUPPLY		
W-1-109 FUSED SUPPLY		
W-1-110 FUSED SUPPLY		
W-1-111 FUSED SUPPLY		
W-1-112 FUSED SUPPLY		
W-1-113 FUSED SUPPLY		
W-1-114 FUSED SUPPLY		
W-1-115 FUSED SUPPLY		
W-1-116 FUSED SUPPLY		
W-1-117 FUSED SUPPLY		
W-1-118 FUSED SUPPLY		
W-1-119 FUSED SUPPLY		
W-1-120 FUSED SUPPLY		
W-1-121 FUSED SUPPLY		
W-1-122 FUSED SUPPLY		
W-1-123 FUSED SUPPLY		
W-1-124 FUSED SUPPLY		
W-1-125 FUSED SUPPLY		
W-1-126 FUSED SUPPLY		
W-1-127 FUSED SUPPLY		
W-1-128 FUSED SUPPLY		
W-1-129 FUSED SUPPLY		
W-1-130 FUSED SUPPLY		
W-1-131 FUSED SUPPLY		
W-1-132 FUSED SUPPLY		
W-1-133 FUSED SUPPLY		
W-1-134 FUSED SUPPLY		
W-1-135 FUSED SUPPLY		
W-1-136 FUSED SUPPLY		
W-1-137 FUSED SUPPLY		
W-1-138 FUSED SUPPLY		
W-1-139 FUSED SUPPLY		
W-1-140 FUSED SUPPLY		
W-1-141 FUSED SUPPLY		
W-1-142 FUSED SUPPLY		
W-1-143 FUSED SUPPLY		
W-1-144 FUSED SUPPLY		
W-1-145 FUSED SUPPLY		
W-1-146 FUSED SUPPLY		
W-1-147 FUSED SUPPLY		
W-1-148 FUSED SUPPLY		
W-1-149 FUSED SUPPLY		
W-1-150 FUSED SUPPLY		
W-1-151 FUSED SUPPLY		
W-1-152 FUSED SUPPLY		
W-1-153 FUSED SUPPLY		
W-1-154 FUSED SUPPLY		
W-1-155 FUSED SUPPLY		
W-1-156 FUSED SUPPLY		
W-1-157 FUSED SUPPLY		
W-1-158 FUSED SUPPLY		
W-1-159 FUSED SUPPLY		
W-1-160 FUSED SUPPLY		
W-1-161 FUSED SUPPLY		
W-1-162 FUSED SUPPLY		
W-1-163 FUSED SUPPLY		
W-1-164 FUSED SUPPLY		
W-1-165 FUSED SUPPLY		
W-1-166 FUSED SUPPLY		
W-1-167 FUSED SUPPLY		
W-1-168 FUSED SUPPLY		
W-1-169 FUSED SUPPLY		
W-1-170 FUSED SUPPLY		
W-1-171 FUSED SUPPLY		
W-1-172 FUSED SUPPLY		
W-1-173 FUSED SUPPLY		
W-1-174 FUSED SUPPLY		
W-1-175 FUSED SUPPLY		
W-1-176 FUSED SUPPLY		
W-1-177 FUSED SUPPLY		
W-1-178 FUSED SUPPLY		
W-1-179 FUSED SUPPLY		
W-1-180 FUSED SUPPLY		
W-1-181 FUSED SUPPLY		
W-1-182 FUSED SUPPLY		
W-1-183 FUSED SUPPLY		
W-1-184 FUSED SUPPLY		
W-1-185 FUSED SUPPLY		
W-1-186 FUSED SUPPLY		
W-1-187 FUSED SUPPLY		
W-1-188 FUSED SUPPLY		
W-1-189 FUSED SUPPLY		
W-1-190 FUSED SUPPLY		
W-1-191 FUSED SUPPLY		
W-1-192 FUSED SUPPLY		
W-1-193 FUSED SUPPLY		
W-1-194 FUSED SUPPLY		
W-1-195 FUSED SUPPLY		
W-1-196 FUSED SUPPLY		
W-1-197 FUSED SUPPLY		
W-1-198 FUSED SUPPLY		
W-1-199 FUSED SUPPLY		
W-1-200 FUSED SUPPLY		
W-1-201 FUSED SUPPLY		
W-1-202 FUSED SUPPLY		
W-1-203 FUSED SUPPLY		
W-1-204 FUSED SUPPLY		
W-1-205 FUSED SUPPLY		
W-1-206 FUSED SUPPLY		
W-1-207 FUSED SUPPLY		
W-1-208 FUSED SUPPLY		
W-1-209 FUSED SUPPLY		
W-1-210 FUSED SUPPLY		
W-1-211 FUSED SUPPLY		
W-1-212 FUSED SUPPLY		
W-1-213 FUSED SUPPLY		
W-1-214 FUSED SUPPLY		
W-1-215 FUSED SUPPLY		
W-1-216 FUSED SUPPLY		
W-1-217 FUSED SUPPLY		
W-1-218 FUSED SUPPLY		
W-1-219 FUSED SUPPLY		
W-1-220 FUSED SUPPLY		
W-1-221 FUSED SUPPLY		
W-1-222 FUSED SUPPLY		
W-1-223 FUSED SUPPLY		
W-1-224 FUSED SUPPLY		
W-1-225 FUSED SUPPLY		
W-1-226 FUSED SUPPLY		
W-1-227 FUSED SUPPLY		
W-1-228 FUSED SUPPLY		
W-1-229 FUSED SUPPLY		
W-1-230 FUSED SUPPLY		
W-1-231 FUSED SUPPLY		
W-1-232 FUSED SUPPLY		
W-1-233 FUSED SUPPLY		
W-1-234 FUSED SUPPLY		
W-1-235 FUSED SUPPLY		
W-1-236 FUSED SUPPLY		
W-1-237 FUSED SUPPLY		
W-1-238 FUSED SUPPLY		
W-1-239 FUSED SUPPLY		
W-1-240 FUSED SUPPLY		
W-1-241 FUSED SUPPLY		
W-1-242 FUSED SUPPLY		
W-1-243 FUSED SUPPLY		
W-1-244 FUSED SUPPLY		
W-1-245 FUSED SUPPLY		
W-1-246 FUSED SUPPLY		
W-1-247 FUSED SUPPLY		
W-1-248 FUSED SUPPLY		

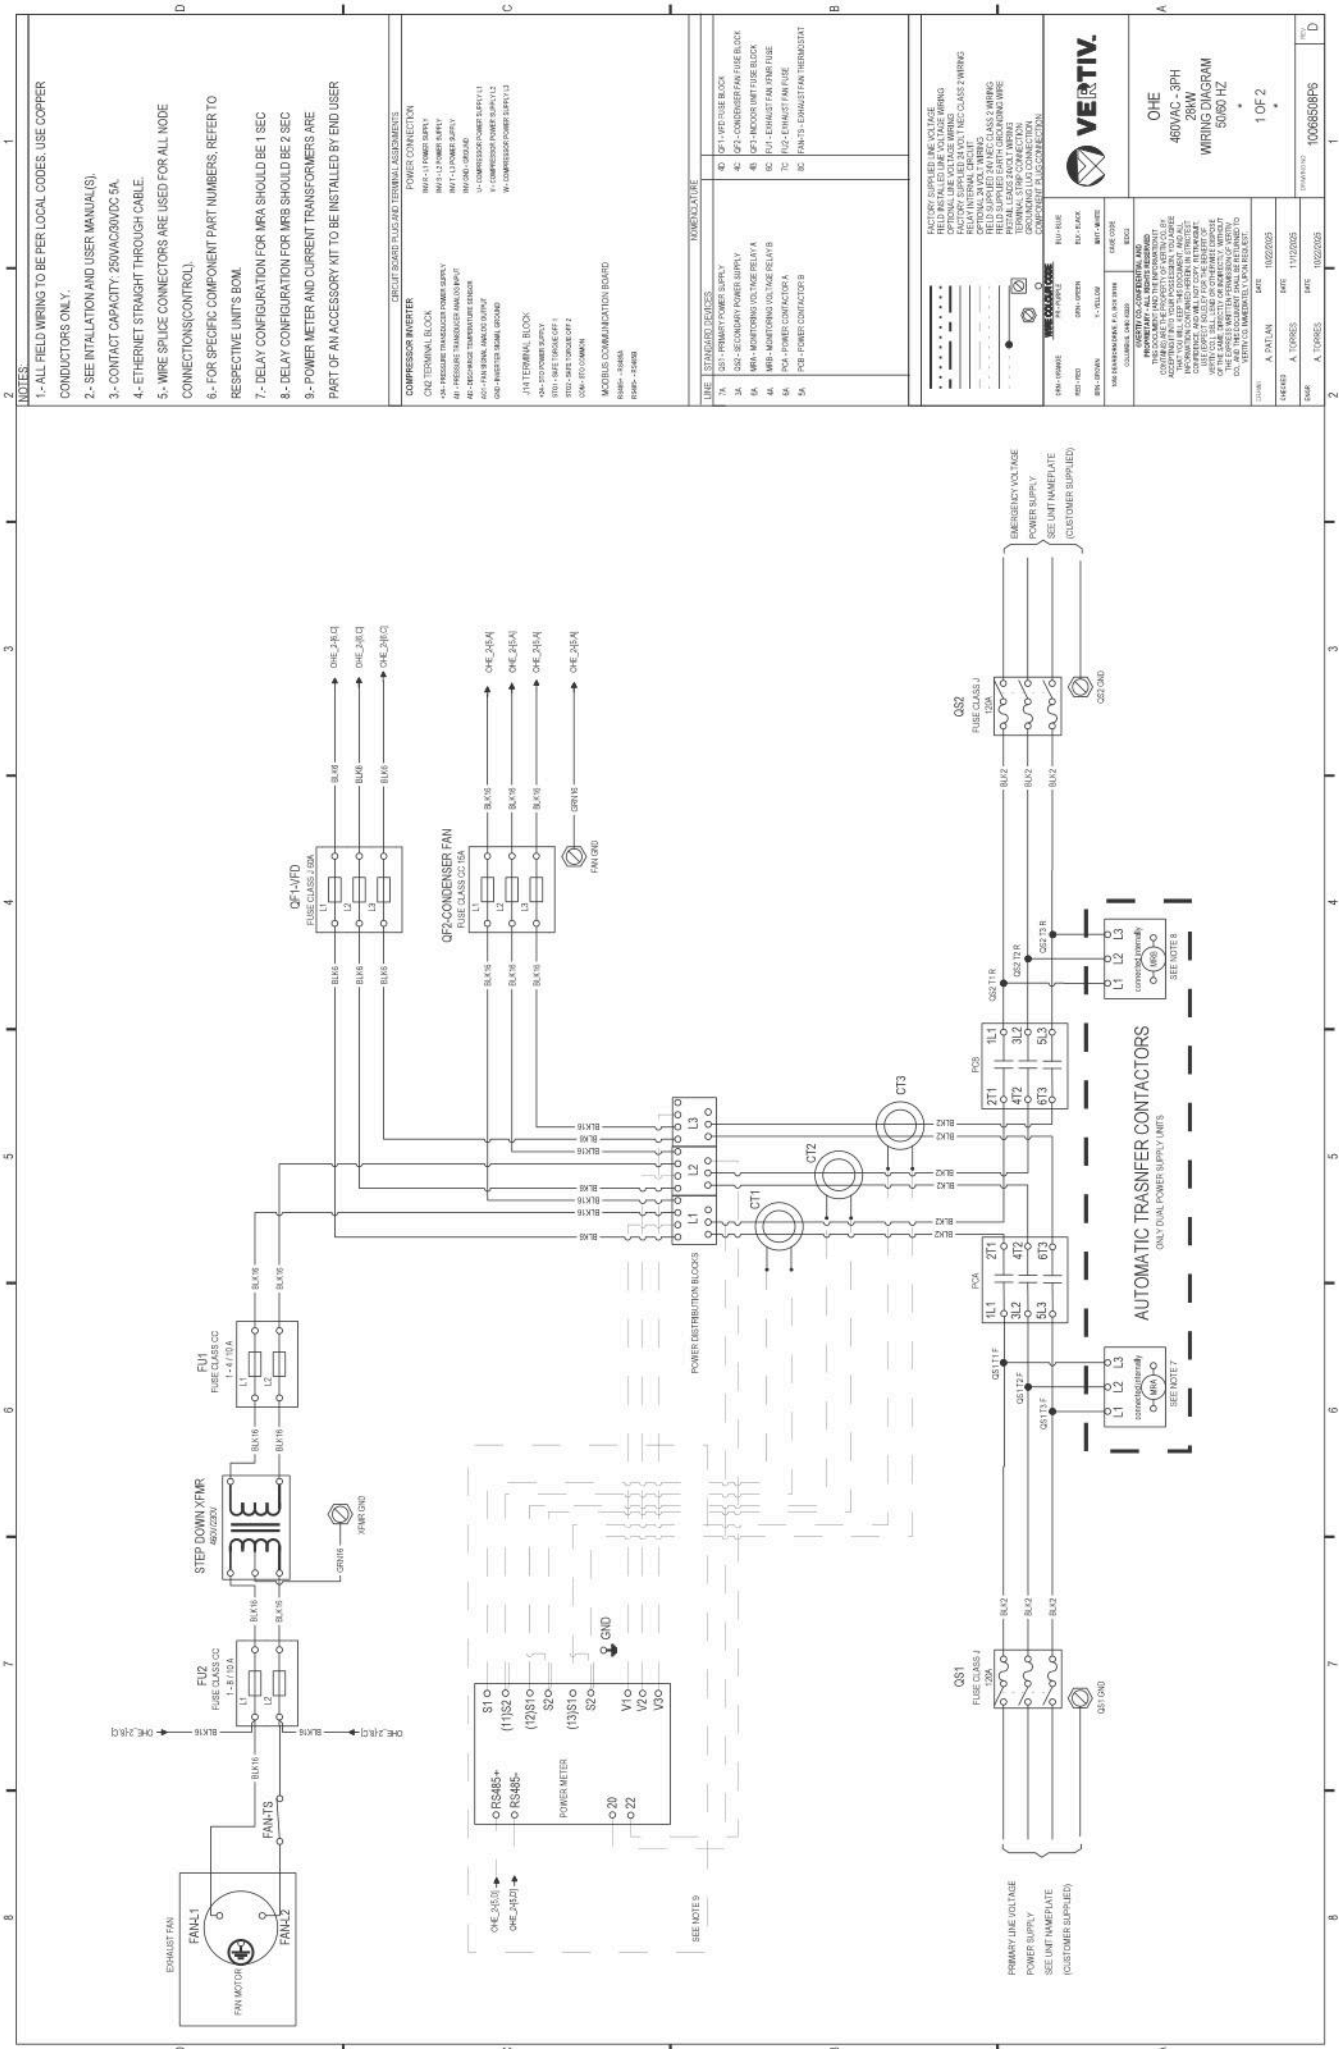

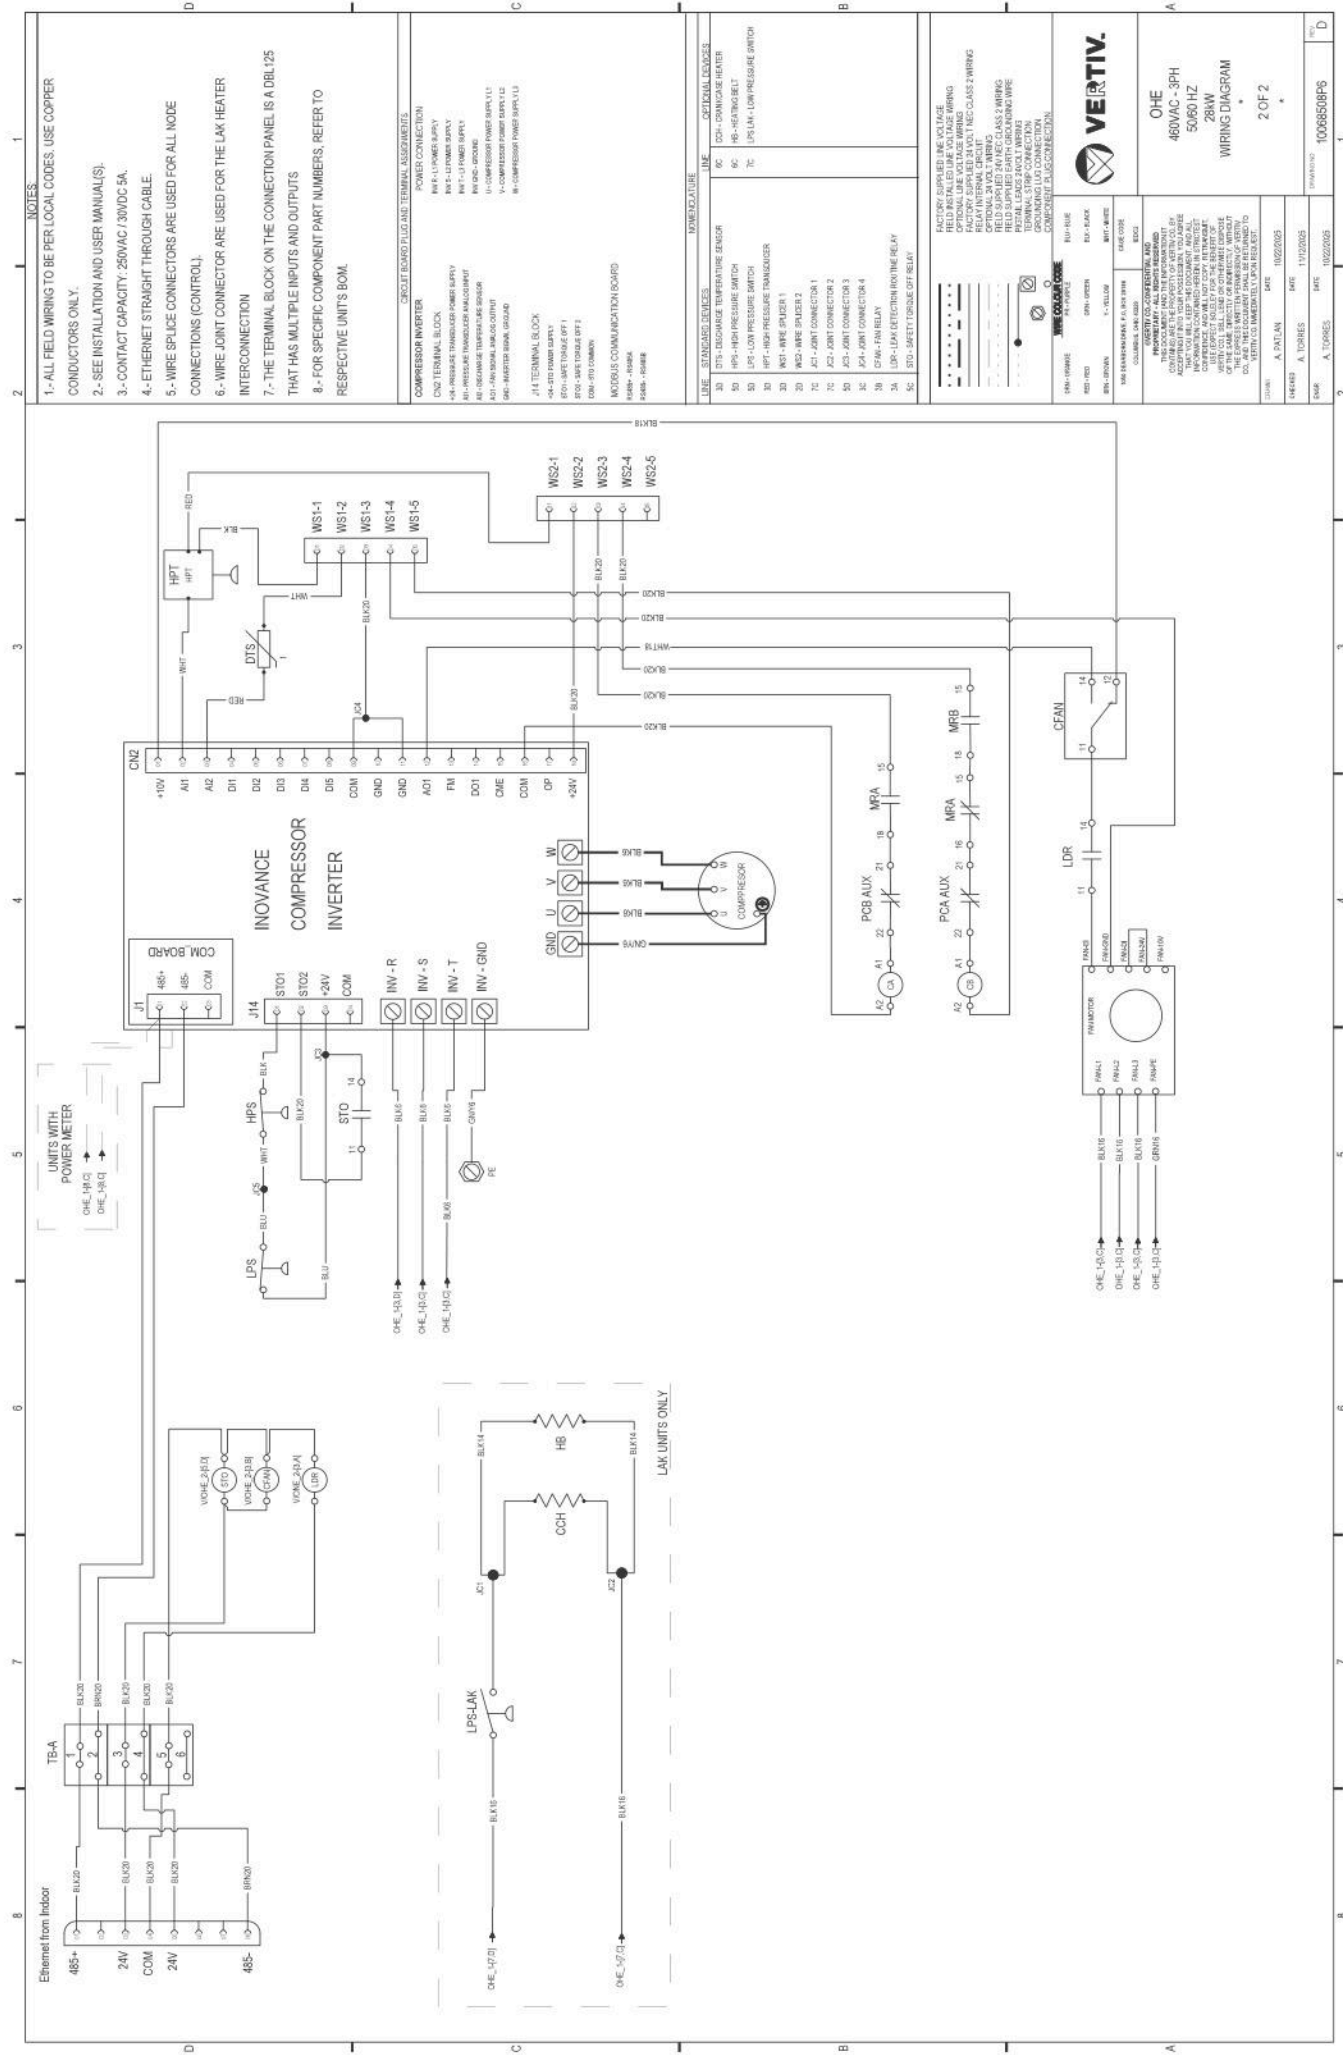

2

1

NOTES

1.- ALL FIELD WIRING TO BE PER LOCAL CODES. USE COPPER CONDUCTORS ONLY.

2.- SEE INSTALLATION AND USER MANUAL(S).

3.- CONTACT CAPACITY: 250VAC / 30VDC 5A.

4.- ETHERNET STRAIGHT THROUGH CABLE.

5.- WIRE SPLICE CONNECTORS ARE USED FOR ALL NODE CONNECTIONS (CONTROL).

6.- WIRE JOINT CONNECTOR ARE USED FOR THE LAX HEATER INTERCONNECTION

7.- THE TERMINAL BLOCK ON THE CONNECTION PANEL IS A DBL12S THAT HAS MULTIPLE INPUTS AND OUTPUTS

8.- FOR SPECIFIC COMPONENT PART NUMBERS, REFER TO RESPECTIVE UNITS BOM.

CIRCUIT BOARD PLUG AND TERMINAL ASSIGNMENTS

COMPRESSION INVERTER

CNO TERMINAL BLOCK

W1-RESISTIVE TRANSFORMER PRIMARY

W3-RESISTIVE TRANSFORMER SECONDARY

W5-RESISTIVE TRANSFORMER SECONDARY

W7-RESISTIVE TRANSFORMER SECONDARY

W9-RESISTIVE TRANSFORMER SECONDARY

W11-RESISTIVE TRANSFORMER SECONDARY

W13-RESISTIVE TRANSFORMER SECONDARY

W15-RESISTIVE TRANSFORMER SECONDARY

W17-RESISTIVE TRANSFORMER SECONDARY

W19-RESISTIVE TRANSFORMER SECONDARY

W21-RESISTIVE TRANSFORMER SECONDARY

W23-RESISTIVE TRANSFORMER SECONDARY

W25-RESISTIVE TRANSFORMER SECONDARY

W27-RESISTIVE TRANSFORMER SECONDARY

W29-RESISTIVE TRANSFORMER SECONDARY

W31-RESISTIVE TRANSFORMER SECONDARY

W33-RESISTIVE TRANSFORMER SECONDARY

W35-RESISTIVE TRANSFORMER SECONDARY

W37-RESISTIVE TRANSFORMER SECONDARY

W39-RESISTIVE TRANSFORMER SECONDARY

W41-RESISTIVE TRANSFORMER SECONDARY

W43-RESISTIVE TRANSFORMER SECONDARY

W45-RESISTIVE TRANSFORMER SECONDARY

W47-RESISTIVE TRANSFORMER SECONDARY

W49-RESISTIVE TRANSFORMER SECONDARY

W51-RESISTIVE TRANSFORMER SECONDARY

W53-RESISTIVE TRANSFORMER SECONDARY

W55-RESISTIVE TRANSFORMER SECONDARY

W57-RESISTIVE TRANSFORMER SECONDARY

W59-RESISTIVE TRANSFORMER SECONDARY

W61-RESISTIVE TRANSFORMER SECONDARY

W63-RESISTIVE TRANSFORMER SECONDARY

W65-RESISTIVE TRANSFORMER SECONDARY

W67-RESISTIVE TRANSFORMER SECONDARY

W69-RESISTIVE TRANSFORMER SECONDARY

W71-RESISTIVE TRANSFORMER SECONDARY

W73-RESISTIVE TRANSFORMER SECONDARY

W75-RESISTIVE TRANSFORMER SECONDARY

W77-RESISTIVE TRANSFORMER SECONDARY

W79-RESISTIVE TRANSFORMER SECONDARY

W81-RESISTIVE TRANSFORMER SECONDARY

W83-RESISTIVE TRANSFORMER SECONDARY

W85-RESISTIVE TRANSFORMER SECONDARY

W87-RESISTIVE TRANSFORMER SECONDARY

W89-RESISTIVE TRANSFORMER SECONDARY

W91-RESISTIVE TRANSFORMER SECONDARY

W93-RESISTIVE TRANSFORMER SECONDARY

W95-RESISTIVE TRANSFORMER SECONDARY

W97-RESISTIVE TRANSFORMER SECONDARY

W99-RESISTIVE TRANSFORMER SECONDARY

W101-RESISTIVE TRANSFORMER SECONDARY

W103-RESISTIVE TRANSFORMER SECONDARY

W105-RESISTIVE TRANSFORMER SECONDARY

W107-RESISTIVE TRANSFORMER SECONDARY

W109-RESISTIVE TRANSFORMER SECONDARY

W111-RESISTIVE TRANSFORMER SECONDARY

W113-RESISTIVE TRANSFORMER SECONDARY

W115-RESISTIVE TRANSFORMER SECONDARY

W117-RESISTIVE TRANSFORMER SECONDARY

W119-RESISTIVE TRANSFORMER SECONDARY

W121-RESISTIVE TRANSFORMER SECONDARY

W123-RESISTIVE TRANSFORMER SECONDARY

W125-RESISTIVE TRANSFORMER SECONDARY

W127-RESISTIVE TRANSFORMER SECONDARY

W129-RESISTIVE TRANSFORMER SECONDARY

W131-RESISTIVE TRANSFORMER SECONDARY

W133-RESISTIVE TRANSFORMER SECONDARY

W135-RESISTIVE TRANSFORMER SECONDARY

W137-RESISTIVE TRANSFORMER SECONDARY

W139-RESISTIVE TRANSFORMER SECONDARY

W141-RESISTIVE TRANSFORMER SECONDARY

W143-RESISTIVE TRANSFORMER SECONDARY

W145-RESISTIVE TRANSFORMER SECONDARY

W147-RESISTIVE TRANSFORMER SECONDARY

W149-RESISTIVE TRANSFORMER SECONDARY

W151-RESISTIVE TRANSFORMER SECONDARY

W153-RESISTIVE TRANSFORMER SECONDARY

W155-RESISTIVE TRANSFORMER SECONDARY

W157-RESISTIVE TRANSFORMER SECONDARY

W159-RESISTIVE TRANSFORMER SECONDARY

W161-RESISTIVE TRANSFORMER SECONDARY

W163-RESISTIVE TRANSFORMER SECONDARY

W165-RESISTIVE TRANSFORMER SECONDARY

W167-RESISTIVE TRANSFORMER SECONDARY

W169-RESISTIVE TRANSFORMER SECONDARY

W171-RESISTIVE TRANSFORMER SECONDARY

W173-RESISTIVE TRANSFORMER SECONDARY

W175-RESISTIVE TRANSFORMER SECONDARY

W177-RESISTIVE TRANSFORMER SECONDARY

W179-RESISTIVE TRANSFORMER SECONDARY

W181-RESISTIVE TRANSFORMER SECONDARY

W183-RESISTIVE TRANSFORMER SECONDARY

W185-RESISTIVE TRANSFORMER SECONDARY

W187-RESISTIVE TRANSFORMER SECONDARY

W189-RESISTIVE TRANSFORMER SECONDARY

W191-RESISTIVE TRANSFORMER SECONDARY

W193-RESISTIVE TRANSFORMER SECONDARY

W195-RESISTIVE TRANSFORMER SECONDARY

W197-RESISTIVE TRANSFORMER SECONDARY

W199-RESISTIVE TRANSFORMER SECONDARY

W201-RESISTIVE TRANSFORMER SECONDARY

W203-RESISTIVE TRANSFORMER SECONDARY

W205-RESISTIVE TRANSFORMER SECONDARY

W207-RESISTIVE TRANSFORMER SECONDARY

W209-RESISTIVE TRANSFORMER SECONDARY

W211-RESISTIVE TRANSFORMER SECONDARY

W213-RESISTIVE TRANSFORMER SECONDARY

W215-RESISTIVE TRANSFORMER SECONDARY

W217-RESISTIVE TRANSFORMER SECONDARY

W219-RESISTIVE TRANSFORMER SECONDARY

W221-RESISTIVE TRANSFORMER SECONDARY

W223-RESISTIVE TRANSFORMER SECONDARY

W225-RESISTIVE TRANSFORMER SECONDARY

W227-RESISTIVE TRANSFORMER SECONDARY

W229-RESISTIVE TRANSFORMER SECONDARY

W231-RESISTIVE TRANSFORMER SECONDARY

W233-RESISTIVE TRANSFORMER SECONDARY

W235-RESISTIVE TRANSFORMER SECONDARY

W237-RESISTIVE TRANSFORMER SECONDARY

W239-RESISTIVE TRANSFORMER SECONDARY

W241-RESISTIVE TRANSFORMER SECONDARY

W243-RESISTIVE TRANSFORMER SECONDARY

W245-RESISTIVE TRANSFORMER SECONDARY

W247-RESISTIVE TRANSFORMER SECONDARY

W249-RESISTIVE TRANSFORMER SECONDARY

W251-RESISTIVE TRANSFORMER SECONDARY

W253-RESISTIVE TRANSFORMER SECONDARY

W255-RESISTIVE TRANSFORMER SECONDARY

W257-RESISTIVE TRANSFORMER SECONDARY

W259-RESISTIVE TRANSFORMER SECONDARY

W261-RESISTIVE TRANSFORMER SECONDARY

W263-RESISTIVE TRANSFORMER SECONDARY

W265-RESISTIVE TRANSFORMER SECONDARY

W267-RESISTIVE TRANSFORMER SECONDARY

W269-RESISTIVE TRANSFORMER SECONDARY

W271-RESISTIVE TRANSFORMER SECONDARY

W273-RESISTIVE TRANSFORMER SECONDARY

W275-RESISTIVE TRANSFORMER SECONDARY

W277-RESISTIVE TRANSFORMER SECONDARY

W279-RESISTIVE TRANSFORMER SECONDARY

W281-RESISTIVE TRANSFORMER SECONDARY

W283-RESISTIVE TRANSFORMER SECONDARY

W285-RESISTIVE TRANSFORMER SECONDARY

W287-RESISTIVE TRANSFORMER SECONDARY

W289-RESISTIVE TRANSFORMER SECONDARY

W291-RESISTIVE TRANSFORMER SECONDARY

W293-RESISTIVE TRANSFORMER SECONDARY

W295-RESISTIVE TRANSFORMER SECONDARY

W297-RESISTIVE TRANSFORMER SECONDARY

W299-RESISTIVE TRANSFORMER SECONDARY

W301-RESISTIVE TRANSFORMER SECONDARY

W303-RESISTIVE TRANSFORMER SECONDARY

W305-RESISTIVE TRANSFORMER SECONDARY

W307-RESISTIVE TRANSFORMER SECONDARY

W309-RESISTIVE TRANSFORMER SECONDARY

W311-RESISTIVE TRANSFORMER SECONDARY

W313-RESISTIVE TRANSFORMER SECONDARY

W315-RESISTIVE TRANSFORMER SECONDARY

W317-RESISTIVE TRANSFORMER SECONDARY

W319-RESISTIVE TRANSFORMER SECONDARY

W321-RESISTIVE TRANSFORMER SECONDARY

W323-RESISTIVE TRANSFORMER SECONDARY

W325-RESISTIVE TRANSFORMER SECONDARY

W327-RESISTIVE TRANSFORMER SECONDARY

W329-RESISTIVE TRANSFORMER SECONDARY

W331-RESISTIVE TRANSFORMER SECONDARY

W333-RESISTIVE TRANSFORMER SECONDARY

W335-RESISTIVE TRANSFORMER SECONDARY

W337-RESISTIVE TRANSFORMER SECONDARY

W339-RESISTIVE TRANSFORMER SECONDARY

W341-RESISTIVE TRANSFORMER SECONDARY

W343-RESISTIVE TRANSFORMER SECONDARY

W345-RESISTIVE TRANSFORMER SECONDARY

W347-RESISTIVE TRANSFORMER SECONDARY

W349-RESISTIVE TRANSFORMER SECONDARY

W351-RESISTIVE TRANSFORMER SECONDARY

W353-RESISTIVE TRANSFORMER SECONDARY

W355-RESISTIVE TRANSFORMER SECONDARY

W357-RESISTIVE TRANSFORMER SECONDARY

W359-RESISTIVE TRANSFORMER SECONDARY

W361-RESISTIVE TRANSFORMER SECONDARY

W363-RESISTIVE TRANSFORMER SECONDARY

W365-RESISTIVE TRANSFORMER SECONDARY

W367-RESISTIVE TRANSFORMER SECONDARY

W369-RESISTIVE TRANSFORMER SECONDARY

W371-RESISTIVE TRANSFORMER SECONDARY

W373-RESISTIVE TRANSFORMER SECONDARY

W375-RESISTIVE TRANSFORMER SECONDARY

W377-RESISTIVE TRANSFORMER SECONDARY

W379-RESISTIVE TRANSFORMER SECONDARY

W381-RESISTIVE TRANSFORMER SECONDARY

W383-RESISTIVE TRANSFORMER SECONDARY

W385-RESISTIVE TRANSFORMER SECONDARY

W387-RESISTIVE TRANSFORMER SECONDARY

W389-RESISTIVE TRANSFORMER SECONDARY

W391-RESISTIVE TRANSFORMER SECONDARY

W393-RESISTIVE TRANSFORMER SECONDARY

W395-RESISTIVE TRANSFORMER SECONDARY

W397-RESISTIVE TRANSFORMER SECONDARY

W399-RESISTIVE TRANSFORMER SECONDARY

W401-RESISTIVE TRANSFORMER SECONDARY

W403-RESISTIVE TRANSFORMER SECONDARY

W405-RESISTIVE TRANSFORMER SECONDARY

W407-RESISTIVE TRANSFORMER SECONDARY

W409-RESISTIVE TRANSFORMER SECONDARY

W411-RESISTIVE TRANSFORMER SECONDARY

W413-RESISTIVE TRANSFORMER SECONDARY

W415-RESISTIVE TRANSFORMER SECONDARY

W417-RESISTIVE TRANSFORMER SECONDARY

W419-RESISTIVE TRANSFORMER SECONDARY

W421-RESISTIVE TRANSFORMER SECONDARY

W423-RESISTIVE TRANSFORMER SECONDARY

W425-RESISTIVE TRANSFORMER SECONDARY

W427-RESISTIVE TRANSFORMER SECONDARY

W429-RESISTIVE TRANSFORMER SECONDARY

W431-RESISTIVE TRANSFORMER SECONDARY

W433-RESISTIVE TRANSFORMER SECONDARY

W435-RESISTIVE TRANSFORMER SECONDARY

W437-RESISTIVE TRANSFORMER SECONDARY

W439-RESISTIVE TRANSFORMER SECONDARY

W441-RESISTIVE TRANSFORMER SECONDARY

W443-RESISTIVE TRANSFORMER SECONDARY

W445-RESISTIVE TRANSFORMER SECONDARY

W447-RESISTIVE TRANSFORMER SECONDARY

W449-RESISTIVE TRANSFORMER SECONDARY

W451-RESISTIVE TRANSFORMER SECONDARY

W453-RESISTIVE TRANSFORMER SECONDARY

W455-RESISTIVE TRANSFORMER SECONDARY

W457-RESISTIVE TRANSFORMER SECONDARY

W459-RESISTIVE TRANSFORMER SECONDARY

W461-RESISTIVE TRANSFORMER SECONDARY

W463-RESISTIVE TRANSFORMER SECONDARY

W465-RESISTIVE TRANSFORMER SECONDARY

W467-RESISTIVE TRANSFORMER SECONDARY

W469-RESISTIVE TRANSFORMER SECONDARY

W471-RESISTIVE TRANSFORMER SECONDARY

W473-RESISTIVE TRANSFORMER SECONDARY

W475-RESISTIVE TRANSFORMER SECONDARY

W477-RESISTIVE TRANSFORMER SECONDARY

W479-RESISTIVE TRANSFORMER SECONDARY

W481-RESISTIVE TRANSFORMER SECONDARY

W483-RESISTIVE TRANSFORMER SECONDARY

W485-RESISTIVE TRANSFORMER SECONDARY

W487-RESISTIVE TRANSFORMER SECONDARY

W489-RESISTIVE TRANSFORMER SECONDARY

W491-RESISTIVE TRANSFORMER SECONDARY

W493-RESISTIVE TRANSFORMER SECONDARY

W495-RESISTIVE TRANSFORMER SECONDARY

W497-RESISTIVE TRANSFORMER SECONDARY

W499-RESISTIVE TRANSFORMER SECONDARY

W501-RESISTIVE TRANSFORMER SECONDARY

W503-RESISTIVE TRANSFORMER SECONDARY

W505-RESISTIVE TRANSFORMER SECONDARY

W507-RESISTIVE TRANSFORMER SECONDARY

W509-RESISTIVE TRANSFORMER SECONDARY

W511-RESISTIVE TRANSFORMER SECONDARY

W513-RESISTIVE TRANSFORMER SECONDARY

W515-RESISTIVE TRANSFORMER SECONDARY

W517-RESISTIVE TRANSFORMER SECONDARY

W519-RESISTIVE TRANSFORMER SECONDARY

W521-RESISTIVE TRANSFORMER SECONDARY

W523-RESISTIVE TRANSFORMER SECONDARY

W525-RESISTIVE TRANSFORMER SECONDARY

W527-RESISTIVE TRANSFORMER SECONDARY

W529-RESISTIVE TRANSFORMER SECONDARY

W531-RESISTIVE TRANSFORMER SECONDARY

W533-RESISTIVE TRANSFORMER SECONDARY

W535-RESISTIVE TRANSFORMER SECONDARY

W537-RESISTIVE TRANSFORMER SECONDARY

W539-RESISTIVE TRANSFORMER SECONDARY

W541-RESISTIVE TRANSFORMER SECONDARY

W543-RESISTIVE TRANSFORMER SECONDARY

W545-RESISTIVE TRANSFORMER SECONDARY

W547-RESISTIVE TRANSFORMER SECONDARY

W549-RESISTIVE TRANSFORMER SECONDARY

W551-RESISTIVE TRANSFORMER SECONDARY

W553-RESISTIVE TRANSFORMER SECONDARY

W555-RESISTIVE TRANSFORMER SECONDARY

W557-RESISTIVE TRANSFORMER SECONDARY

W559-RESISTIVE TRANSFORMER SECONDARY

W561-RESISTIVE TRANSFORMER SECONDARY

W563-RESISTIVE TRANSFORMER SECONDARY

W565-RESISTIVE TRANSFORMER SECONDARY

W567-RESISTIVE TRANSFORMER SECONDARY

W569-RESISTIVE TRANSFORMER SECONDARY

W571-RESISTIVE TRANSFORMER SECONDARY

W573-RESISTIVE TRANSFORMER SECONDARY

W575-RESISTIVE TRANSFORMER SECONDARY

W577-RESISTIVE TRANSFORMER SECONDARY

W579-RESISTIVE TRANSFORMER SECONDARY

W581-RESISTIVE TRANSFORMER SECONDARY

W583-RESISTIVE TRANSFORMER SECONDARY

W585-RESISTIVE TRANSFORMER SECONDARY

W587-RESISTIVE TRANSFORMER SECONDARY

W589-RESISTIVE TRANSFORMER SECONDARY

W591-RESISTIVE TRANSFORMER SECONDARY

W593-RESISTIVE TRANSFORMER SECONDARY

W595-RESISTIVE TRANSFORMER SECONDARY

W597-RESISTIVE TRANSFORMER SECONDARY

W599-RESISTIVE TRANSFORMER SECONDARY

W601-RESISTIVE TRANSFORMER SECONDARY

W603-RESISTIVE TRANSFORMER SECONDARY

W605-RESISTIVE TRANSFORMER SECONDARY

W607-RESISTIVE TRANSFORMER SECONDARY

W609-RESISTIVE TRANSFORMER SECONDARY

W611-RESISTIVE TRANSFORMER SECONDARY

W613-RESISTIVE TRANSFORMER SECONDARY

W615-RESISTIVE TRANSFORMER SECONDARY

W617-RESISTIVE TRANSFORMER SECONDARY

W619-RESISTIVE TRANSFORMER SECONDARY

W621-RESISTIVE TRANSFORMER SECONDARY

W623-RESISTIVE TRANSFORMER SECONDARY

W625-RESISTIVE TRANSFORMER SECONDARY

W627-RESISTIVE TRANSFORMER SECONDARY

W629-RESISTIVE TRANSFORMER SECONDARY

W631-RESISTIVE TRANSFORMER SECONDARY

W633-RESISTIVE TRANSFORMER SECONDARY

W635-RESISTIVE TRANSFORMER SECONDARY

W637-RESISTIVE TRANSFORMER SECONDARY

W639-RESISTIVE TRANSFORMER SECONDARY

W641-RESISTIVE TRANSFORMER SECONDARY

W643-RESISTIVE TRANSFORMER SECONDARY

W645-RESISTIVE TRANSFORMER SECONDARY

W647-RESISTIVE TRANSFORMER SECONDARY

W649-RESISTIVE TRANSFORMER SECONDARY

W651-RESISTIVE TRANSFORMER SECONDARY

W653-RESISTIVE TRANSFORMER SECONDARY

W655-RESISTIVE TRANSFORMER SECONDARY

W657-RESISTIVE TRANSFORMER SECONDARY

W659-RESISTIVE TRANSFORMER SECONDARY

W661-RESISTIVE TRANSFORMER SECONDARY

W663-RESISTIVE TRANSFORMER SECONDARY

W665-RESISTIVE TRANSFORMER SECONDARY

W667-RESISTIVE TRANSFORMER SECONDARY

W669-RESISTIVE TRANSFORMER SECONDARY

W671-RESISTIVE TRANSFORMER SECONDARY

W673-RESISTIVE TRANSFORMER SECONDARY

W675-RESISTIVE TRANSFORMER SECONDARY

W677-RESISTIVE TRANSFORMER SECONDARY

W679-RESISTIVE TRANSFORMER SECONDARY

W681-RESISTIVE TRANSFORMER SECONDARY

W683-RESISTIVE TRANSFORMER SECONDARY

W685-RESISTIVE TRANSFORMER SECONDARY

W687-RESISTIVE TRANSFORMER SECONDARY

W689-RESISTIVE TRANSFORMER SECONDARY

W691-RESISTIVE TRANSFORMER SECONDARY

W693-RESISTIVE TRANSFORMER SECONDARY

W695-RESISTIVE TRANSFORMER SECONDARY

W697-RESISTIVE TRANSFORMER SECONDARY

W699-RESISTIVE TRANSFORMER SECONDARY

W701-RESISTIVE TRANSFORMER SECONDARY

W703-RESISTIVE TRANSFORMER SECONDARY

W705-RESISTIVE TRANSFORMER SECONDARY

W707-RESISTIVE TRANSFORMER SECONDARY

W709-RESISTIVE TRANSFORMER SECONDARY

W711-RESISTIVE TRANSFORMER SECONDARY

W713-RESISTIVE TRANSFORMER SECONDARY

W715-RESISTIVE TRANSFORMER SECONDARY

W717-RESISTIVE TRANSFORMER SECONDARY

W719-RESISTIVE TRANSFORMER SECONDARY

W721-RESISTIVE TRANSFORMER SECONDARY

W723-RESISTIVE TRANSFORMER SECONDARY

W725-RESISTIVE TRANSFORMER SECONDARY

W727-RESISTIVE TRANSFORMER SECONDARY

W729-RESISTIVE TRANSFORMER SECONDARY

W731-RESISTIVE TRANSFORMER SECONDARY

W733-RESISTIVE TRANSFORMER SECONDARY

W735-RESISTIVE TRANSFORMER SECONDARY

W737-RESISTIVE TRANSFORMER SECONDARY

W739-RESISTIVE TRANSFORMER SECONDARY

W741-RESISTIVE TRANSFORMER SECONDARY

W743-RESISTIVE TRANSFORMER SECONDARY

W745-RESISTIVE TRANSFORMER SECONDARY

W747-RESISTIVE TRANSFORMER SECONDARY

W749-RESISTIVE TRANSFORMER SECONDARY

W751-RESISTIVE TRANSFORMER SECONDARY

W753-RESISTIVE TRANSFORMER SECONDARY

W755-RESISTIVE TRANSFORMER SECONDARY

W757-RESISTIVE TRANSFORMER SECONDARY

W759-RESISTIVE TRANSFORMER SECONDARY

W761-RESISTIVE TRANSFORMER SECONDARY

W763-RESISTIVE TRANSFORMER SECONDARY

W765-RESISTIVE TRANSFORMER SECONDARY

W767-RESISTIVE TRANSFORMER SECONDARY

W769-RESISTIVE TRANSFORMER SECONDARY

W771-RESISTIVE TRANSFORMER SECONDARY

W773-RESISTIVE TRANSFORMER SECONDARY

W775-RESISTIVE TRANSFORMER SECONDARY

W777-RESISTIVE TRANSFORMER SECONDARY

W779-RESISTIVE TRANSFORMER SECONDARY

W781-RESISTIVE TRANSFORMER SECONDARY

W783-RESISTIVE TRANSFORMER SECONDARY

W785-RESISTIVE TRANSFORMER SECONDARY

W787-RESISTIVE TRANSFORMER SECONDARY

W789-RESISTIVE TRANSFORMER SECONDARY

W791-RESISTIVE TRANSFORMER SECONDARY

W793-RESISTIVE TRANSFORMER SECONDARY

W795-RESISTIVE TRANSFORMER SECONDARY

W797-RESISTIVE TRANSFORMER SECONDARY

W799-RESISTIVE TRANSFORMER SECONDARY

W801-RESISTIVE TRANSFORMER SECONDARY

W803-RESISTIVE TRANSFORMER SECONDARY

W805-RESISTIVE TRANSFORMER SECONDARY

W807-RESISTIVE TRANSFORMER SECONDARY

W809-RESISTIVE TRANSFORMER SECONDARY

W811-RESISTIVE TRANSFORMER SECONDARY

W813-RESISTIVE TRANSFORMER SECONDARY

W815-RESISTIVE TRANSFORMER SECONDARY

W817-RESISTIVE TRANSFORMER SECONDARY

W819-RESISTIVE TRANSFORMER SECONDARY

W821-RESISTIVE TRANSFORMER SECONDARY

W823-RESISTIVE TRANSFORMER SECONDARY

W825-RESISTIVE TRANSFORMER SECONDARY

W827-RESISTIVE TRANSFORMER SECONDARY

W829-RESISTIVE TRANSFORMER SECONDARY

W831-RESISTIVE TRANSFORMER SECONDARY

W833-RESISTIVE TRANSFORMER SECONDARY

W835-RESISTIVE TRANSFORMER SECONDARY

W837-RESISTIVE TRANSFORMER SECONDARY

W839-RESISTIVE TRANSFORMER SECONDARY

W841-RESISTIVE TRANSFORMER SECONDARY

W843-RESISTIVE TRANSFORMER SECONDARY

W845-RESISTIVE TRANSFORMER SECONDARY

W847-RESISTIVE TRANSFORMER SECONDARY

W849-RESISTIVE TRANSFORMER SECONDARY

W851-RESISTIVE TRANSFORMER SECONDARY

W853-RESISTIVE TRANSFORMER SECONDARY

W855-RESISTIVE TRANSFORMER SECONDARY

W857-RESISTIVE TRANSFORMER SECONDARY

W859-RESISTIVE TRANSFORMER SECONDARY

W861-RESISTIVE TRANSFORMER SECONDARY

W863-RESISTIVE TRANSFORMER SECONDARY

W865-RESISTIVE TRANSFORMER SECONDARY

W867-RESISTIVE TRANSFORMER SECONDARY

W869-RESISTIVE TRANSFORMER SECONDARY

W871-RESISTIVE TRANSFORMER SECONDARY

W873-RESISTIVE TRANSFORMER SECONDARY

W875-RESISTIVE TRANSFORMER SECONDARY

W877-RESISTIVE TRANSFORMER SECONDARY

W879-RESISTIVE TRANSFORMER SECONDARY

W881-RESISTIVE TRANSFORMER SECONDARY

W883-RESISTIVE TRANSFORMER SECONDARY

W885-RESISTIVE TRANSFORMER SECONDARY

W887-RESISTIVE TRANSFORMER SECONDARY

W889-RESISTIVE TRANSFORMER SECONDARY

W891-RESISTIVE TRANSFORMER SECONDARY

W893-RESISTIVE TRANSFORMER SECONDARY

W895-RESISTIVE TRANSFORMER SECONDARY

W897-RESISTIVE TRANSFORMER SECONDARY

W899-RESISTIVE TRANSFORMER SECONDARY

W901-RESISTIVE TRANSFORMER SECONDARY

W903-RESISTIVE TRANSFORMER SECONDARY

W905-RESISTIVE TRANSFORMER SECONDARY

W907-RESISTIVE TRANSFORMER SECONDARY

W909-RESISTIVE TRANSFORMER SECONDARY

W911-RESISTIVE TRANSFORMER SECONDARY

W913-RESISTIVE TRANSFORMER SECONDARY

W915-RESISTIVE TRANSFORMER SECONDARY

W917-RESISTIVE TRANSFORMER SECONDARY

W919-RESISTIVE TRANSFORMER SECONDARY

W921-RESISTIVE TRANSFORMER SECONDARY

W923-RESISTIVE TRANSFORMER SECONDARY

W925-RESISTIVE TRANSFORMER SECONDARY

W927-RESISTIVE TRANSFORMER SECONDARY

W929-RESISTIVE TRANSFORMER SECONDARY

W931-RESISTIVE TRANSFORMER SECONDARY

W933-RESISTIVE TRANSFORMER SECONDARY

W935-RESISTIVE TRANSFORMER SECONDARY

W937-RESISTIVE TRANSFORMER SECONDARY

W939-RESISTIVE TRANSFORMER SECONDARY

W941-RESISTIVE TRANSFORMER SECONDARY

W943-RESISTIVE TRANSFORMER SECONDARY

W945-RESISTIVE TRANSFORMER SECONDARY

W947-RESISTIVE TRANSFORMER SECONDARY

W949-RESISTIVE TRANSFORMER SECONDARY

W951-RESISTIVE TRANSFORMER SECONDARY

W953-RESISTIVE TRANSFORMER SECONDARY

W955-RESISTIVE TRANSFORMER SECONDARY

W957-RESISTIVE TRANSFORMER SECONDARY

W959-RESISTIVE TRANSFORMER SECONDARY

W961-RESISTIVE TRANSFORMER SECONDARY

W963-RESISTIVE TRANSFORMER SECONDARY

W965-RESISTIVE TRANSFORMER SECONDARY

W967-RESISTIVE TRANSFORMER SECONDARY

W969-RESISTIVE TRANSFORMER SECONDARY

W971-RESISTIVE TRANSFORMER SECONDARY

W973-RESISTIVE TRANSFORMER SECONDARY

W975-RESISTIVE TRANSFORMER SECONDARY

W977-RESISTIVE TRANSFORMER SECONDARY

W979-RESISTIVE TRANSFORMER SECONDARY

W981-RESISTIVE TRANSFORMER SECONDARY

W983-RESISTIVE TRANSFORMER SECONDARY

W985-RESISTIVE TRANSFORMER SECONDARY

W987-RESISTIVE TRANSFORMER SECONDARY

W989-RESISTIVE TRANSFORMER SECONDARY

W991-RESISTIVE TRANSFORMER SECONDARY

W993-RESISTIVE TRANSFORMER SECONDARY

W995-RESISTIVE TRANSFORMER SECONDARY

W997-RESISTIVE TRANSFORMER SECONDARY

W999-RESISTIVE TRANSFORMER SECONDARY

W1001-RESISTIVE TRANSFORMER SECONDARY

W1003-RESISTIVE TRANSFORMER SECONDARY

W1005-RESISTIVE TRANSFORMER SECONDARY

W1007-RESISTIVE TRANSFORMER SECONDARY

W1009-RESISTIVE TRANSFORMER SECONDARY

W1011-RESISTIVE TRANSFORMER SECONDARY

W1013-RESISTIVE TRANSFORMER SECONDARY

W1015-RESISTIVE TRANSFORMER SECONDARY

W1017-RESISTIVE TRANSFORMER SECONDARY

W1019-RESISTIVE TRANSFORMER SECONDARY

W1021-RESISTIVE TRANSFORMER SECONDARY

W1023-RESISTIVE TRANSFORMER SECONDARY

W1025-RESISTIVE TRANSFORMER SECONDARY

W1027-RESISTIVE TRANSFORMER SECONDARY

W1029-RESISTIVE TRANSFORMER SECONDARY

W1031-RESISTIVE TRANSFORMER SECONDARY

W1033-RESISTIVE TRANSFORMER SECONDARY

W1035-RESISTIVE TRANSFORMER SECONDARY

W1037-RESISTIVE TRANSFORMER SECONDARY

W1039-RESISTIVE TRANSFORMER SECONDARY

W1041-RESISTIVE TRANSFORMER SECONDARY

W1043-RESISTIVE TRANSFORMER SECONDARY

W1045-RESISTIVE TRANSFORMER SECONDARY

W1047-RESISTIVE TRANSFORMER SECONDARY

W1049-RESISTIVE TRANSFORMER SECONDARY

W1051-RESISTIVE TRANSFORMER SECONDARY

W1053-RESISTIVE TRANSFORMER SECONDARY

W1055-RESISTIVE TRANSFORMER SECONDARY

W1057-RESISTIVE TRANSFORMER SECONDARY

W1059-RESISTIVE TRANSFORMER SECONDARY

W1061-RESISTIVE TRANSFORMER SECONDARY

W1063-RESISTIVE TRANSFORMER SECONDARY

W1065-RESISTIVE TRANSFORMER SECONDARY

W1067-RESISTIVE TRANSFORMER SECONDARY

W1069-RESISTIVE TRANSFORMER SECONDARY

W1071-RESISTIVE TRANSFORMER SECONDARY

W1073-RESISTIVE TRANSFORMER SECONDARY

W1075-RESISTIVE TRANSFORMER SECONDARY

W1077-RESISTIVE TRANSFORMER SECONDARY

W1079-RESISTIVE TRANSFORMER SECONDARY

W1081-RESISTIVE TRANSFORMER SECONDARY

W1083-RESISTIVE TRANSFORMER SECONDARY

W1085-RESISTIVE TRANSFORMER SECONDARY

W1087-RESISTIVE TRANSFORMER SECONDARY

W1089-RESISTIVE TRANSFORMER SECONDARY

W1091-RESISTIVE TRANSFORMER SECONDARY

W1093-RESISTIVE TRANSFORMER SECONDARY

W1095-RESISTIVE TRANSFORMER SECONDARY

W1097-RESISTIVE TRANSFORMER SECONDARY

W1099-RESISTIVE TRANSFORMER SECONDARY

W1101-RESISTIVE TRANSFORMER SECONDARY

W1103-RESISTIVE TRANSFORMER SECONDARY

W1105-RESISTIVE TRANSFORMER SECONDARY

W1107-RESISTIVE TRANSFORMER SECONDARY

W1109-RESISTIVE TRANSFORMER SECONDARY

W1111-RESISTIVE TRANSFORMER SECONDARY

W1113-RESISTIVE TRANSFORMER SECONDARY

W1115-RESISTIVE TRANSFORMER SECONDARY

W1117-RESISTIVE TRANSFORMER SECONDARY

W1119-RESISTIVE TRANSFORMER SECONDARY

W1121-RESISTIVE TRANSFORMER SECONDARY

W1123-RESISTIVE TRANSFORMER SECONDARY

W1125-RESISTIVE TRANSFORMER SECONDARY

W1127-RESISTIVE TRANSFORMER SECONDARY

W1129-RESISTIVE TRANSFORMER SECONDARY

W1131-RESISTIVE TRANSFORMER SECONDARY

W1133-RESISTIVE TRANSFORMER SECONDARY

W1135-RESISTIVE TRANSFORMER SECONDARY

W1137-RESISTIVE TRANSFORMER SECONDARY

W1139-RESISTIVE TRANSFORMER SECONDARY

W1141-RESISTIVE TRANSFORMER SECONDARY

W1143-RESISTIVE TRANSFORMER SECONDARY

W1145-RESISTIVE TRANSFORMER SECONDARY

W1147-RESISTIVE TRANSFORMER SECONDARY

W1149-RESISTIVE TRANSFORMER SECONDARY

W1151-RESISTIVE TRANSFORMER SECONDARY

W1153-RESISTIVE TRANSFORMER SECONDARY

W1155-RESISTIVE TRANSFORMER SECONDARY

W1157-RESISTIVE TRANSFORMER SECONDARY

W1159-RESISTIVE TRANSFORMER SECONDARY

W1161-RESISTIVE TRANSFORMER SECONDARY

W1163-RESISTIVE TRANSFORMER SECONDARY

W1165-RESISTIVE TRANSFORMER SECONDARY

W1167-RESISTIVE TRANSFORMER SECONDARY

W1169-RESISTIVE TRANSFORMER SECONDARY

W1171-RESISTIVE TRANSFORMER SECONDARY

W1173-RESISTIVE TRANSFORMER SECONDARY

W1175-RESISTIVE TRANSFORMER SECONDARY

W1177-RESISTIVE TRANSFORMER SECONDARY

W1179-RESISTIVE TRANSFORMER SECONDARY

W1181-RESISTIVE TRANSFORMER SECONDARY

W1183-RESISTIVE TRANSFORMER SECONDARY

W1185-RESISTIVE TRANSFORMER SECONDARY

W1187-RESISTIVE TRANSFORMER SECONDARY

W1189-RESISTIVE TRANSFORMER SECONDARY

W1191-RESISTIVE TRANSFORMER SECONDARY

W1193-RESISTIVE TRANSFORMER SECONDARY

W1195-RESISTIVE TRANSFORMER SECONDARY

W1197-RESISTIVE TRANSFORMER SECONDARY

W1199-RESISTIVE TRANSFORMER SECONDARY

W1201-RESISTIVE TRANSFORMER SECONDARY

W1203-RESISTIVE TRANSFORMER SECONDARY

W1205-RESISTIVE TRANSFORMER SECONDARY

W1207-RESISTIVE TRANSFORMER SECONDARY

W1209-RESISTIVE TRANSFORMER SECONDARY

W1211-RESISTIVE TRANSFORMER SECONDARY

W1213-RESISTIVE TRANSFORMER SECONDARY

W1215-RESISTIVE TRANSFORMER SECONDARY

W1217-RESISTIVE TRANSFORMER SECONDARY

W1219-RESISTIVE TRANSFORMER SECONDARY

W1221-RESISTIVE TRANSFORMER SECONDARY

W1223-RESISTIVE TRANSFORMER SECONDARY

W1225-RESISTIVE TRANSFORMER SECONDARY

W1227-RESISTIVE TRANSFORMER SECONDARY

W1229-RESISTIVE TRANSFORMER SECONDARY

W1231-RESISTIVE TRANSFORMER SECONDARY

W1233-RESISTIVE TRANSFORMER SECONDARY

W1235-RESISTIVE TRANSFORMER SECONDARY

W1237-RESISTIVE TRANSFORMER SECONDARY

W1239-RESISTIVE TRANSFORMER SECONDARY

W1241-RESISTIVE TRANSFORMER SECONDARY

W1243-RESISTIVE TRANSFORMER SECONDARY

W1245-RESISTIVE TRANSFORMER SECONDARY

W1247-RESISTIVE TRANSFORMER SECONDARY

W1249-RESISTIVE TRANSFORMER SECONDARY

W1251-RESISTIVE TRANSFORMER SECONDARY

W1253-RESISTIVE TRANSFORMER SECONDARY

W1255-RESISTIVE TRANSFORMER SECONDARY

W1257-RESISTIVE TRANSFORMER SECONDARY

W1259-RESISTIVE TRANSFORMER SECONDARY

W1261-RESISTIVE TRANSFORMER SECONDARY

W1263-RESISTIVE TRANSFORMER SECONDARY

W1265-RESISTIVE TRANSFORMER SECONDARY

W1267-RESISTIVE TRANSFORMER SECONDARY

W1269-RESISTIVE TRANSFORMER SECONDARY

W1271-RESISTIVE TRANSFORMER SECONDARY

W1273-RESISTIVE TRANSFORMER SECONDARY

W1275-RESISTIVE TRANSFORMER SECONDARY

W1277-RESISTIVE TRANSFORMER SECONDARY

W1279-RESISTIVE TRANSFORMER SECONDARY

W1281-RESISTIVE TRANSFORMER SECONDARY

W1283-RESISTIVE TRANSFORMER SECONDARY

W1285-RESISTIVE TRANSFORMER SECONDARY

W1287-RESISTIVE TRANSFORMER SECONDARY

W1289-RESISTIVE TRANSFORMER SECONDARY

W1291-RESISTIVE TRANSFORMER SECONDARY

W1293-RESISTIVE TRANSFORMER SECONDARY

W1295-RESISTIVE TRANSFORMER SECONDARY

W1297-RESISTIVE TRANSFORMER SECONDARY

W1299-RESISTIVE TRANSFORMER SECONDARY

W1301-RESISTIVE TRANSFORMER SECONDARY

W1303-RESISTIVE TRANSFORMER SECONDARY

W1305-RESISTIVE TRANSFORMER SECONDARY

W1307-RESISTIVE TRANSFORMER SECONDARY

W1309-RESISTIVE TRANSFORMER SECONDARY

W1311-RESISTIVE TRANSFORMER SECONDARY

W1313-RESISTIVE TRANSFORMER SECONDARY

W1315-RESISTIVE TRANSFORMER SECONDARY

W1317-RESISTIVE TRANSFORMER SECONDARY

W1319-RESISTIVE TRANSFORMER SECONDARY

W1321-RESISTIVE TRANSFORMER SECONDARY

W1323-RESISTIVE TRANSFORMER SECONDARY

W1325-RESISTIVE TRANSFORMER SECONDARY

W1327-RESISTIVE TRANSFORMER SECONDARY

W1329-RESISTIVE TRANSFORMER SECONDARY





W1331-RESISTIVE TRANSFORMER SECONDARY

W1333-RESISTIVE TRANSFORMER SECONDARY

W1335-RESISTIVE TRANSFORMER

VERTIV COOLPHASE CEILING

GENERAL ARRANGEMENT 1-2 TON DIRECT EXPANSION AIR COOLED

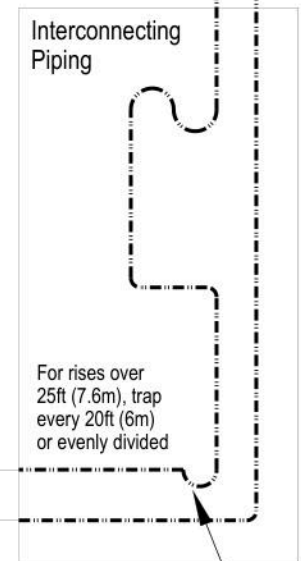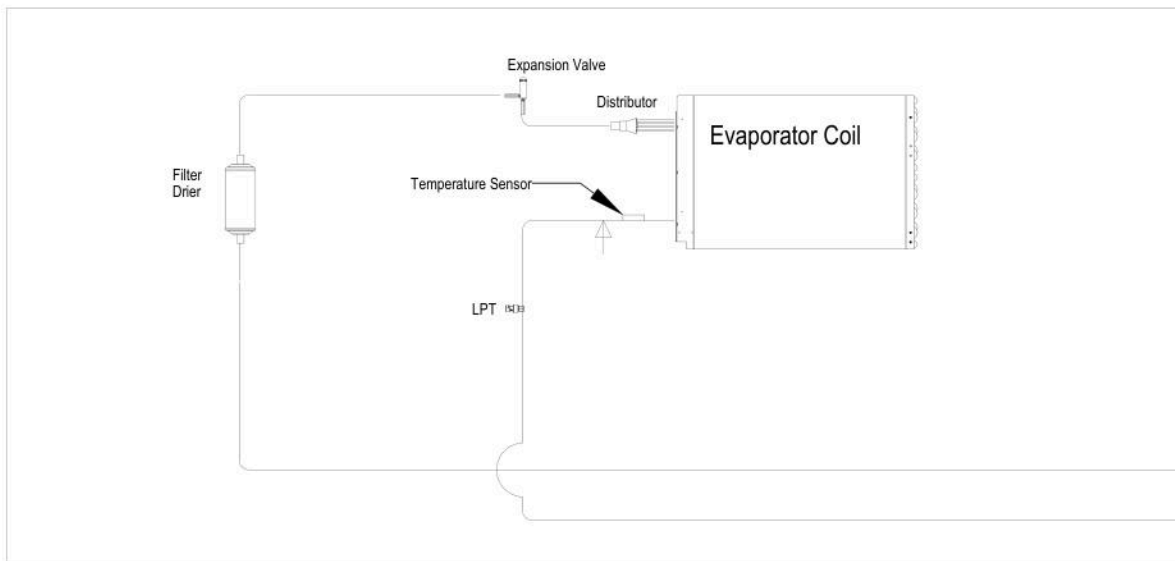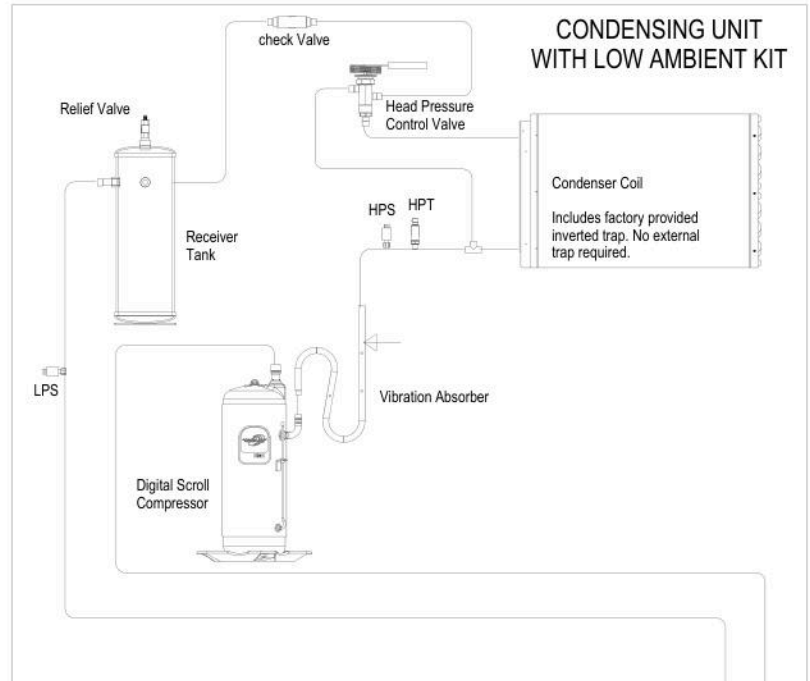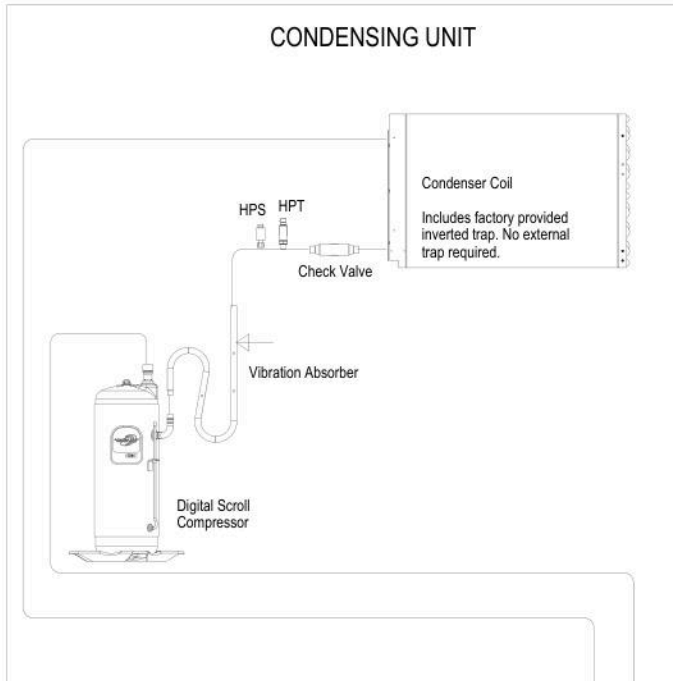

FACTORY REFRIGERANT PIPING

FIELD PIPING

▽ SERVICE / SCHRADER (ACCESS) CONNECTION NO VALVE CORE

▽ SERVICE / SCHRADER (ACCESS) CONNECTION WITH VALVE CORE


Notes:

1. Schematic representation shown. Do not use for specific connection location.
2. Interconnecting piping are not supplied by Vertiv™, but are required for proper circuit operation and maintenance.
3. Do not isolate any refrigerant circuit from over pressurization protection.
4. Traps must be installed and horizontal lines pitched to ensure proper oil return and to reduce liquid floodback to compressor. Pitch horizontal hot gas piping at a minimum of 1/2" per 10 feet (42mm per 10m) so that gravity will aid in moving oil in the direction of the refrigeration flow.




VERTIV COOLPHASE CEILING

GENERAL ARRANGEMENT 3-8 TON DIRECT EXPANSION AIR COOLED

CONDENSING UNIT

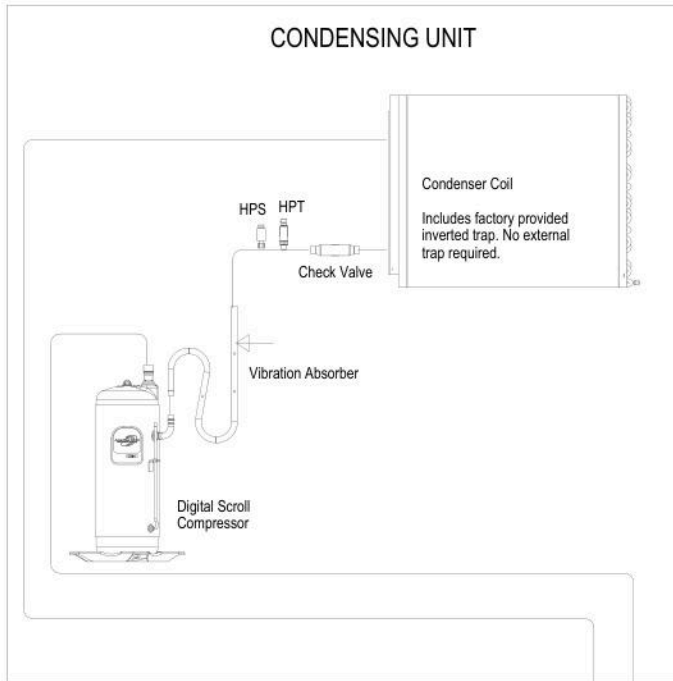

CONDENSING UNIT
WITH LOW AMBIENT KIT

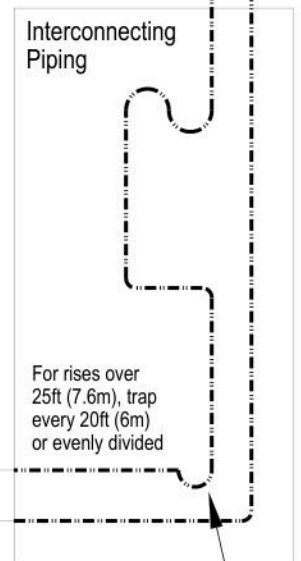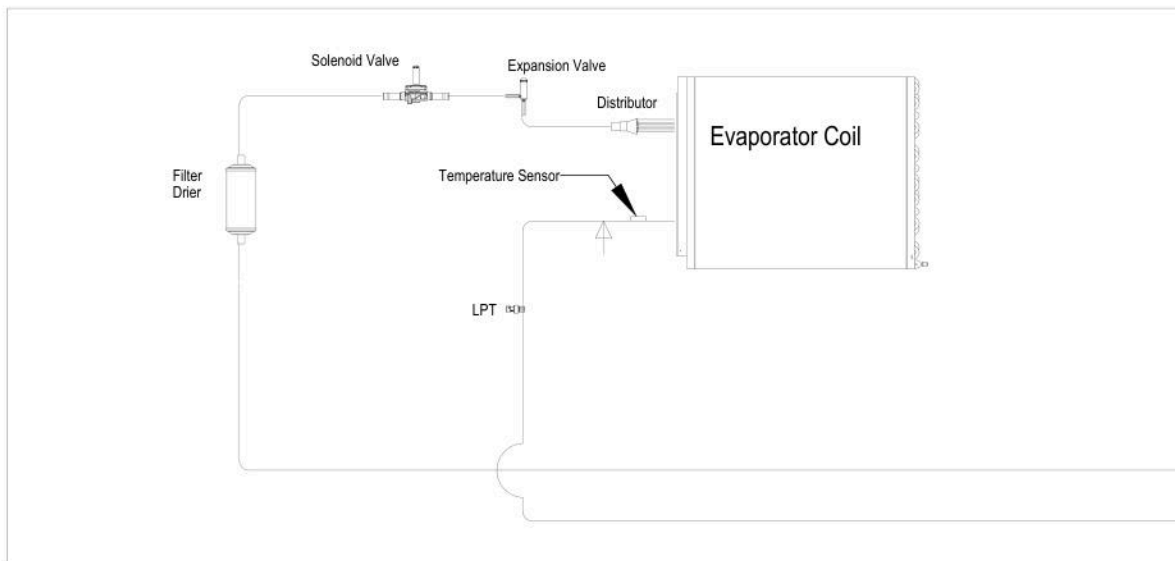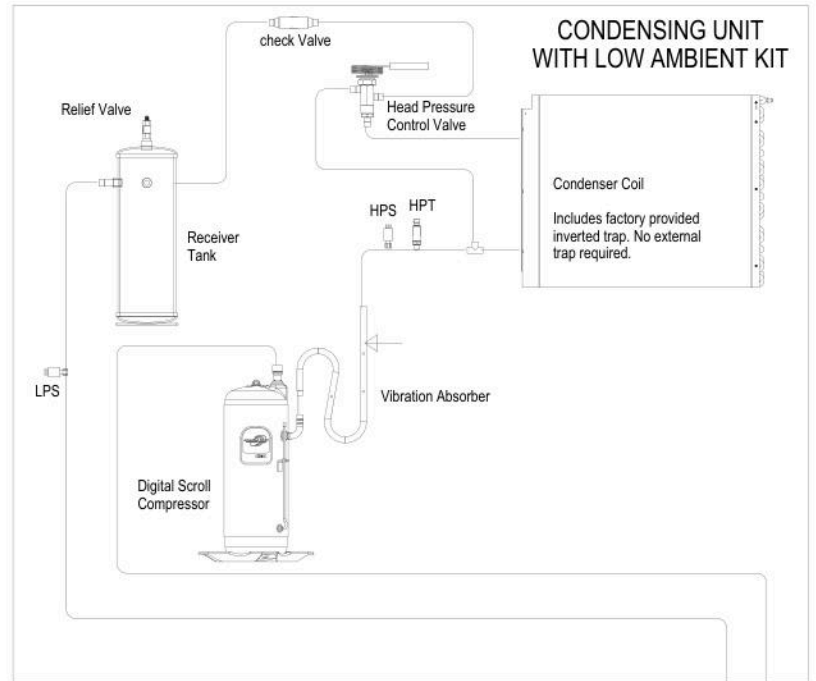

FACTORY REFRIGERANT PIPING
FIELD PIPING


▽ SERVICE / SCHRADER (ACCESS) CONNECTION NO VALVE CORE
▽ SERVICE / SCHRADER (ACCESS) CONNECTION WITH VALVE CORE

Trap at base of risers over 5ft. (1.5m)

- Notes:
1. Schematic representation shown. Do not use for specific connection location. Filter Drier and Solenoid Valve could be in different order in the liquid line depending on the model.
 2. Interconnecting piping is not supplied by Vertiv™, but is required for proper circuit operation and maintenance.
 3. Do not isolate any refrigerant circuit from over pressurization protection.
 4. Traps must be installed and horizontal lines pitched to ensure proper oil return and to reduce liquid floodback to compressor. Pitch horizontal hot gas piping at a minimum of 1/2" per 10 feet (42mm per 10m) so that gravity will aid in moving oil in the direction of the refrigeration flow.

VERTIV COOLPHASE CEILING

GENERAL ARRANGEMENT 1-8 TON FREE COOLING

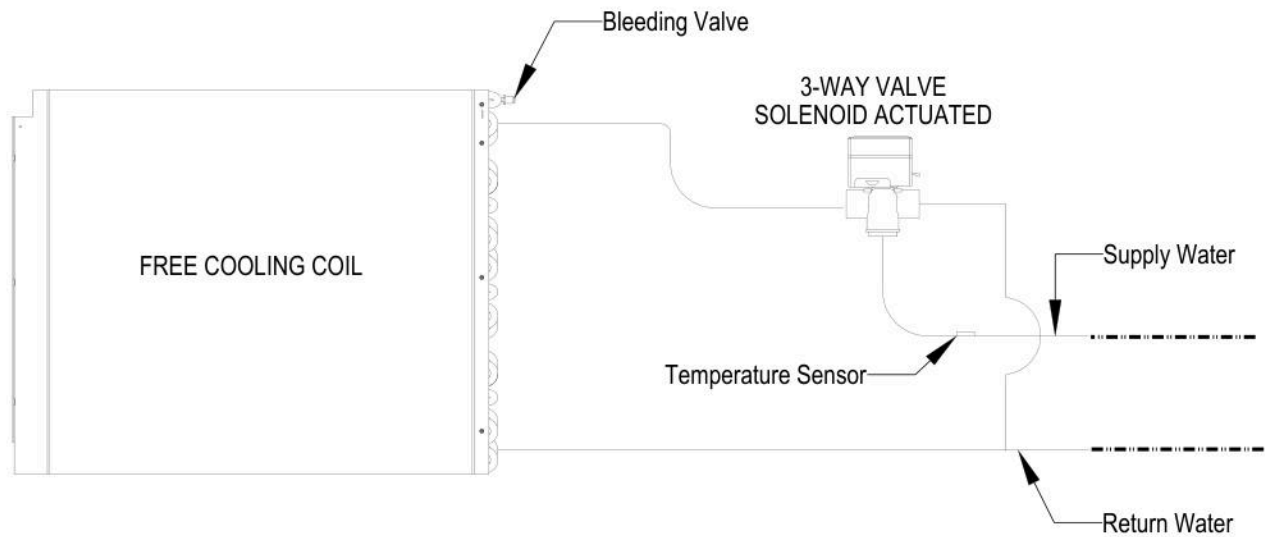

— FACTORY PIPING
- - - FIELD PIPING

▽ SERVICE / SCHRADER (ACCESS) CONNECTION NO VALVE CORE
▽ SERVICE / SCHRADER (ACCESS) CONNECTION WITH VALVE CORE


Notes:

1. Schematic representation shown. Do not use for specific connection location.



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS DIRECT EXPANSION UNIT 1 TON PIPING SCHEMATICS

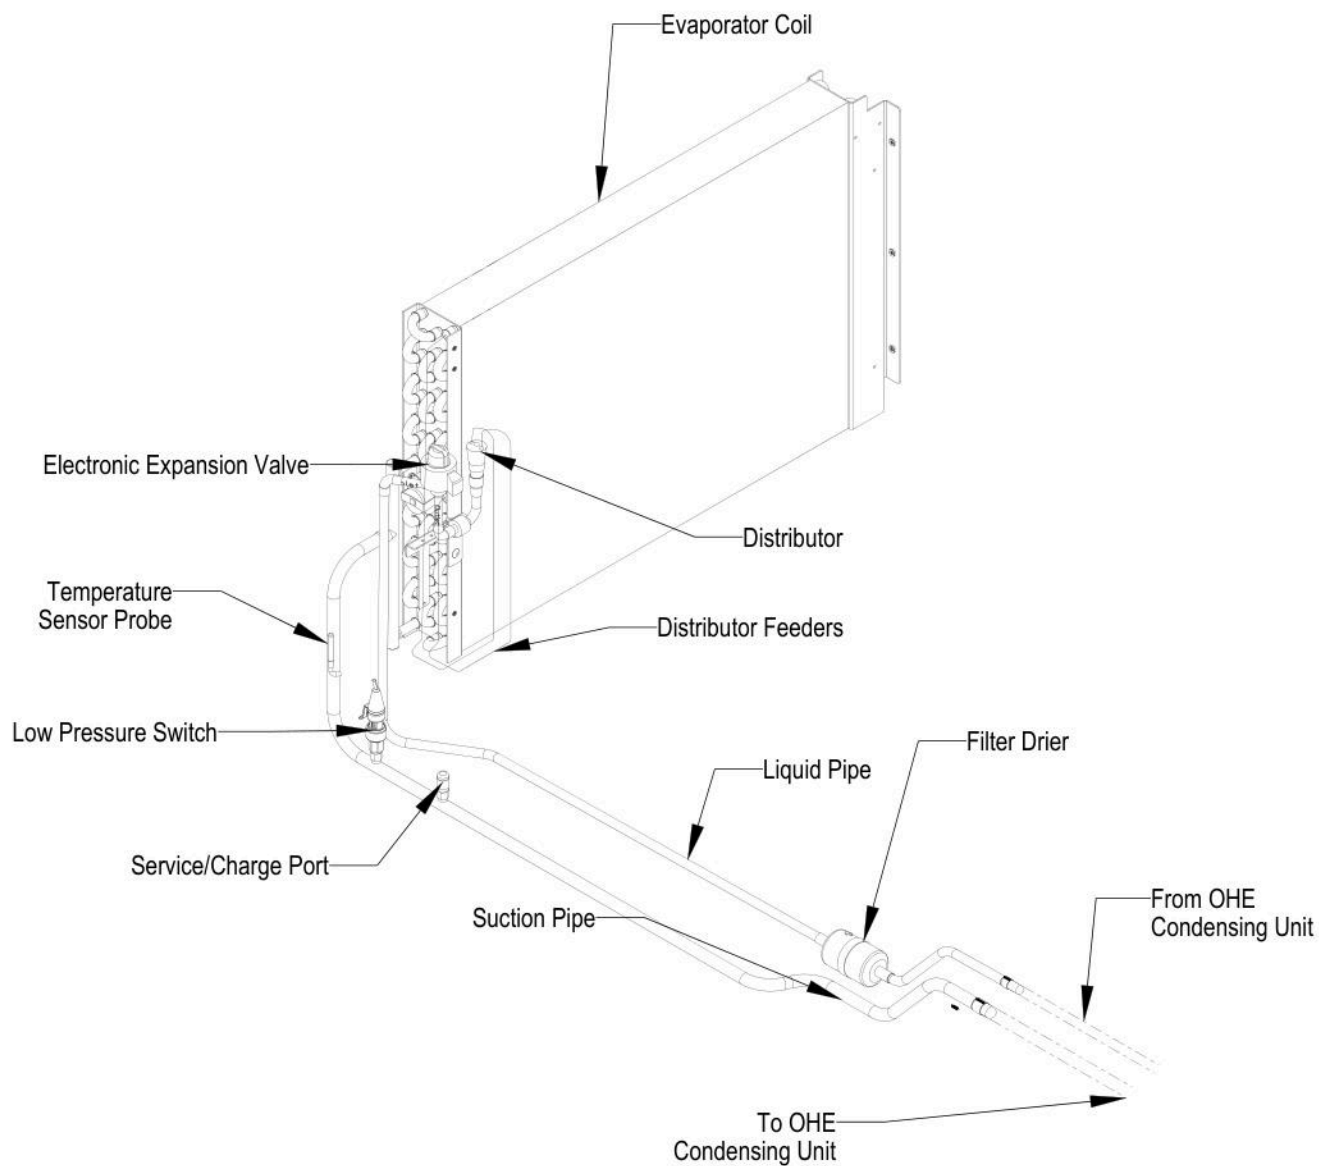



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS FREE COOLING OPTION 1 TON PIPING SCHEMATICS

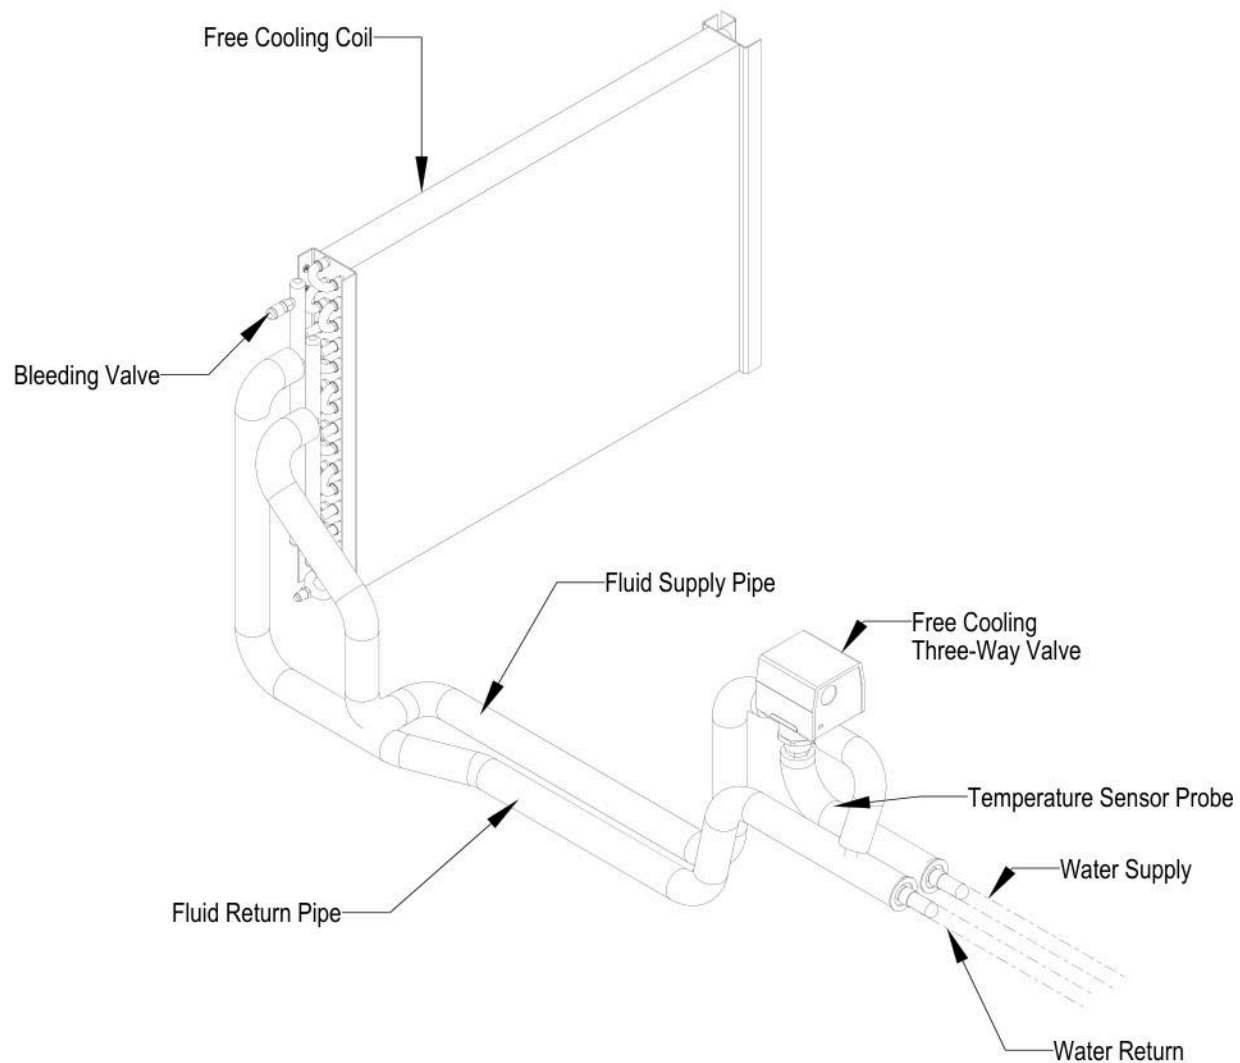



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS DIRECT EXPANSION UNIT 2 & 3 TON PIPING SCHEMATICS

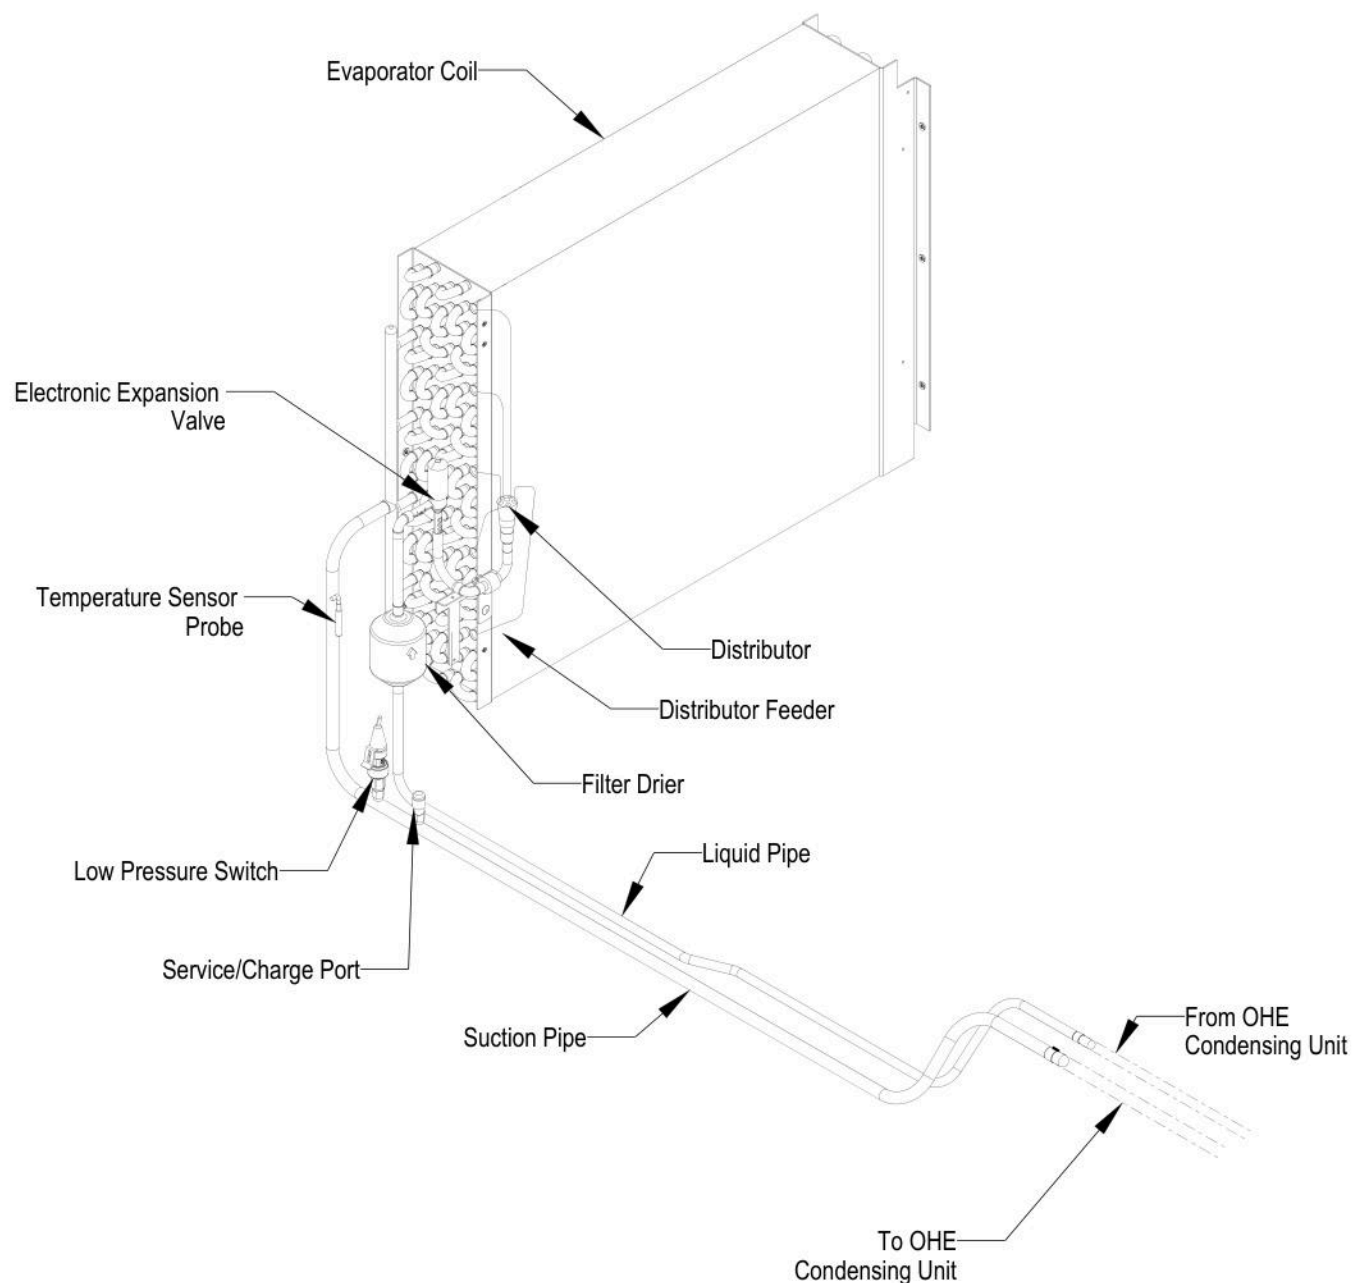



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS FREE COOLING OPTION 2 & 3 TON PIPING SCHEMATICS

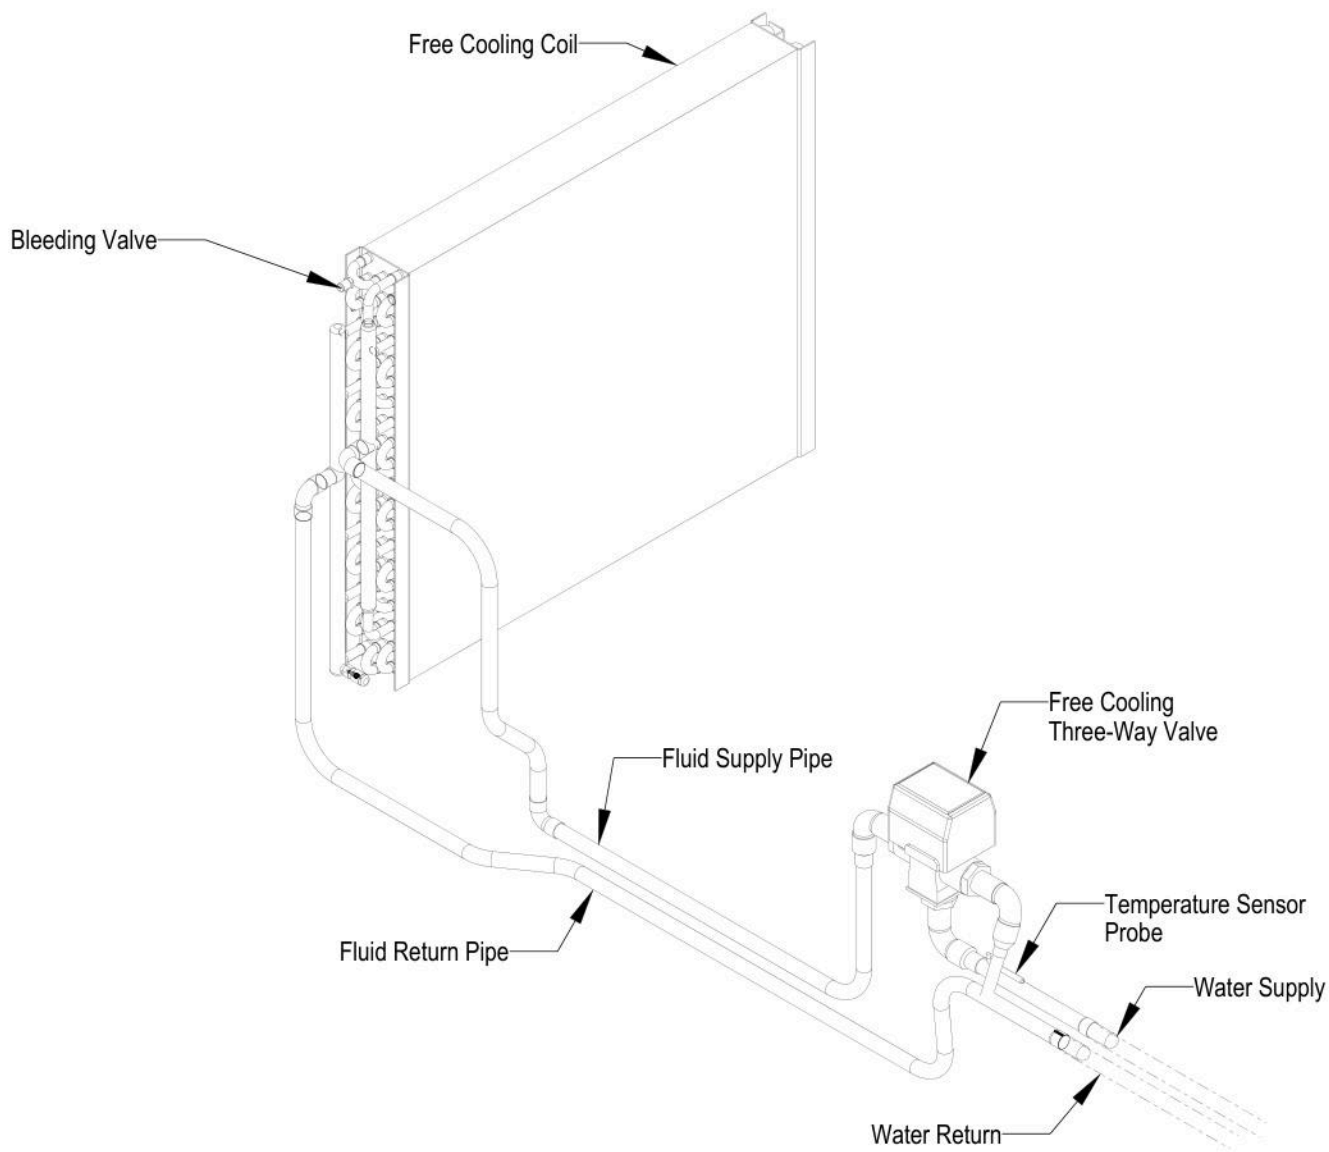



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS DIRECT EXPANSION UNIT 4 & 5 TON PIPING SCHEMATICS

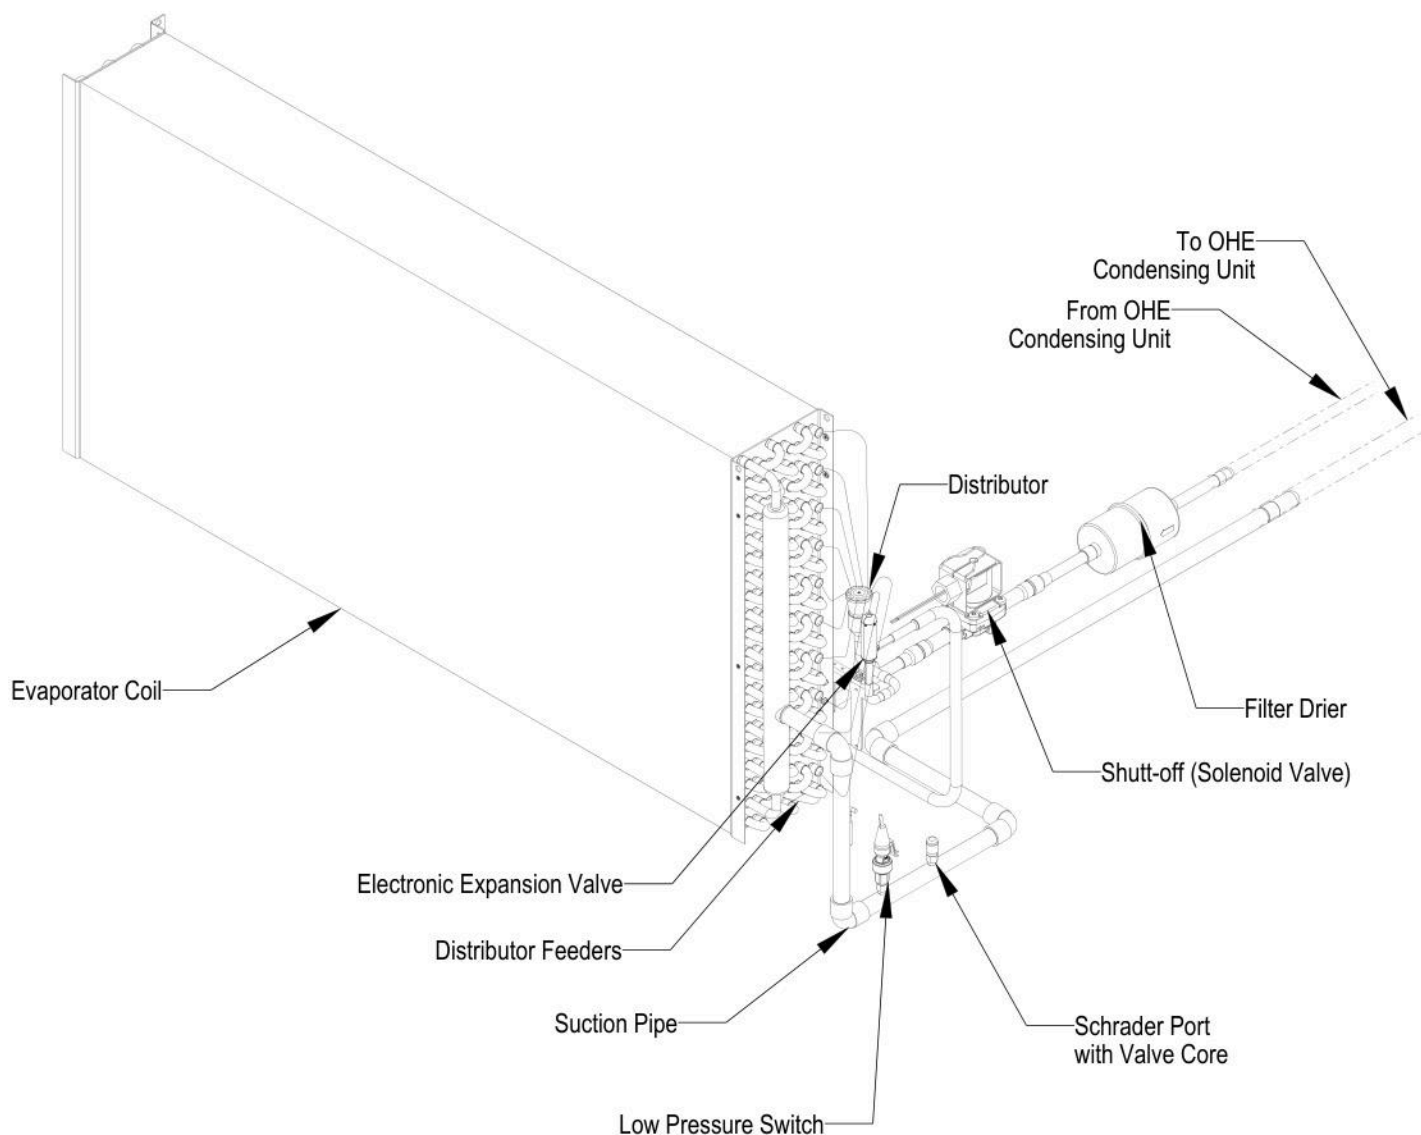



VERTIV COOLPHASE CEILING


PIPING SCHEMATICS FREE COOLING OPTION 4 & 5 TON PIPING SCHEMATICS

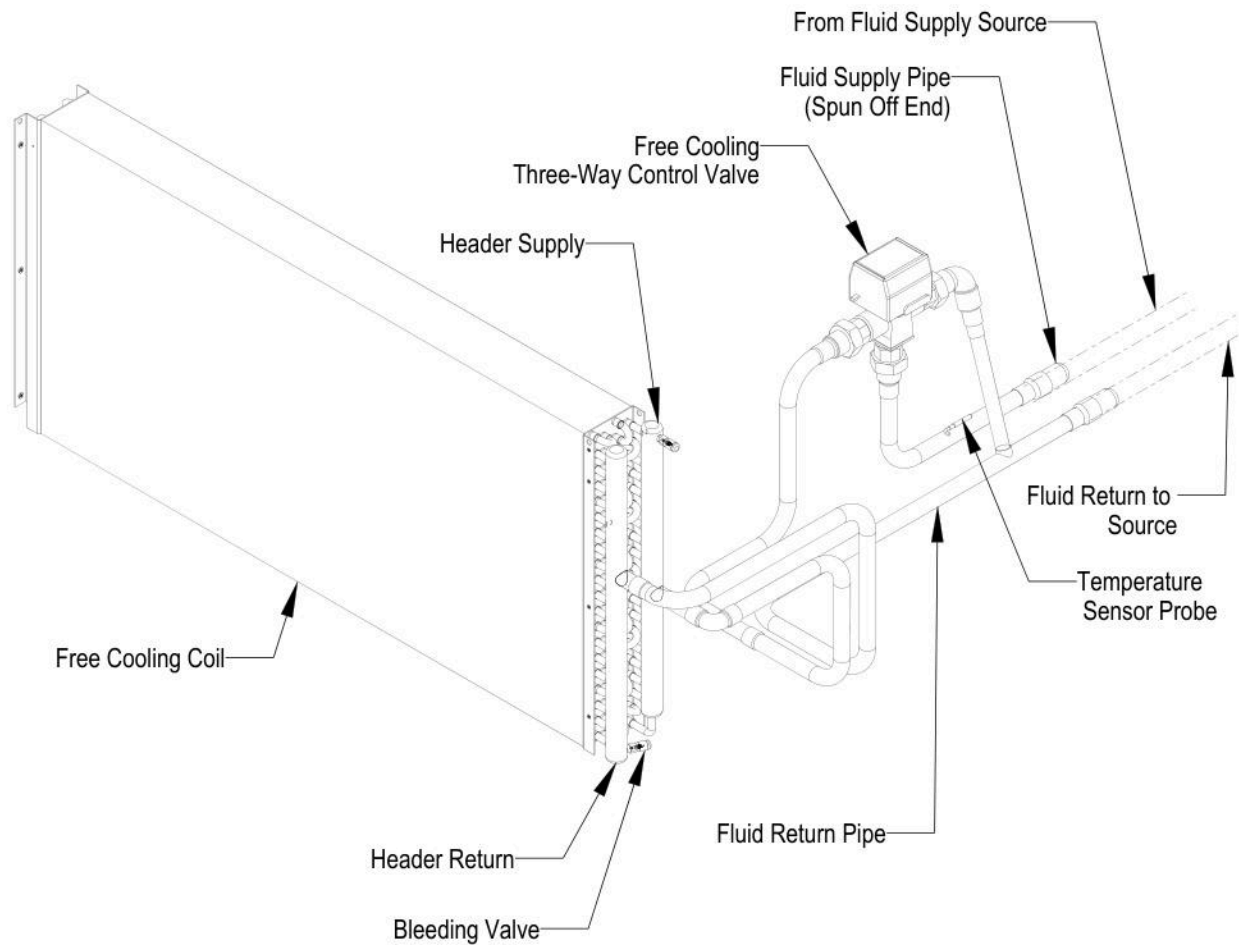




VERTIV COOLPHASE CEILING

PIPING SCHEMATIC DIRECT EXPANSION UNIT 8 TON PIPING SCHEMATICS

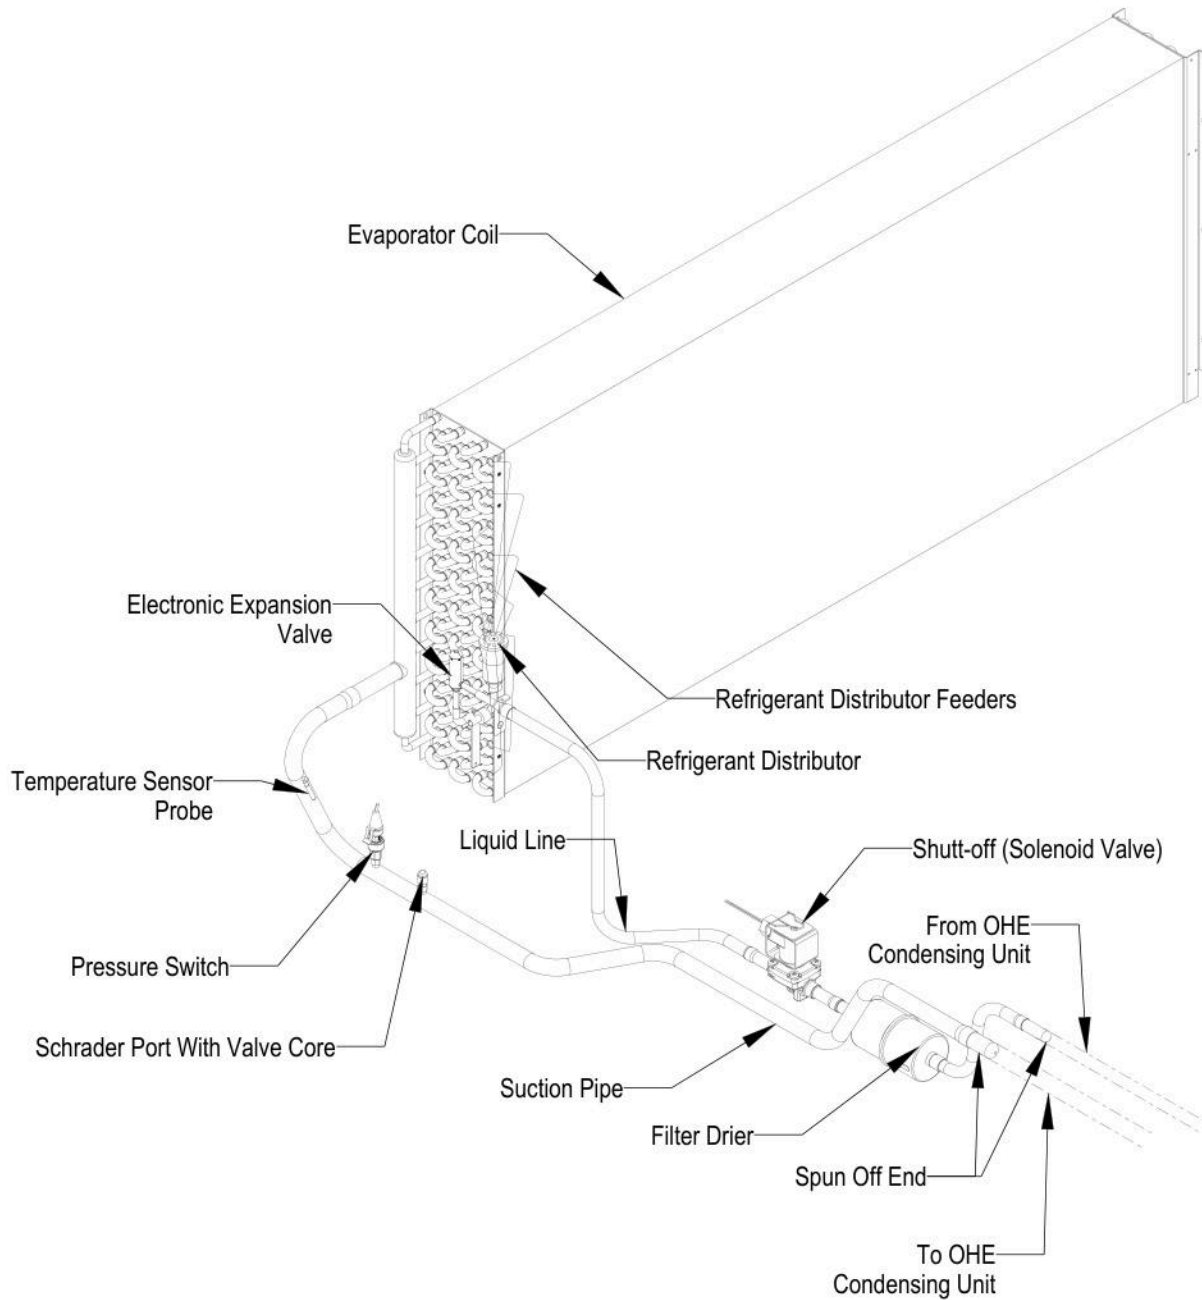


PIPING SCHEMATICS FREE COOLING OPTION 8 TON PIPING SCHEMATICS

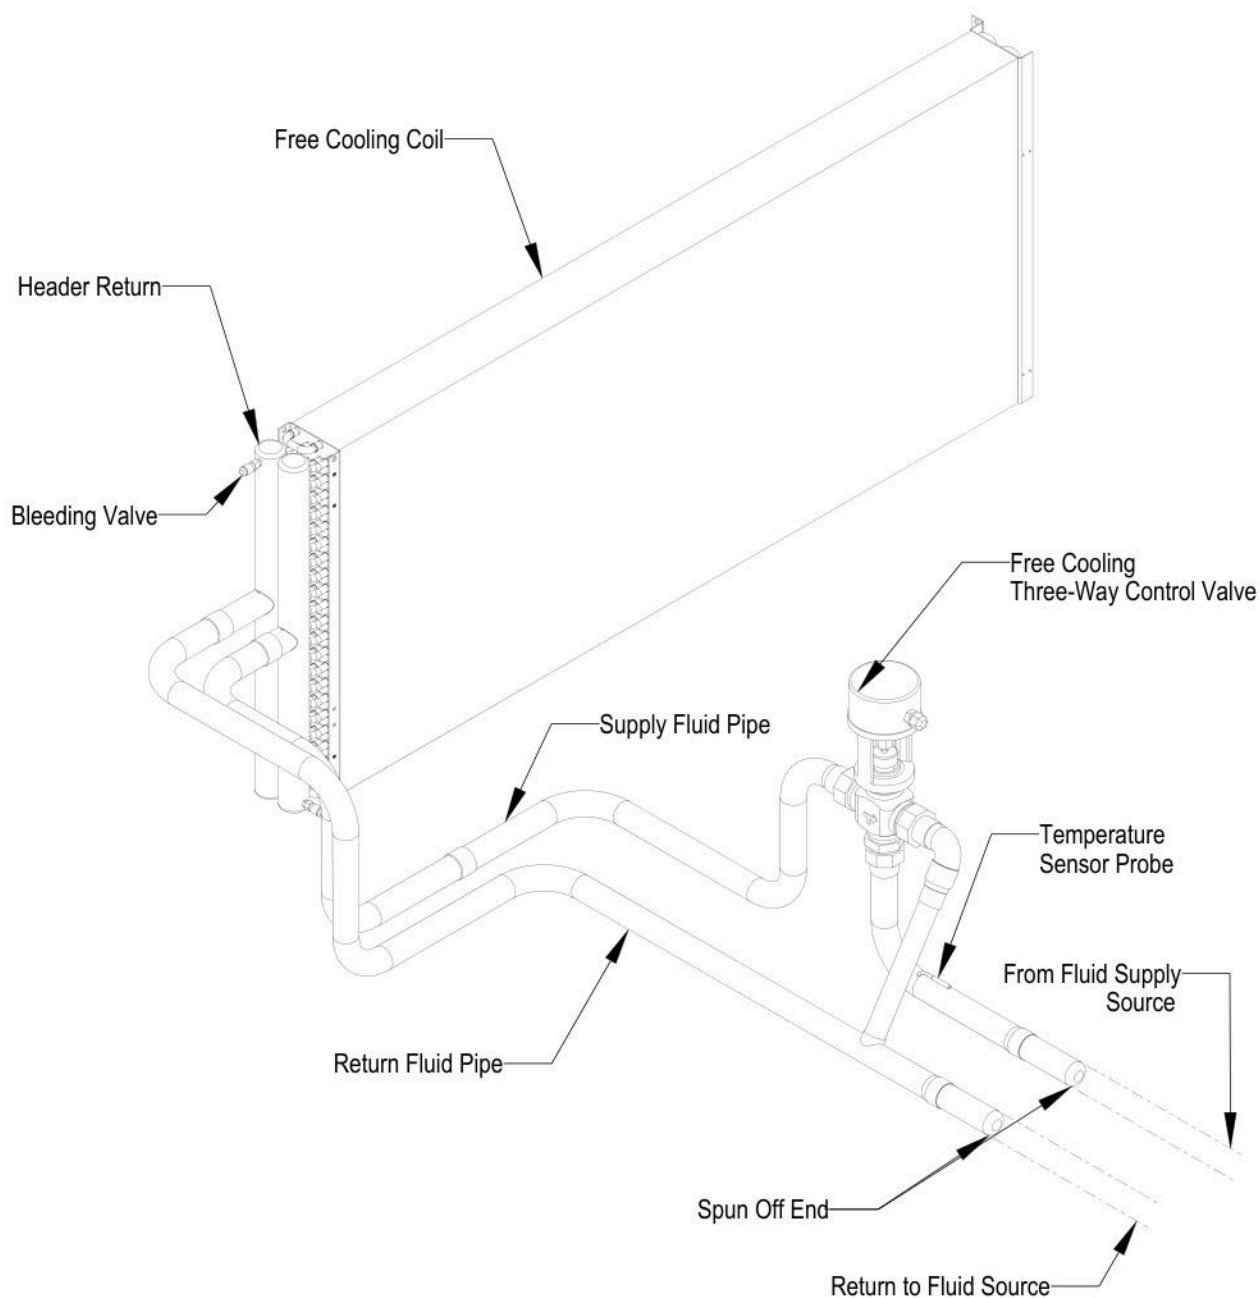

VERTIV COOLPHASE CEILING

PRIMARY CONNECTION LOCATIONS



1 TON DIRECT EXPANSION & FREE COOLING

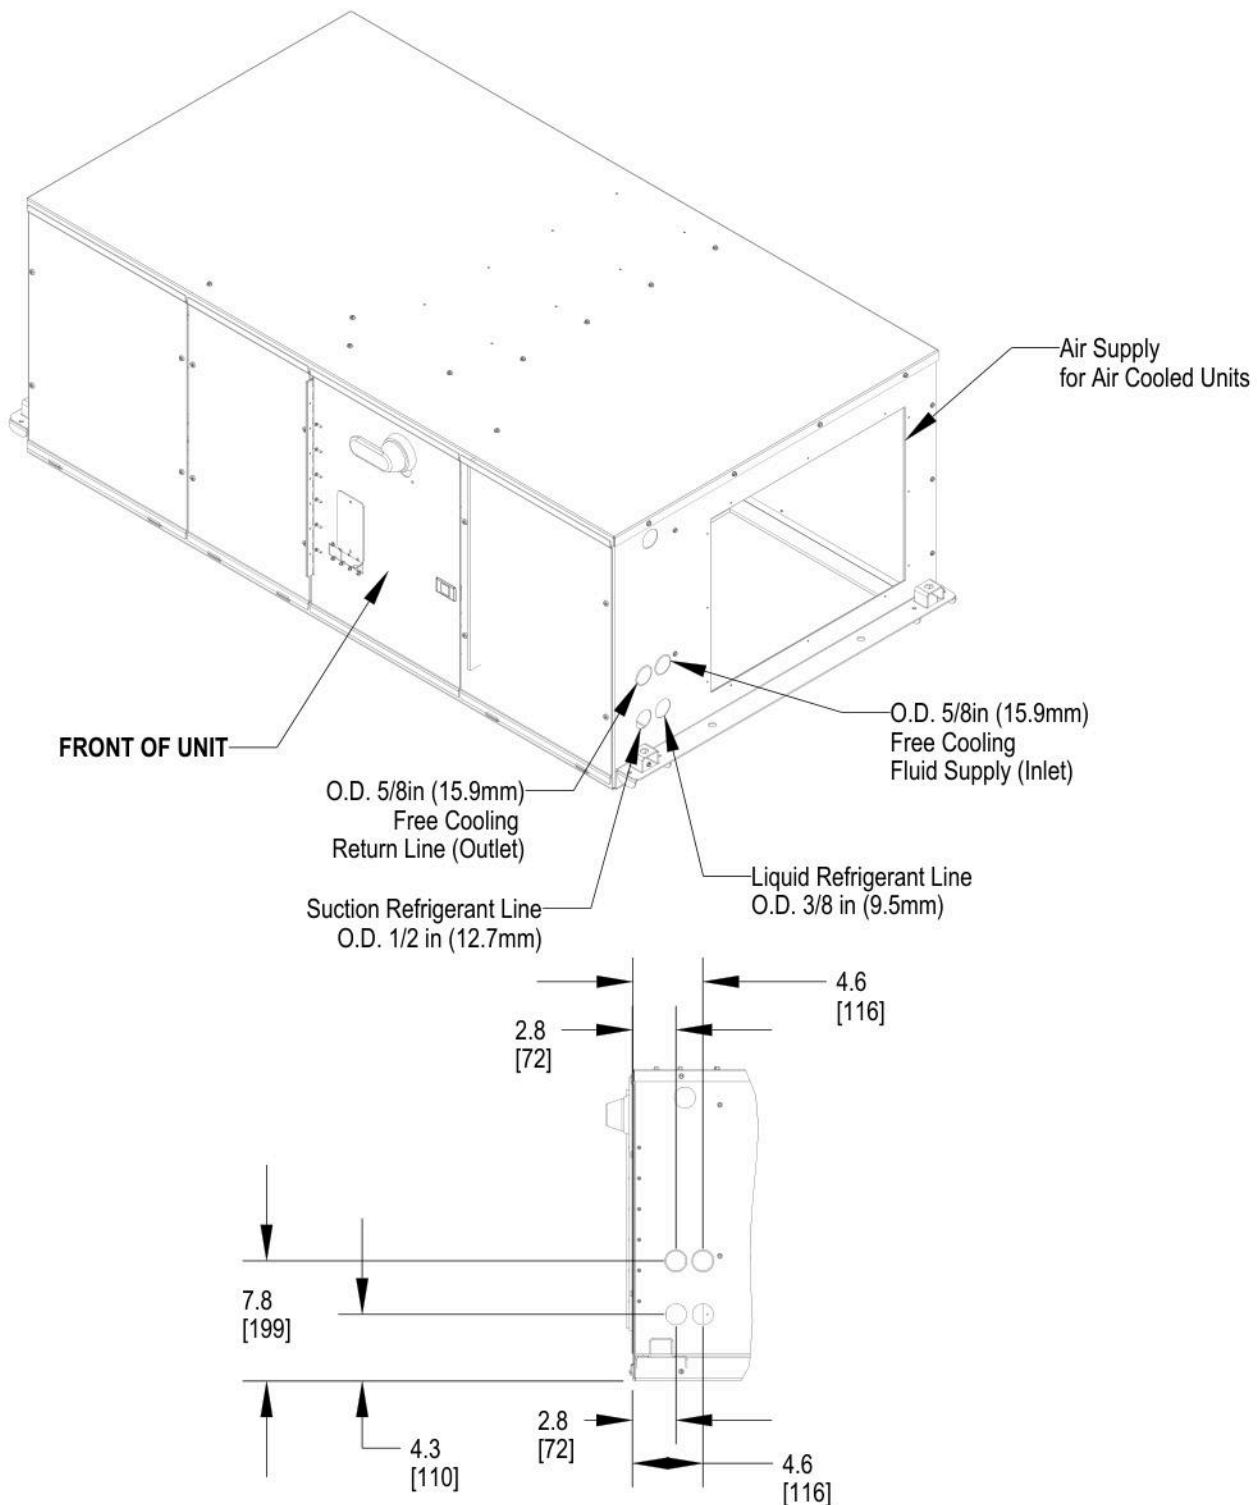

VERTIV COOLPHASE CEILING


PRIMARY CONNECTION LOCATIONS

1 TON DIRECT EXPANSION & FREE COOLING

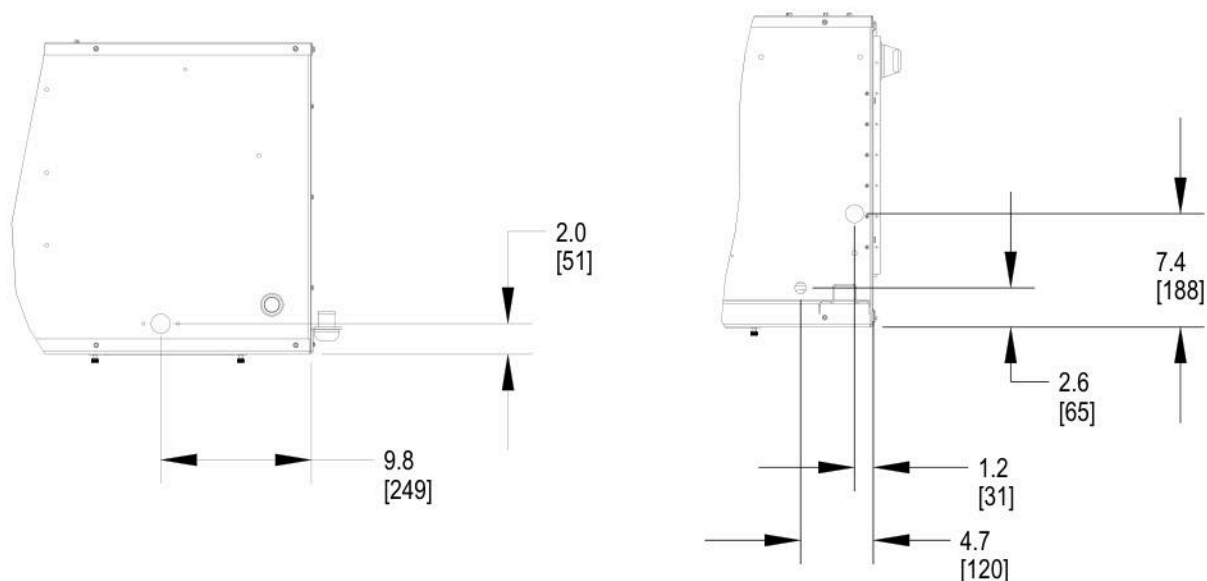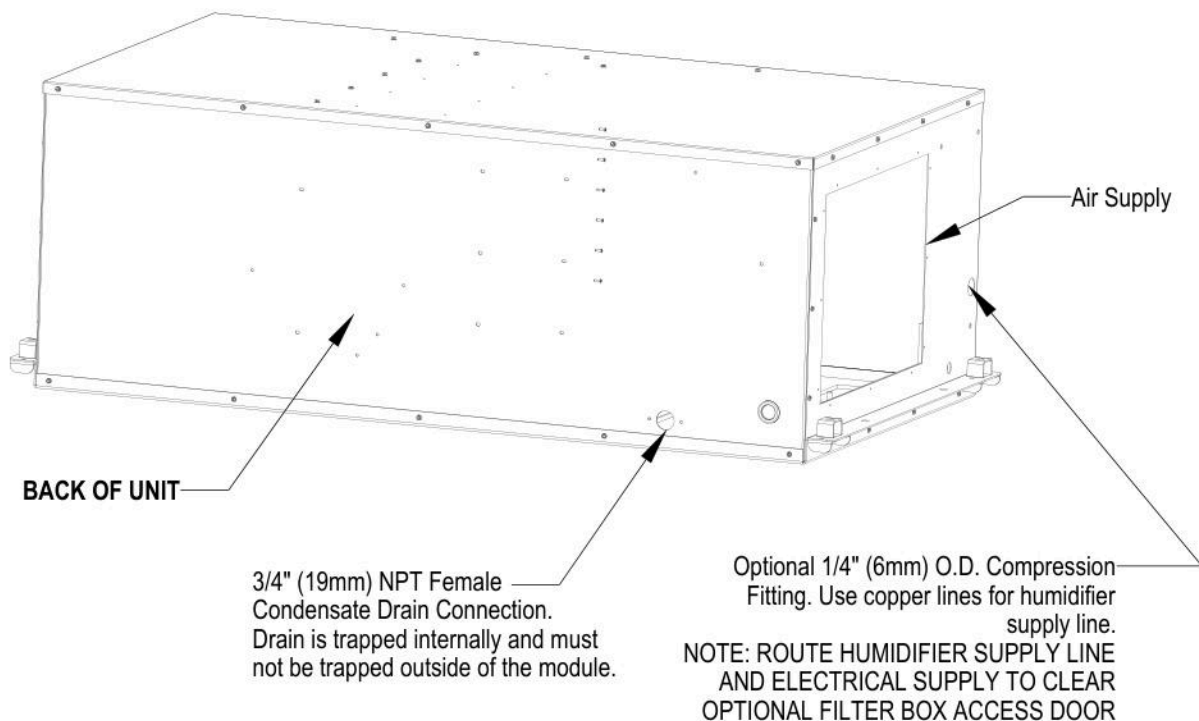




VERTIV COOLPHASE CEILING

PRIMARY CONNECTION LOCATIONS 2 & 3 TON DIRECT EXPANSION & FREE COOLING

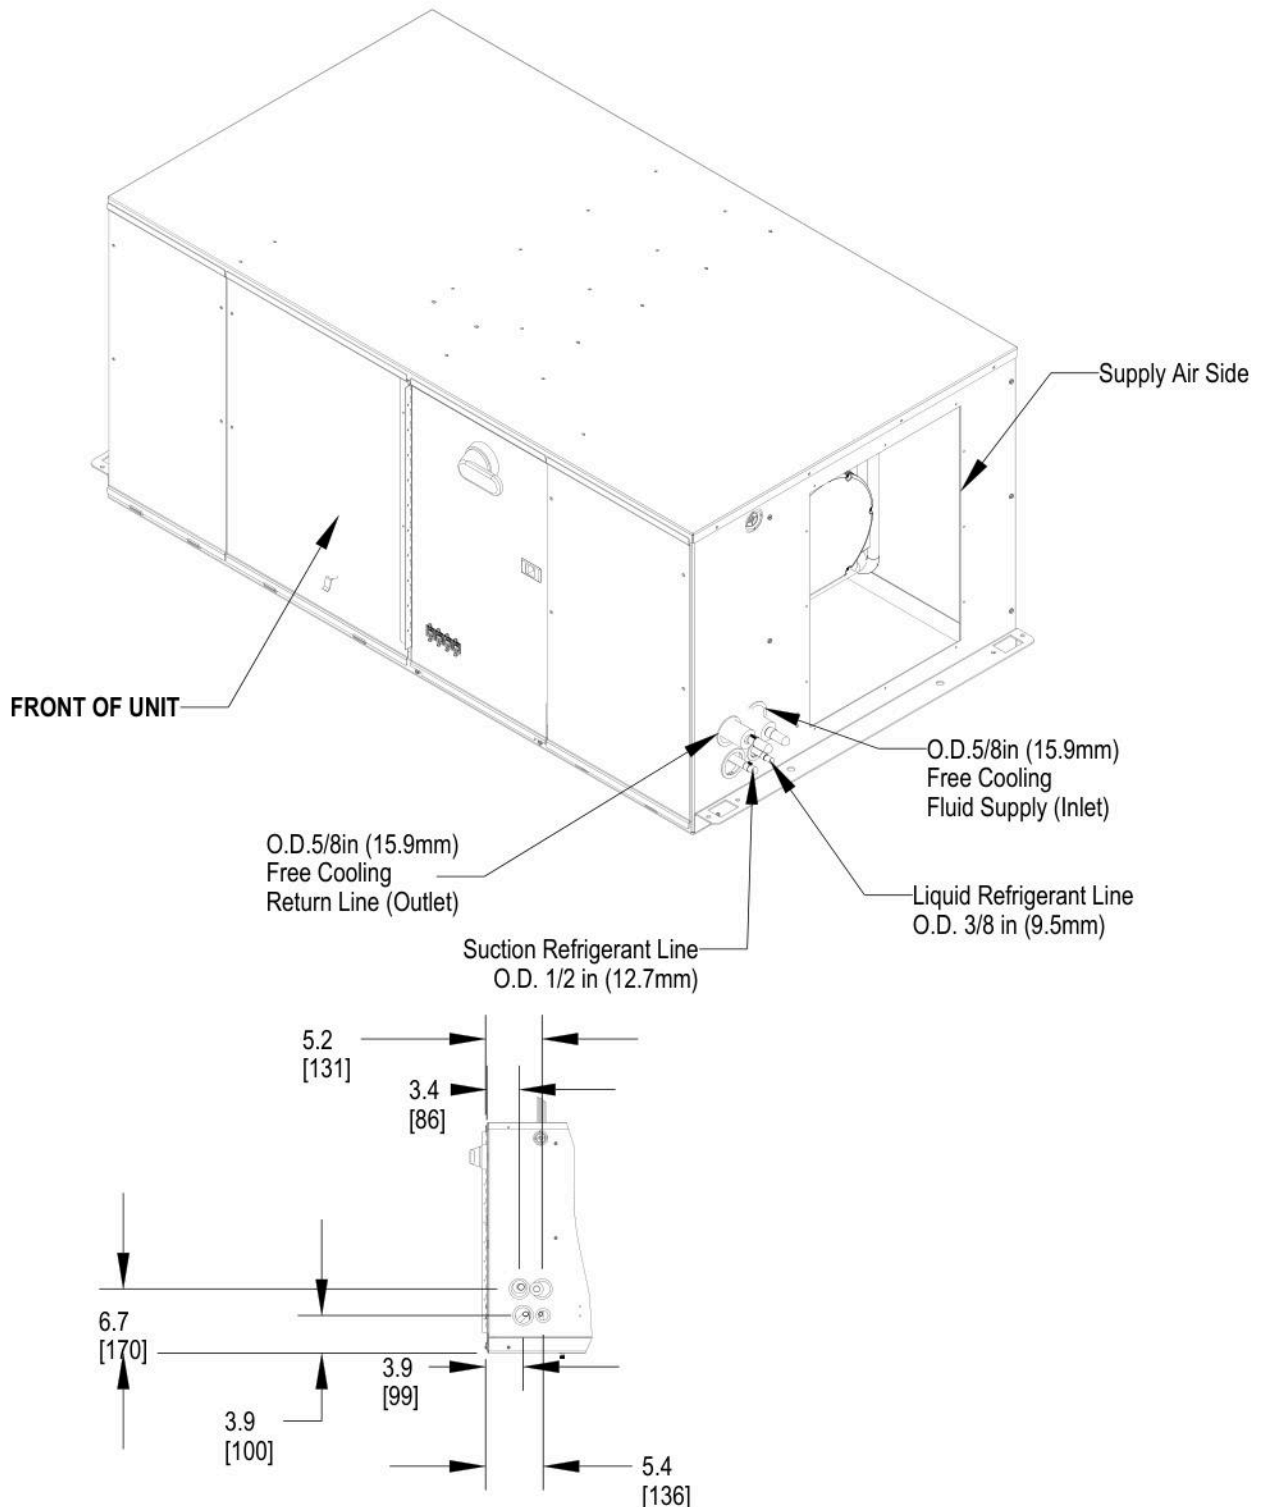

VERTIV COOLPHASE CEILING



PRIMARY CONNECTION LOCATIONS 2 & 3 TON DIRECT EXPANSION & FREE COOLING

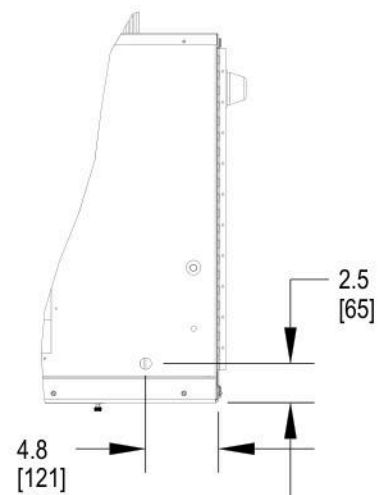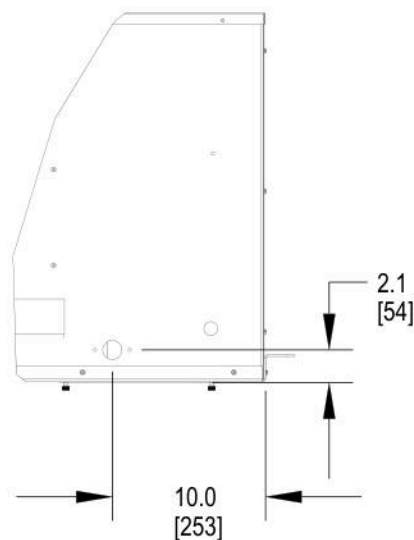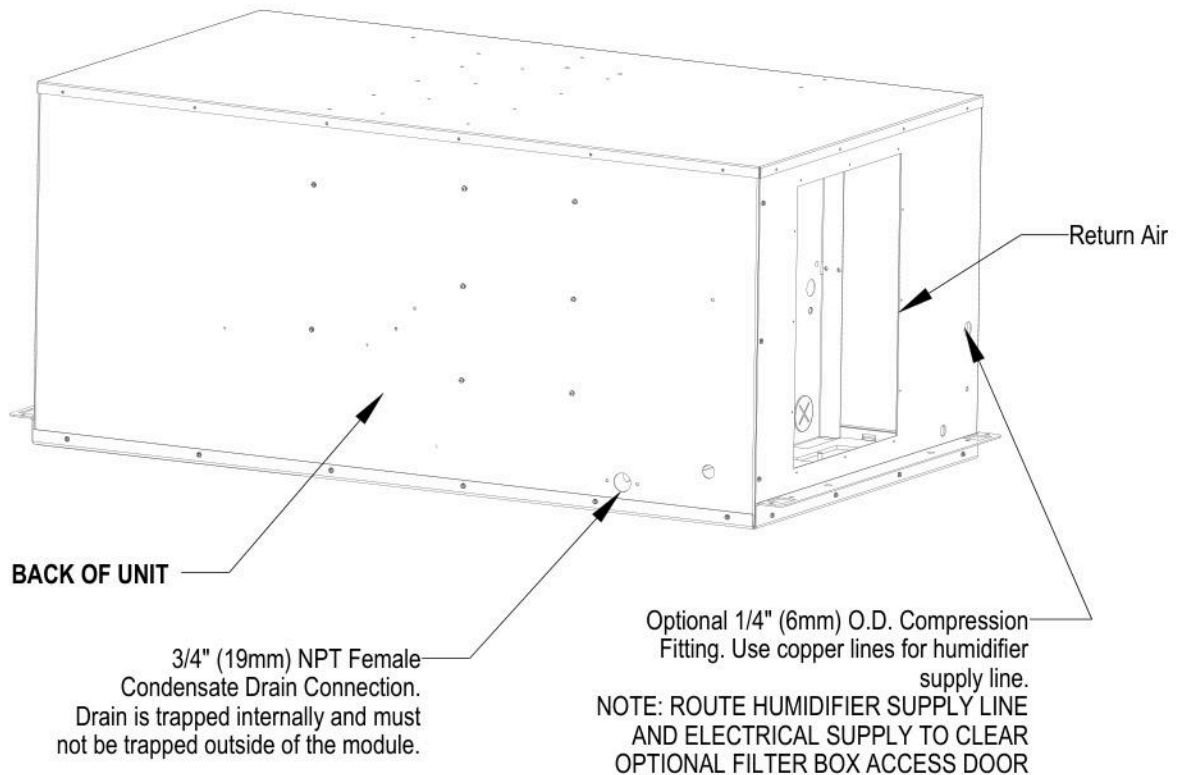



VERTIV COOLPHASE CEILING



PRIMARY CONNECTION LOCATIONS 4 & 5 TON DIRECT EXPANSION & FREE COOLING

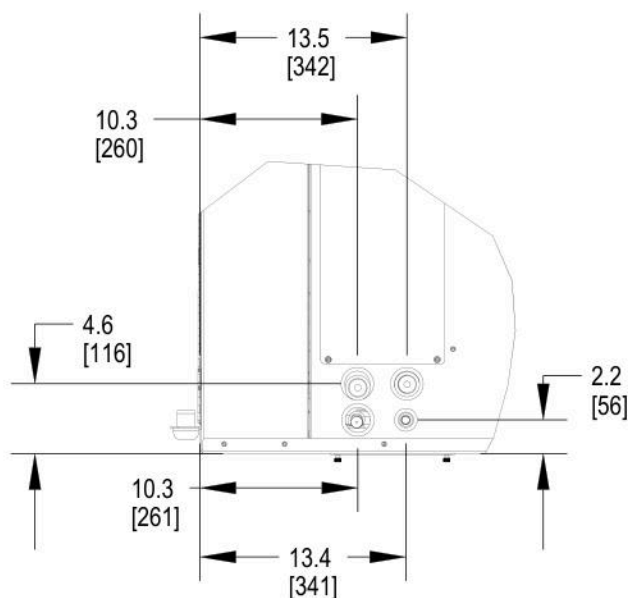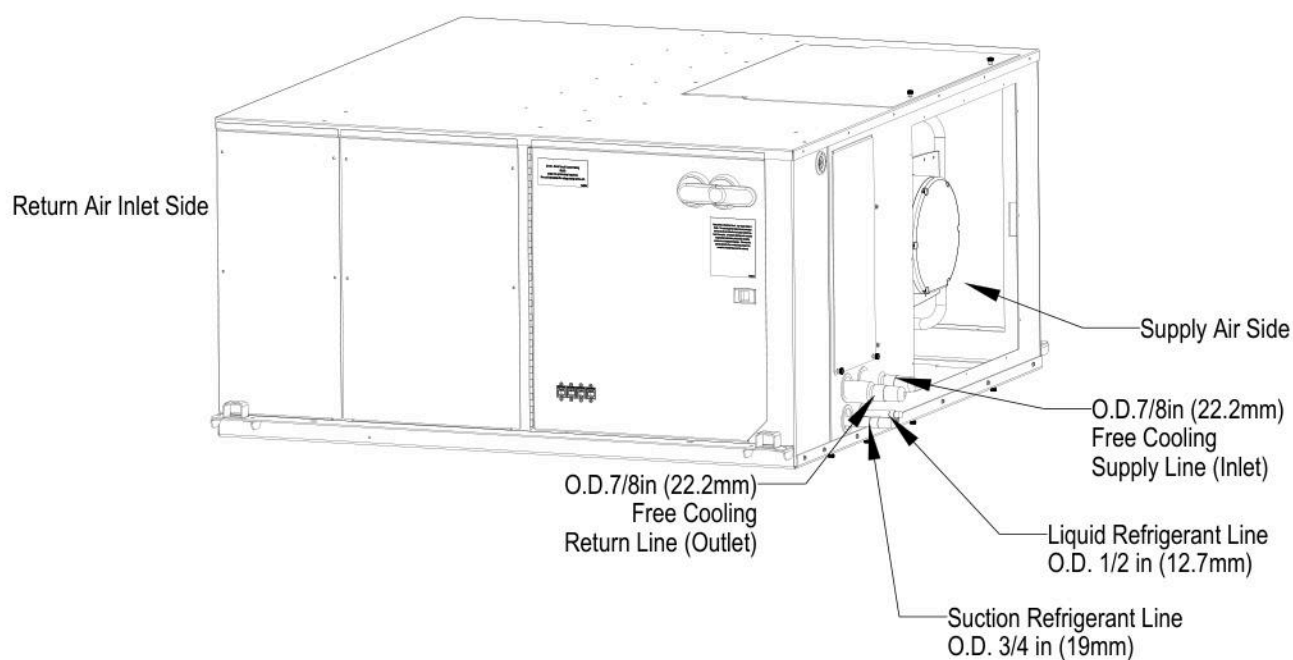



VERTIV COOLPHASE CEILING


PRIMARY CONNECTION LOCATIONS 4 & 5 TON DIRECT EXPANSION & FREE COOLING

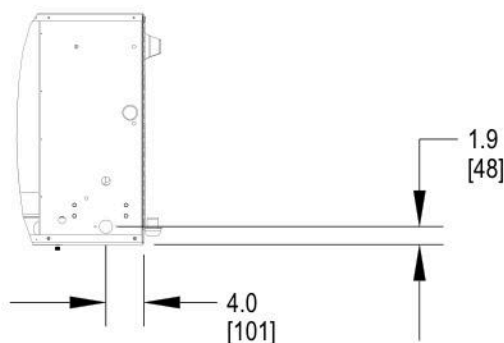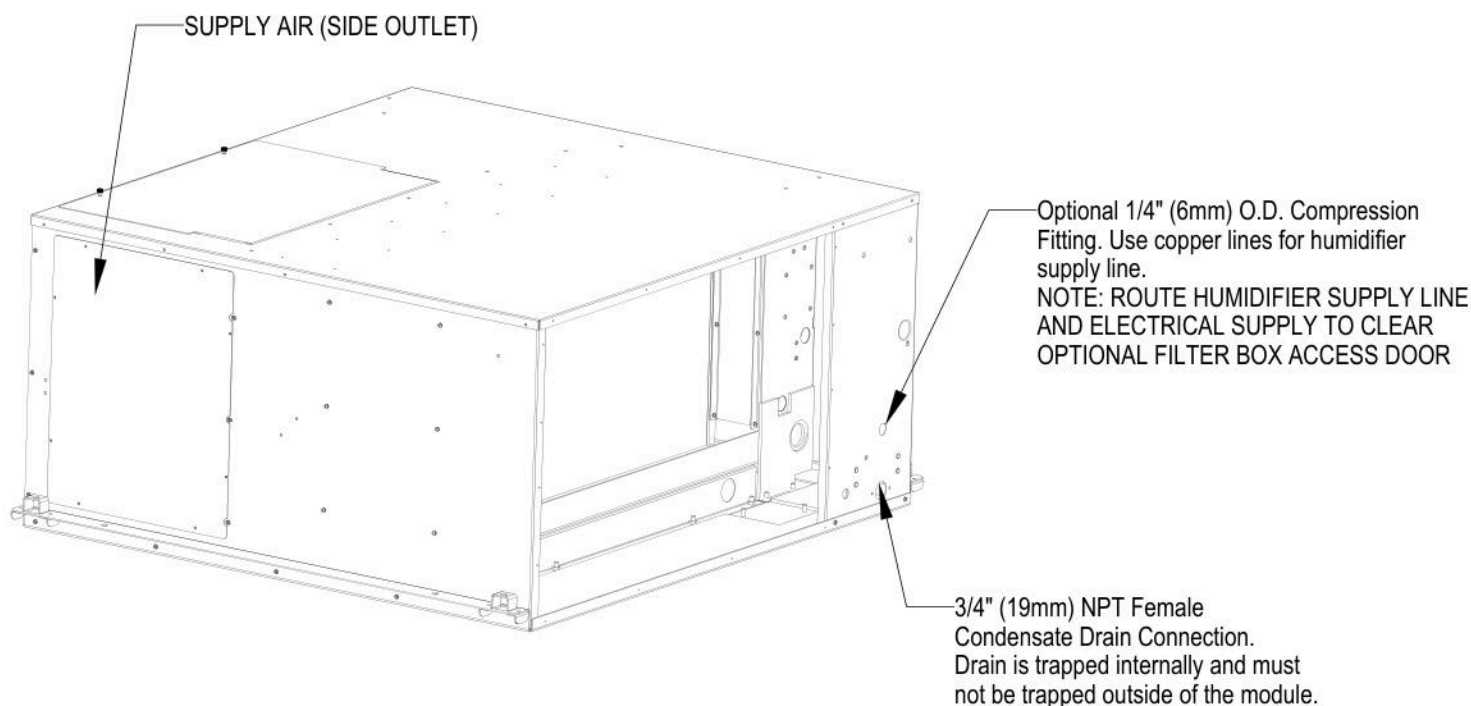

VERTIV COOLPHASE CEILING

PRIMARY CONNECTION LOCATIONS

8 TON DIRECT EXPANSION & FREE COOLING


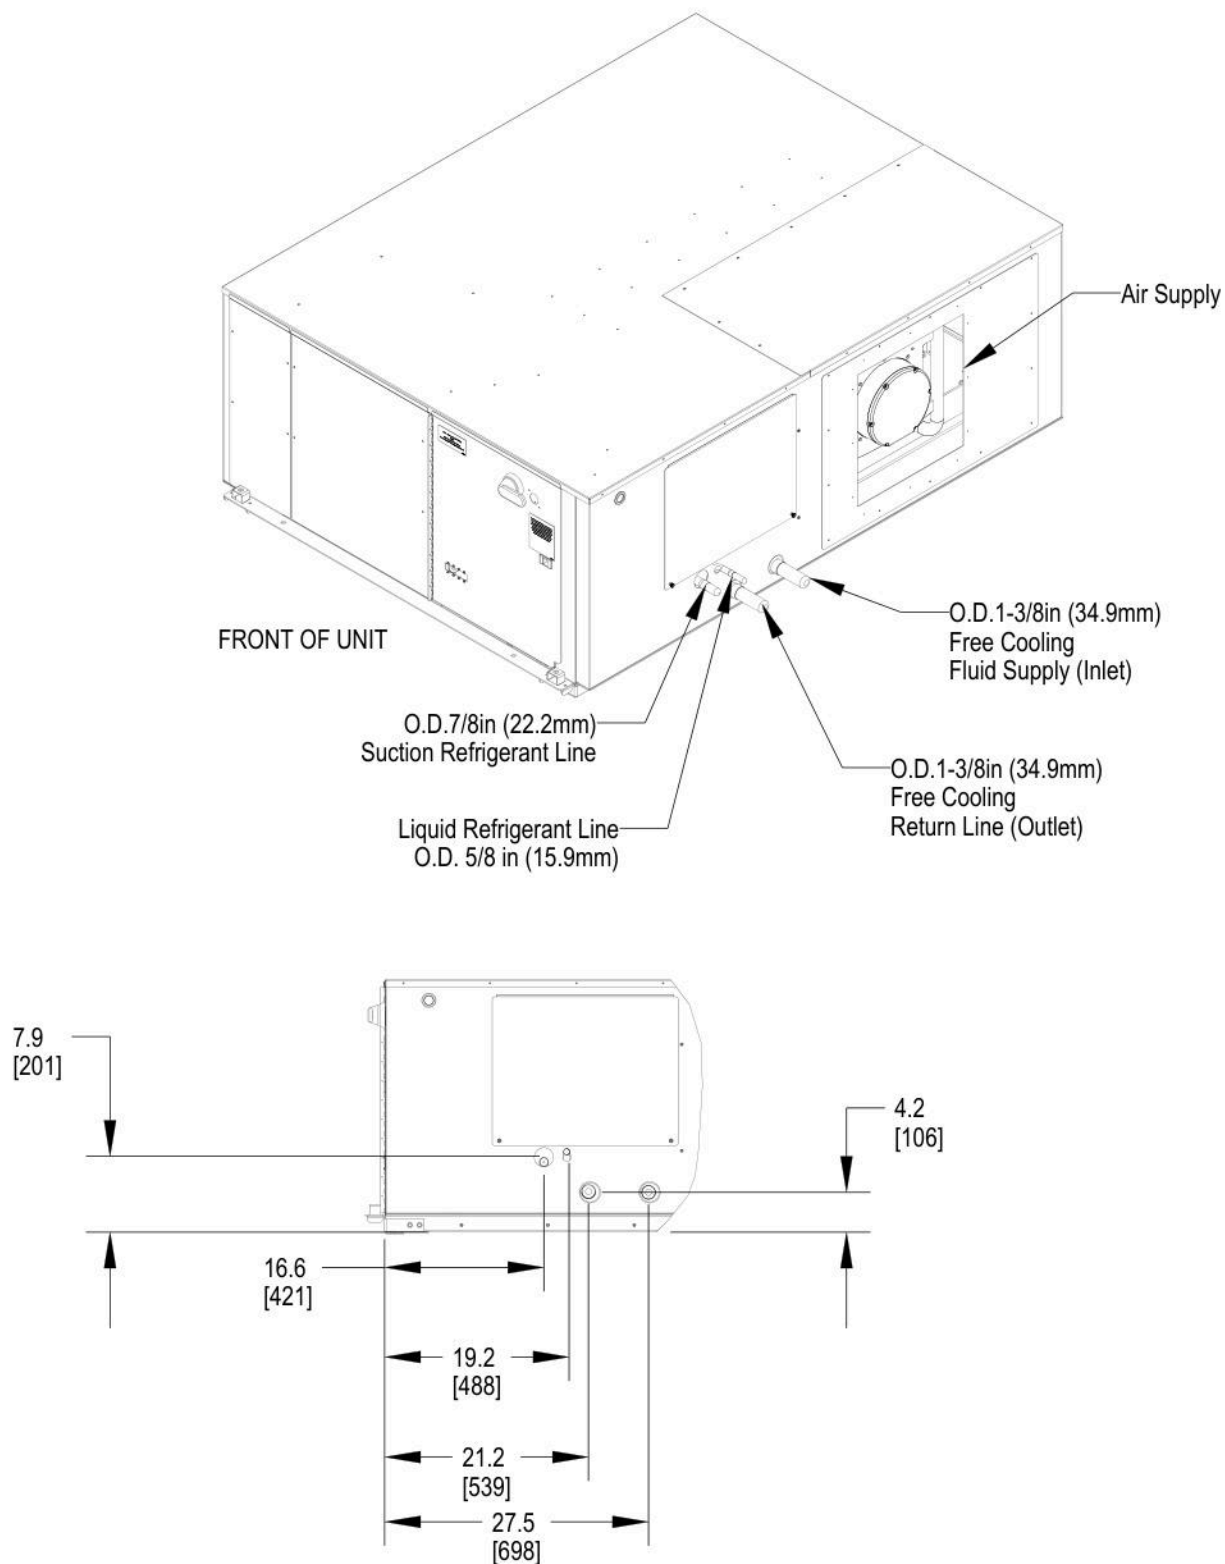




VERTIV COOLPHASE CEILING

PRIMARY CONNECTION LOCATIONS

8 TON DIRECT EXPANSION & FREE COOLING

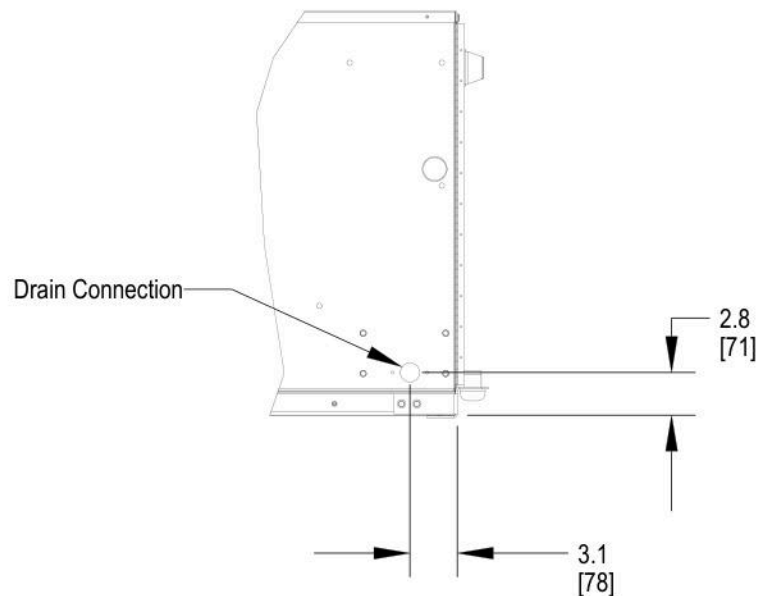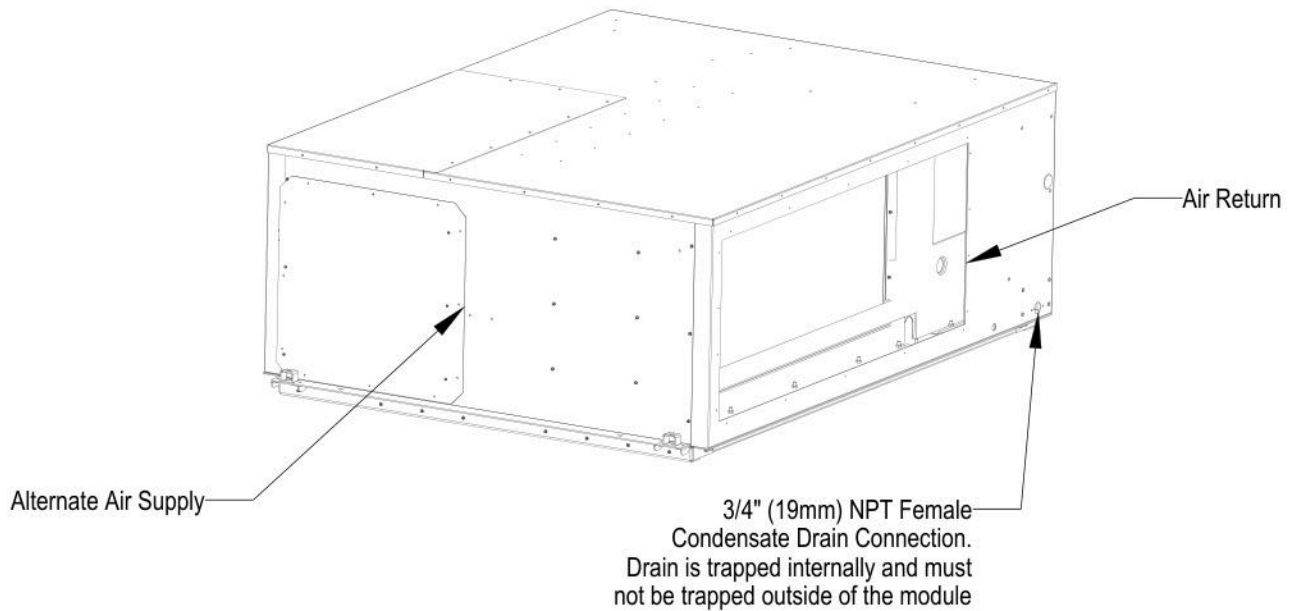



Vertiv CoolPhase Condensing Unit

PRIMARY CONNECTION LOCATIONS

Field-installed piping must comply with all applicable local codes.

The vertical riser pipe size must be reduced according to the following trade sizes: (1-1/8 to 7/8, 7/8 to 3/4, 3/4 to 5/8, 5/8 to 1/2.)

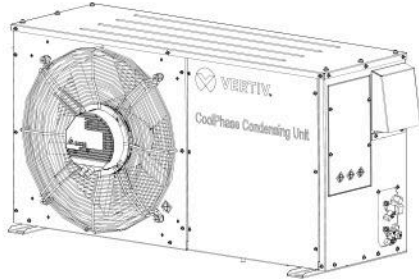






Table 1. Vertiv Coolphase Condensing Unit recommended refrigerant line size of standard units and low ambient units

	A	B	C	D	E	F
1	Outdoor Model	Refrigerant line length ft(m)	Liquid line diameter ANSI(mm)	Suction line diameter ANSI(mm)	"LIQUID LINE SERVICE VALVE"	"SUCTION LINE SERVICE VALVE"
2	CUD030-E000A	$L \leq (33)10$	1/4"(6.35)	1/2"(12.7)	7/16"-20UNF	3/4"-16UNF
3	CUL030-E000A	$33(10) < L \leq 197(60)$	3/8"(9.52)	1/2"(12.7)	7/16"-20UNF	3/4"-16UNF
4	CUD070-E000A	$L \leq (33)10$	3/8"(9.52)	1/2"(12.7)	5/8"-18UNF	3/4"-16UNF
5	CUL070-E000A	$33(10) < L \leq 115(35)$	3/8"(9.52)	5/8"(16)	5/8"-18UNF	3/4"-16UNF
6		$115(35) < L \leq 197(60)$	1/2"(12.7)	5/8"(16)	5/8"-18UNF	3/4"-16UNF
7	CUD111-E000A	$L \leq 66(20)$	3/8"(9.52)	5/8"(16)	5/8"-18UNF	7/8"-14UNF
8	CUL111-E000A	$66(20) < L \leq 148(45)$	1/2"(12.7)	3/4"(19.05)	5/8"-18UNF	7/8"-14UNF
9	CUD115-E000A	$148(45) < L \leq 197(60)$	1/2"(12.7)	7/8"(22.23)	5/8"-18UNF	7/8"-14UNF



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING DIMENSIONAL DATA CONDENSER UNITS 15 kW & 21kW

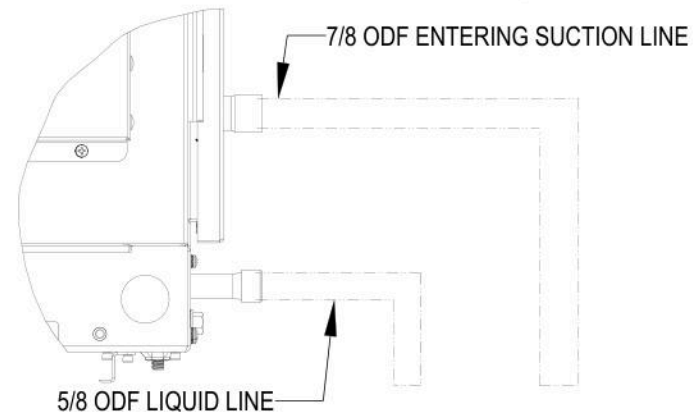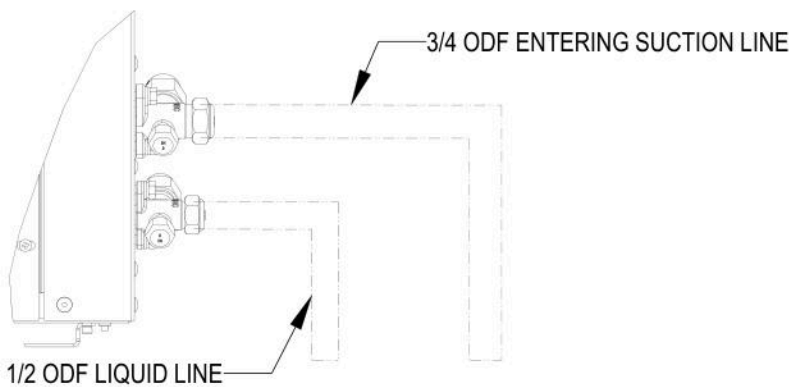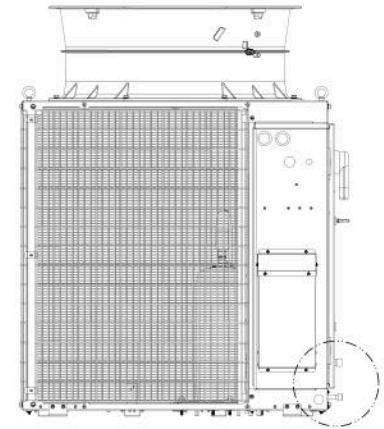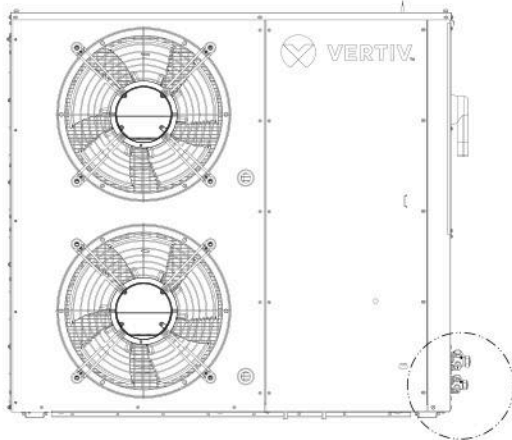



Model / Capacity	Length (mts)	Length (ft)	Liquid Line Diameter (mm)	Liquid Line Diameter (ANSI)	Suction Line Diameter (mm)	Suction Line Diameter (ANSI)
CU15 kW	5	16	12.7	1/2	19.05	3/4
	10	33	12.7	1/2	19.05	3/4
	15	49	12.7	1/2	22.23	7/8
	20	66	12.7	1/2	22.23	7/8
	25	82	12.7	1/2	22.23	7/8
	30	98	15.88	5/8	28.58	1 1/8
	35	115	15.88	5/8	28.58	1 1/8
	40	131	15.88	5/8	28.58	1 1/8
	45	148	15.88	5/8	28.58	1 1/8
	50	164	15.88	5/8	28.58	1 1/8
	55	180	15.88	5/8	28.58	1 1/8
	60	197	15.88	5/8	28.58	1 1/8
	65	213	15.88	5/8	28.58	1 1/8
	70	230	15.88	5/8	28.58	1 1/8
	75	246	15.88	5/8	28.58	1 1/8
	80	262	15.88	5/8	28.58	1 1/8
	85	279	15.88	5/8	28.58	1 1/8
	90	295	15.88	5/8	28.58	1 1/8

Model / Capacity	Length (mts)	Length (ft)	Liquid Line Diameter (mm)	Liquid Line Diameter (ANSI)	Suction Line Diameter (mm)	Suction Line Diameter (ANSI)
CU21 kW	5	16	12.7	1/2	19.05	3/4
	10	33	12.7	1/2	22.23	7/8
	15	49	12.7	1/2	22.23	7/8
	20	66	15.88	5/8	28.58	1 1/8
	25	82	15.88	5/8	28.58	1 1/8
	30	98	15.88	5/8	28.58	1 1/8
	35	115	15.88	5/8	28.58	1 1/8
	40	131	15.88	5/8	28.58	1 1/8
	45	148	15.88	5/8	28.58	1 1/8
	50	164	15.88	5/8	28.58	1 1/8
	55	180	15.88	5/8	28.58	1 1/8
	60	197	19.05	3/4	34.93	1 3/8
	65	213	19.05	3/4	34.93	1 3/8
	70	230	19.05	3/4	34.93	1 3/8
	75	246	19.05	3/4	34.93	1 3/8
	80	262	19.05	3/4	34.93	1 3/8
	85	279	19.05	3/4	34.93	1 3/8
	90	295	19.05	3/4	34.93	1 3/8
	95	312	19.05	3/4	34.93	1 3/8
	100	328	19.05	3/4	34.93	1 3/8
	105	344	19.05	3/4	34.93	1 3/8
	110	361	19.05	3/4	34.93	1 3/8
	115	377	19.05	3/4	34.93	1 3/8
	120	394	19.05	3/4	34.93	1 3/8





VERTIV COOLPHASE ROW

PIPING CONNECTION LOCATIONS CONDENSING UNIT 28KW & 35KW

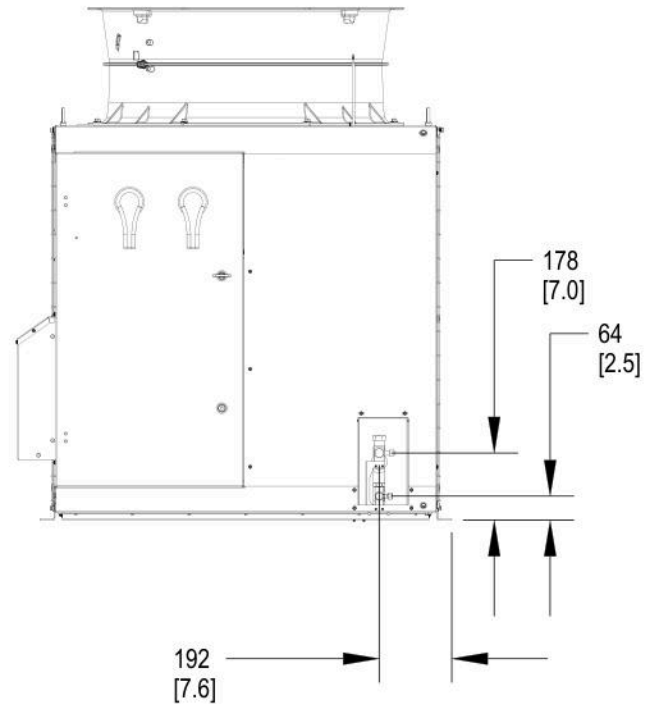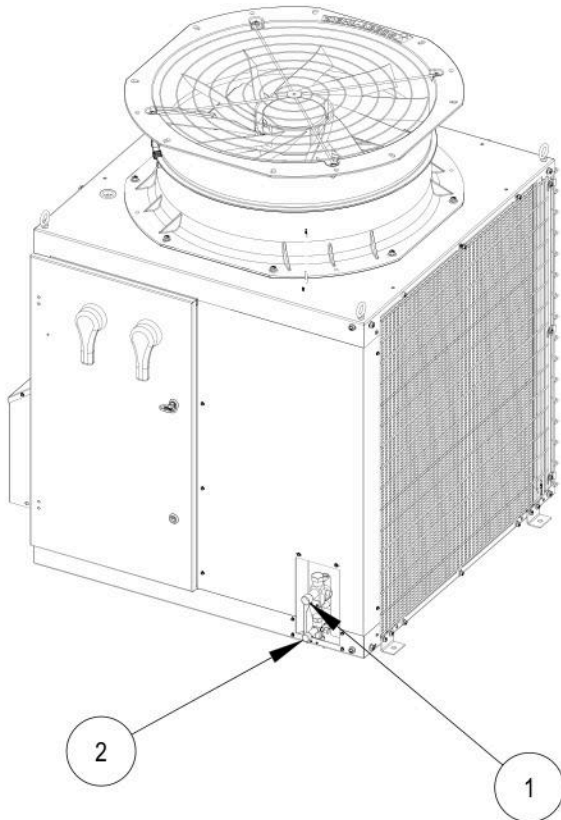

1	SUCTION LINE INLET	5/8" ODF
2	LIQUID LINE OUTLET	7/8" ODF

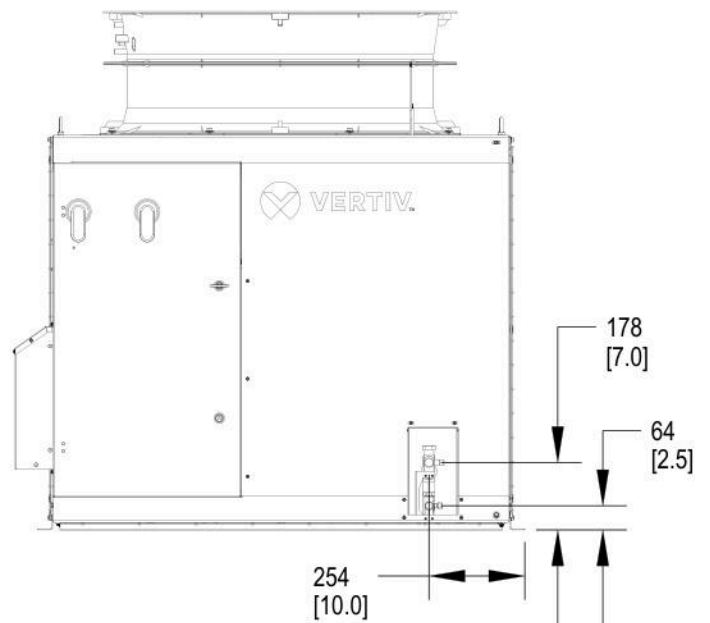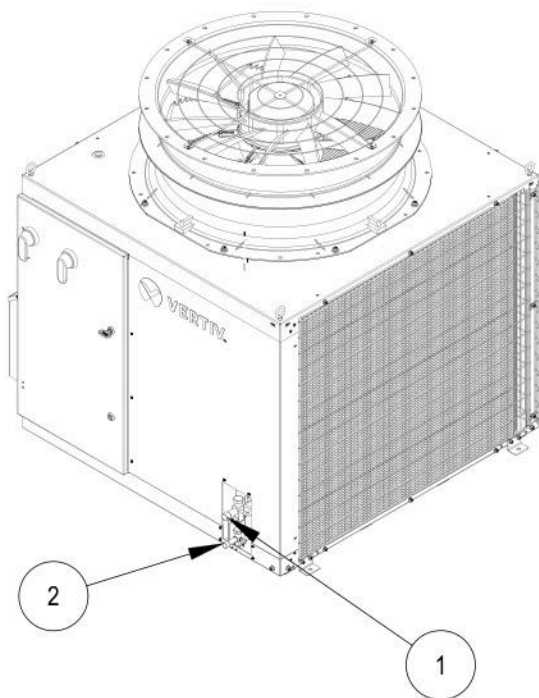


1	SUCTION LINE INLET	5/8" ODF
2	LIQUID LINE OUTLET	7/8" ODF



Vertiv CoolPhase Condensing Unit

PIPING SCHEMATIC

CONDENSING UNIT ABOVE INDOOR UNIT 3.5, 7 & 11 kW

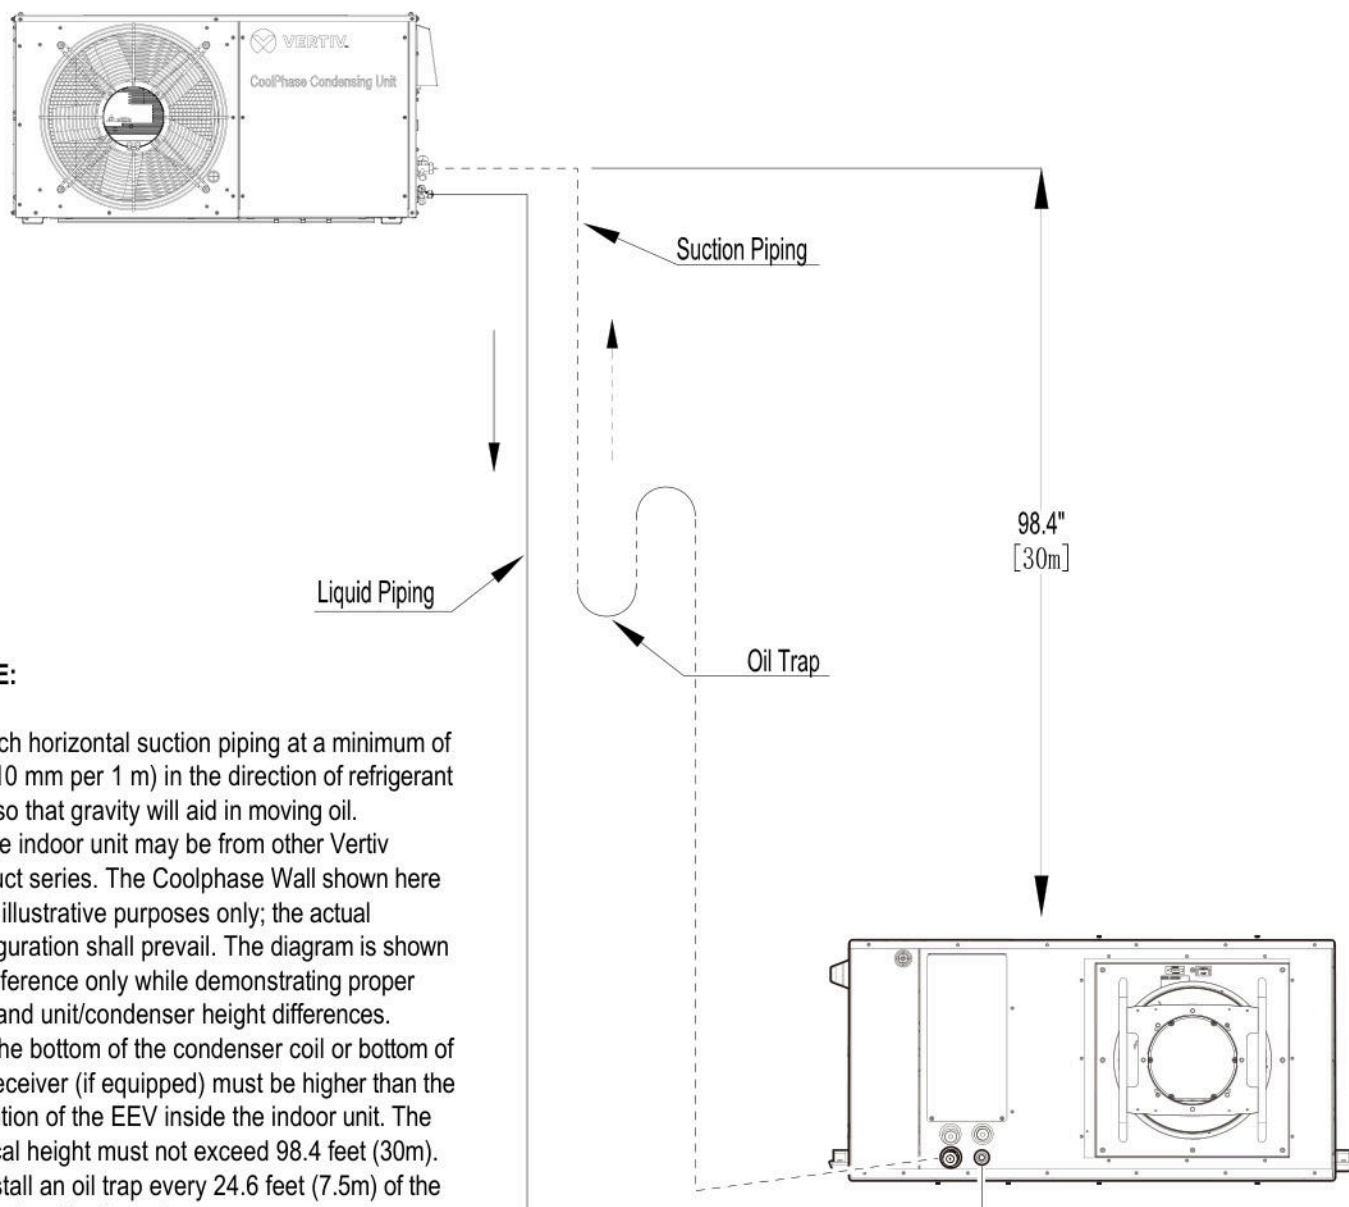

NOTE:

1. Pitch horizontal suction piping at a minimum of 1% (10 mm per 1 m) in the direction of refrigerant flow so that gravity will aid in moving oil.
2. The indoor unit may be from other Vertiv product series. The Coolphase Wall shown here is for illustrative purposes only; the actual configuration shall prevail. The diagram is shown for reference only while demonstrating proper pipe and unit/condenser height differences.
3. If the bottom of the condenser coil or bottom of the receiver (if equipped) must be higher than the elevation of the EEV inside the indoor unit. The vertical height must not exceed 98.4 feet (30m).
4. Install an oil trap every 24.6 feet (7.5m) of the vertical suction/gas pipe.
5. If the condensing unit is installed indoors, the total system refrigerant charge (Indoor unit + Condensing unit + Piping) can't exceed 4 lbs.


Vertiv CoolPhase Condensing Unit

PIPING SCHEMATIC

CONDENSING UNIT ABOVE INDOOR UNIT 3.5, 7 & 11 kW

NOTE:


1. Pitch horizontal suction piping at a minimum of 1% (10 mm per 1 m) in the direction of refrigerant flow so that gravity will aid in moving oil.
2. The indoor unit may be from other Vertiv product series. The Coolphase Wall shown here is for illustrative purposes only; the actual configuration shall prevail. The diagram is shown for reference only while demonstrating proper pipe and unit/condenser height differences.
3. If the bottom of the condenser coil or bottom of the receiver (if equipped) must be lower than the elevation of the EEV inside the indoor unit. The vertical height must not exceed 26.2feet (8m).
4. If the condensing unit is installed indoors, the total system refrigerant charge (Indoor unit + Condensing unit + Piping) can't exceed 4 lbs.

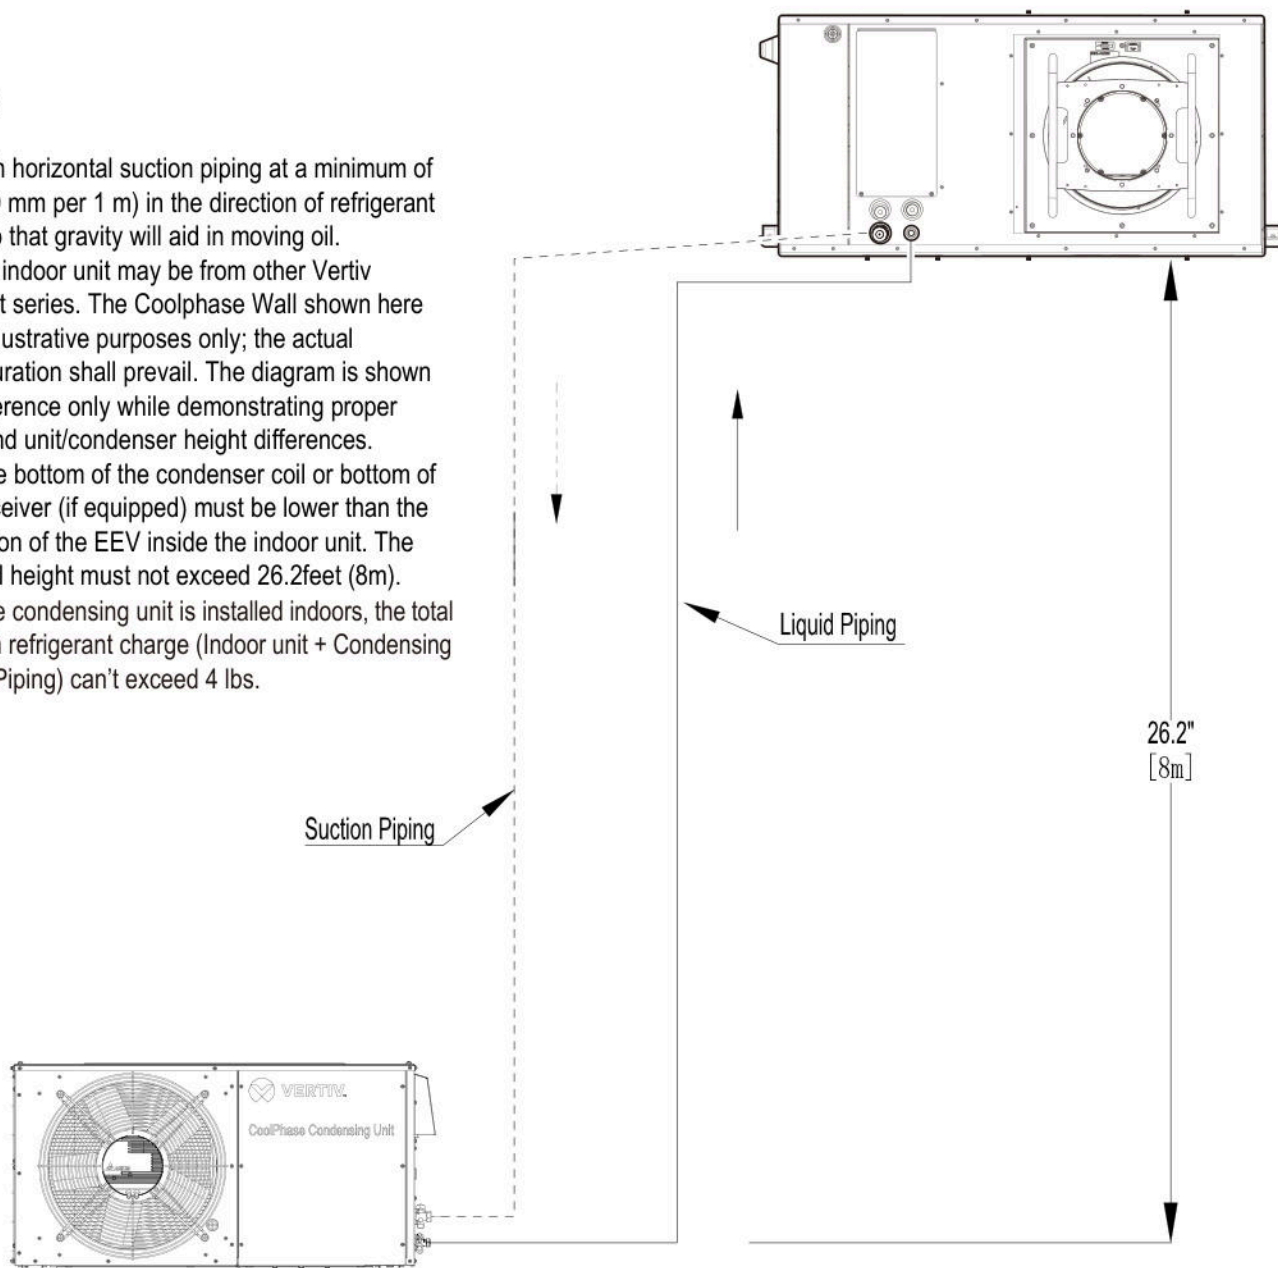



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING SCHEMATIC CONDENSING UNIT ABOVE INDOOR UNIT 15 kW

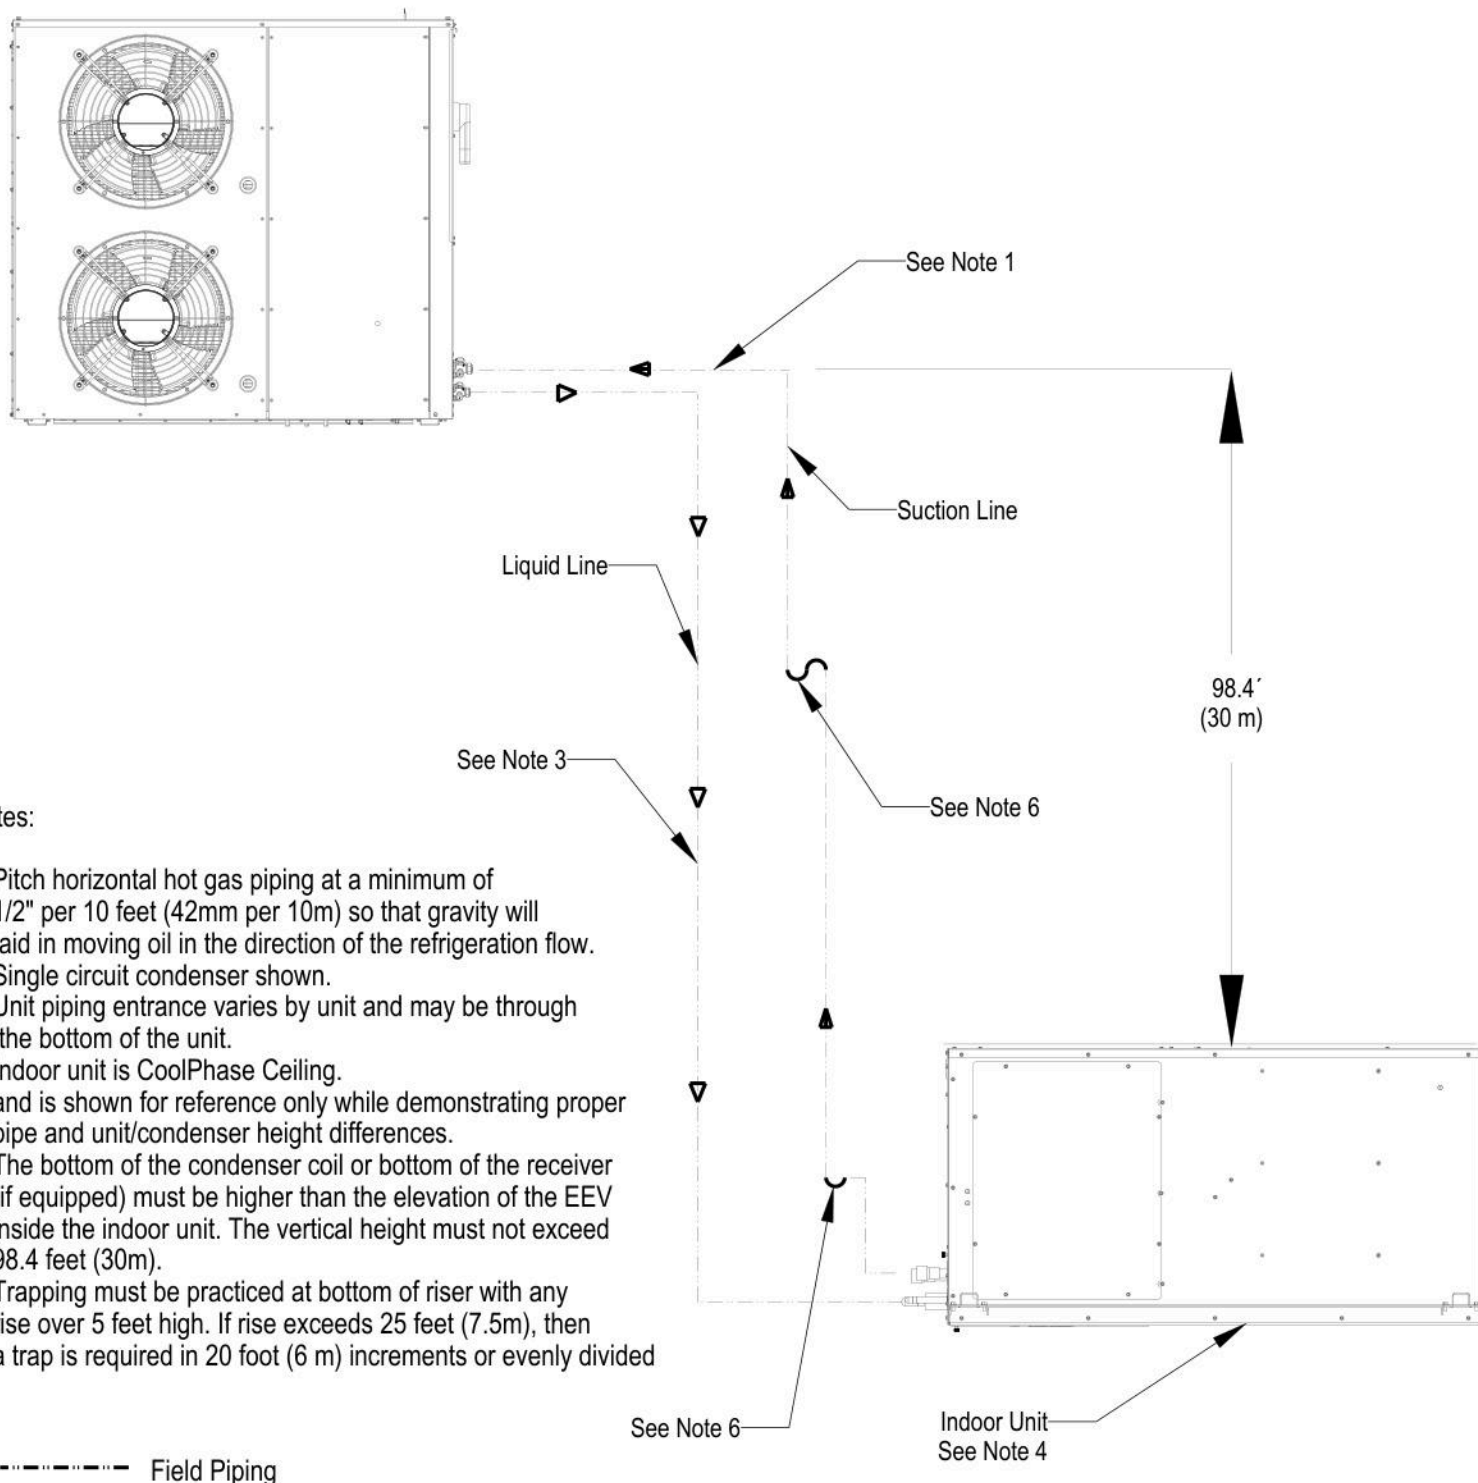

Notes:

1. Pitch horizontal hot gas piping at a minimum of 1/2" per 10 feet (42mm per 10m) so that gravity will aid in moving oil in the direction of the refrigeration flow.
2. Single circuit condenser shown.
3. Unit piping entrance varies by unit and may be through the bottom of the unit.
4. Indoor unit is CoolPhase Ceiling.
and is shown for reference only while demonstrating proper pipe and unit/condenser height differences.
5. The bottom of the condenser coil or bottom of the receiver (if equipped) must be higher than the elevation of the EEV inside the indoor unit. The vertical height must not exceed 98.4 feet (30m).
6. Trapping must be practiced at bottom of riser with any rise over 5 feet high. If rise exceeds 25 feet (7.5m), then a trap is required in 20 foot (6 m) increments or evenly divided




VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING SCHEMATIC

CONDENSING UNIT BELOW INDOOR UNIT 15kW

Notes:


1. Pitch horizontal hot gas piping at a minimum of 1/2" per 10 feet (42mm per 10m) so that gravity will aid in moving oil in the direction of the refrigeration flow.
2. Single circuit condenser shown.
3. Unit piping entrance varies by unit and may be through the top of the unit.
4. Indoor unit Cool Phase Ceiling and is shown for reference only while demonstrating proper pipe and unit/condenser height differences.

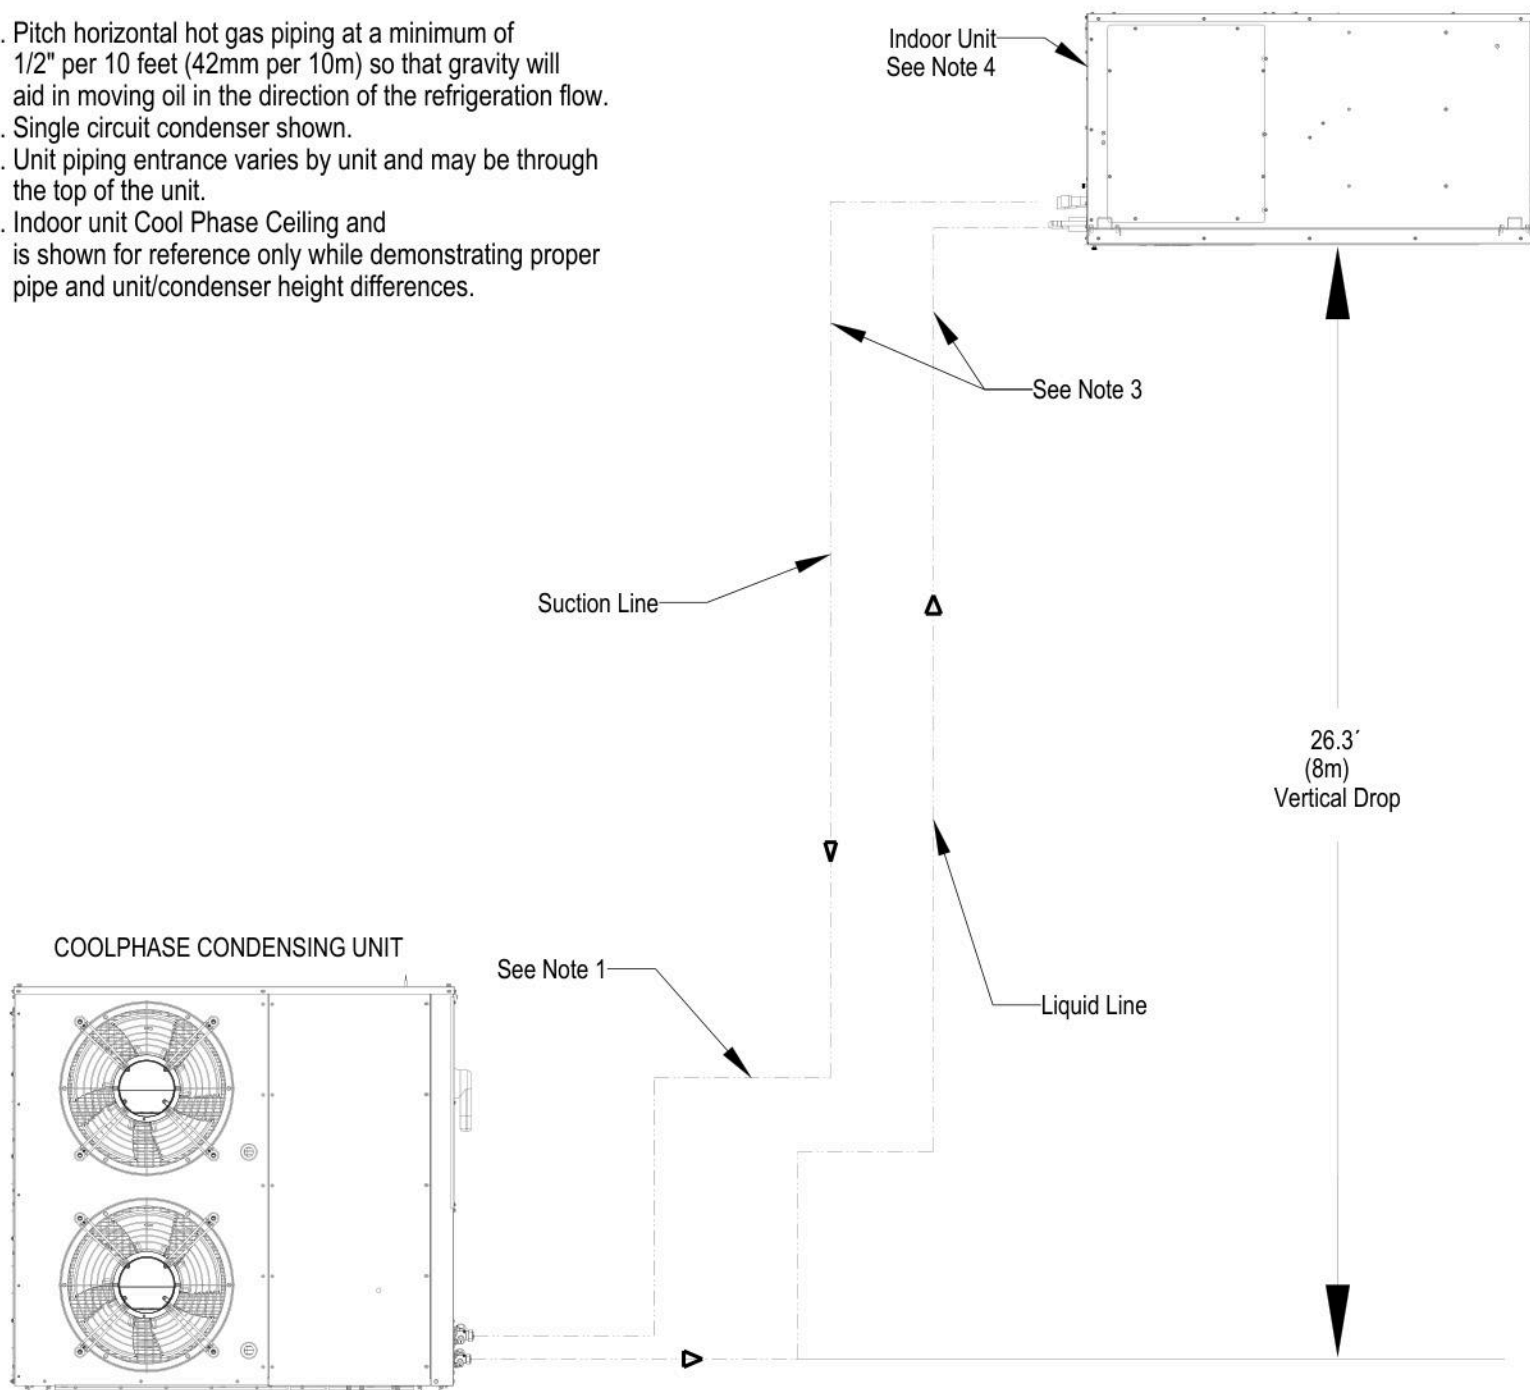



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING SCHEMATIC CONDENSING UNIT ABOVE INDOOR UNIT 21 & 28kW

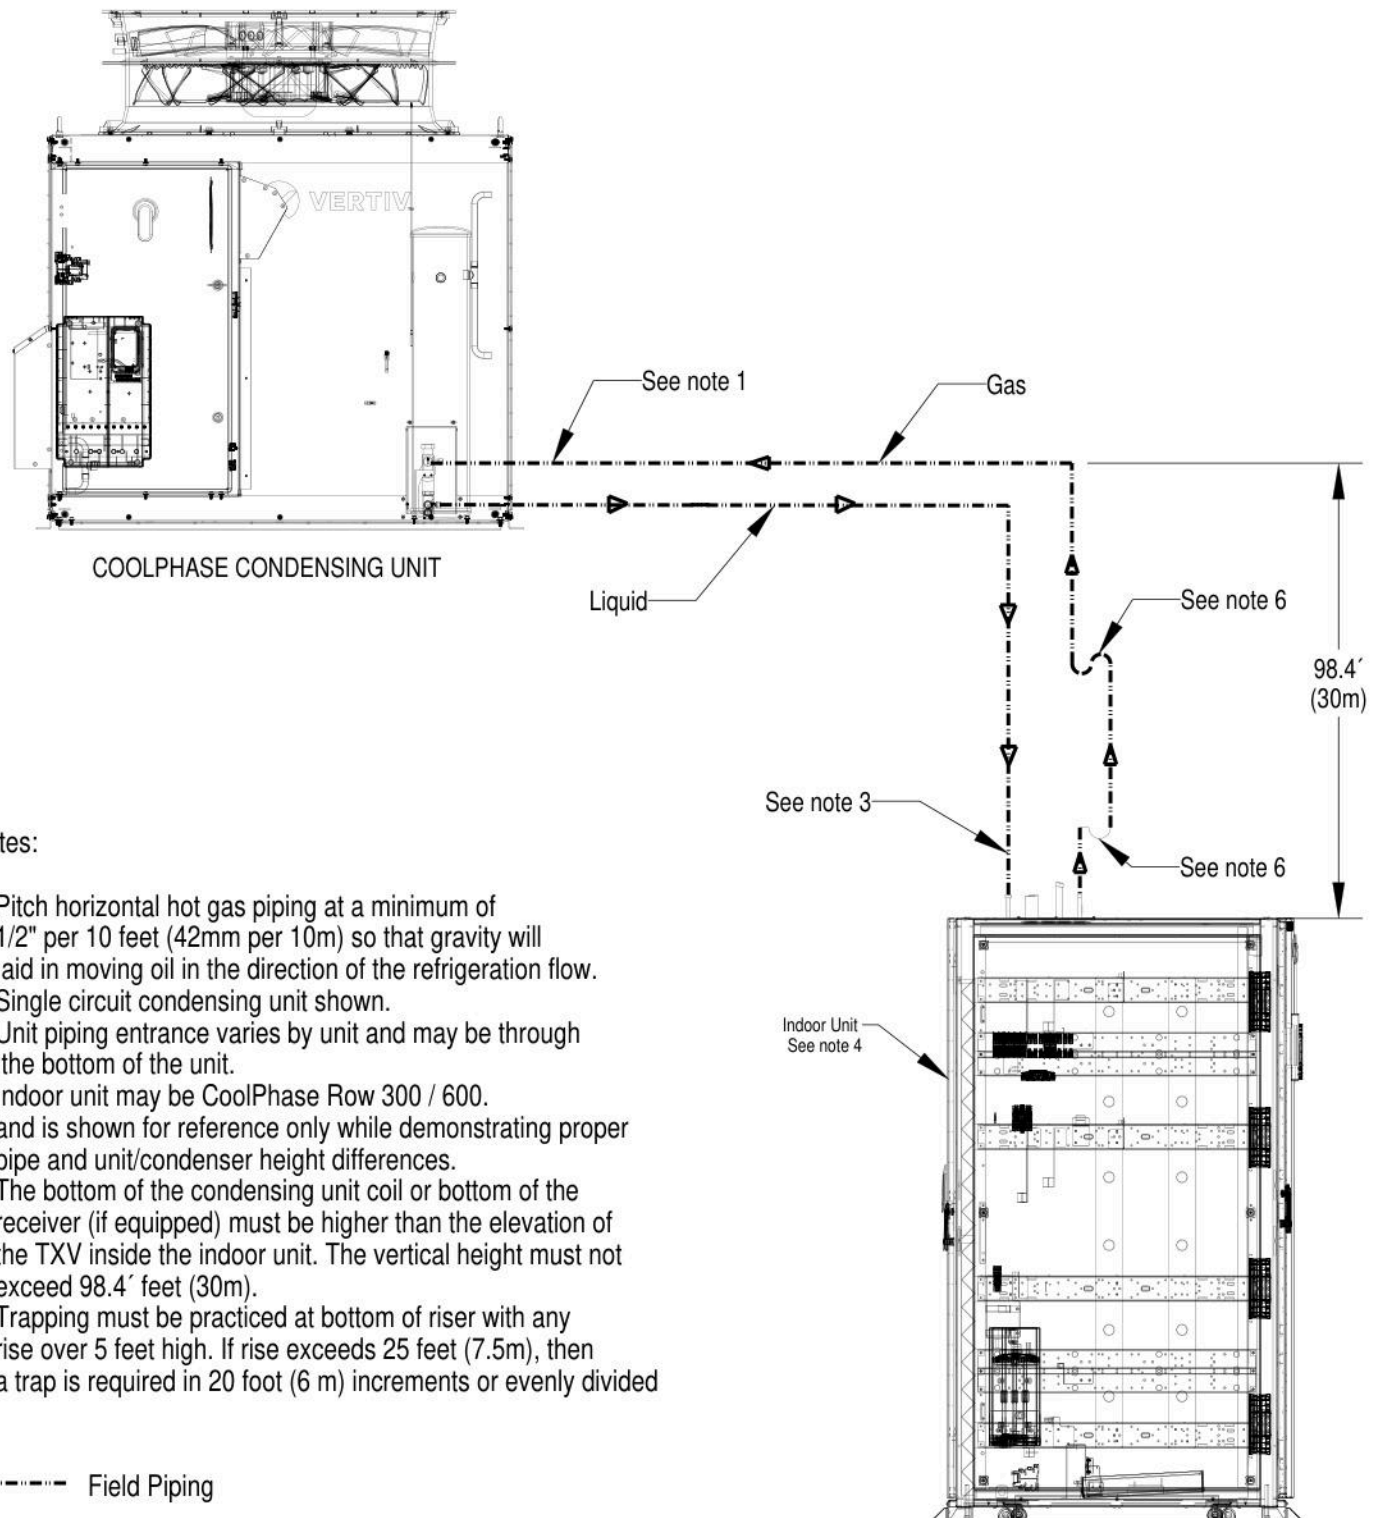




VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING SCHEMATIC CONDENSING UNIT BELOW INDOOR UNIT 21 & 28kW

Notes:

1. Pitch horizontal hot gas piping at a minimum of 1/2" per 10 feet (42mm per 10m) so that gravity will aid in moving oil in the direction of the refrigeration flow.
2. Single circuit condensing unit shown.
3. Unit piping entrance varies by unit and may be through the top of the unit.
4. Indoor unit may be Vertiv CoolPhase Row 300 / 600 and is shown for reference only while demonstrating proper pipe and unit/condenser height differences.

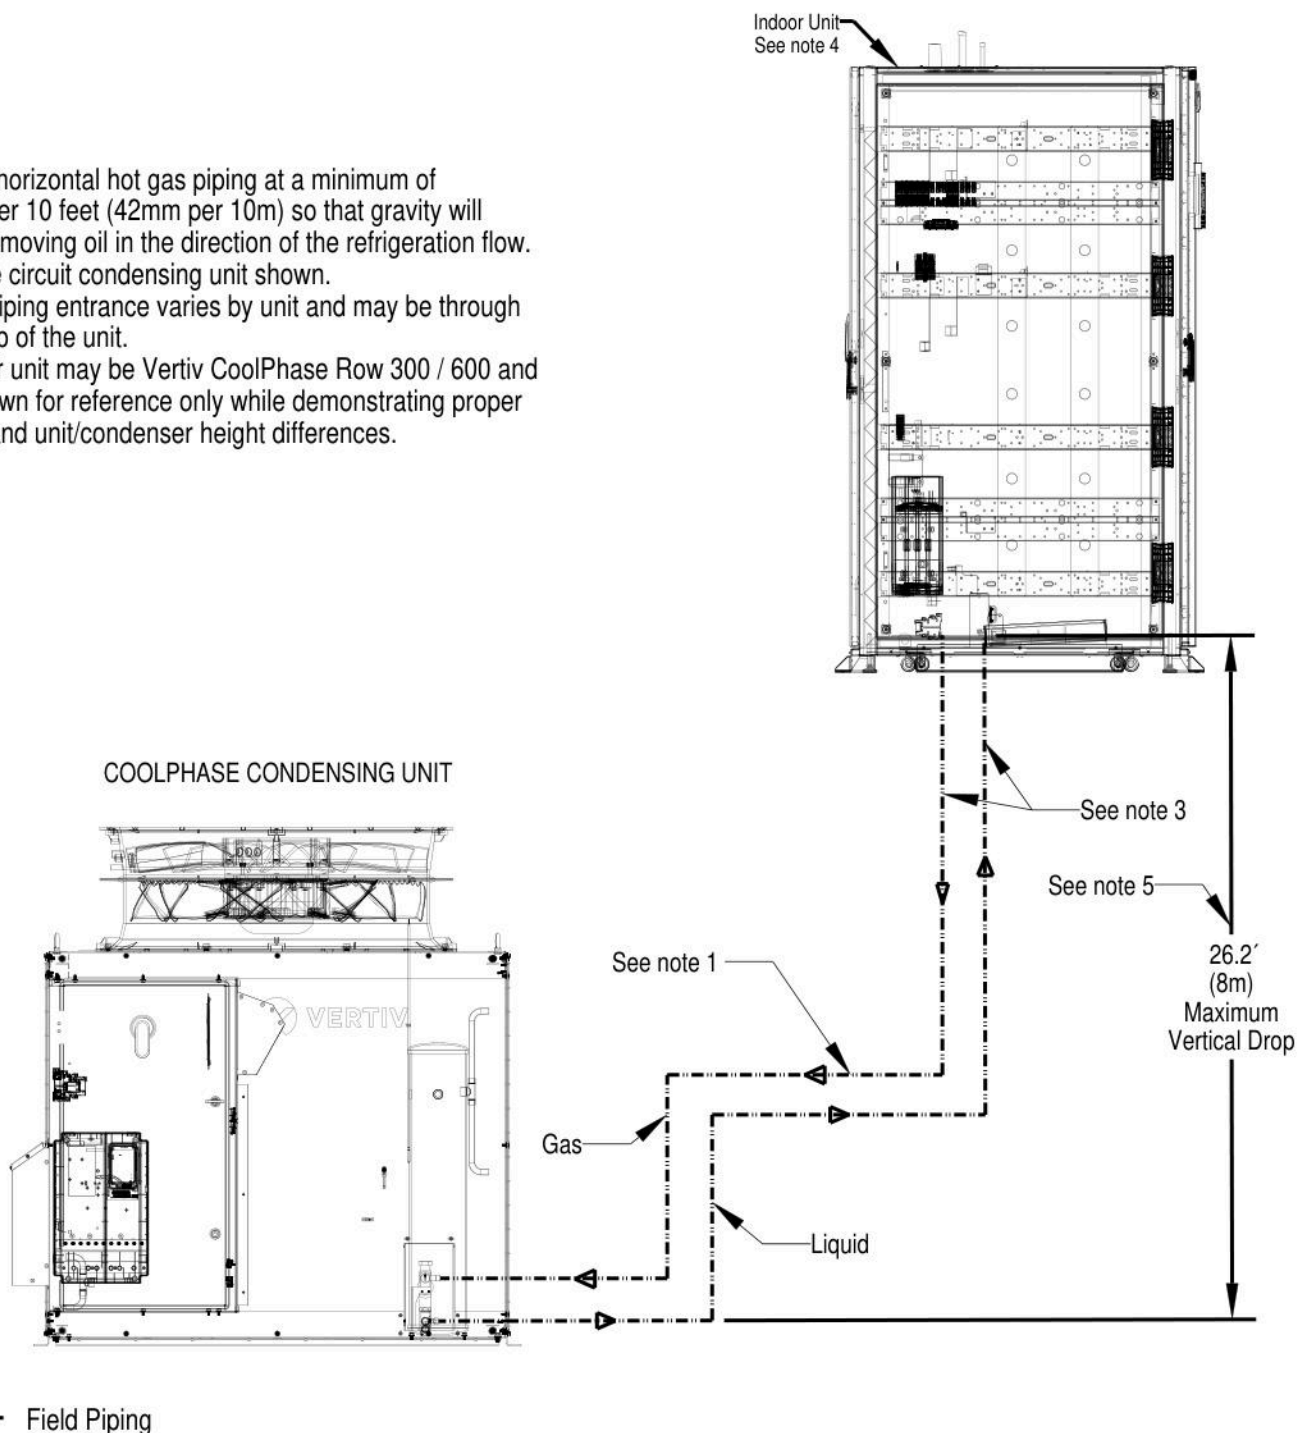



DX PRODUCTS WITH R32

A2L REFRIGERANT DISPERSAL VOLUME CALCULATION R32

Engineer of record to determine the Refrigerant Charge m_c and required minimum Effective Dispersal Volume V_{ED} of the space to which the appliance can be utilized for the cooling of ITE AREAS.

The required minimum EFFECTIVE DISPERSAL VOLUME V_{ED} is a function of the refrigerant charge, m_c and is represented by the following equation:

$$V_{ED} = m_c / 0.5 \times \text{LFL}$$

V_{ED} = the minimum Effective Dispersal Volume in ft^3 (m^3)



m_c = the refrigerant charge of the largest single circuit of a unit in lbs (kg)

0.5 = the concentration factor

LFL = the Lower Flammability Limit in $\text{lbs}/1000 \text{ ft}^3$ (kg/m^3)

Note: The LFL of R32 is $19.2 \text{ lbs}/1000 \text{ ft}^3$ ($307.0 \text{ g}/\text{m}^3$) according to ASHRAE 34-2022.

Minimum Effective Dispersal Volume V_{ED} of the space shall be based on altitude of the installation location. For locations above sea level, the engineer of record will need to adjust the value of LFL in accordance with ANSI/ASHRAE 34 before applying it to the equation for determining the required minimum Effective Dispersal Volume V_{ED} .

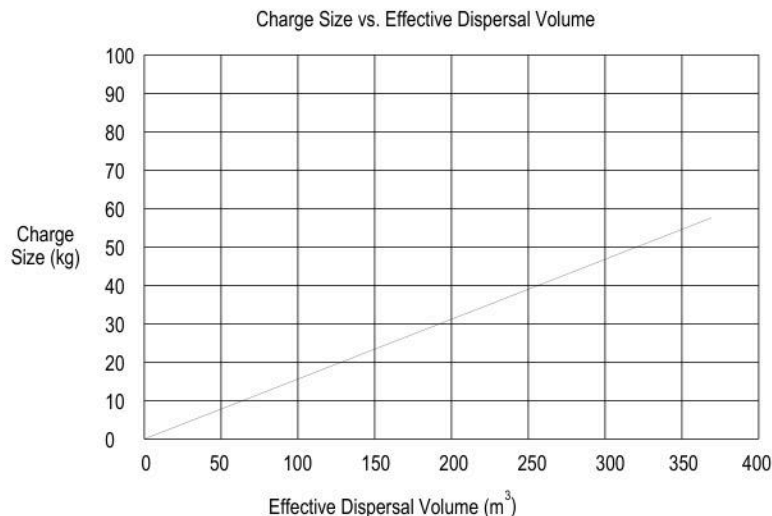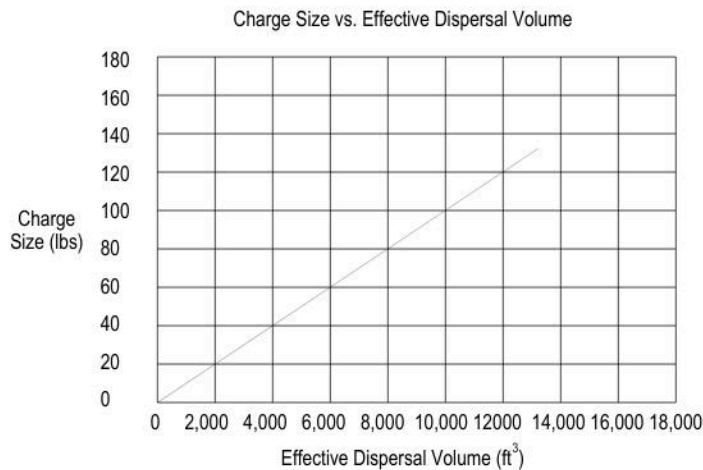



DX PRODUCTS WITH R32

A2L REFRIGERANT DISPERSAL VOLUME CALCULATION R32

How to Determine the Effective Dispersal Volume of an ITE Area

Volume Calculations shall be based on the overall volume of space available to which the refrigerant disperses within the CIRCULATION AIRFLOW in the event of a refrigerant leak. This overall volume shall be modified with the appropriate deductions. For the purposes of determining the EFFECTIVE DISPERSAL VOLUME of an ITE AREA the following shall apply:

- a) The EFFECTIVE DISPERSAL VOLUME shall only include the circulated airflow of the system.
- b) The EFFECTIVE DISPERSAL VOLUME shall initially include the ITE AREA enclosed by the floor, walls, and ceiling of that space.
- c) When the CIRCULATION AIRFLOW includes underfloor spaces, suspended ceiling spaces, or other partitioned spaces, such as equipment galleries, the volume of those spaces may be included.



In general, the volume of equipment, piping, wiring, or other apparatus that consume space within and are isolated from the CIRCULATION AIRFLOW shall be deducted from the EFFECTIVE DISPERSAL VOLUME. The following deductions shall be applied:

- a) When the CIRCULATION AIRFLOW has been fully contained on both hot and cold sides of the aisle, via ducts or other apparatus, any room volume outside of that containment shall not be included when calculating the EFFECTIVE DISPERSAL VOLUME.
- b) When the overall volume of space available, or a partitioned portion of that volume includes ducted openings from partially ducted systems, some volume of that space may require a deduction. No volume greater than 4 feet away in height from the upper most supply or return duct opening in the space may be included when calculating the EFFECTIVE DISPERSAL VOLUME, unless an analysis of the airflow has been conducted to show that the volume of air has effective movement for the mixing of a leaked refrigerant.
- c) Obstructions of tubing, piping, wiring, etc., consuming more than 0.0071 m^3 (0.25 ft^3) of space shall be included in the deductions from the overall volume.
- d) The ITE within the circulated airflow shall be evaluated for their deduction from the EFFECTIVE DISPERSAL VOLUME. The deducted volume of the ITE shall be based on the designed maximum capacity or fill of the servers.
- e) As a maximum value, no more than 75 % of the ITE's volume shall be included as circulating air space in the EFFECTIVE DISPERSAL VOLUME. The total volume of the ITE shall be defined by the overall dimensions of its ITE ENCLOSURE. Small gaps in between individual server racks shall not be included in the EFFECTIVE DISPERSAL VOLUME.
- f) Any other volume within the circulation airflow that is otherwise enclosed or partitioned off from the airflow shall be deducted in the calculation of the EFFECTIVE DISPERSAL VOLUME.



VERTIV™ VERTIV COOLPHASE CONDENSING UNIT

PIPING DIMENSIONAL DATA CONDENSING UNITS 28 & 35 kW

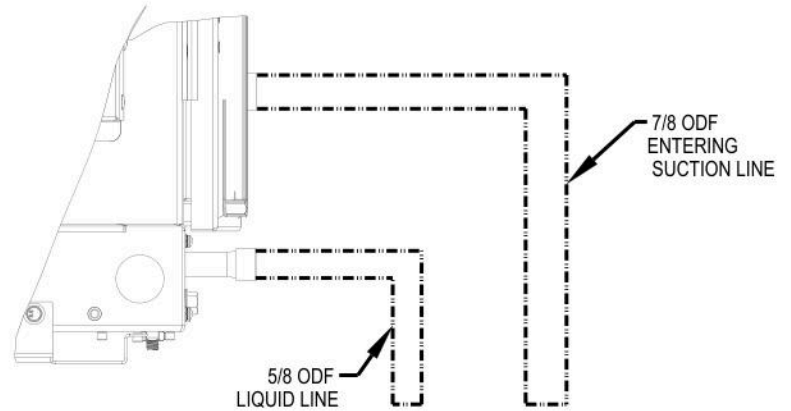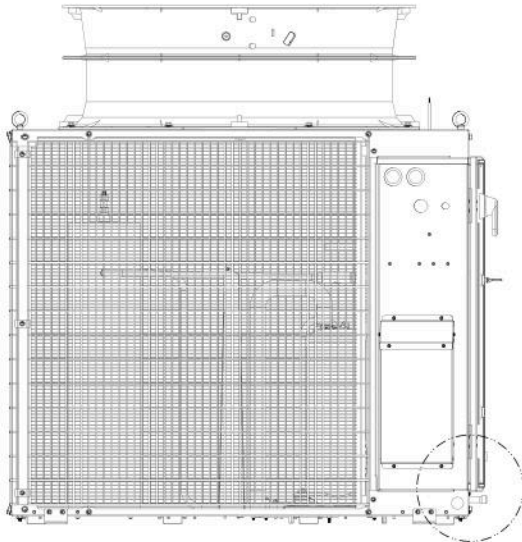

OPTIONAL FUSIBLE PLUG SERVICE KIT TO BE BRAZED INTO THE LIQUID LINE(S) IN EITHER THE VERTICAL OR HORIZONTAL POSITION. (WHERE REQUIRED)

(VERTICAL POSITION IS PREFERRED, HORIZONTAL POSITION IS OPTIONAL.)




--- FIELD PIPING

□ CONNECTION SIZES:


Model / Capacity	Length (mts)	Length (ft)	Liquid Line Ø (mm)	Liquid Line Ø (ANSI)	Suction Line Ø (mm)	Suction Line Ø (ANSI)
CU28 kW	1	3.28	12.7	1/2	22.23	7/8
	5	16.40	12.7	1/2	22.23	7/8
	10	32.81	15.88	5/8	22.23	7/8
	15	49.21	15.88	5/8	28.58	1 1/8
	20	65.62	15.88	5/8	28.58	1 1/8
	25	82.02	15.88	5/8	28.58	1 1/8
	30	98.43	19.05	3/4	28.58	1 1/8
	35	114.83	19.05	3/4	34.93	1 3/8
	40	131.23	19.05	3/4	34.93	1 3/8
	45	147.64	19.05	3/4	34.93	1 3/8
	50	164.04	19.05	3/4	34.93	1 3/8
	55	180.45	19.05	3/4	34.93	1 3/8
	60	196.85	19.05	3/4	34.93	1 3/8
	65	213.25	19.05	3/4	34.93	1 3/8
	70	229.66	19.05	3/4	34.93	1 3/8
	75	246.06	19.05	3/4	34.93	1 3/8
	80	262.47	22.23	7/8	34.93	1 3/8
	85	278.87	22.23	7/8	41.28	1 5/8
	90	295.28	22.23	7/8	41.28	1 5/8
	95	311.68	22.23	7/8	41.28	1 5/8
	100	328.08	22.23	7/8	41.28	1 5/8
	105	344.49	22.23	7/8	41.28	1 5/8
	110	360.89	22.23	7/8	41.28	1 5/8
	115	377.30	22.23	7/8	41.28	1 5/8
	120	393.70	22.23	7/8	41.28	1 5/8

Model / Capacity	Length (mts)	Length (ft)	Liquid Line Ø (mm)	Liquid Line Ø (ANSI)	Suction Line Ø (mm)	Suction Line Ø (ANSI)
CU35 kW	1	3.28	12.7	1/2	22.23	7/8
	5	16.40	12.7	1/2	22.23	7/8
	10	32.81	15.88	5/8	28.58	1 1/8
	15	49.21	15.88	5/8	28.58	1 1/8
	20	65.62	15.88	5/8	28.58	1 1/8
	25	82.02	19.05	3/4	34.93	1 3/8
	30	98.43	19.05	3/4	34.93	1 3/8
	35	114.83	19.05	3/4	34.93	1 3/8
	40	131.23	19.05	3/4	34.93	1 3/8
	45	147.64	19.05	3/4	34.93	1 3/8
	50	164.04	19.05	3/4	34.93	1 3/8
	55	180.45	19.05	3/4	34.93	1 3/8
	60	196.85	22.23	7/8	41.28	1 5/8
	65	213.25	22.23	7/8	41.28	1 5/8
	70	229.66	22.23	7/8	41.28	1 5/8
	75	246.06	22.23	7/8	41.28	1 5/8
	80	262.47	22.23	7/8	41.28	1 5/8
	85	278.87	22.23	7/8	41.28	1 5/8
	90	295.28	22.23	7/8	41.28	1 5/8
	95	311.68	22.23	7/8	41.28	1 5/8
	100	328.08	22.23	7/8	41.28	1 5/8
	105	344.49	22.23	7/8	41.28	1 5/8
	110	360.89	22.23	7/8	41.28	1 5/8
	115	377.30	22.23	7/8	41.28	1 5/8
	120	393.70	22.23	7/8	41.28	1 5/8




DIMENSIONAL DATA FILTER BOX 1 TON

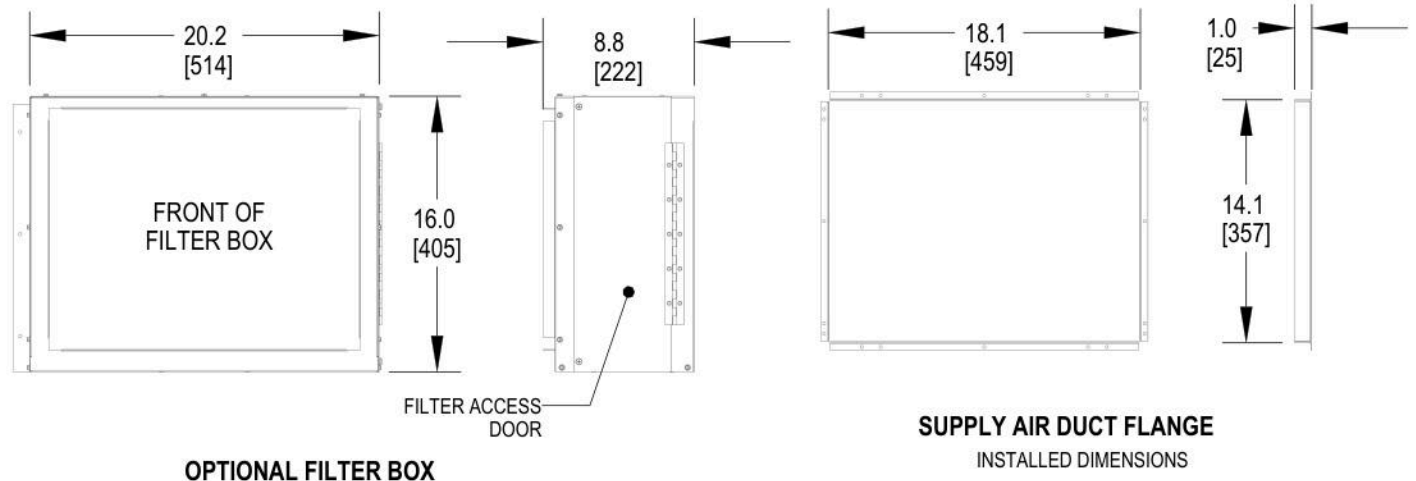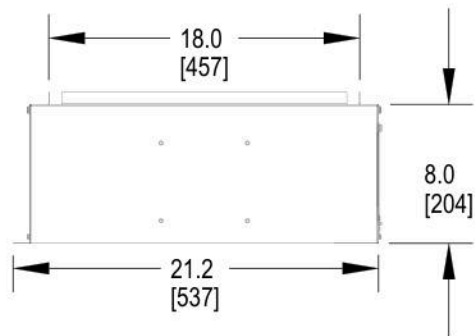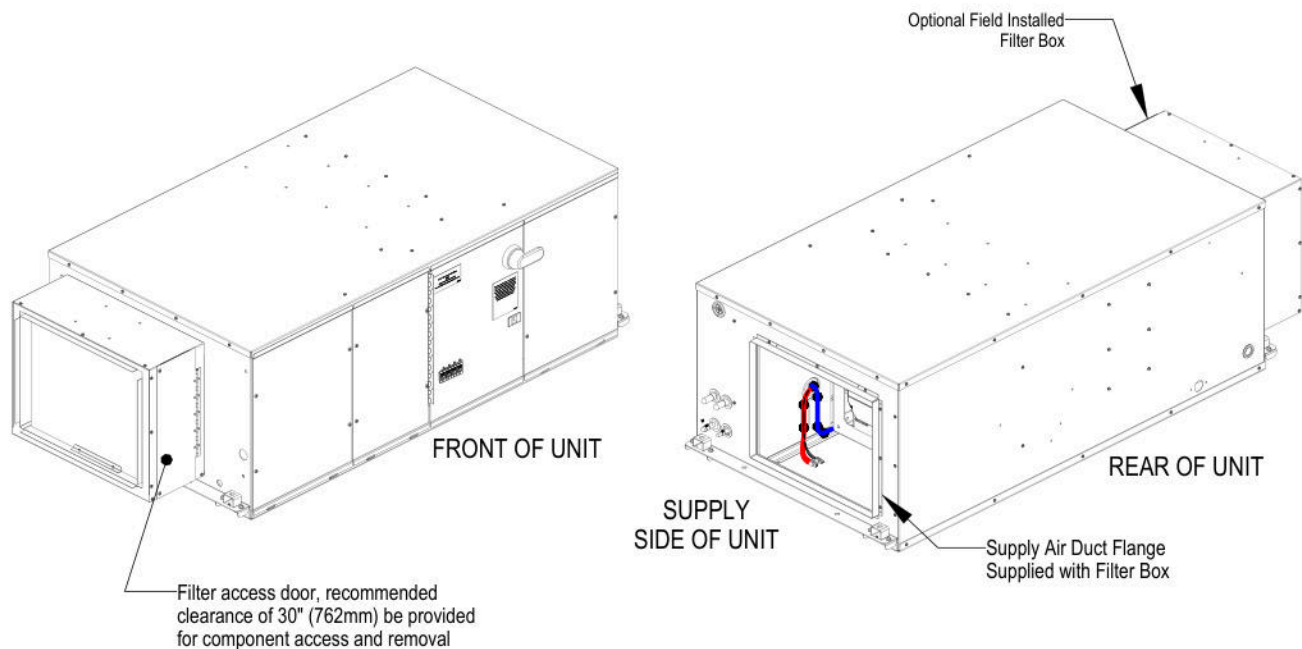


DIMENSIONAL DATA FILTER BOX 2 & 3 TON

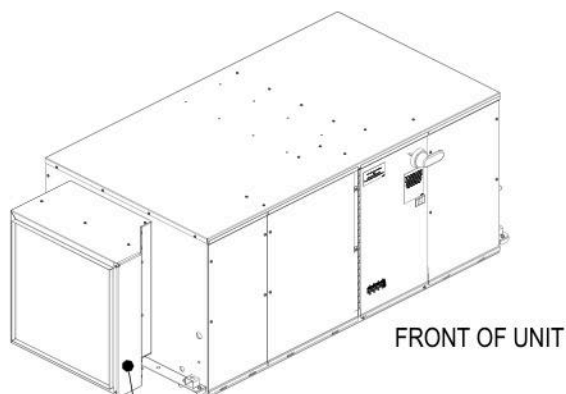


Filter access door, recommended clearance of 30" (762mm) be provided for component access and removal.

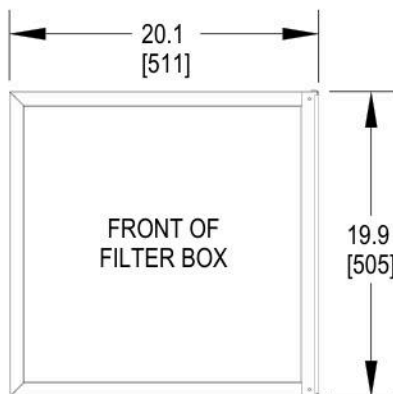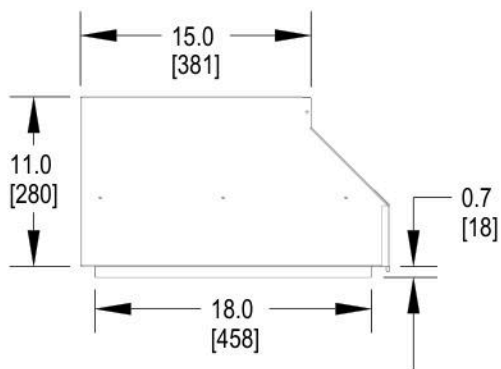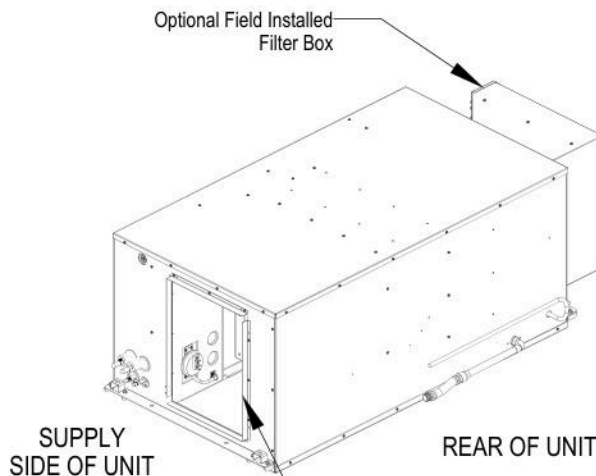

OPTIONAL FILTER BOX


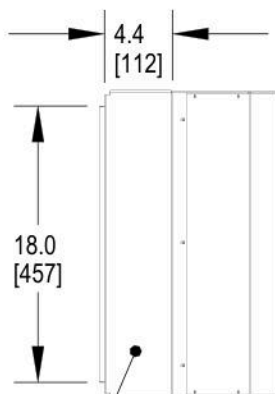


FILTER ACCESS DOOR

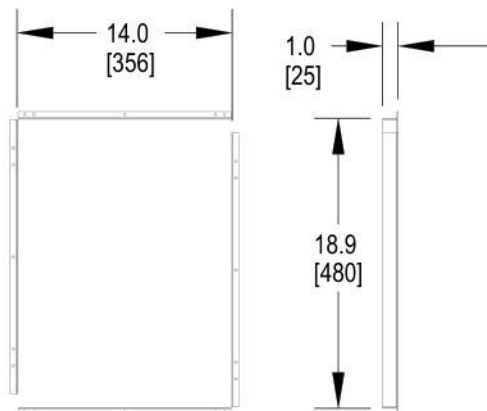





SUPPLY AIR DUCT FLANGES
INSTALLED DIMENSIONS

DIMENSIONAL DATA FILTER BOX 4 & 5 TON

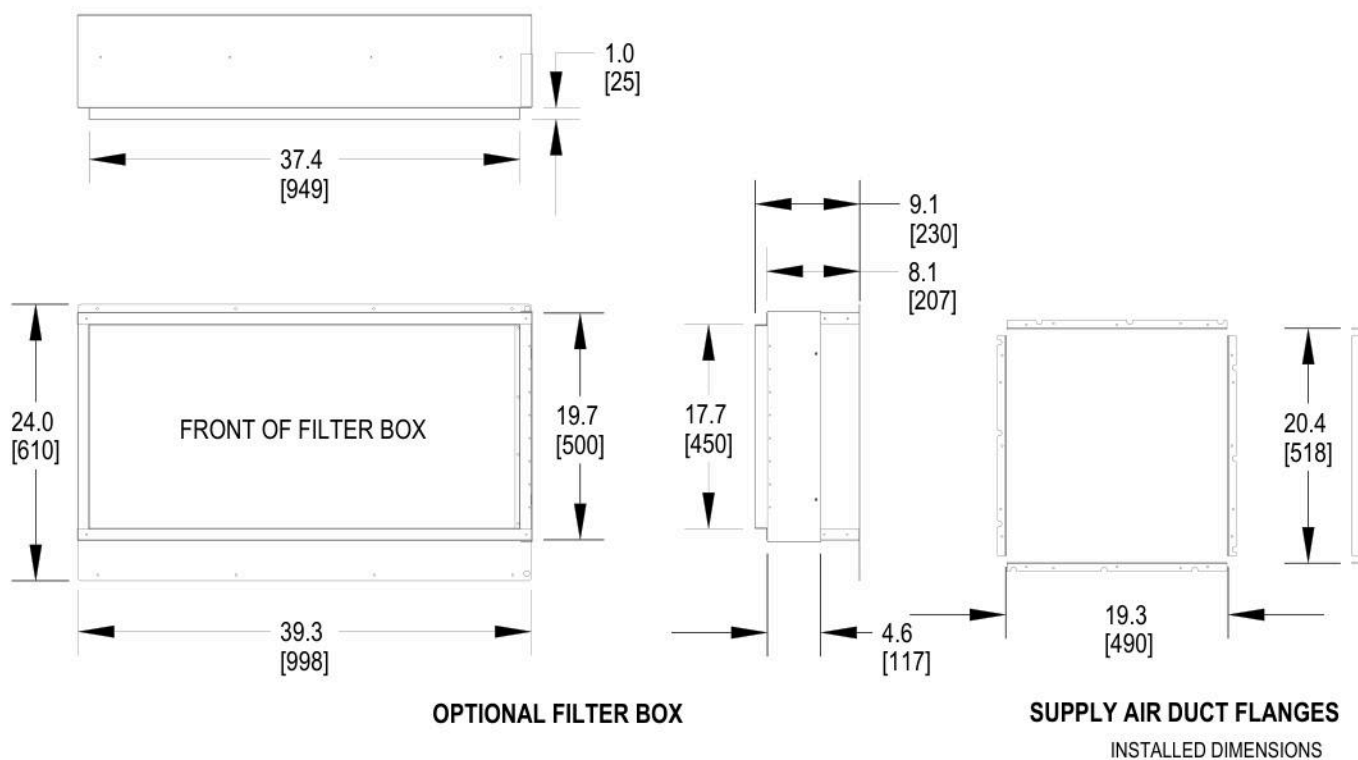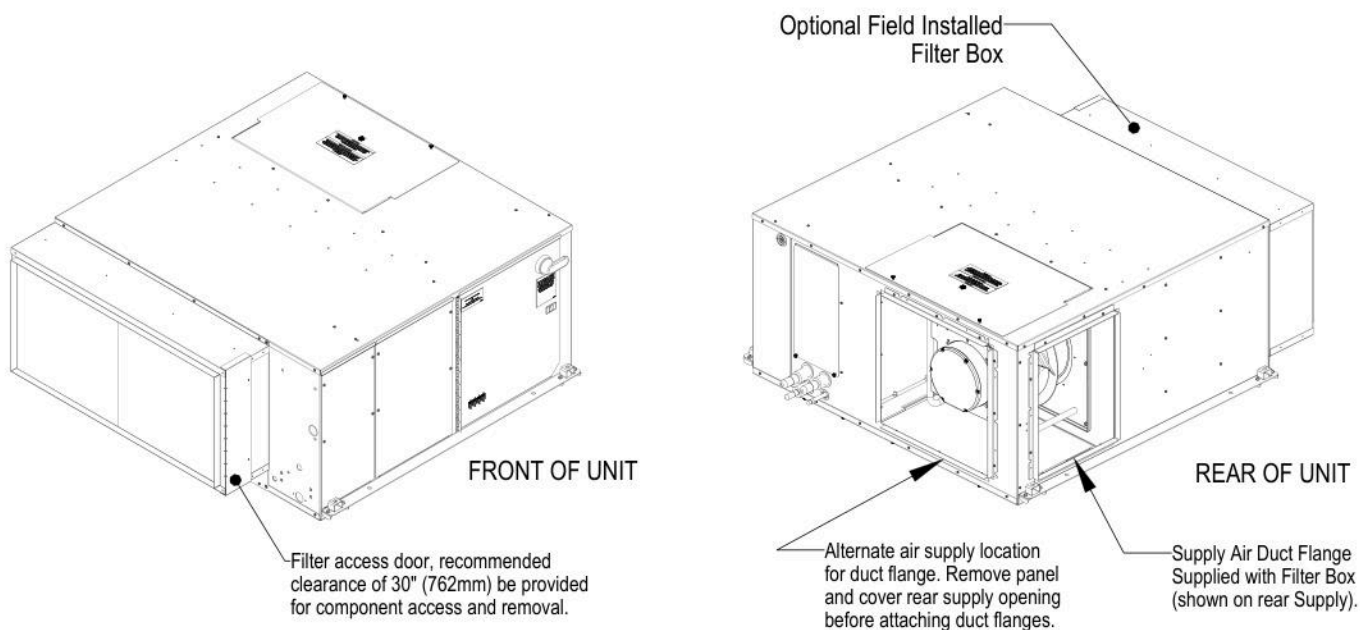


DIMENSIONAL DATA

FILTER BOX 8 TON

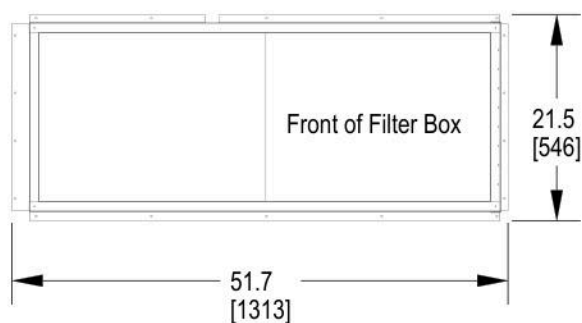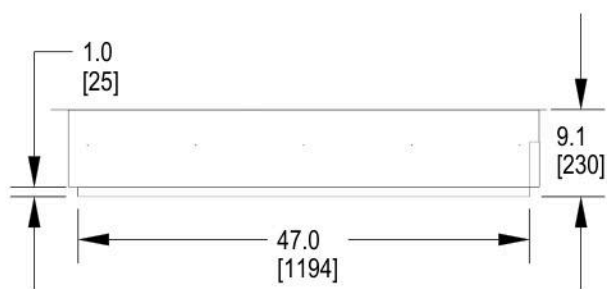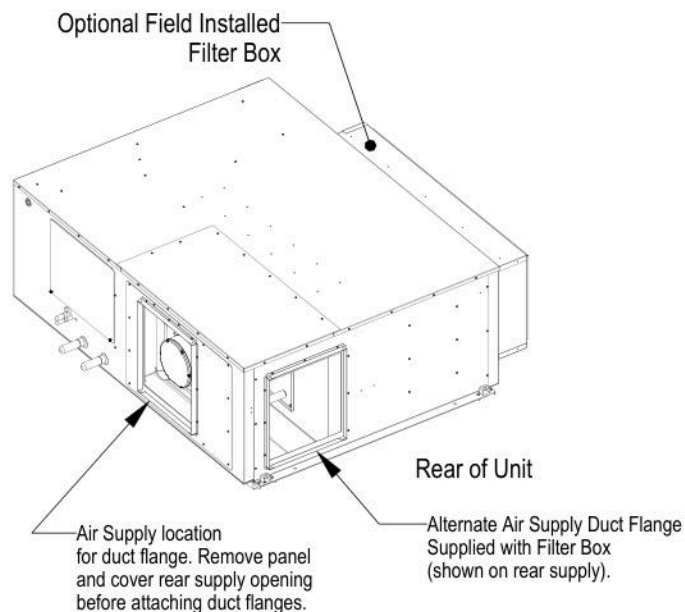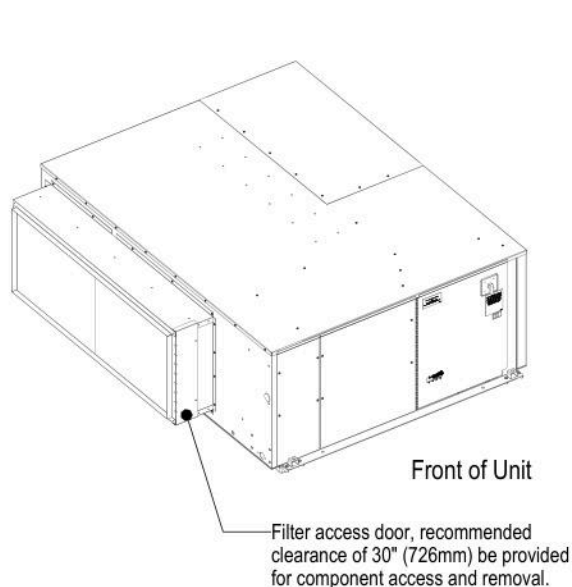


OPTIONAL FILTER BOX

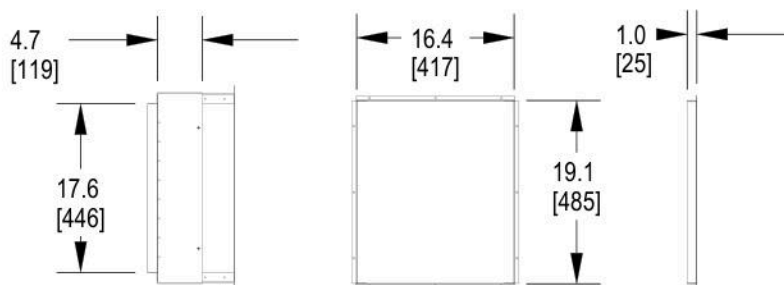

SUPPLY AIR DUCT FLANGES
INSTALLED DIMENSIONS



PIPING CONNECTIONS

CONDENSATE PUMP CONNECTION LOCATIONS, 1 TON

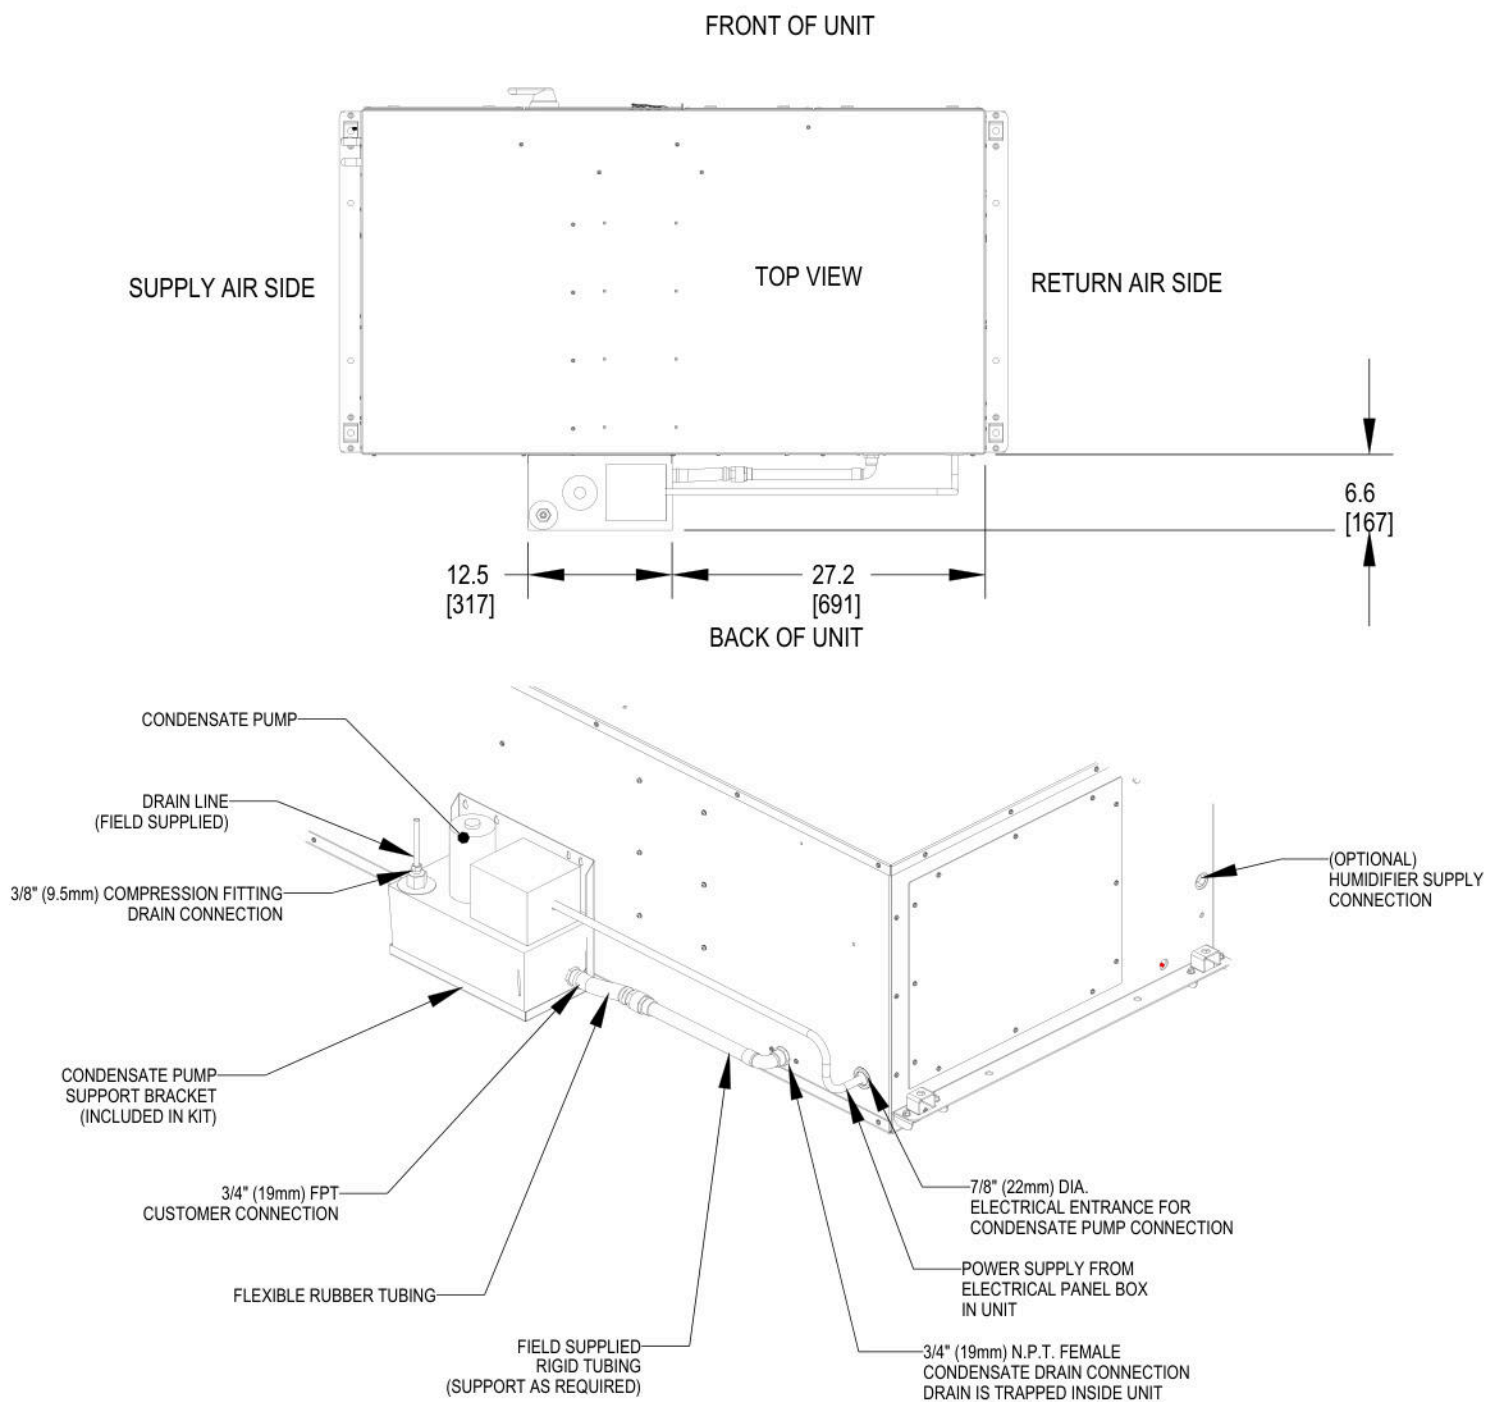


PIPING CONNECTIONS

CONDENSATE PUMP CONNECTION LOCATIONS, 2 & 3 TON

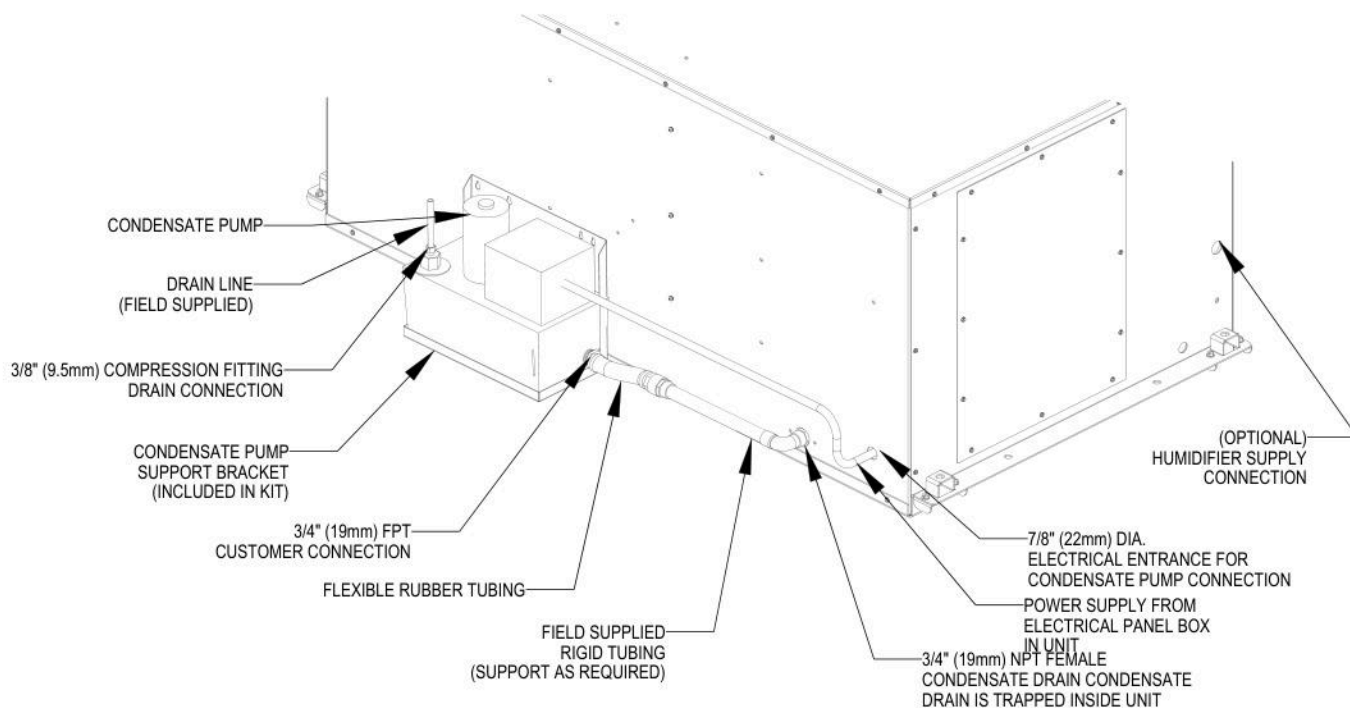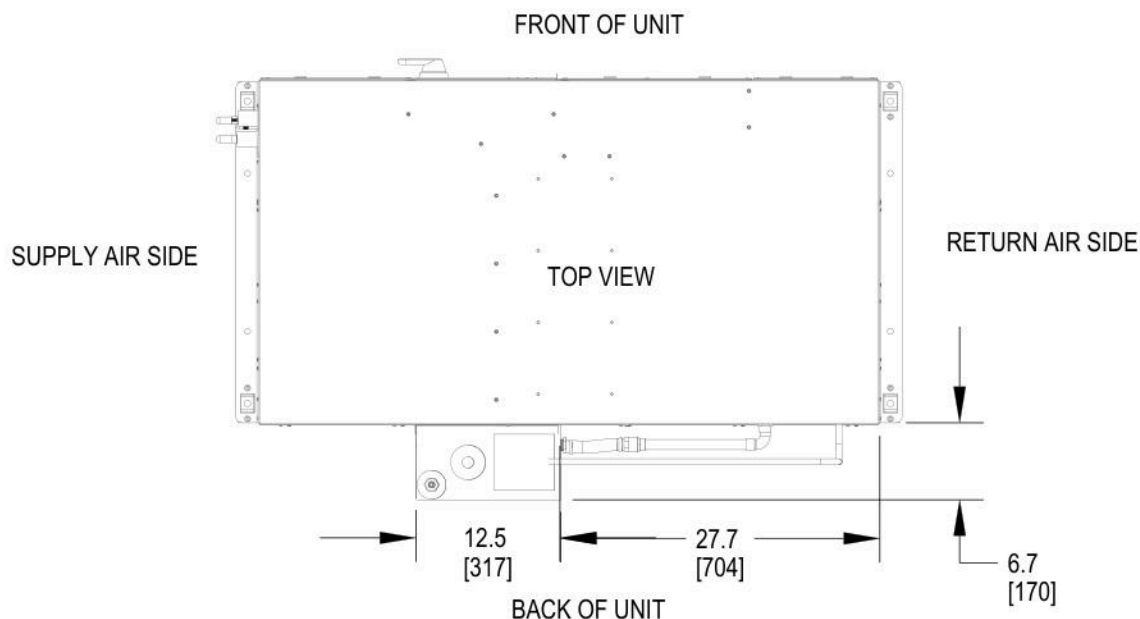



PIPING CONNECTIONS

CONDENSATE PUMP CONNECTION LOCATIONS, 4 & 5 TON



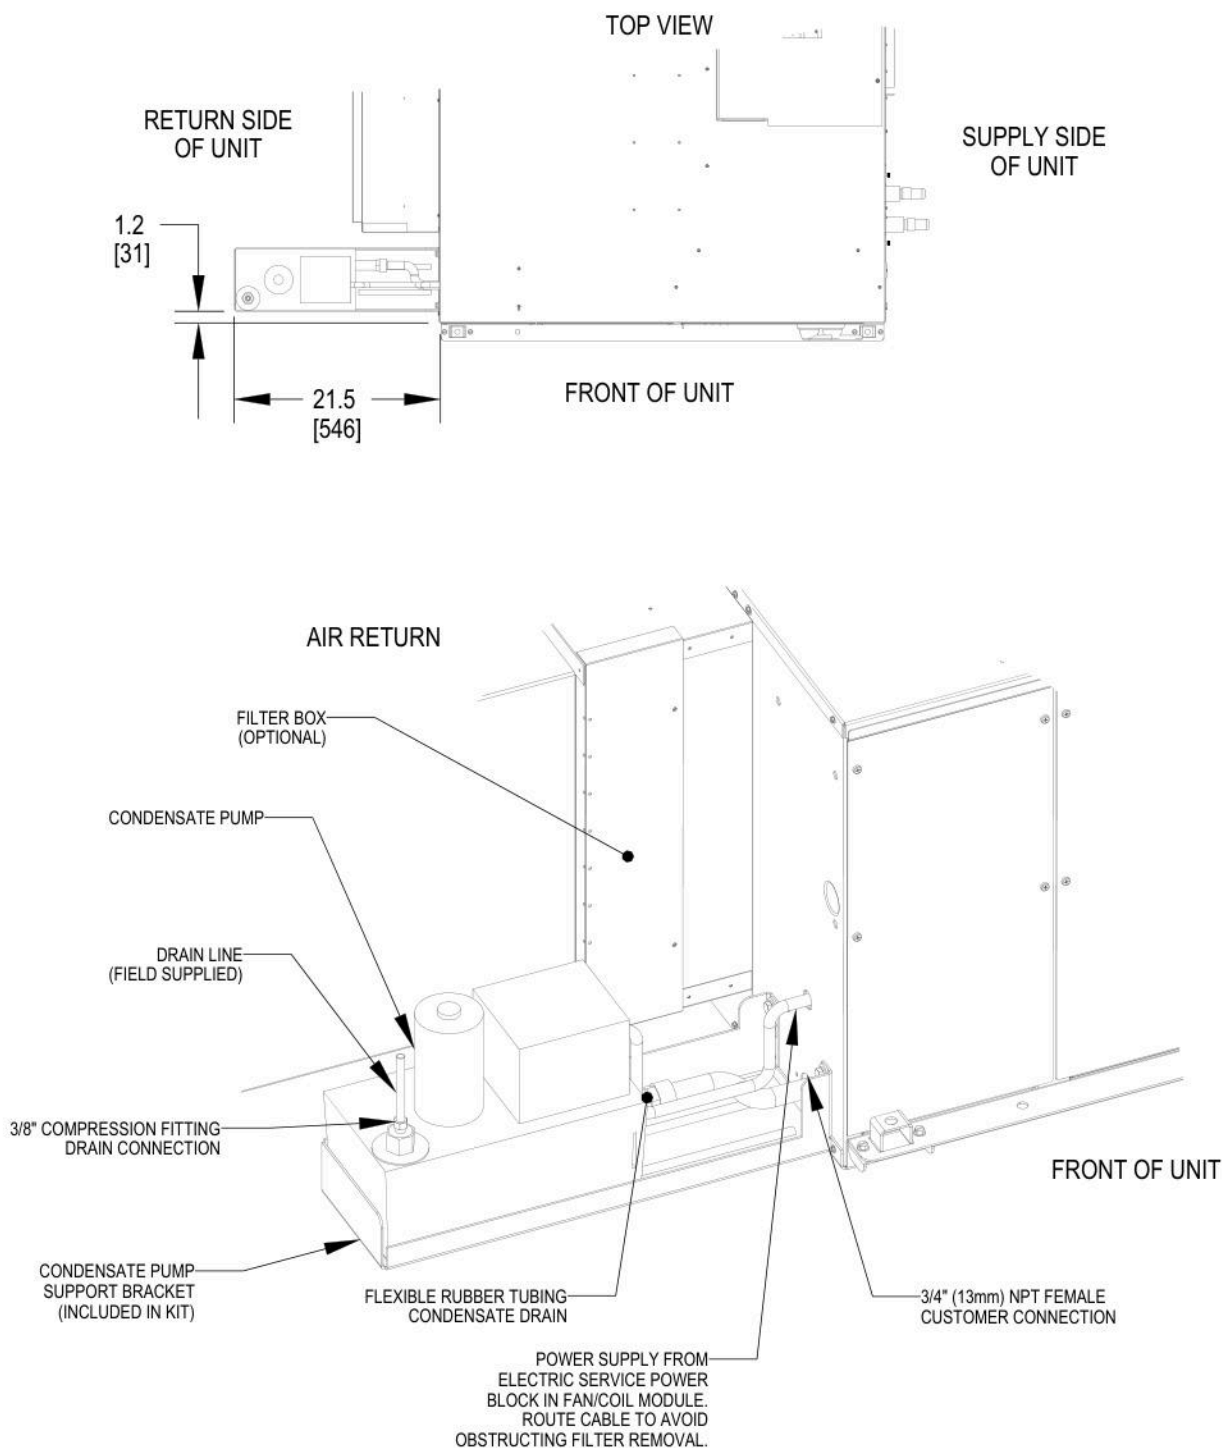


PIPING CONNECTIONS


CONDENSATE PUMP CONNECTION LOCATIONS, 8 TON

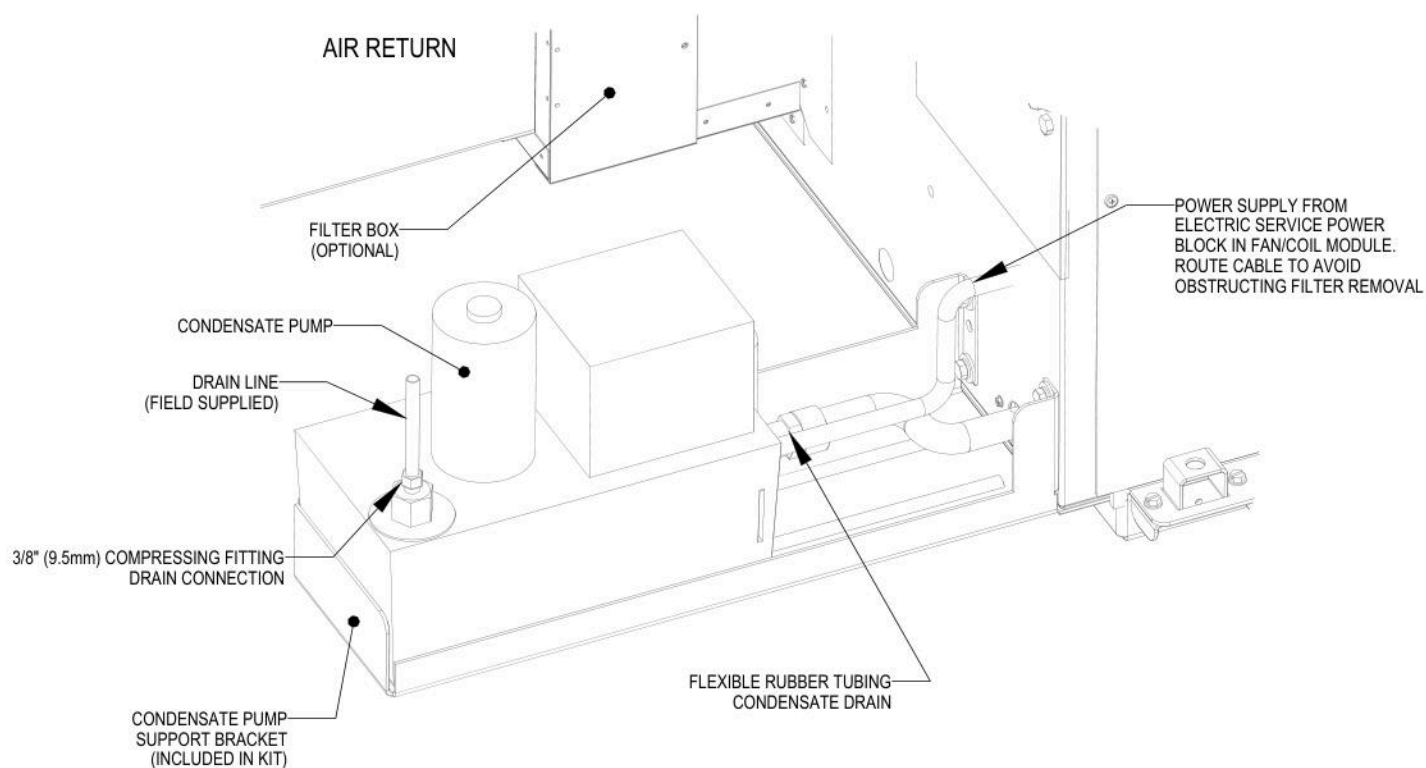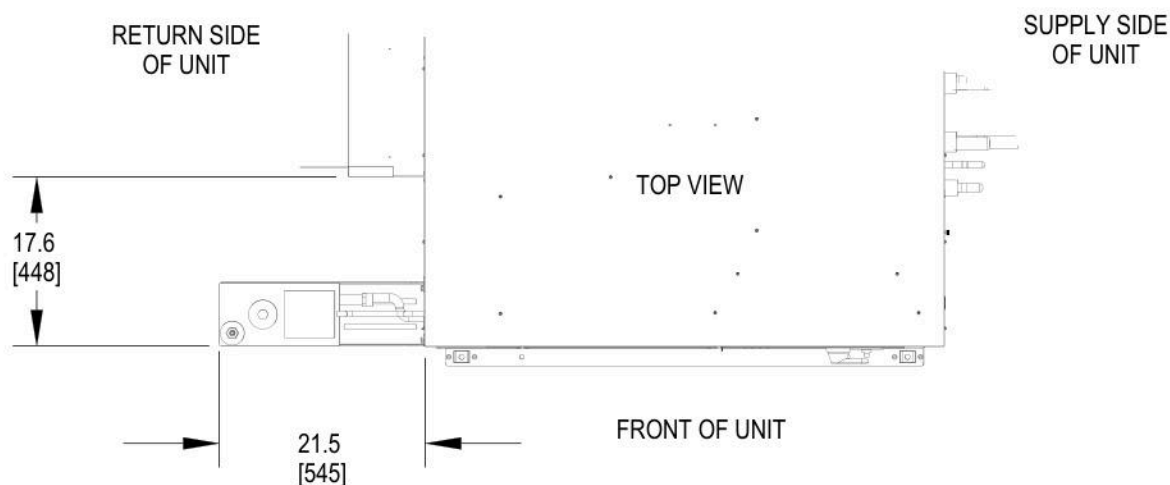


DIMENSIONAL DATA DUCT FLANGES, 1 TON

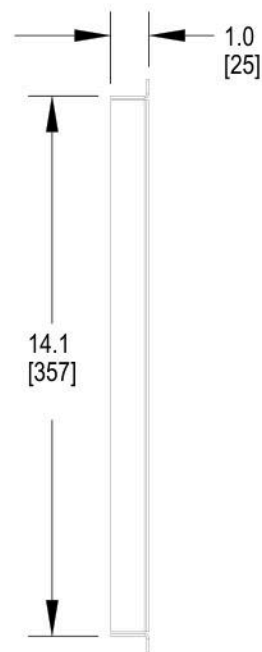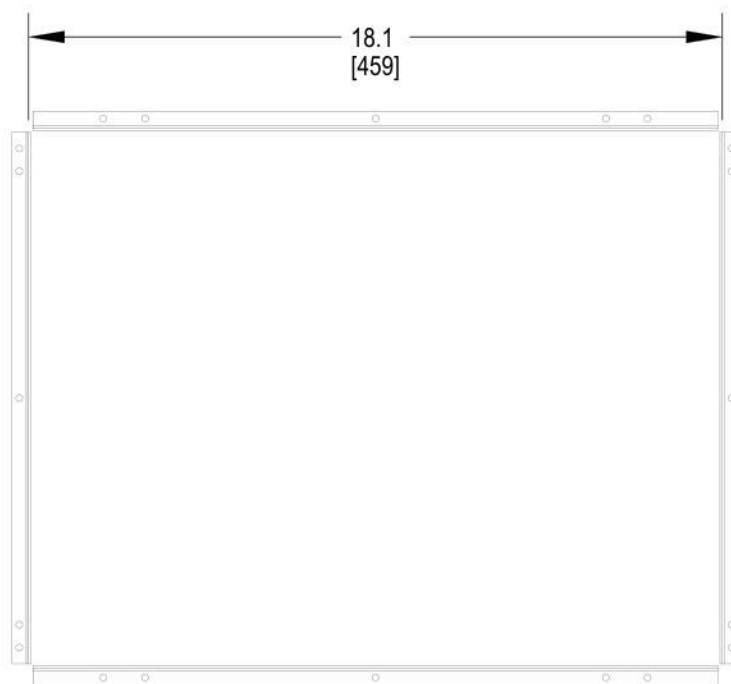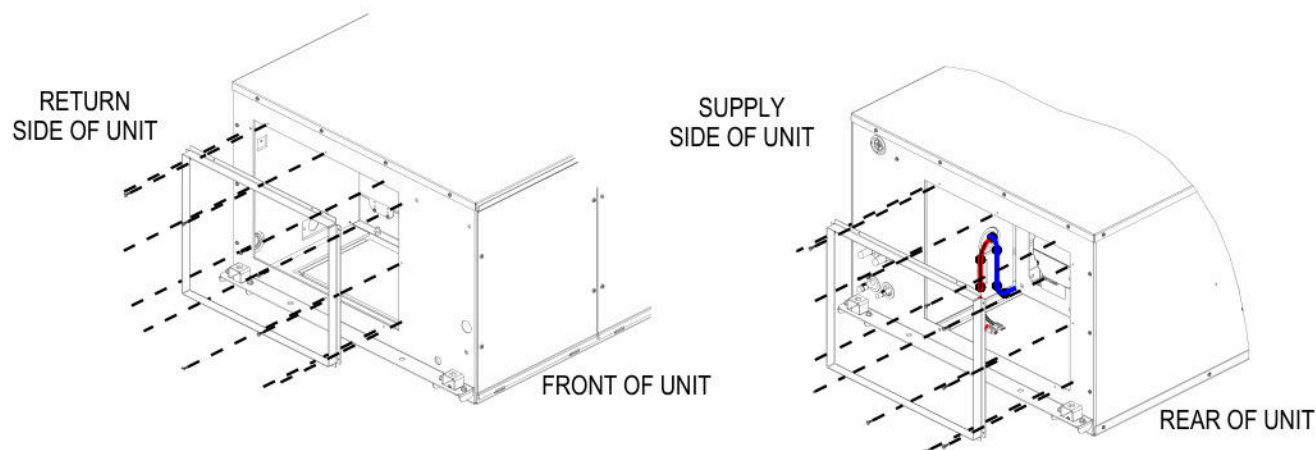



DIMENSIONAL DATA DUCT FLANGES, 2 & 3 TON

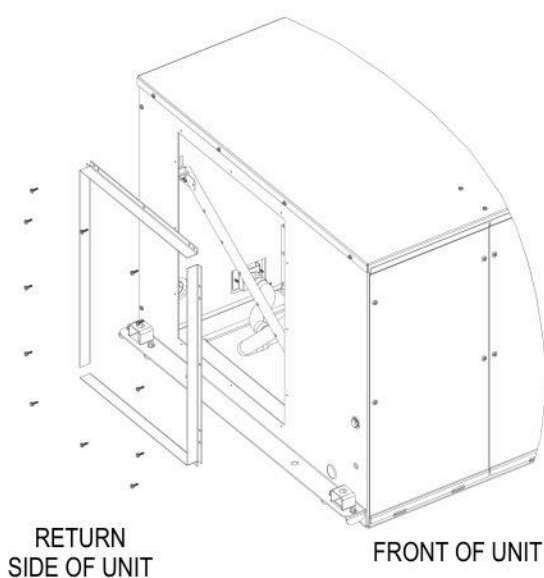






FRONT OF UNIT

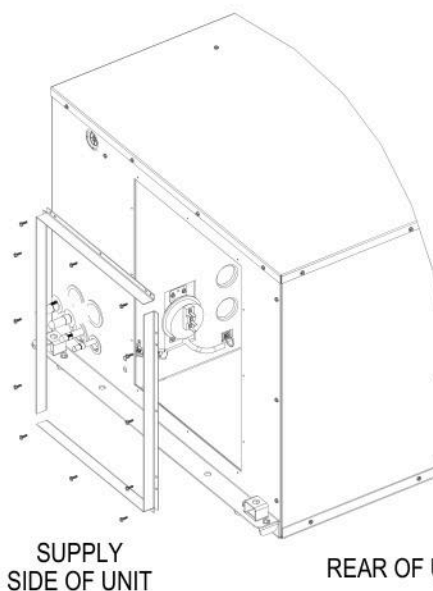

REAR OF UNIT

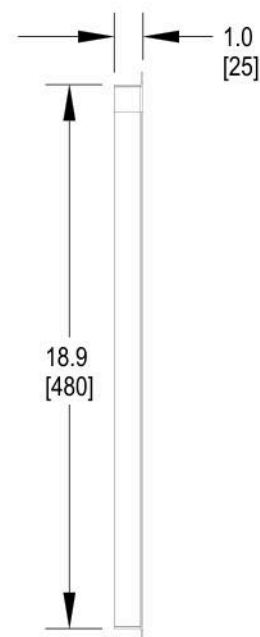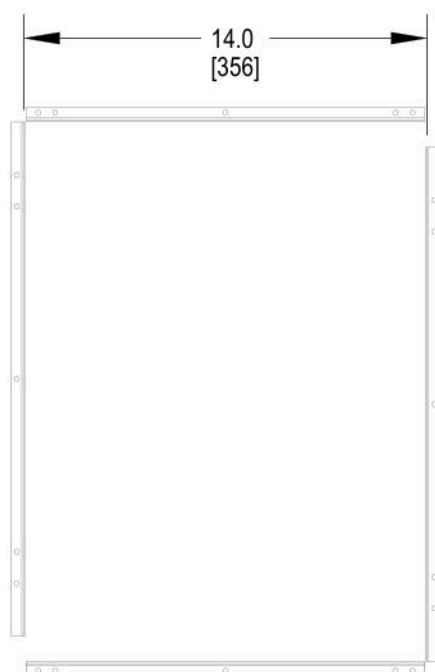

DIMENSIONAL DATA DUCT FLANGES, 4 & 5 TON

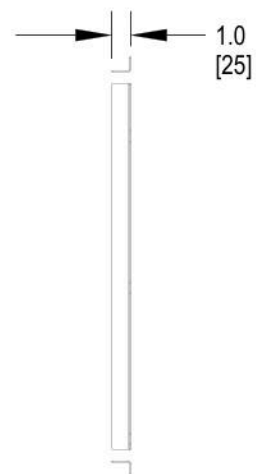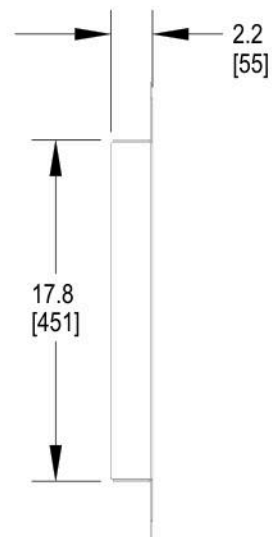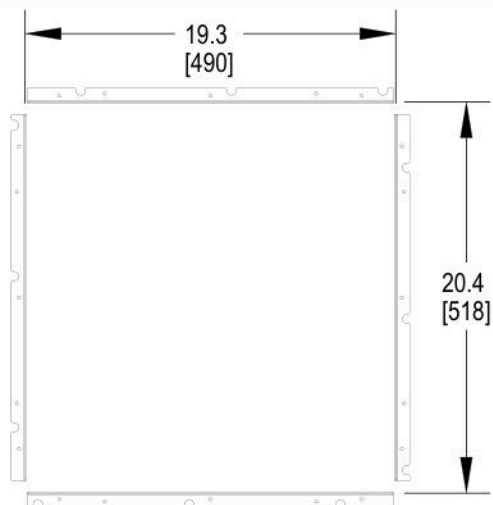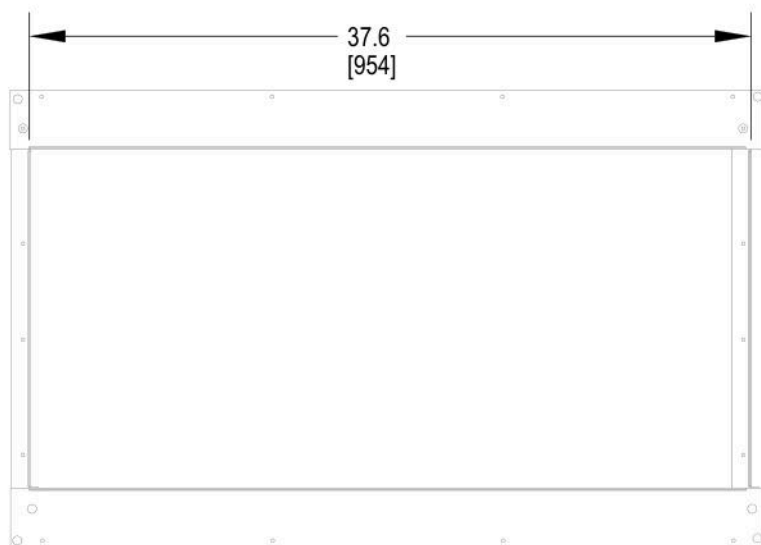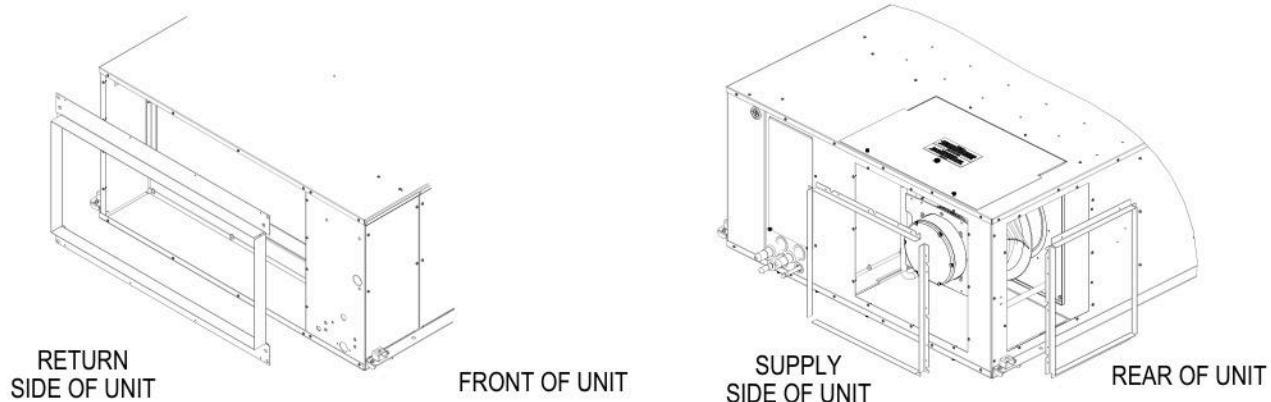

DIMENSIONAL DATA DUCT FLANGES, 8 TON



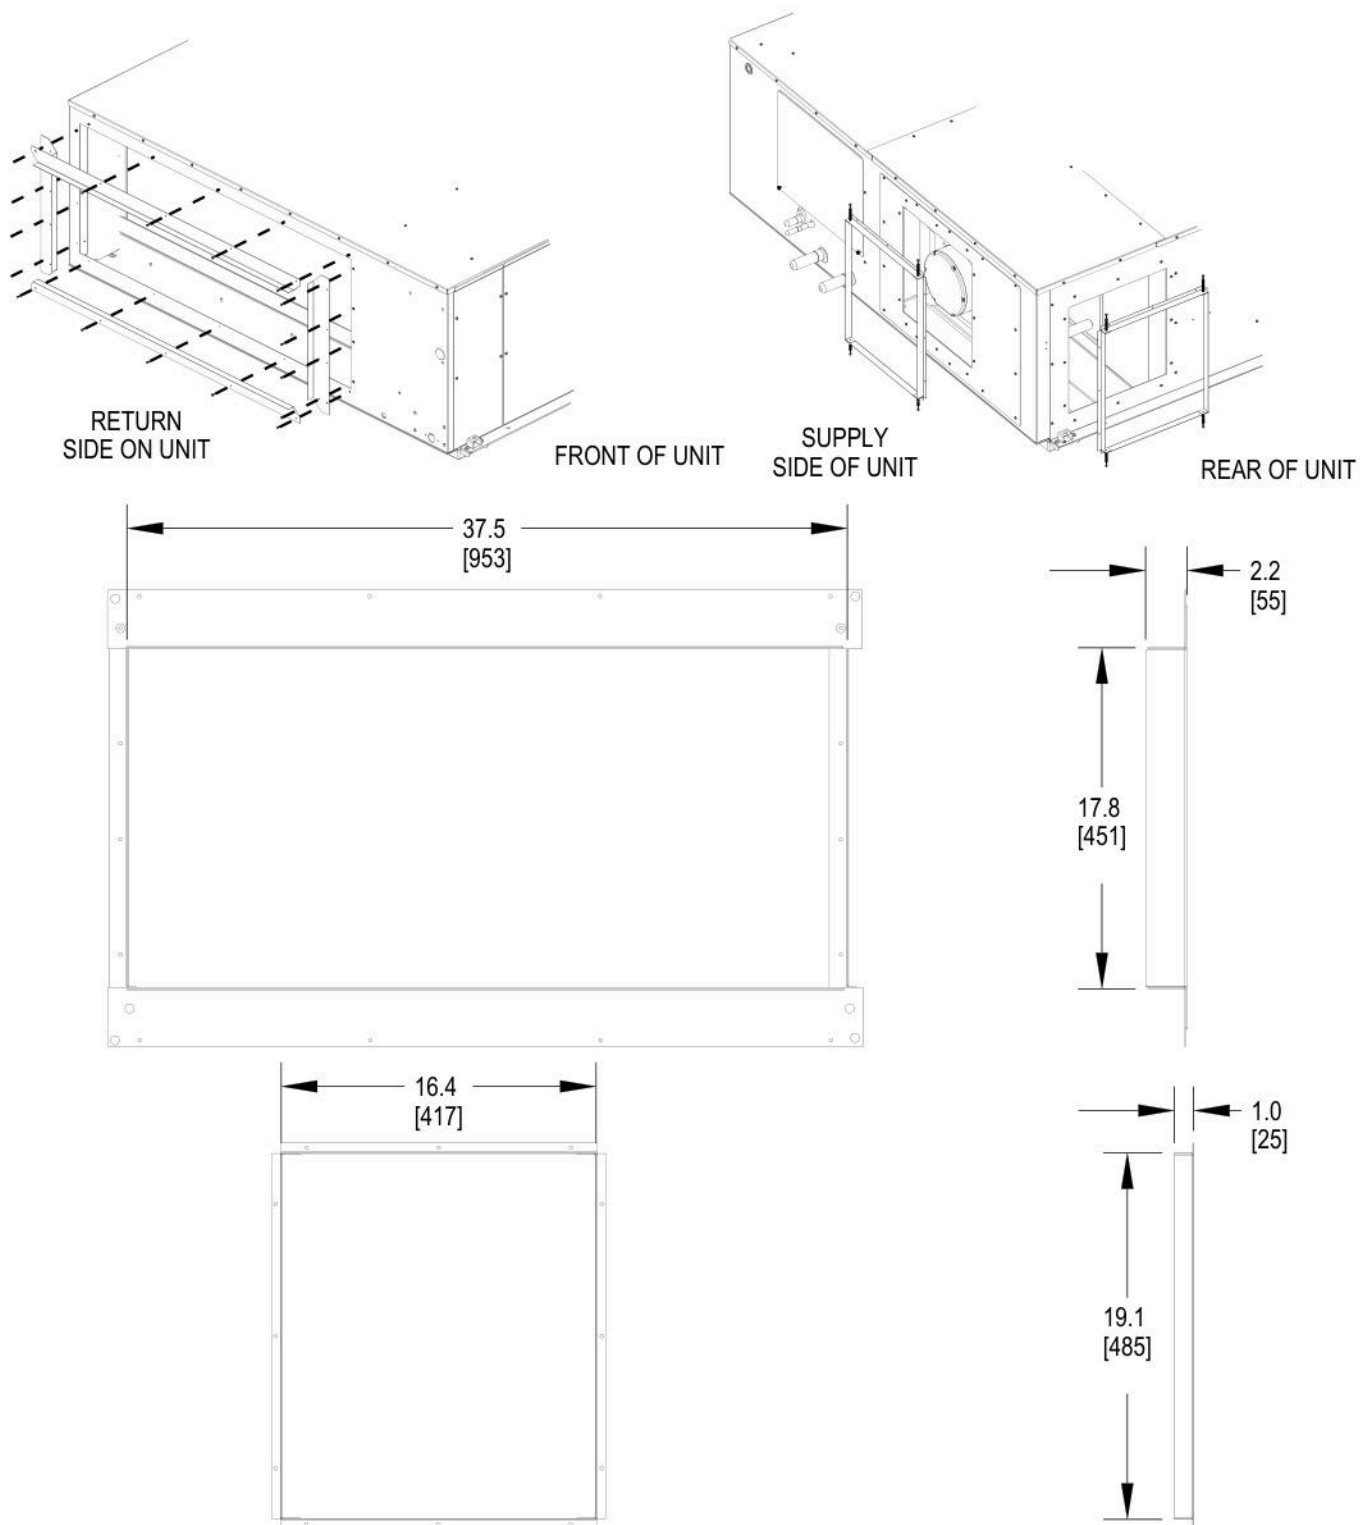




Diagram illustrating the installation of a unit into a drop ceiling. The unit is shown with its front panel removed, revealing the internal components. The front panel is labeled "FRONT OF UNIT". The unit is supported by a "REMOVABLE AIR RETURN COVER". The unit is connected to the ceiling via a "One Way Air Return To Unit". The unit is supported by "24" (610 mm) X 24" (610 mm) Grille supported by Drop Ceiling T-Bars". The unit is connected to the ceiling via a "Three Way Unit Supply".

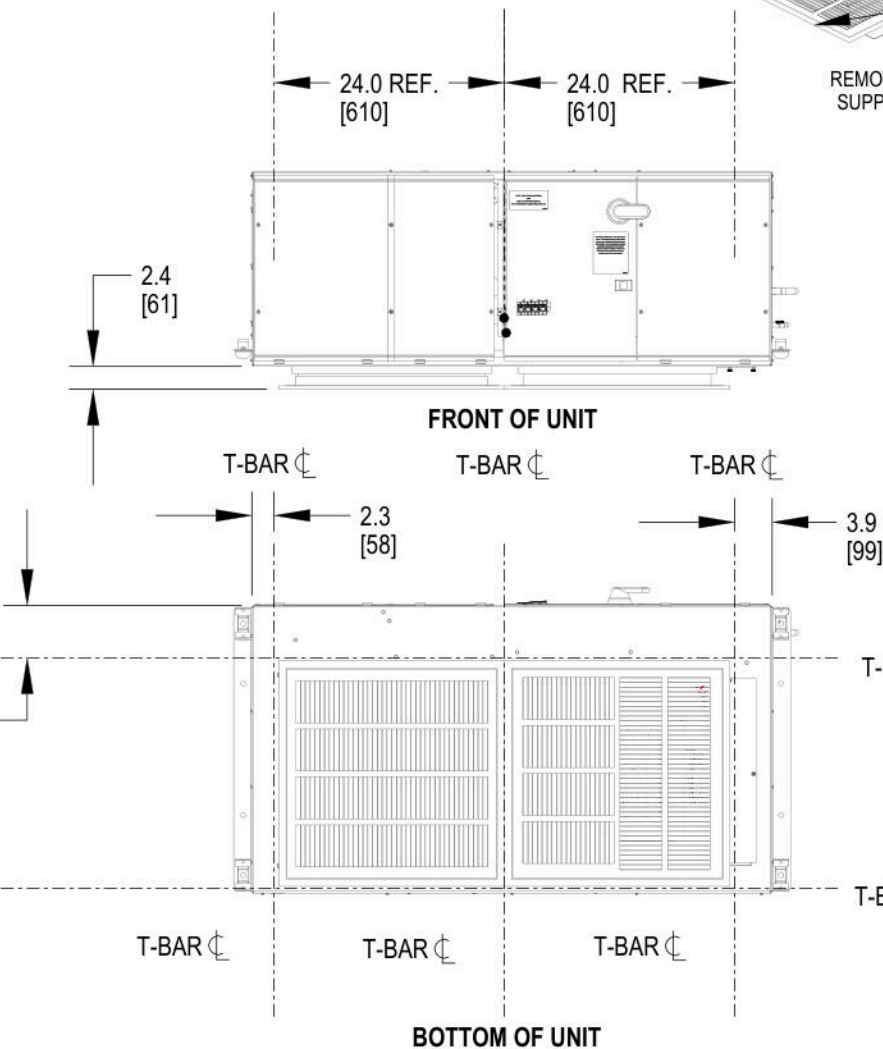


DIMENSIONAL DATA DOWNFLOW GRILLE 2 & 3 TON

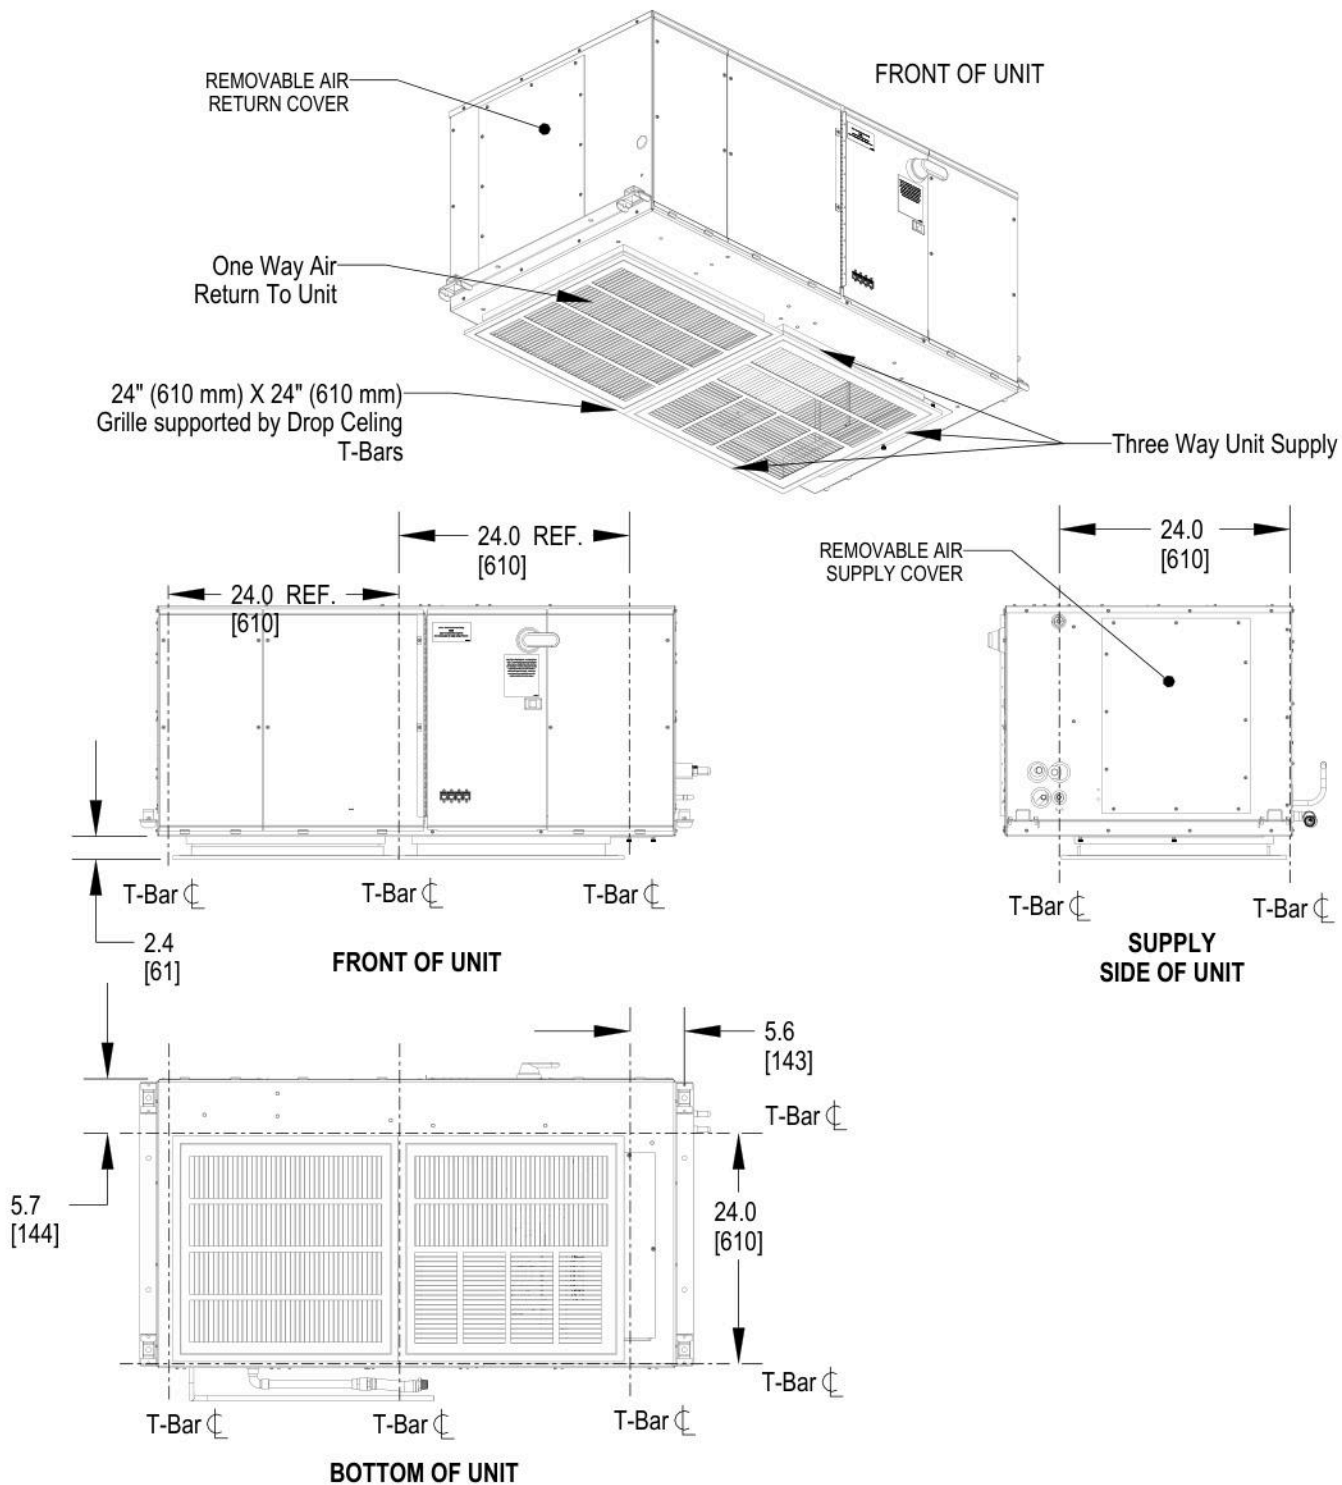


DIMENSIONAL DATA

AIR DISTRIBUTION PLENUM 1 TON

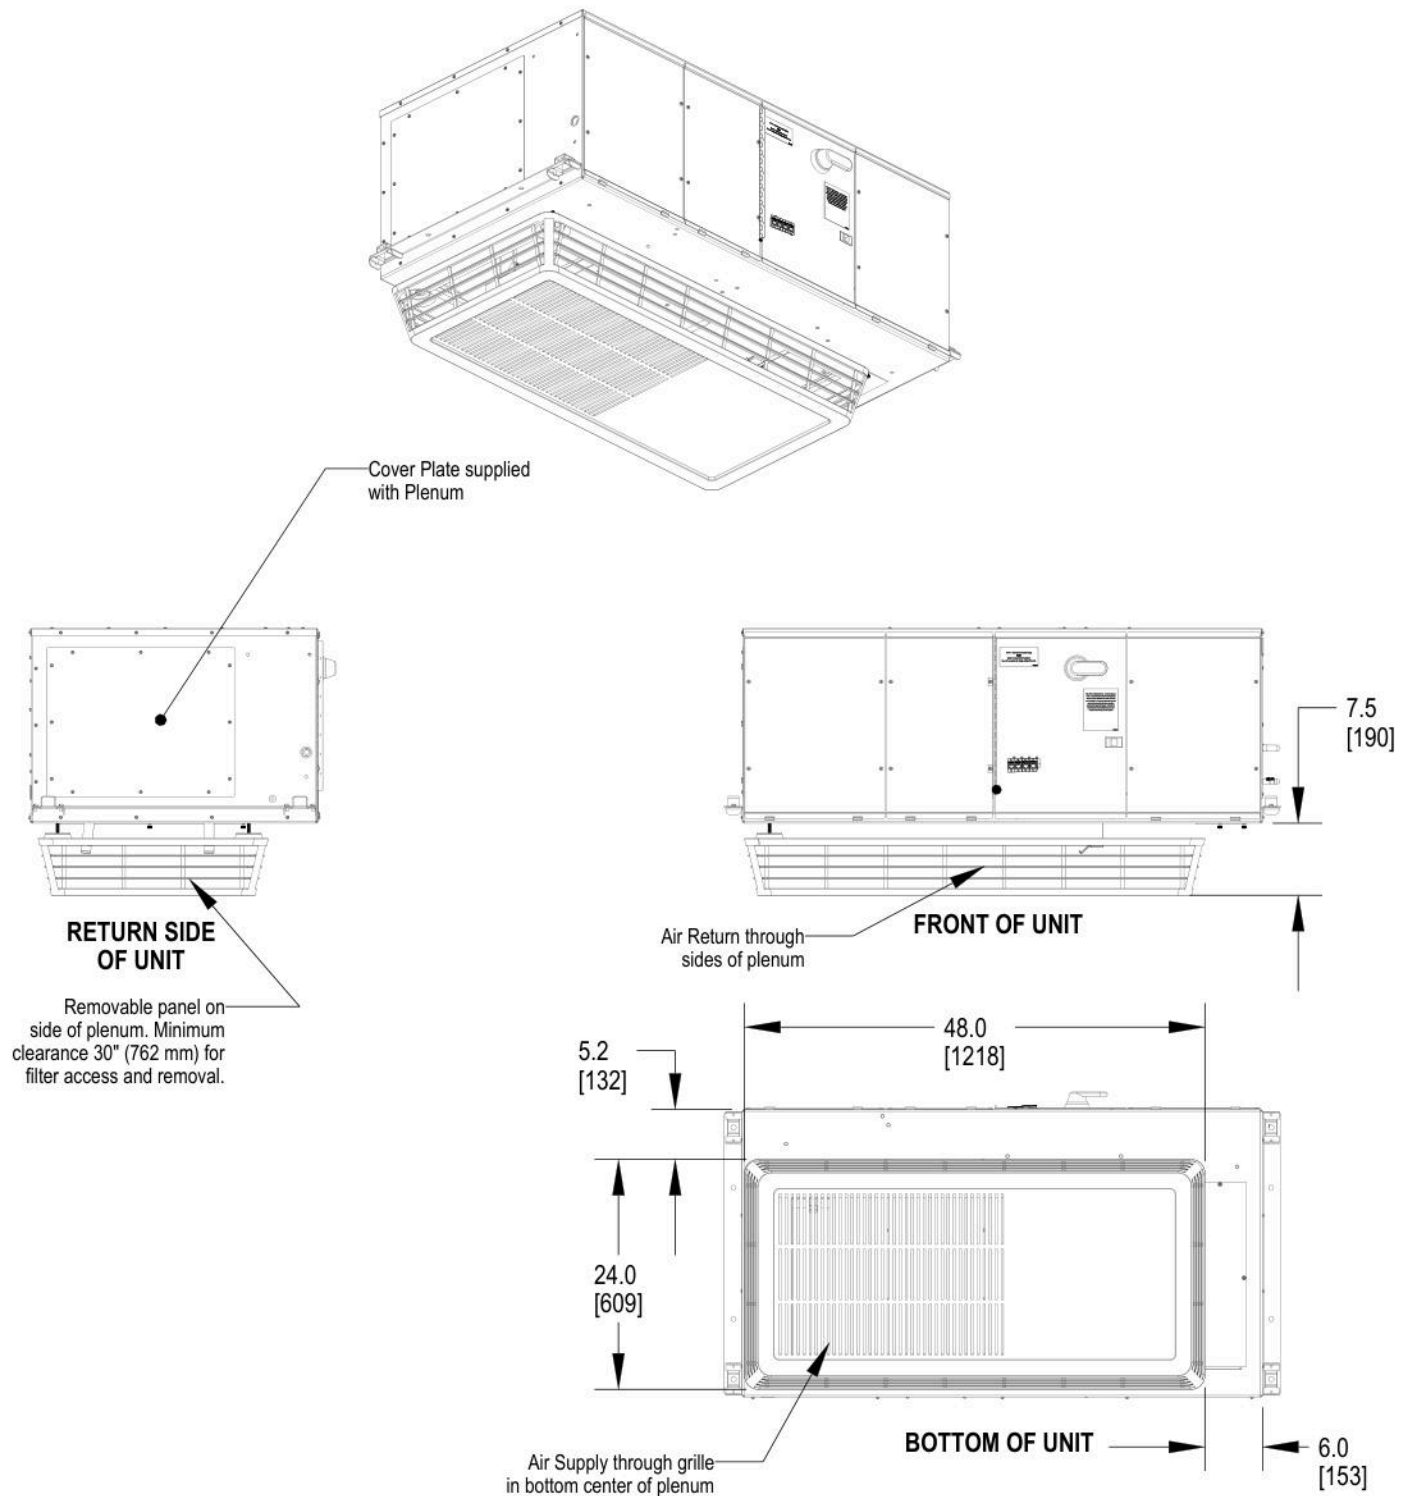





DIMENSIONAL DATA

AIR DISTRIBUTION PLENUM 2 & 3 TON

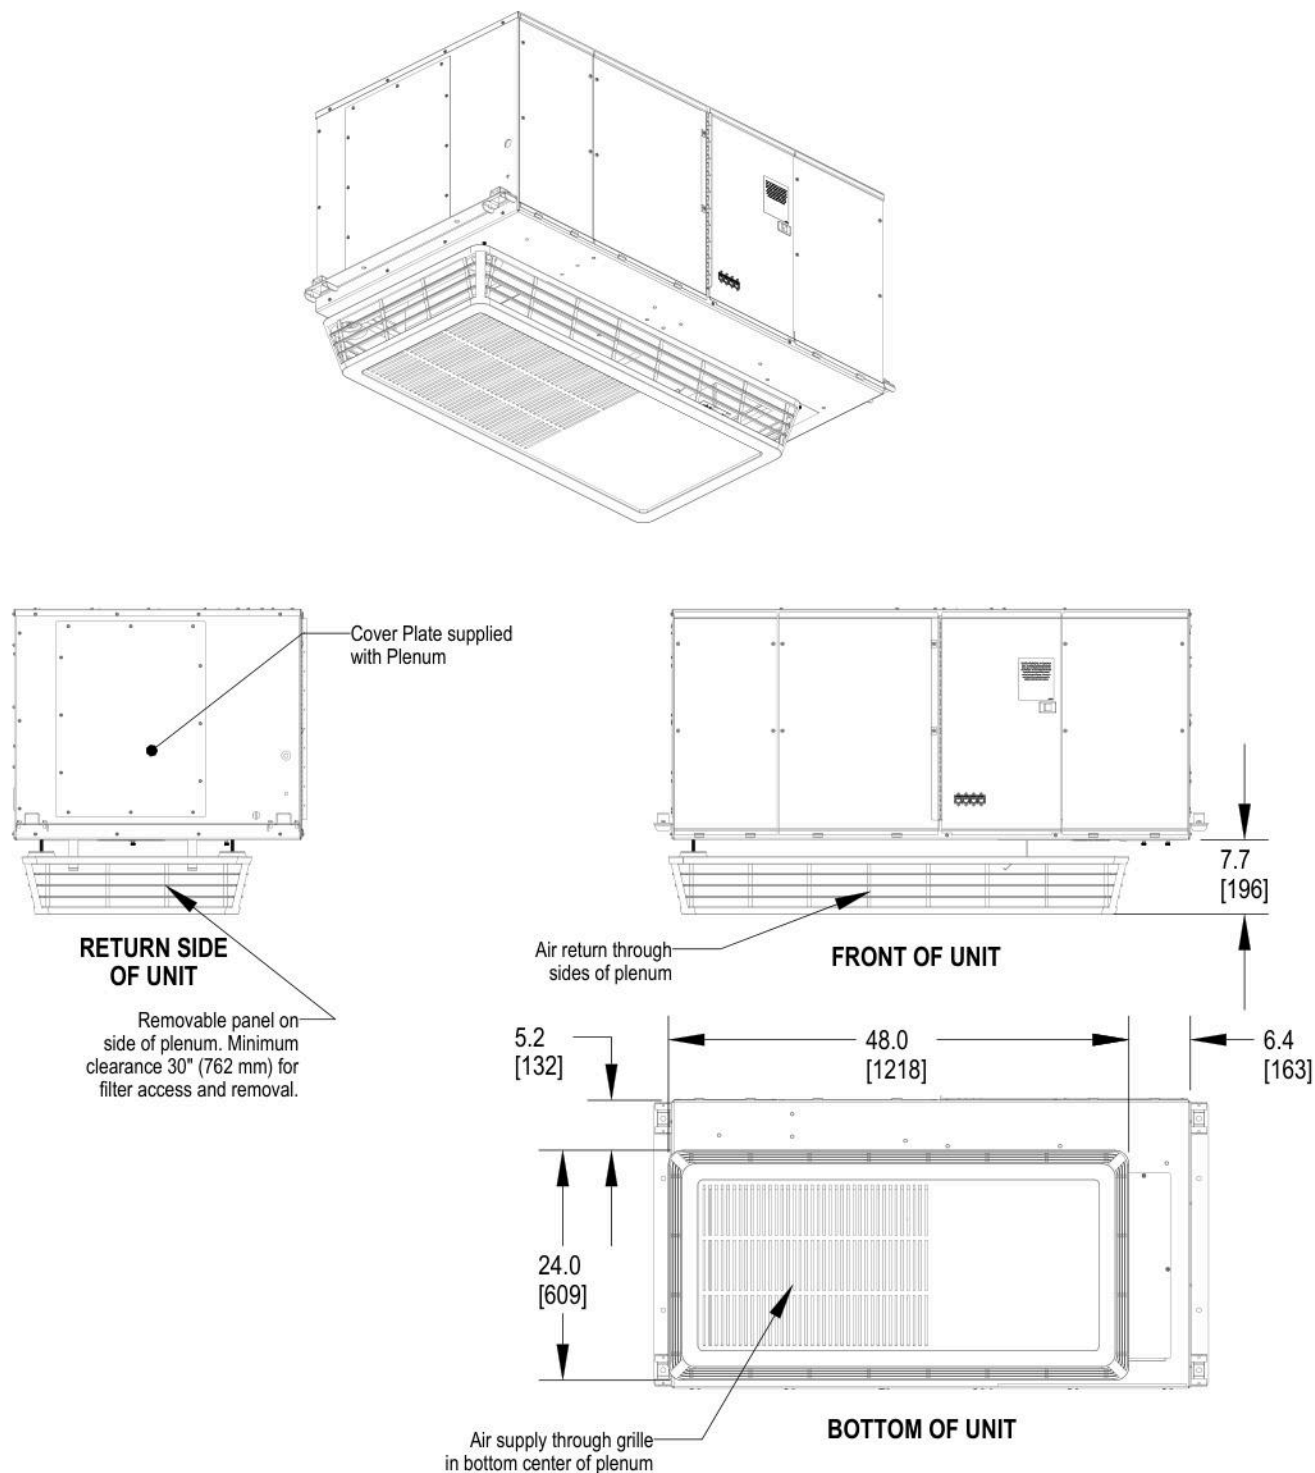

GENERAL DIMENSIONS



HAIL-GUARD 15kW

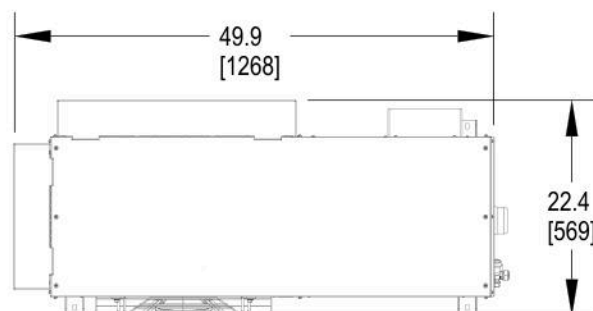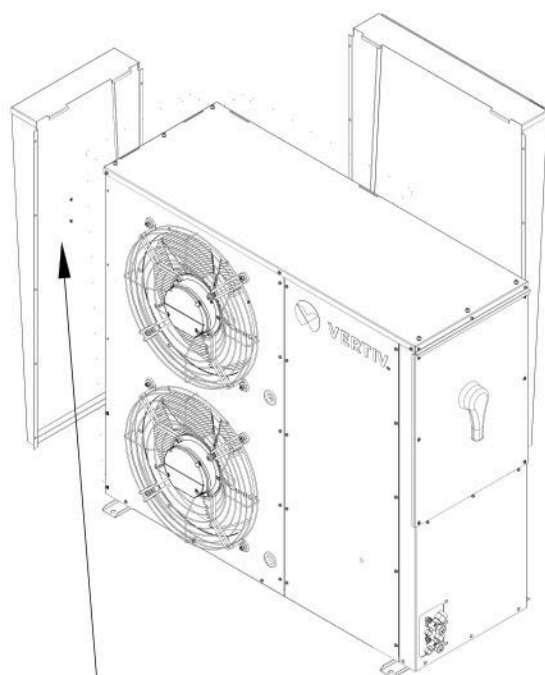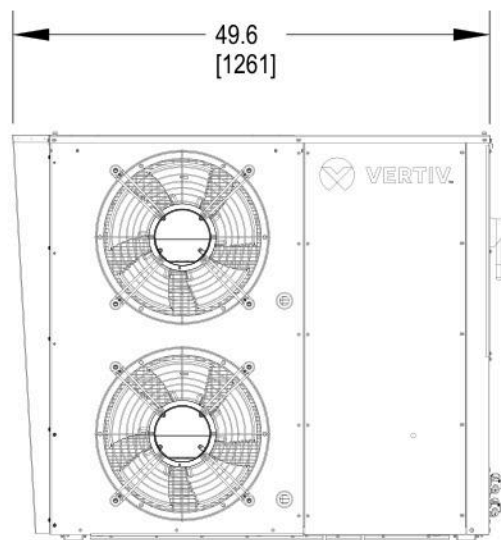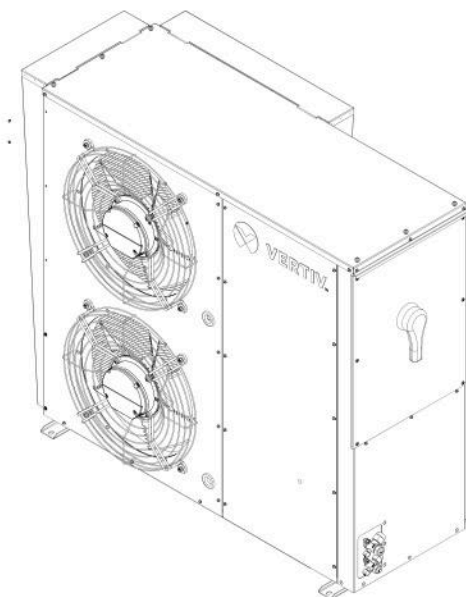

HAIL - GUARD INSTALLATION



HAILGUARD KIT DATA

CONDENSING UNIT 21/28 KW, 35 KW

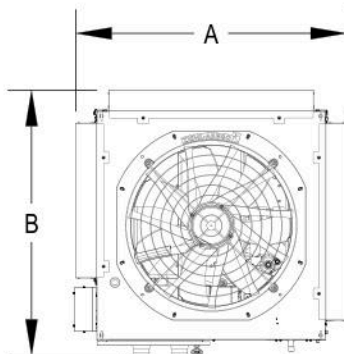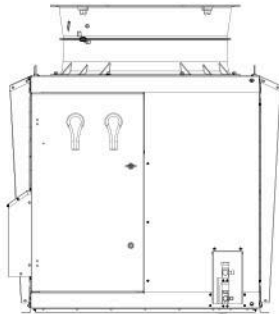



DIMENSIONS CONDENSING UNIT 21/28 KW IN [MM]	
A	47.1 [1195]
B	46 [1170]

HAIL GUARD INSTALLATION

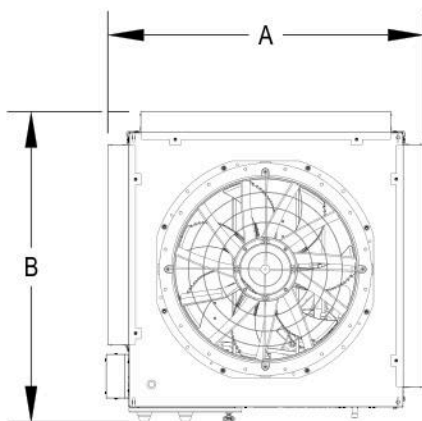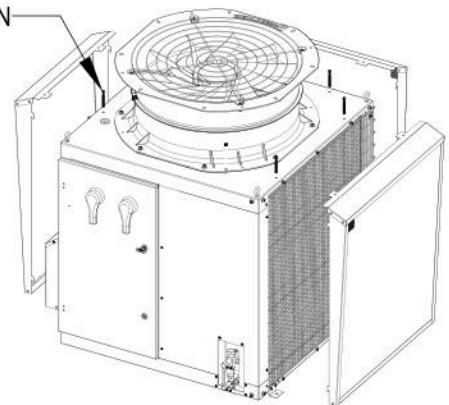

DIMENSION CONDENSING UNIT 35 KW IN [MM]	
A	54.9 [1395]
B	53.9 [1369]



HAIL GUARD INSTALLATION

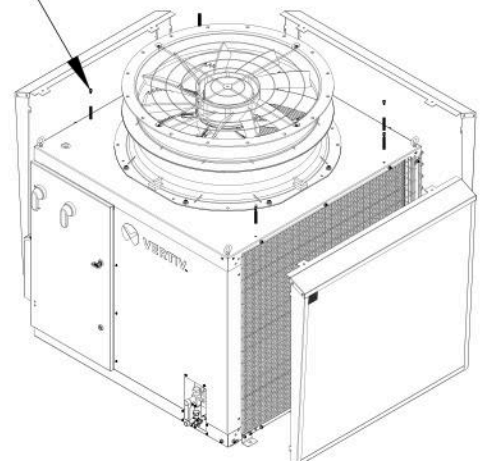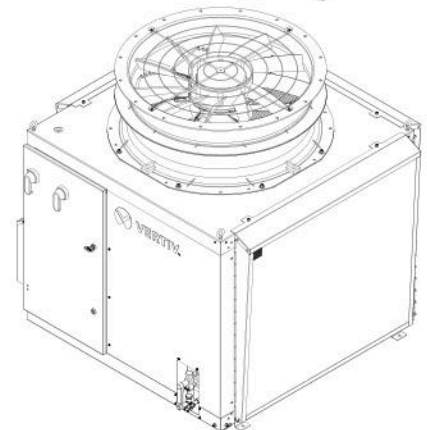




VERTIV COOLPHASE CONDENSER


GENERAL DIMENSIONS WIND BAFFLE KIT 15 kW

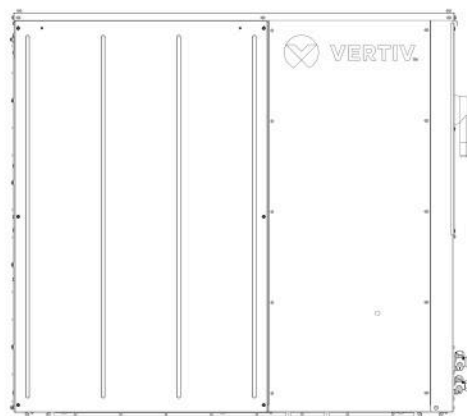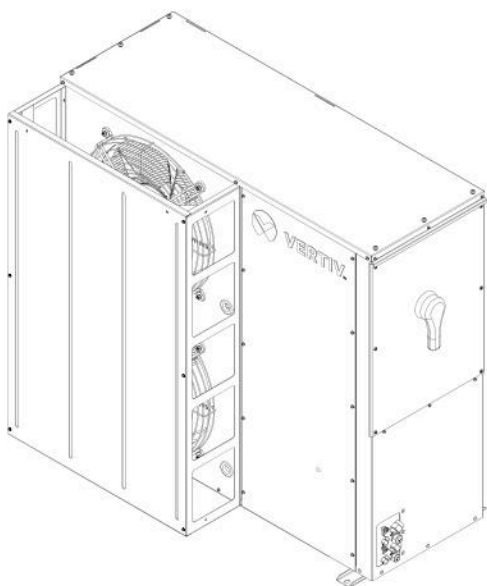

FRONT VIEW OF UNIT

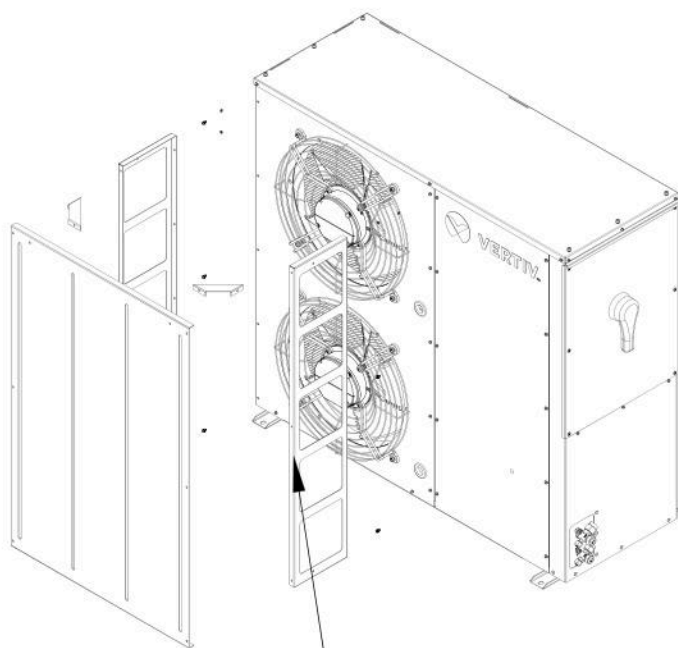

AIR BLOCK DEFLECTOR INSTALLATION

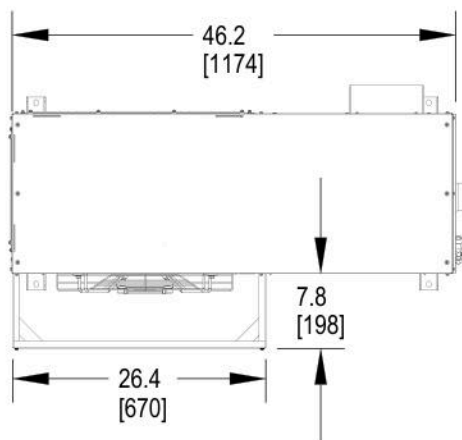

TOP OF UNIT

Connect with Vertiv on Social Media



<https://www.facebook.com/vertiv/>



<https://www.instagram.com/vertiv/>



<https://www.linkedin.com/company/vertiv/>



<https://www.x.com/Vertiv/>



Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082 USA

©2026 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

SL-80138_REVA_05-26