


Vertiv™ CoolPhase Wall Handling and Unpacking Instructions

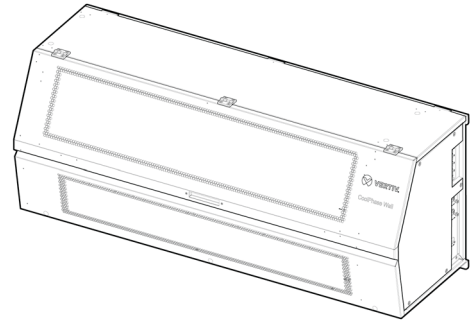

For WLM030A, WLM070A and WLM110A

Reference guide for receiving, unpacking
and preparing for installation.
DO NOT THROW AWAY!



Safety Information




WARNING

Risk of unit falling over. Improper handling can cause equipment damage, injury, or death. Read all following instructions before attempting to move, lift, remove packaging from, or preparing unit for installation.



CAUTION

When moving a single unit without pallet, two people are required to carry it.

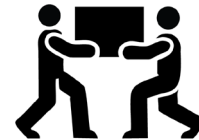


CAUTION

Risk of contact with sharp edges, splinters, and exposed fasteners. Can cause injury. Wear appropriate OSHA approved personal protective equipment (PPE) when attempting to move, lift, remove packaging from, or prepare unit for installation.


NOTICE

Risk of unit damage if improperly stored. Keep unit indoors and protected from dampness, freezing temperatures, and contact damage.

Recommended Unit Handling Equipment

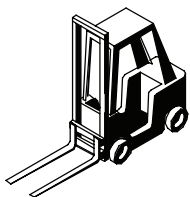

**Fork
Lift**

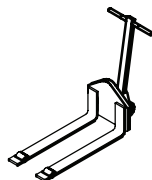

**Pallet
Jack**

Equipment Inspection

Upon arrival verify that labeled equipment matches Bill of Lading. Carefully inspect all items for either visible or concealed damage. Damage should be immediately reported to carrier and a damage claim filed with a copy sent to Vertiv or to your sales representative.

Packing Material




Most materials used to package this unit is recyclable. Please save for future use or appropriately dispose of material.

Handling the Unit While Stacked and Packaged

Transport packaged unit using a forklift or pallet jack.

- When using a forklift or pallet jack, make sure forks (if adjustable) are spread to widest allowable distance to still fit under pallet. Make sure fork length is suitable for pallet length.
- Packaged unit shall not be lifted any higher than 2'- 4" (51-102mm) off ground when handled. All by-standing personnel shall be no closer than 12' (3.7m) to handled packaged unit.
- If circumstances require unit to be lifted higher than 4" (102mm), great care shall be exercised and all by-standing personnel are to be no closer than 20' (5m) to lift point of unit.

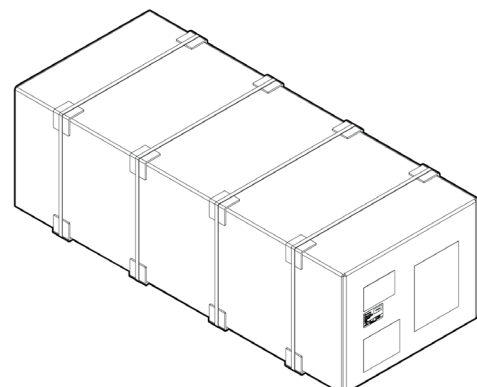

Vertiv™ CoolPhase Wall Handling and Unpacking Instructions



For WLM030A, WLM070A and WLM110A

- The following tools/equipment are required to unpack Vertiv™ CoolPhase Wall:
- Safety boots.
 - Gloves to avoid splinters when the panels are being handled.
 - Forklift or Pallet Jack to move unit closer to its final location.

Follow these instructions to unpack the Unit:





1.

Place the cardboard box on a flat surface and cut the straps to release the lid.
2.

Take the cardboard lid out of the box.
3.

Remove the foams that protect the unit and take the accessories out.
4.

Remove the plastic bag and take the Indoor unit out of the packaging base.

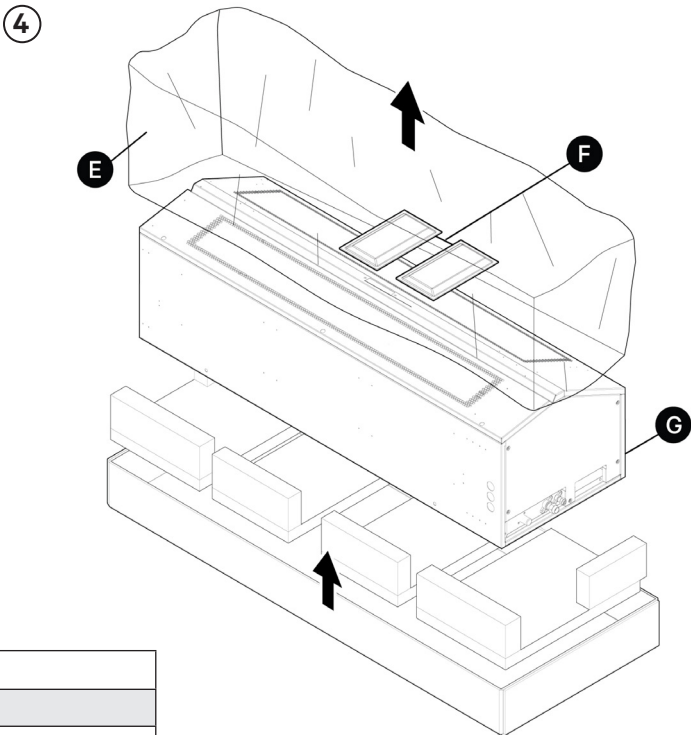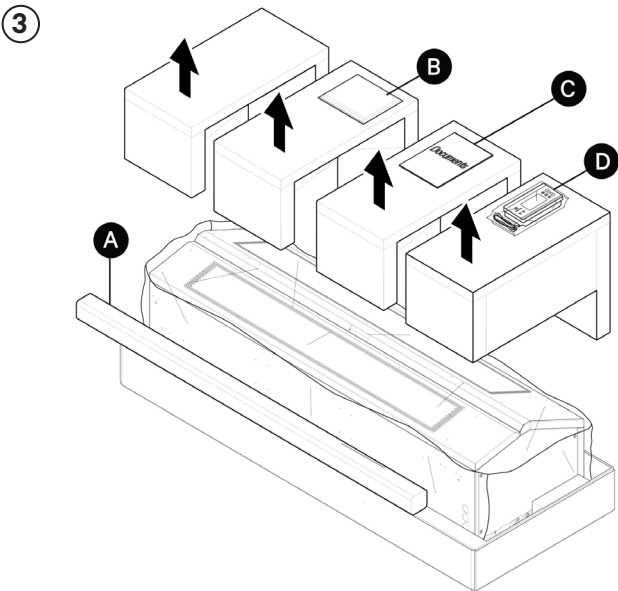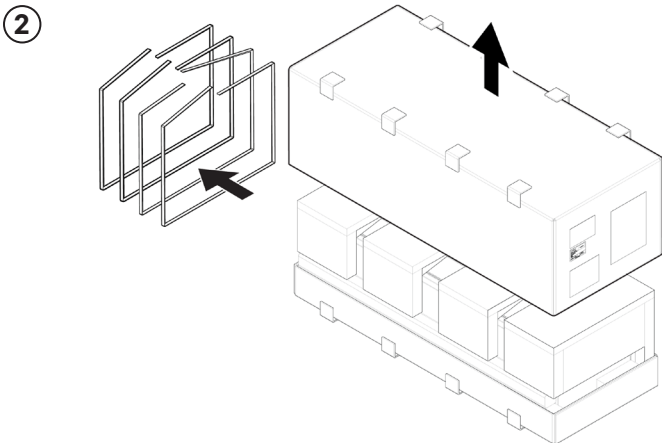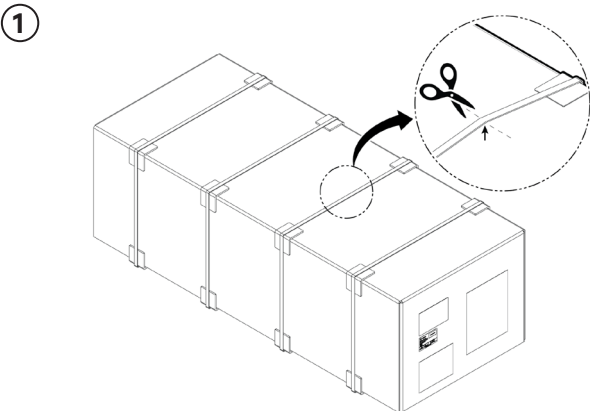

Item	Description	Item	Description
A	Mounting bars (x2)	E	Plastic Bag
B	Hardware bag	F	Desiccant bags
C	Documents bag	G	Vertiv™ CoolPhase Wall (indoor unit)
D	LCD Display		

To contact Vertiv Technical Support: visit www.Vertiv.com

© 2025 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

