

GEIST™ SWITCHAIR AIRFLOW MANAGEMENT DEVICE



Quick Installation Guide

Models:

SA1-02003, SA1-02003XS

Switch Type:

Rear air intake-front (port) exhaust
2U switch or two 1U switches

CAUTION: Ensure the required airflow for safe operation of equipment is not compromised when installing the Geist SwitchAir device.

WARNING: Take precaution to avoid interference with the switch's input power cords when installing behind a live switch.

1. Preparing for installation

Before installing the SwitchAir device, remove and save the upper and lower screws that attach each of the two switch mounting bracket rails (left and right) to the front rack uprights (if necessary). Leave the middle screws in place.

The SwitchAir device is not shipped in the fully extended position. Pull evenly on the chassis mounting tabs for the desired depth.

2. Installing the device

Insert the SwitchAir device into the open rack space at the same U height as the 2U switch (or two 1U switches). As the SwitchAir device is pushed into the space, the SwitchAir rail tabs engage the switch mounting bracket rails for support during installation.


Keep pushing the SwitchAir device into the space until the SwitchAir front chassis mounting tabs are flush with the rack's front rails.

Reinstall the previously removed screws to complete the installation.

Geist SwitchAir Airflow Management Device



Geist SwitchAir Rack Installation

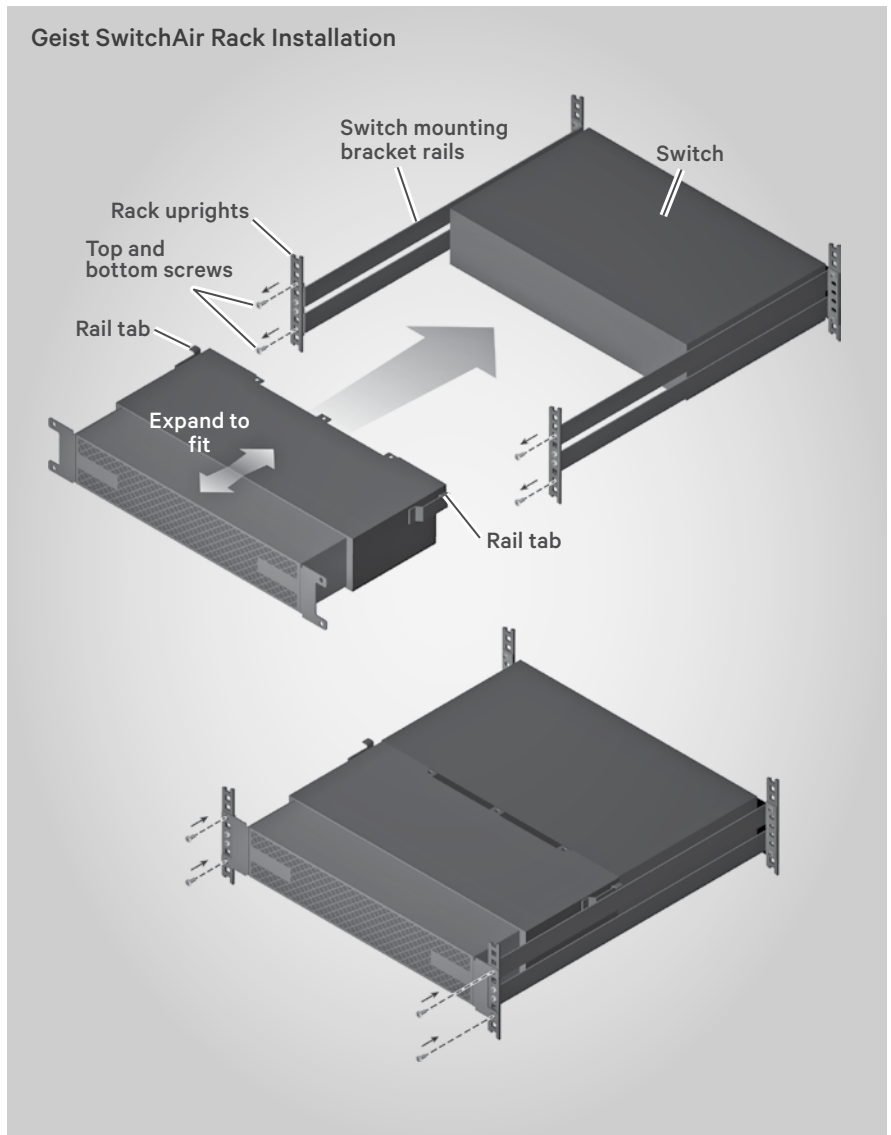



To contact Vertiv Technical Support: visit www.VertivCo.com

© 2019 Vertiv Co. All rights reserved. Vertiv and the Vertiv logo are trademarks or registered trademarks of Vertiv Co. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness herein, Vertiv Co. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications are subject to change without notice.

